


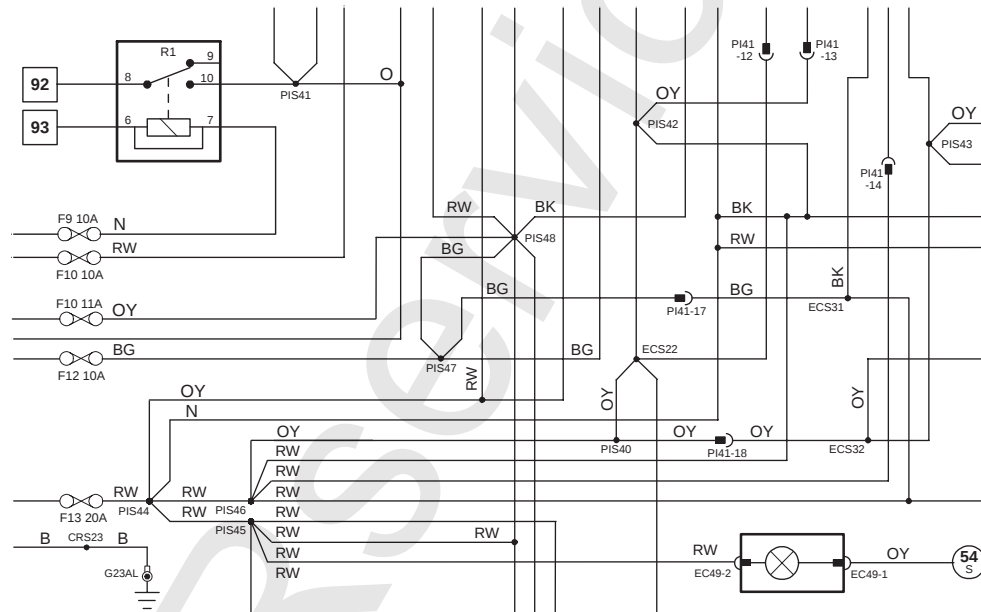

Electrical Wiring Diagrams



Defender

Issue: 1c

LRservice.ru



BY APPOINTMENT
TO HM THE QUEEN
MANUFACTURERS OF
LAND ROVER VEHICLES
LAND ROVER, WARWICK



BY APPOINTMENT
TO HRH THE DUKE OF EDINBURGH
MANUFACTURERS OF
LAND ROVER VEHICLES
LAND ROVER, WARWICK



BY APPOINTMENT
TO HM QUEEN ELIZABETH THE QUEEN MOTHER
MANUFACTURERS OF
LAND ROVER VEHICLES
LAND ROVER, WARWICK



BY APPOINTMENT
TO HRH THE PRINCE OF WALES
MANUFACTURERS OF
LAND ROVER VEHICLES
LAND ROVER, WARWICK

Electrical Wiring Diagrams

Defender

Published by Technical Communications, Land Rover
Publication Part No. JLR 13 30 21_1E, September 2007

PREFACE

While every effort is made to ensure accuracy, design changes to the vehicle may be made in the period between the completion of this publication and the introduction of vehicles.

All rights reserved. No part of this publication may be reproduced, stored in a retrieval system or transmitted in any form, electronic, mechanical, recording or other means without prior written permission from Land Rover.

© 2007 Land Rover

CONTENTS

ABBREVIATIONS

.....	2
-------	---

USING THIS PUBLICATION

Health and safety	3
Using this publication	3
Section numbering	3
Circuit sheet numbering	3
Understanding the circuit diagrams	3

206-09 - ANTI-LOCK CONTROL

.....	5
-------	---

303-06 - STARTING SYSTEM

Starting and charging - D4	7
----------------------------------	---

303-14 - ELECTRONIC ENGINE CONTROLS

D4	9
----------	---

412-01 - CLIMATE CONTROL

.....	13
-------	----

412-02 - AUXILIARY CLIMATE CONTROL

Windshield heater	15
Rear window heater	16
Non air conditioning	17

413-00 - INSTRUMENT CLUSTER AND PANEL ILLUMINATION

.....	18
-------	----

413-01 - INSTRUMENT CLUSTER

.....	20
-------	----

413-06 - HORN

.....	23
-------	----

413-07 - CLOCK

.....	24
-------	----

414-01 - BATTERY, MOUNTING AND CABLES

Header joints	25
Battery junction box	30
Splices	36
Ground distribution	44

415-00 - INFORMATION AND ENTERTAINMENT SYSTEM

.....	50
-------	----

417-01 - EXTERIOR LIGHTING

Rear fog guard lamps	51
Turn signal indicators and hazard flashers	53
Trailer socket	56
Stop and reverse lamps	58
Headlamp levelling	61
Head/Side lamps	62

417-02 - INTERIOR LIGHTING

.....	65
-------	----

418-00 - MODULE COMMUNICATIONS NETWORK

Diagnostic socket	67
-------------------------	----

419-01 - ANTI-THEFT SYSTEM

Active	68
Passive	71

501-10 - SEATING

Heated - front	72
----------------------	----

501-11 - GLASS, FRAMES AND MECHANISMS

Window lift	73
-------------------	----

501-12 - INSTRUMENT PANEL AND CONSOLE

Cigar lighter	74
.....	75

501-16 - WIPERS AND WASHERS

Rear	76
Front	77

ABBREVIATIONS

Abbreviation	Description
ABS	Anti-lock braking system
AFS	Adaptive front lighting system
AUTO	Automatic transmission
CAN	Controller area network
DSC	Dynamic stability control
D4	Diesel engine - Straight-four
DV6	Diesel engine - V6
DV8	Diesel engine - V8
EGR	Exhaust gas recirculation
FET	Field effect transistor
GPS	Global positioning system
HS CAN	High speed controller area network bus
PV6	Petrol engine - V6
PV8	Petrol engine - V8
PV8NA	Naturally aspirated engine - V8
PV8SC	Super charged engine - V8
LH	Left-hand
LIN	Local interconnect network
MAF/IAT	Mass air flow / intake air temperature
MS CAN	Medium speed controller area network bus
NAS	North American specification
PDC	Park distance control
RH	Right-hand
TPMS	Tire pressure monitoring system
TSD	Touch screen display

USING THIS PUBLICATION

Health and safety

Always follow health and safety guidelines, specifically those detailed in the Workshop Manual.

Using this publication

The information provided in this publication is for use only by competent, qualified auto-electricians. Good product knowledge is assumed, as well as the ability to access and use recommended test equipment and other reference material provided.

Test equipment and other reference material

The information in this publication should be used in conjunction with the recommended test equipment; refer to Workshop Manual. Other reference material includes: Technical Service Bulletins (TSB) and the Workshop Manual.

The Electrical Reference Library (ERL) may also prove useful since it provides detailed connector information.

Battery disconnection and reconnection

It is imperative that any information relating to battery disconnection and reconnection is followed; refer to the appropriate sections in the Workshop Manual.

Fault Diagnosis

Always use the recommended test equipment for correct and reliable fault diagnosis, refer to the Workshop Manual.

Harness Repair

Repairs should only be undertaken for connectors where a Service Repair Kit is available; refer to the appropriate Electrical Reference Library (ERL).

Note: Fibre Optic circuits cannot be repaired; refer to the Workshop Manual.

Section numbering

The sections in this publication are ordered to match the Global Outline numbering system as found in the current Workshop Manual. The Power and Ground distribution circuits can be found under section 414-01, BATTERY, MOUNTING AND CABLES.


Note: Where circuit diagrams show more than one sub-system, the circuit will be located in the section that carries the first-named sub-system, for example: Starting and Charging will be located under section 303-06 Starting System, since 'Starting' is the first-named sub-system.

Circuit sheet numbering

The figures in brackets to the left of the page number indicate a circuit sheet number and the total number of sheets per circuit, for example (01 / 05) represents sheet 1 of 5.

Understanding the circuit diagrams

Components

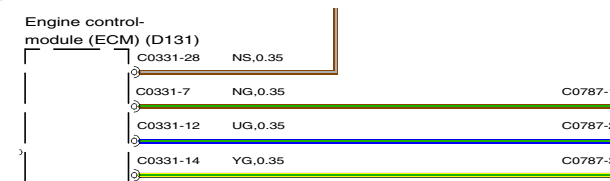

After each component description, a translation code is displayed in brackets, for example: Starter relay (R102), Engine control-module (ECM)(D131). The codes can be ignored.

Note: A dotted outline indicates that the component identified is not shown in its entirety.

Connectors

 
Connectors and header joints are identified by their corresponding connector number with a numbered suffix to indicate the pin-out detail of the wire, i.e. C0292-1 identifies connector 292, pin number 1. Wire insulation colours are listed in a table at the end of this section. Where wires have a predominant colour with a secondary colour tracer, the main colour is identified first, i.e. WH-BK - white with a black tracer.

USING THIS PUBLICATION


Wire length (Power and Ground Distribution only)

The wire length (in millimetres) is displayed after the colour and cross sectional area; for example, SR,0.35,480. In this example, the figure, 480 indicates the approximate position of the harness splice is 480mm from connector C2335.


Line Types



 Crossed wires as illustrated above show an example of how a twisted pair of wires may be represented on the circuits.



The arrows illustrated above show an example of the page break symbols, identifying that the circuit continues at the corresponding letter on the sheet number indicated.

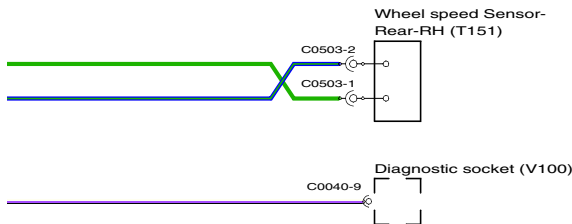

The cup and ball symbol represents the male and female halves of connector. Most connectors plug directly into a component but some are wired directly to the component using a 'flylead' as with C503 above.


Ground points


Ground points are identified with an eyelet symbol and a connector number, except where components are grounded through its fixings, when only the eyelet is shown.


Colour Codes


CODE	COLOUR
BK or B	BLACK
BN or N	BROWN
BU or U	BLUE
GN or G	GREEN
GY or S	GREY (slate)
OG or O	ORANGE
PK or K	PINK
RD or R	RED
VT or P	PURPLE
WH or W	WHITE
YE or Y	YELLOW


206-09 - ANTI-LOCK CONTROL

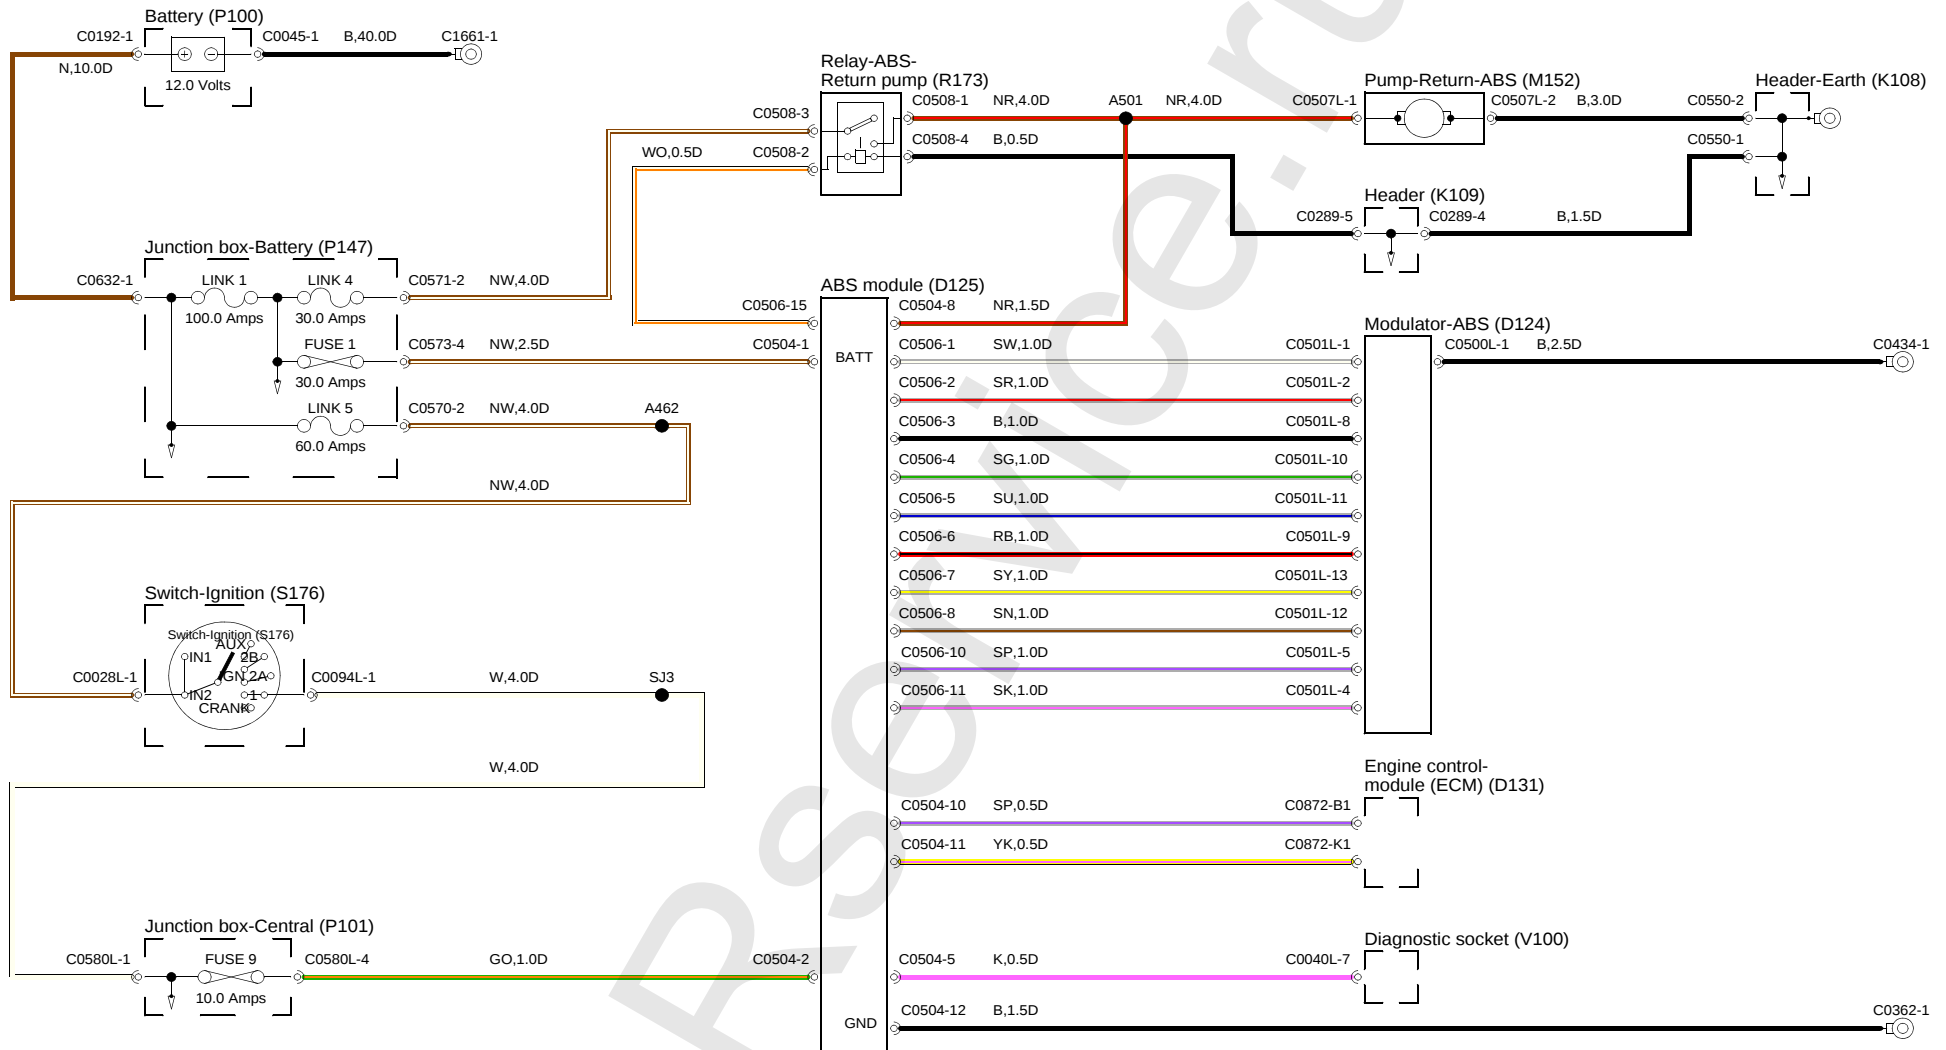


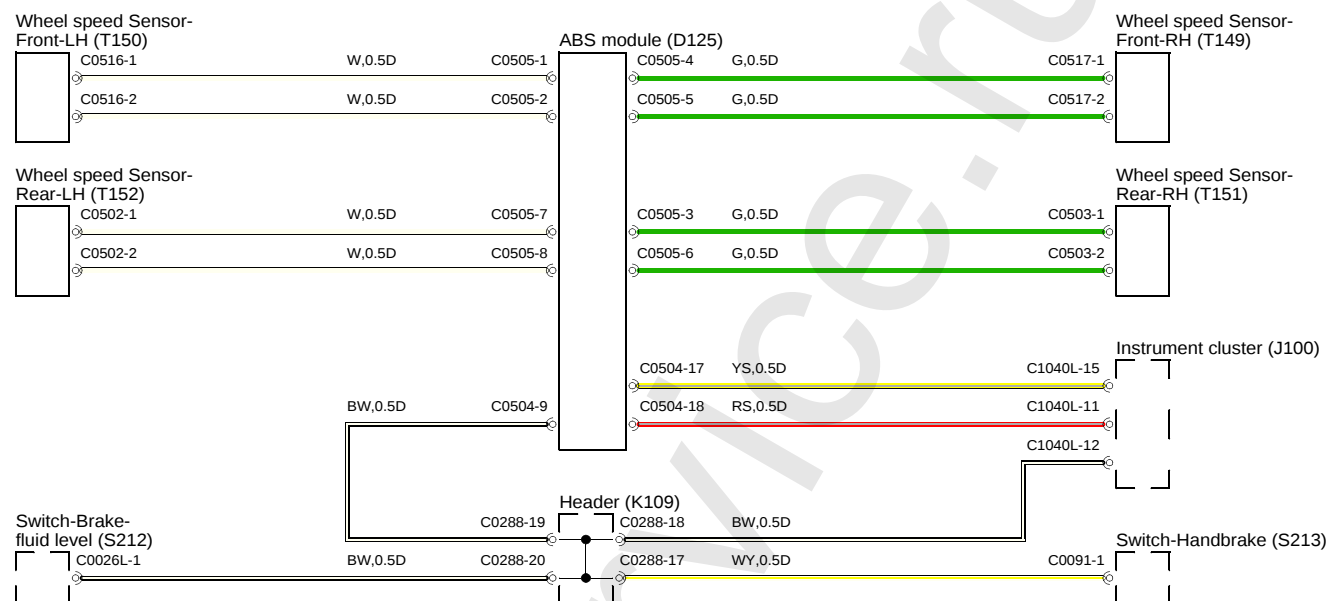


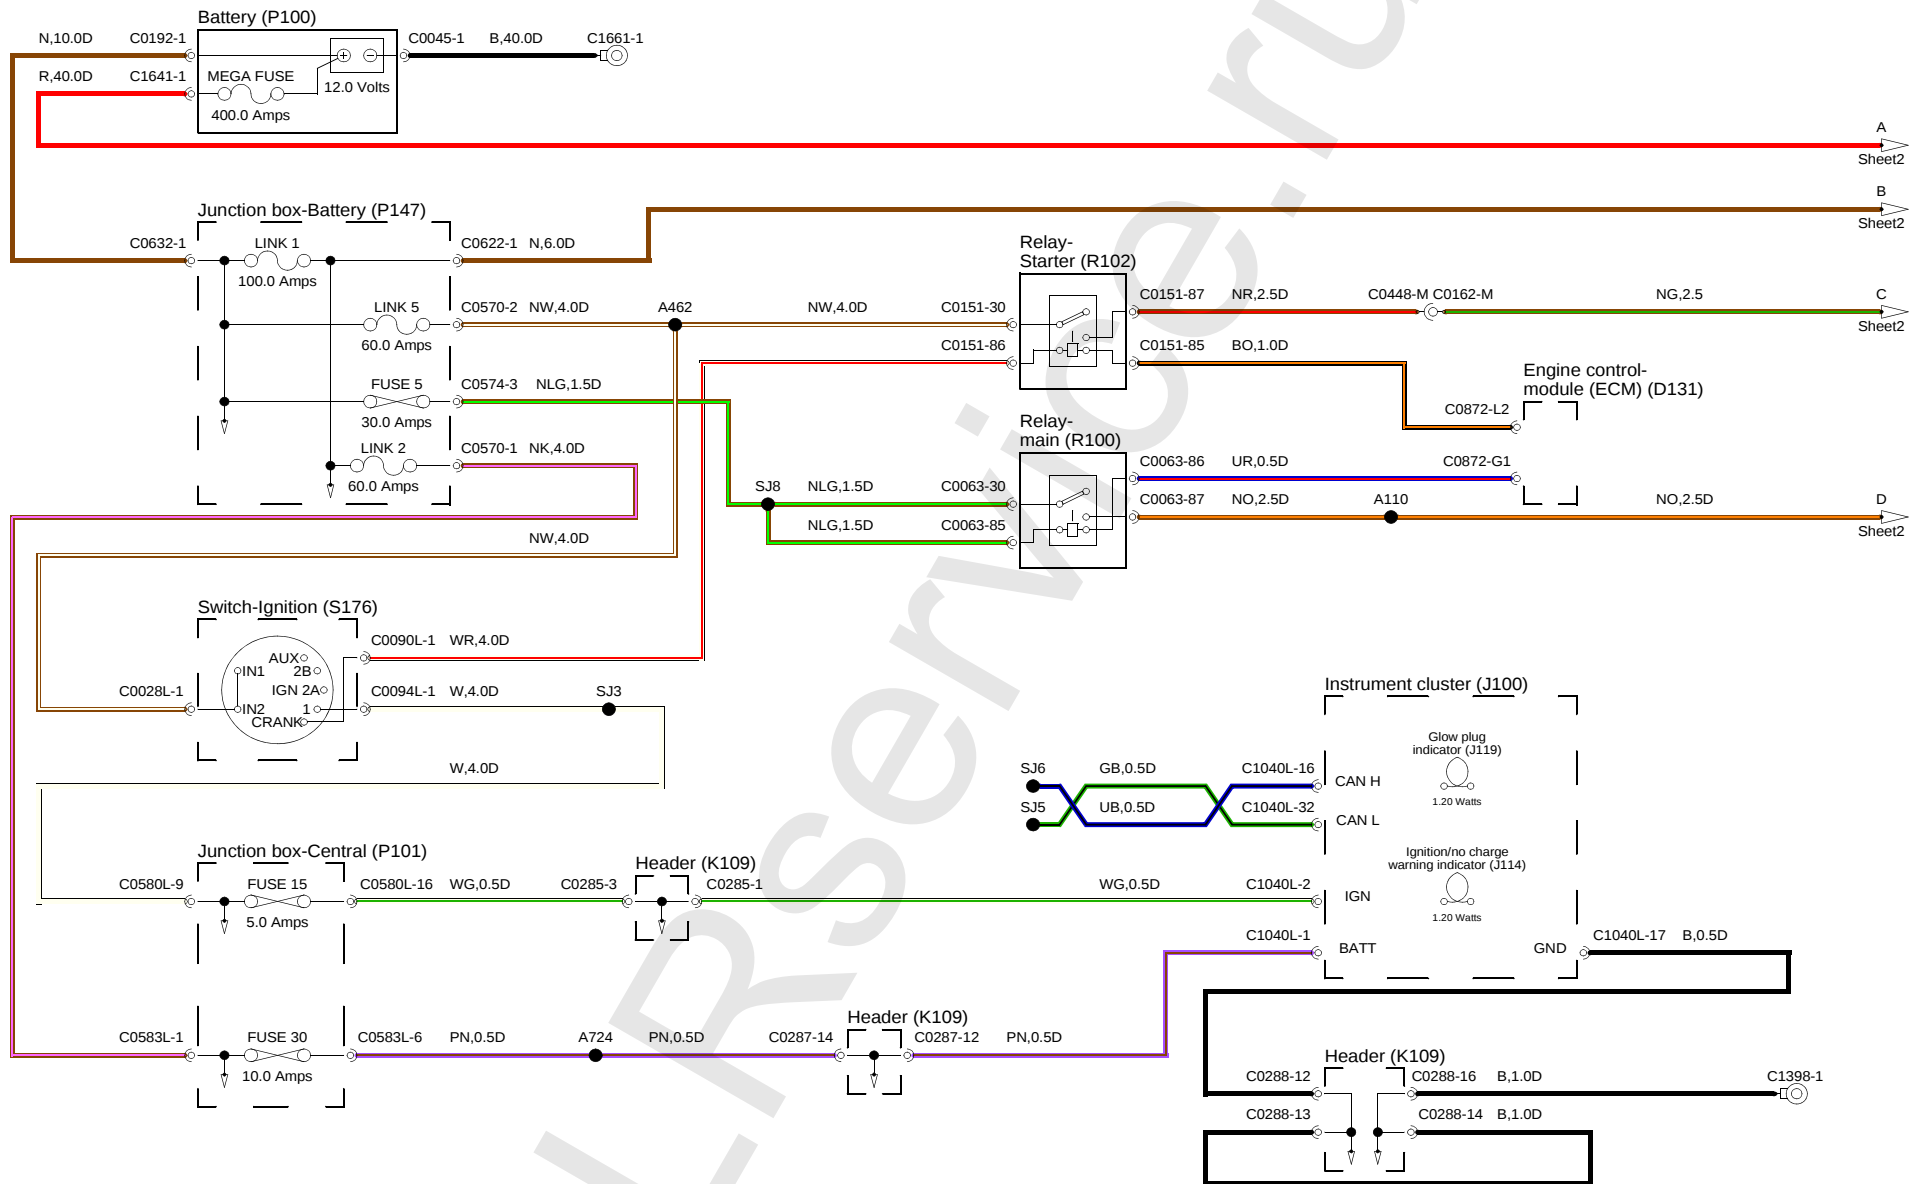


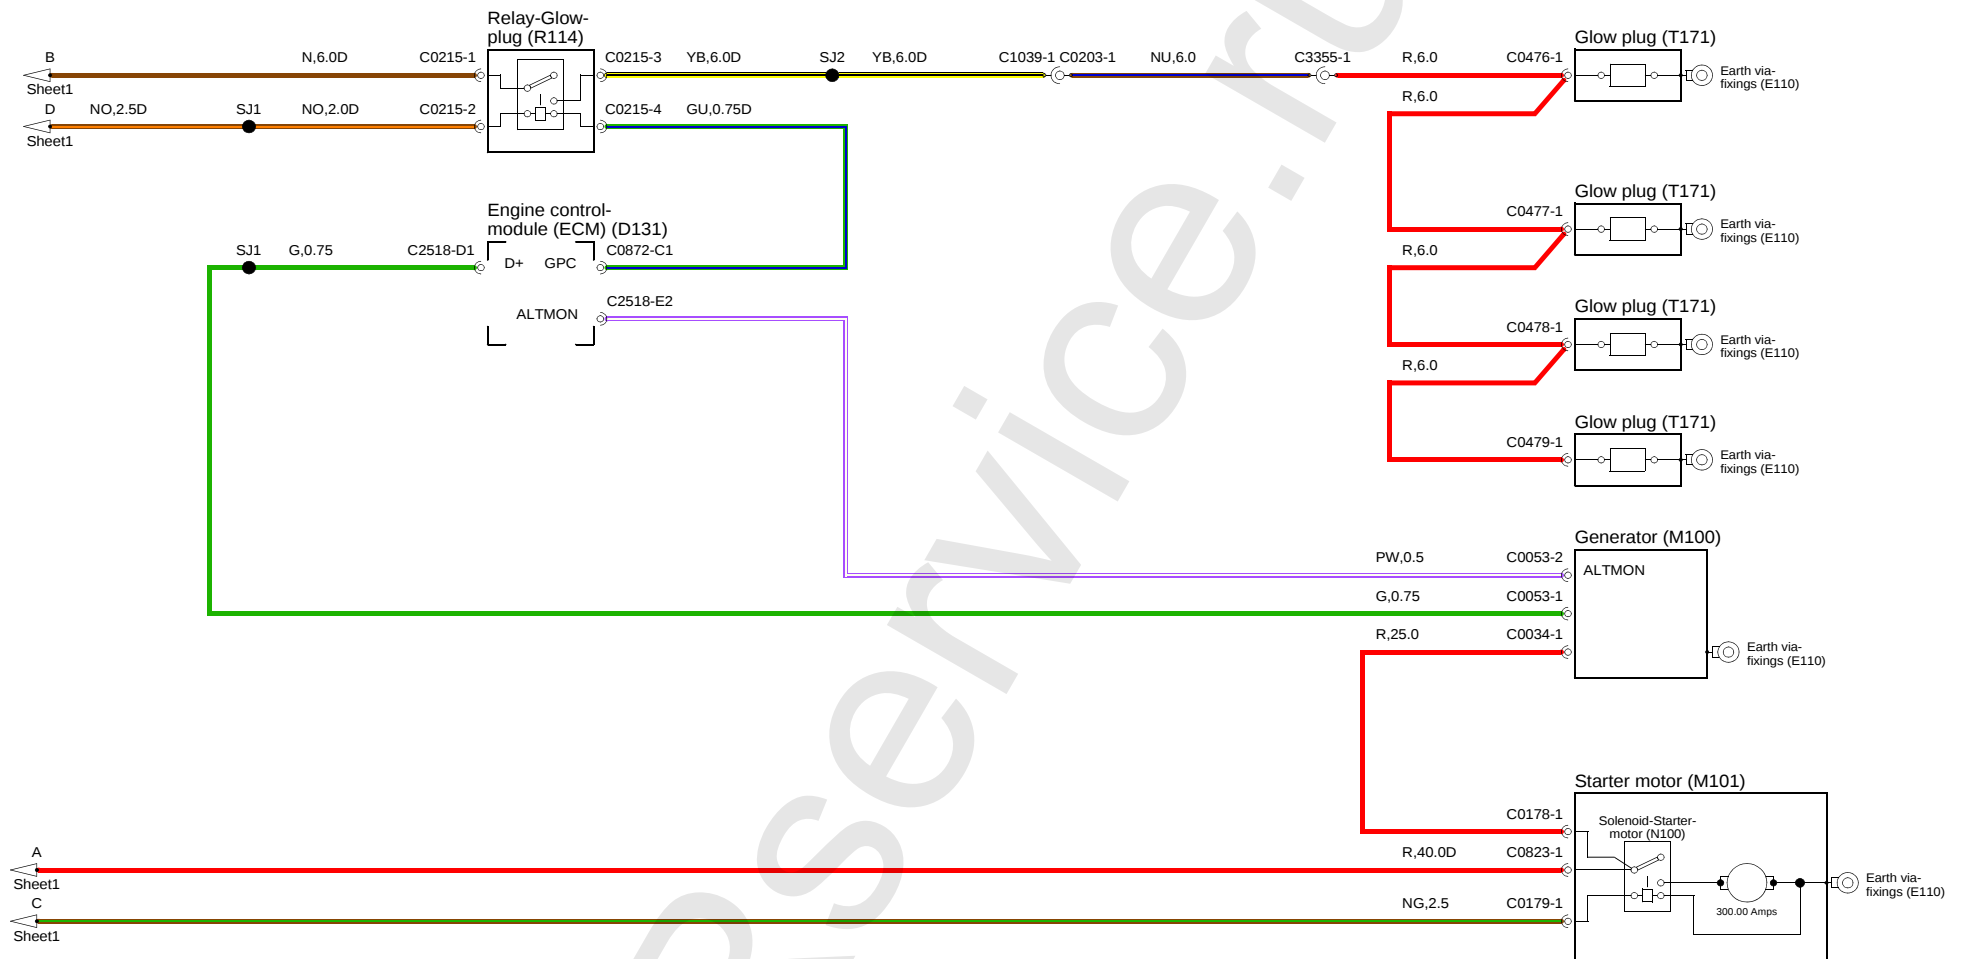


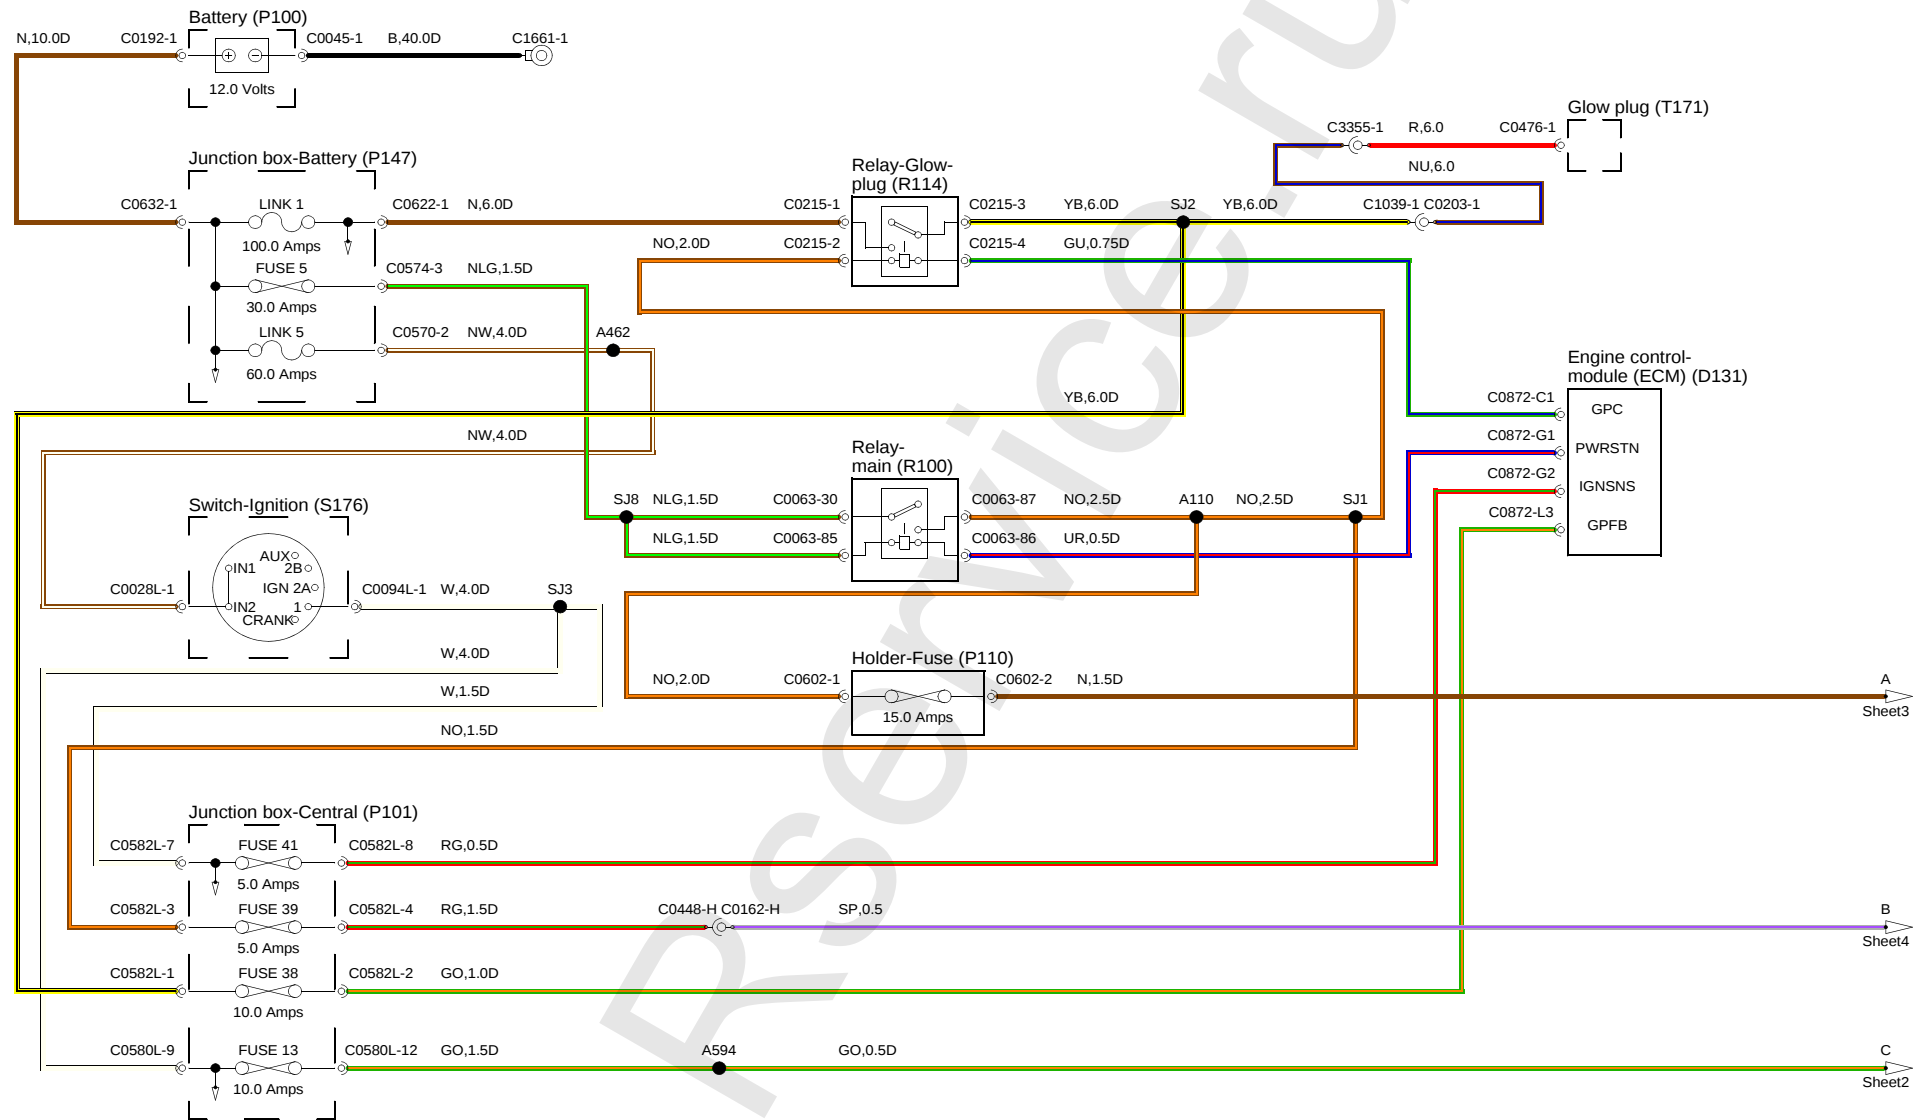


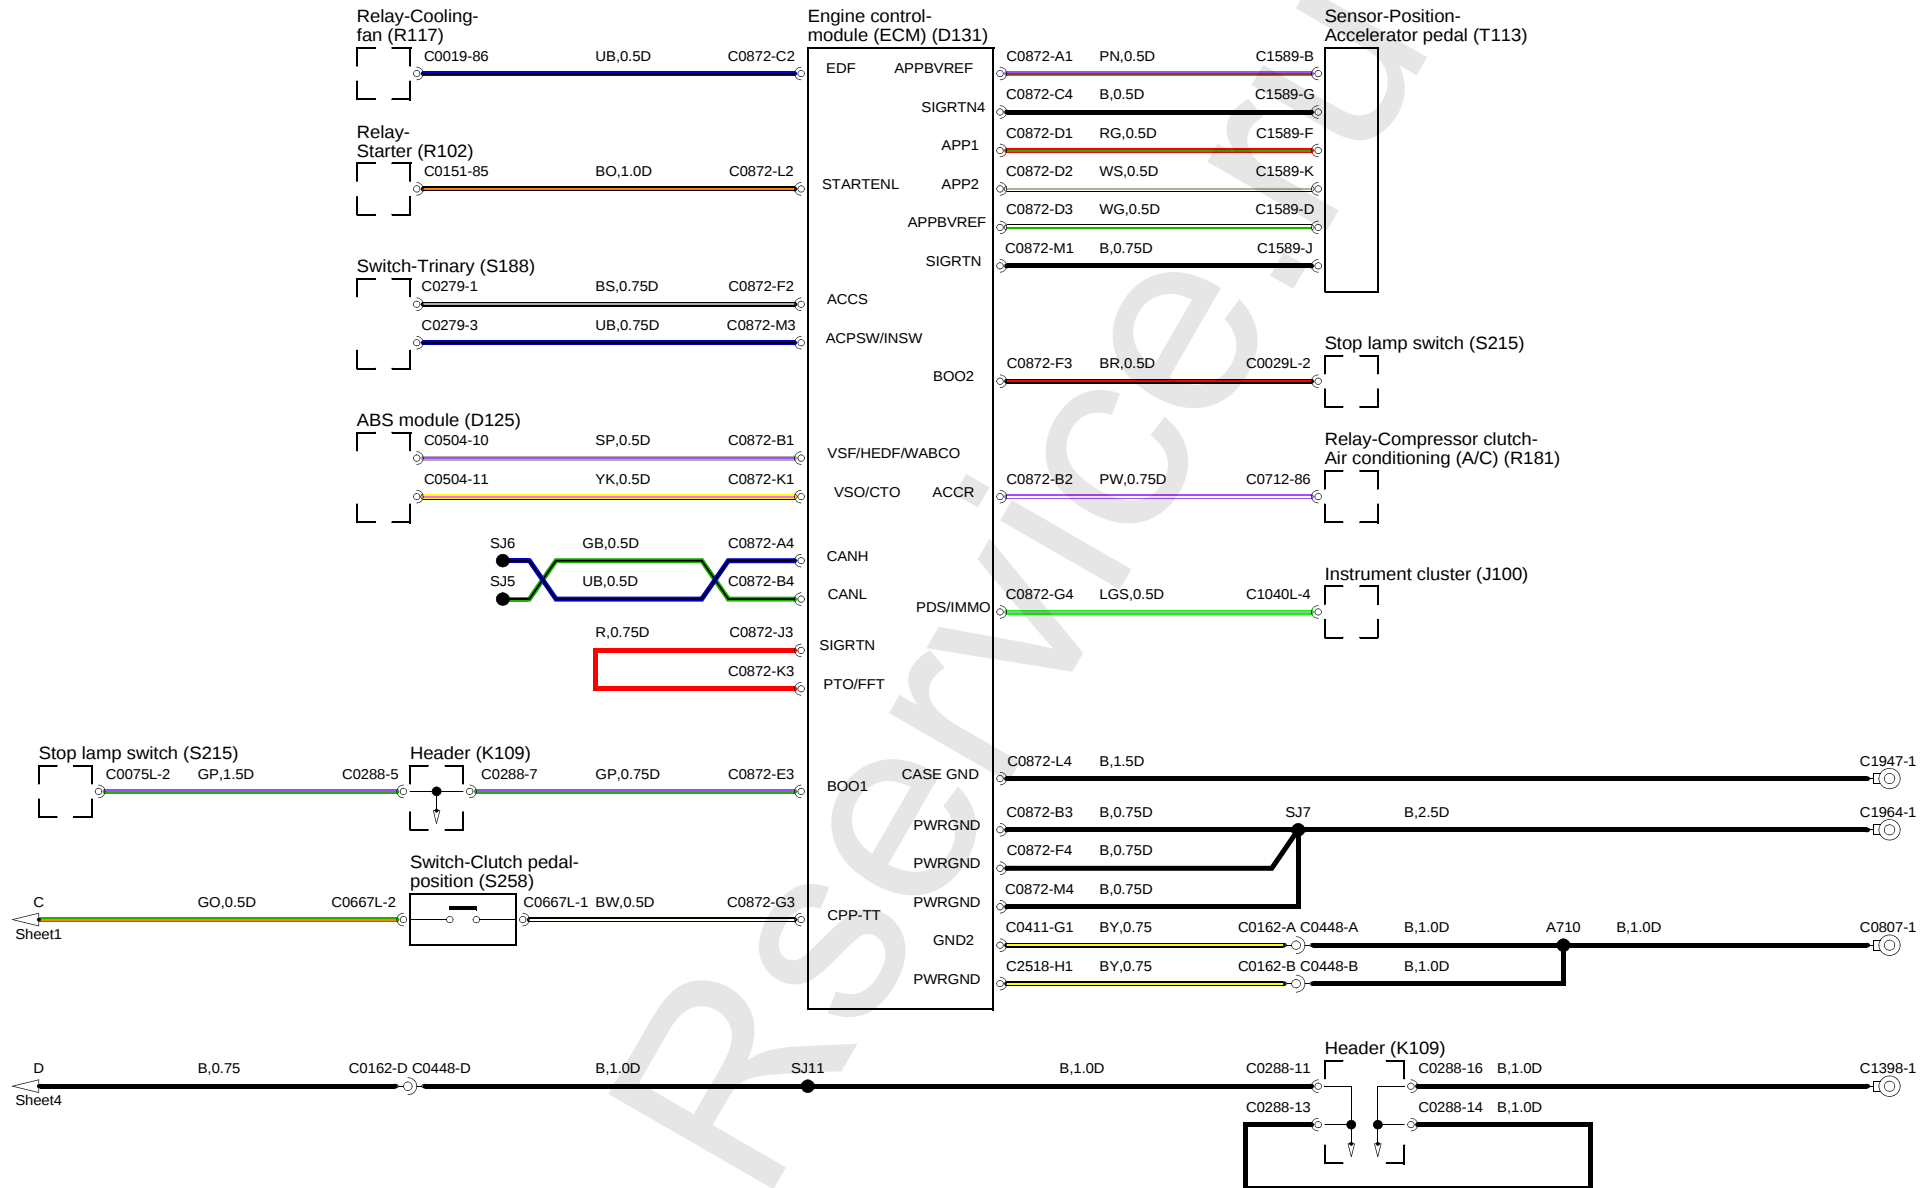


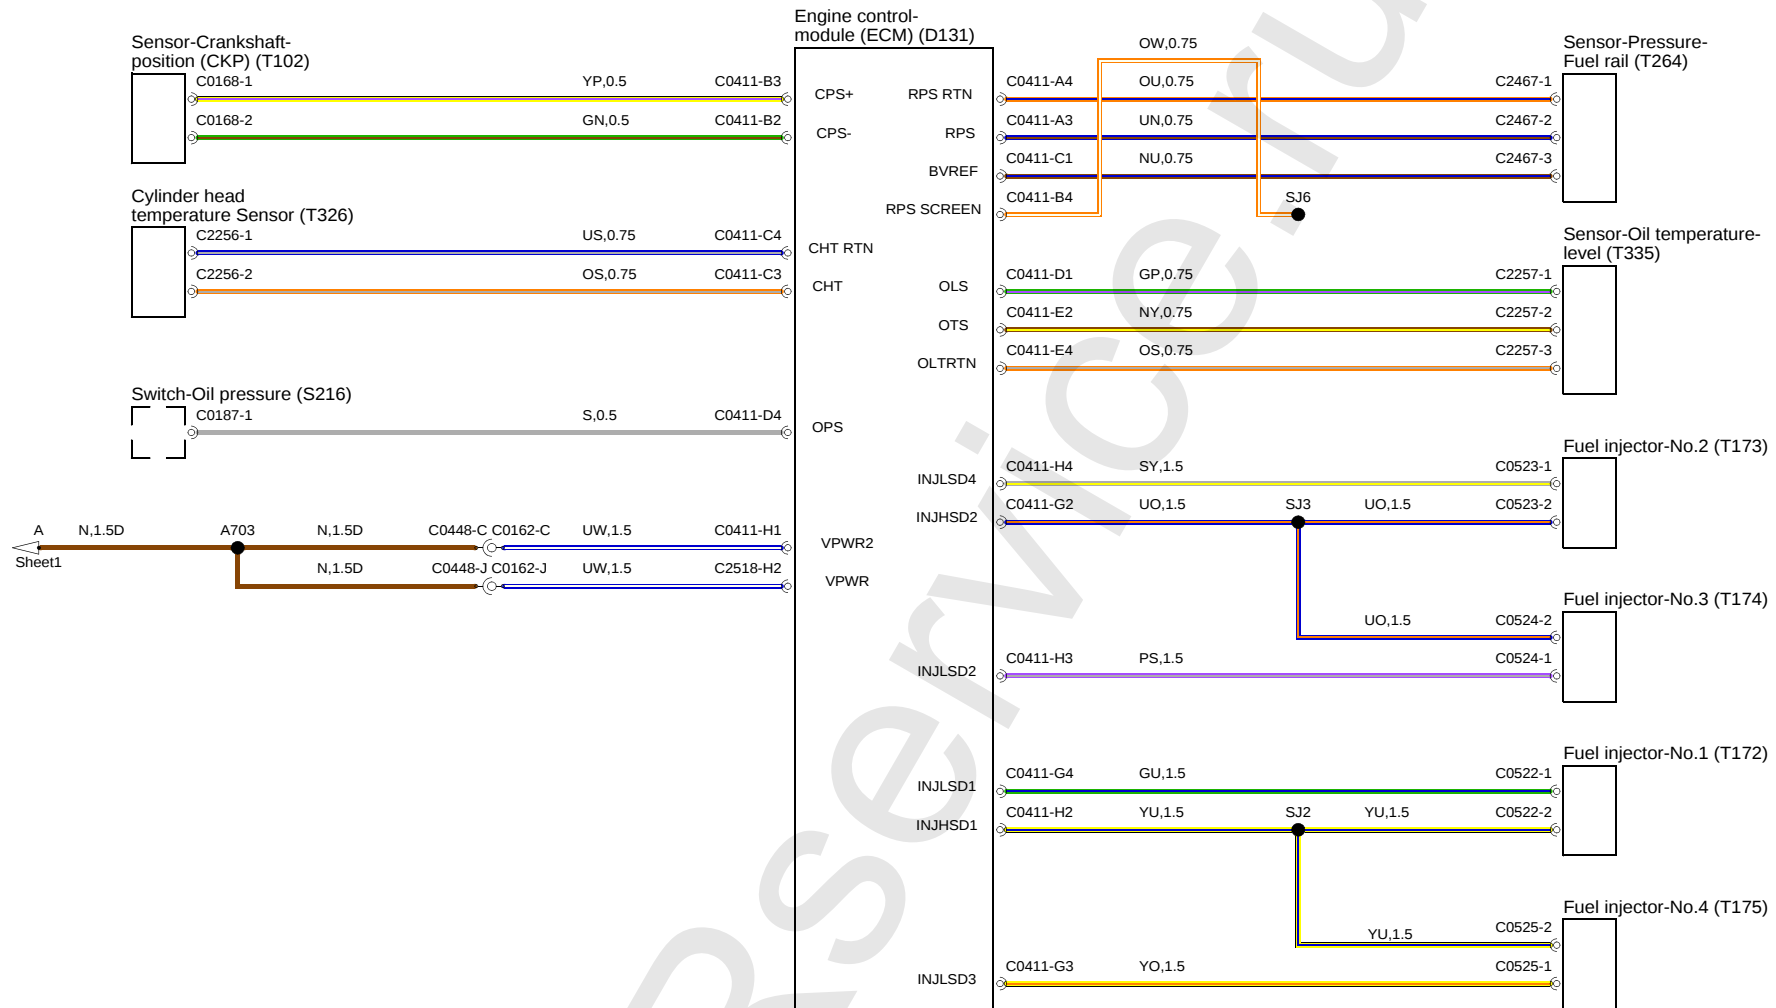


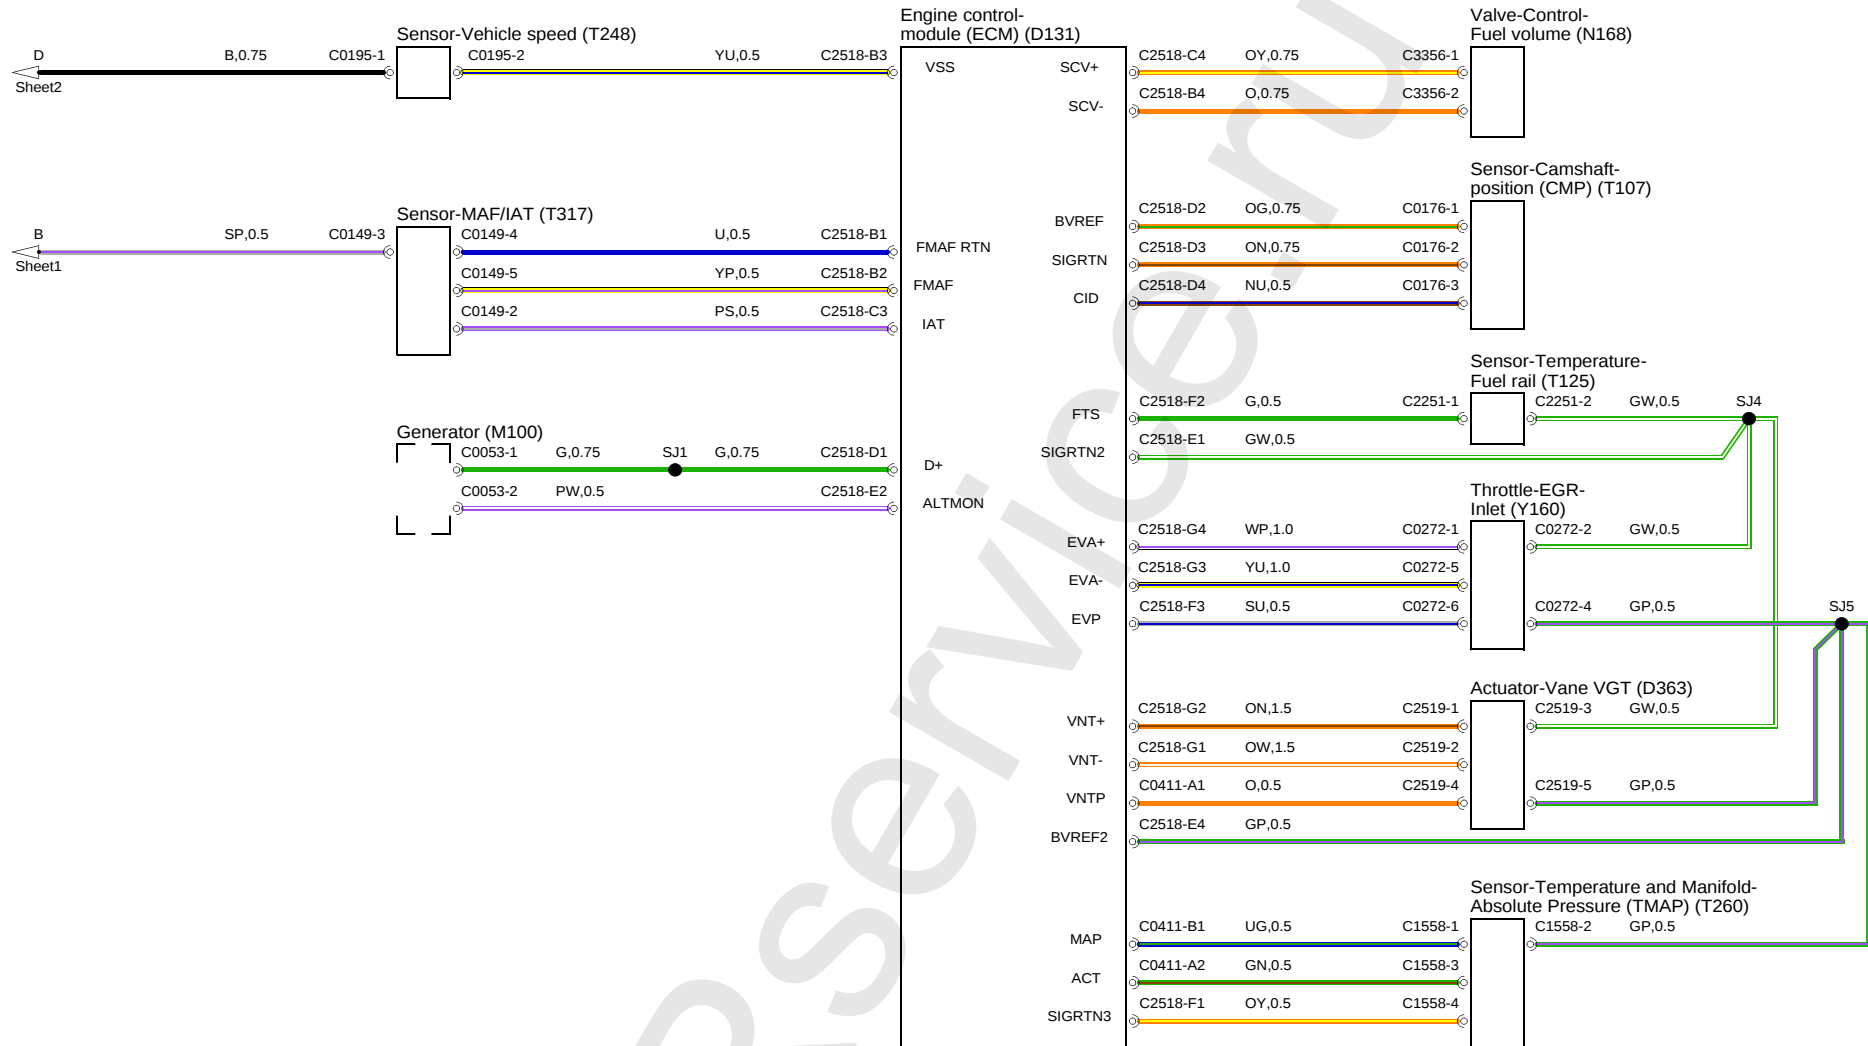


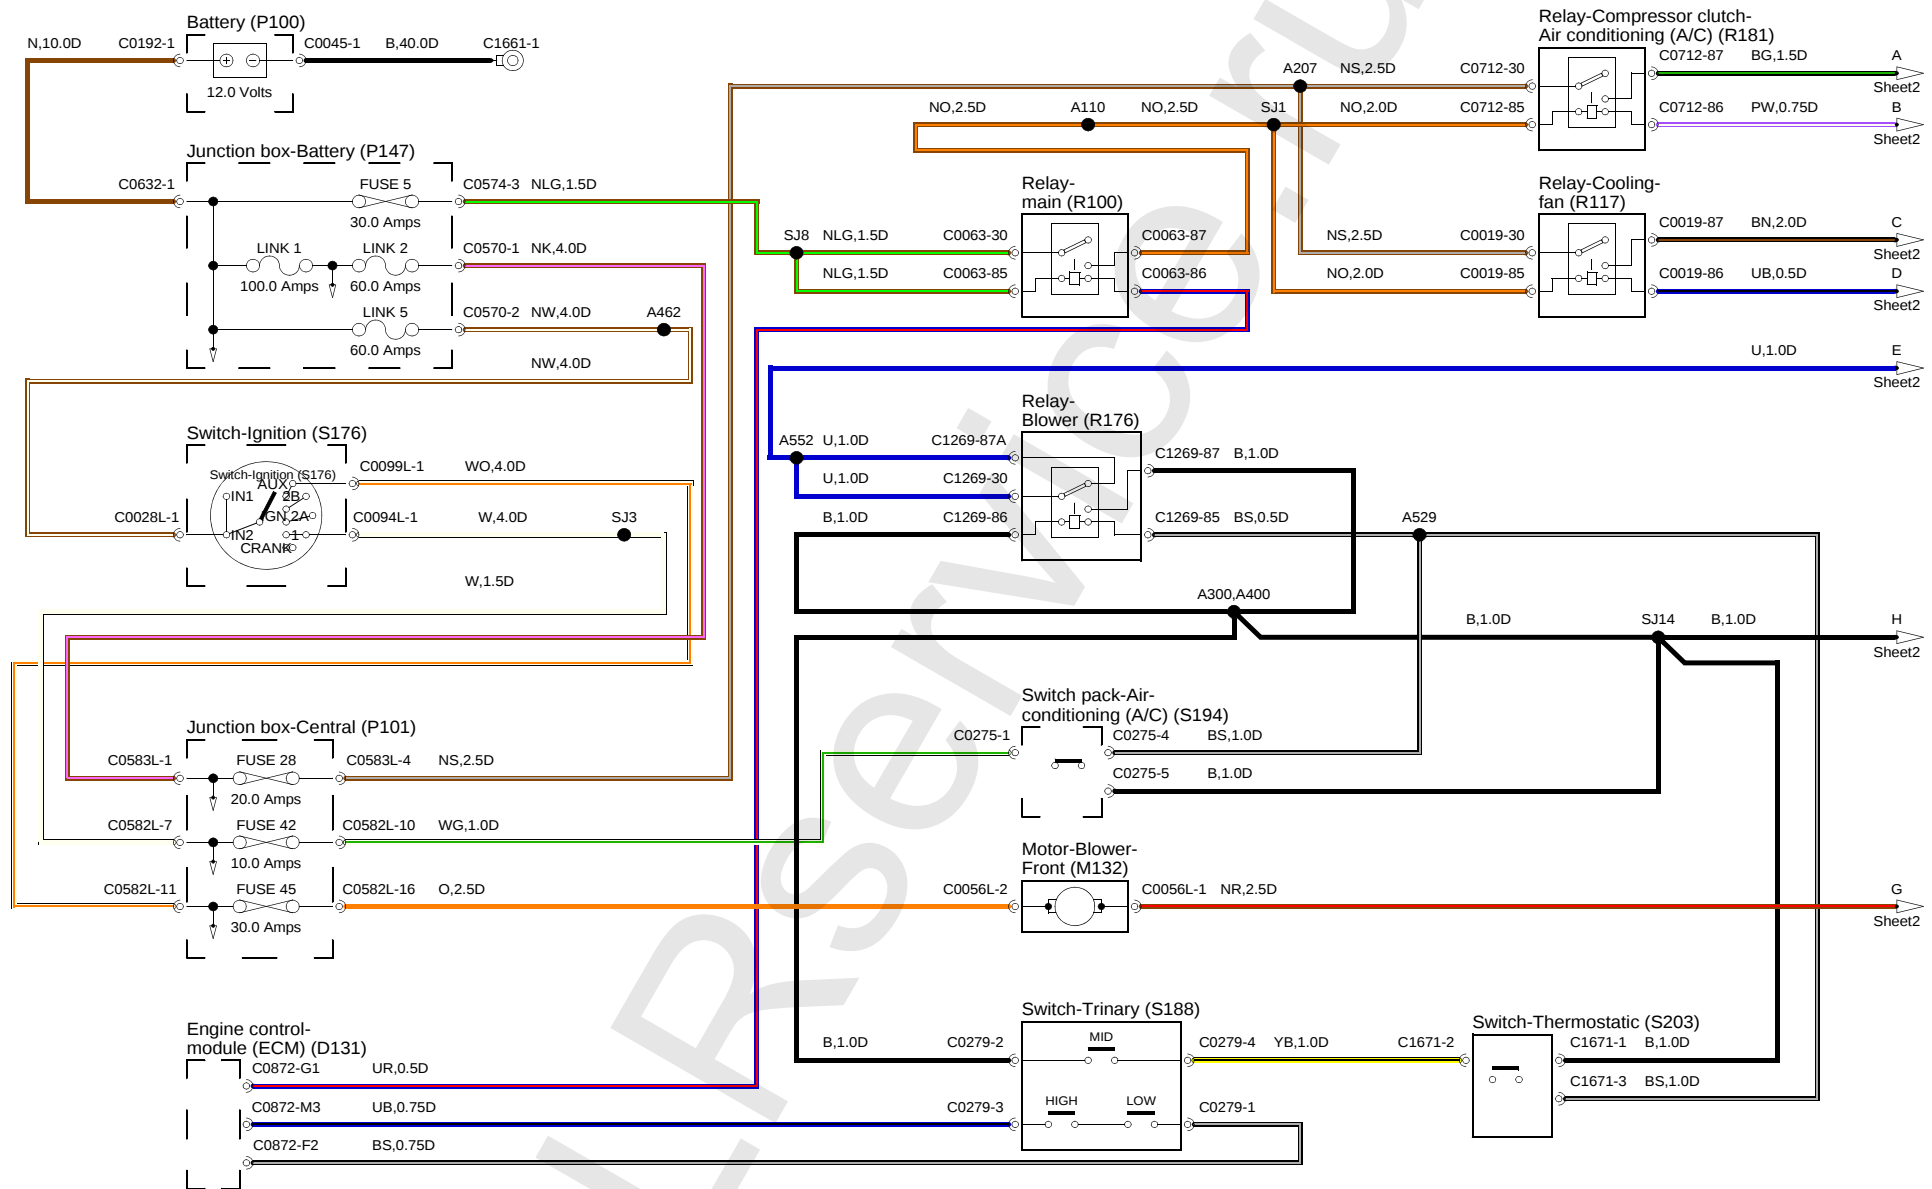


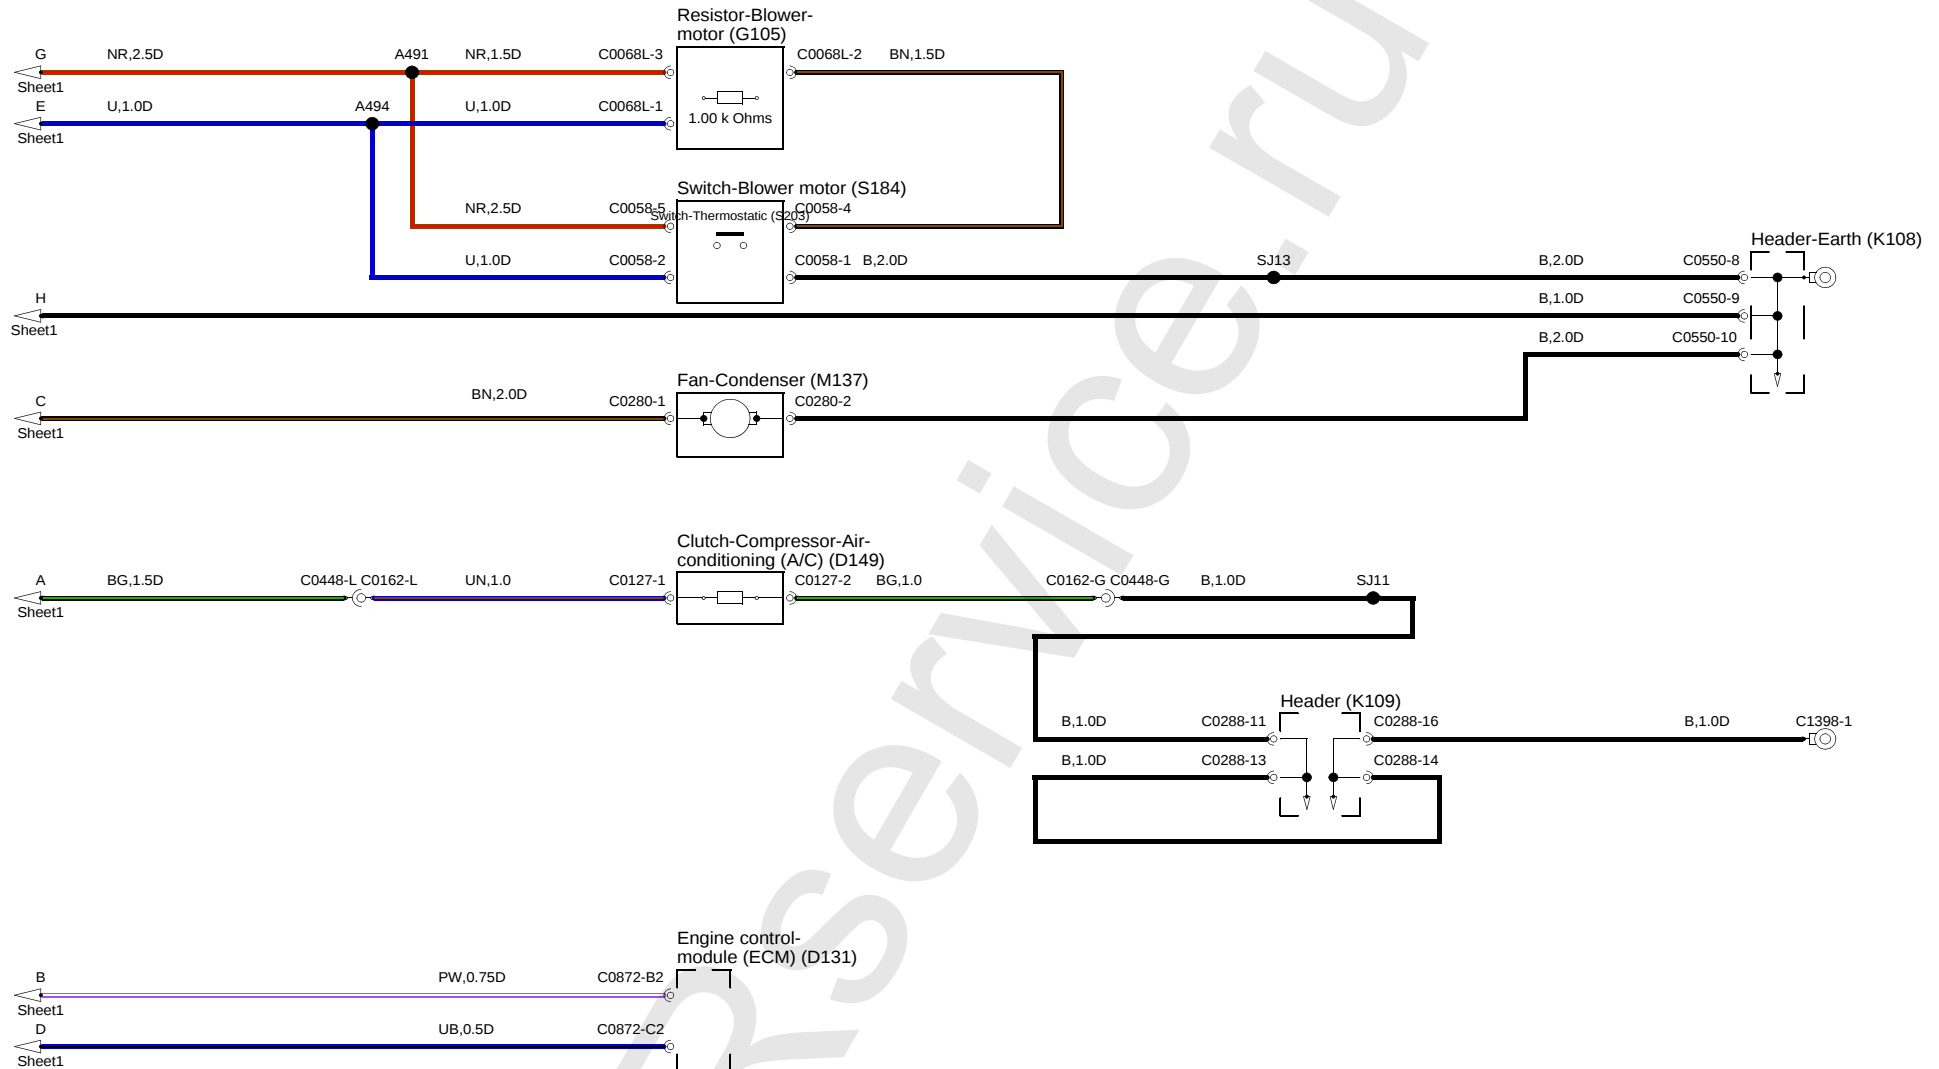

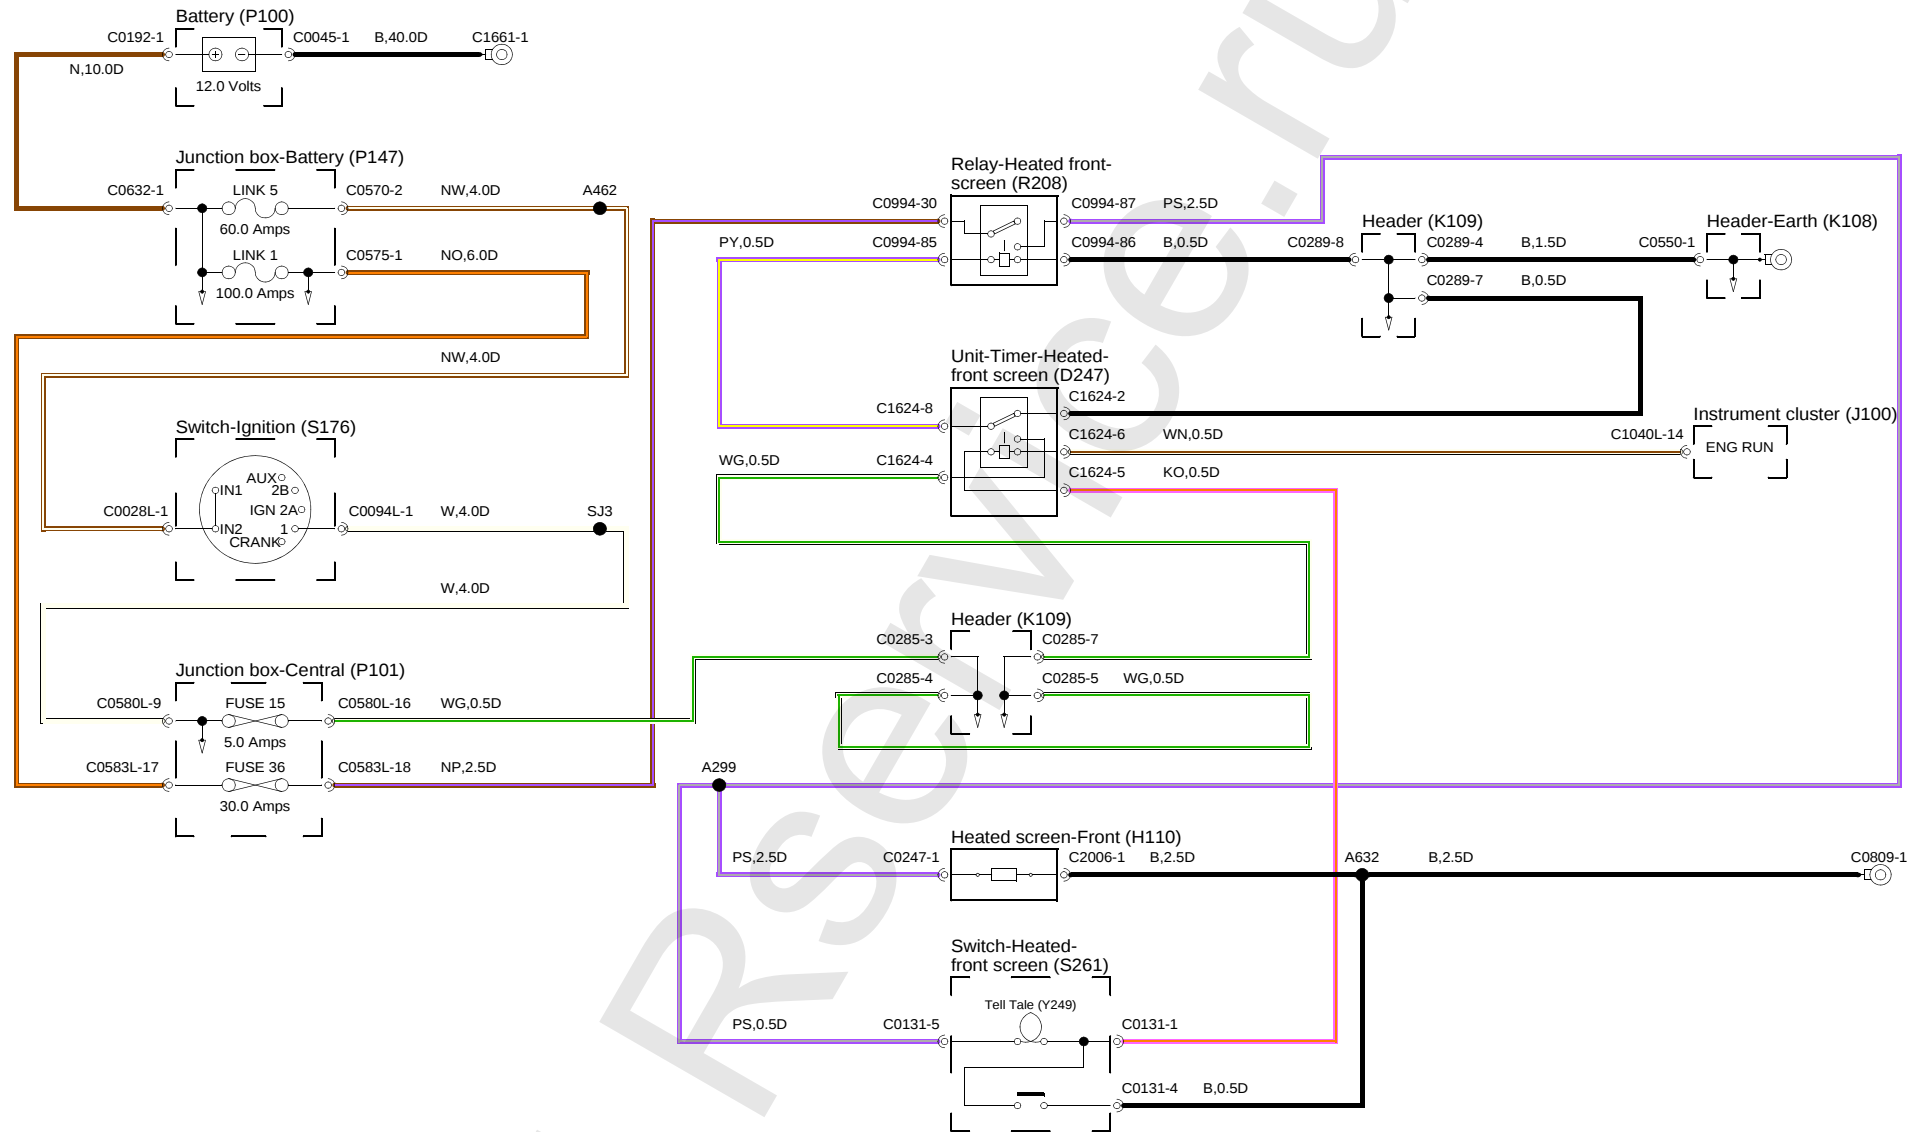


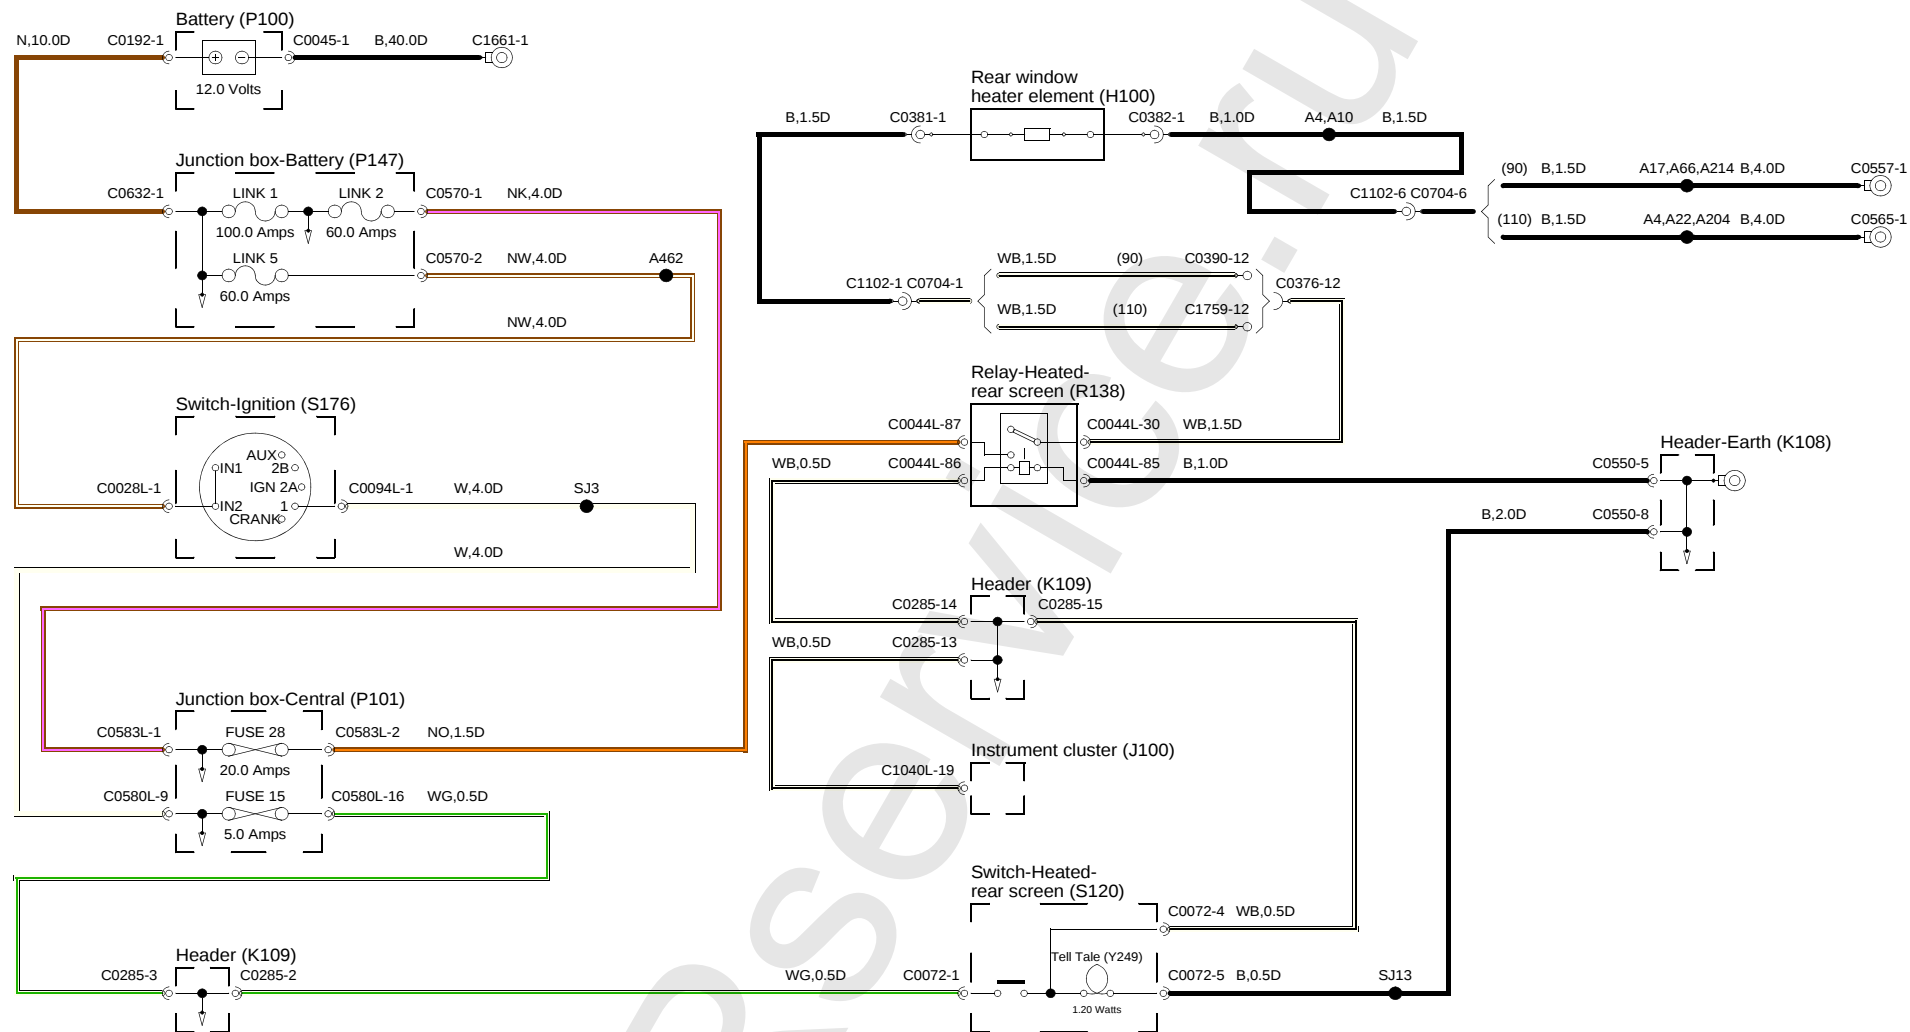


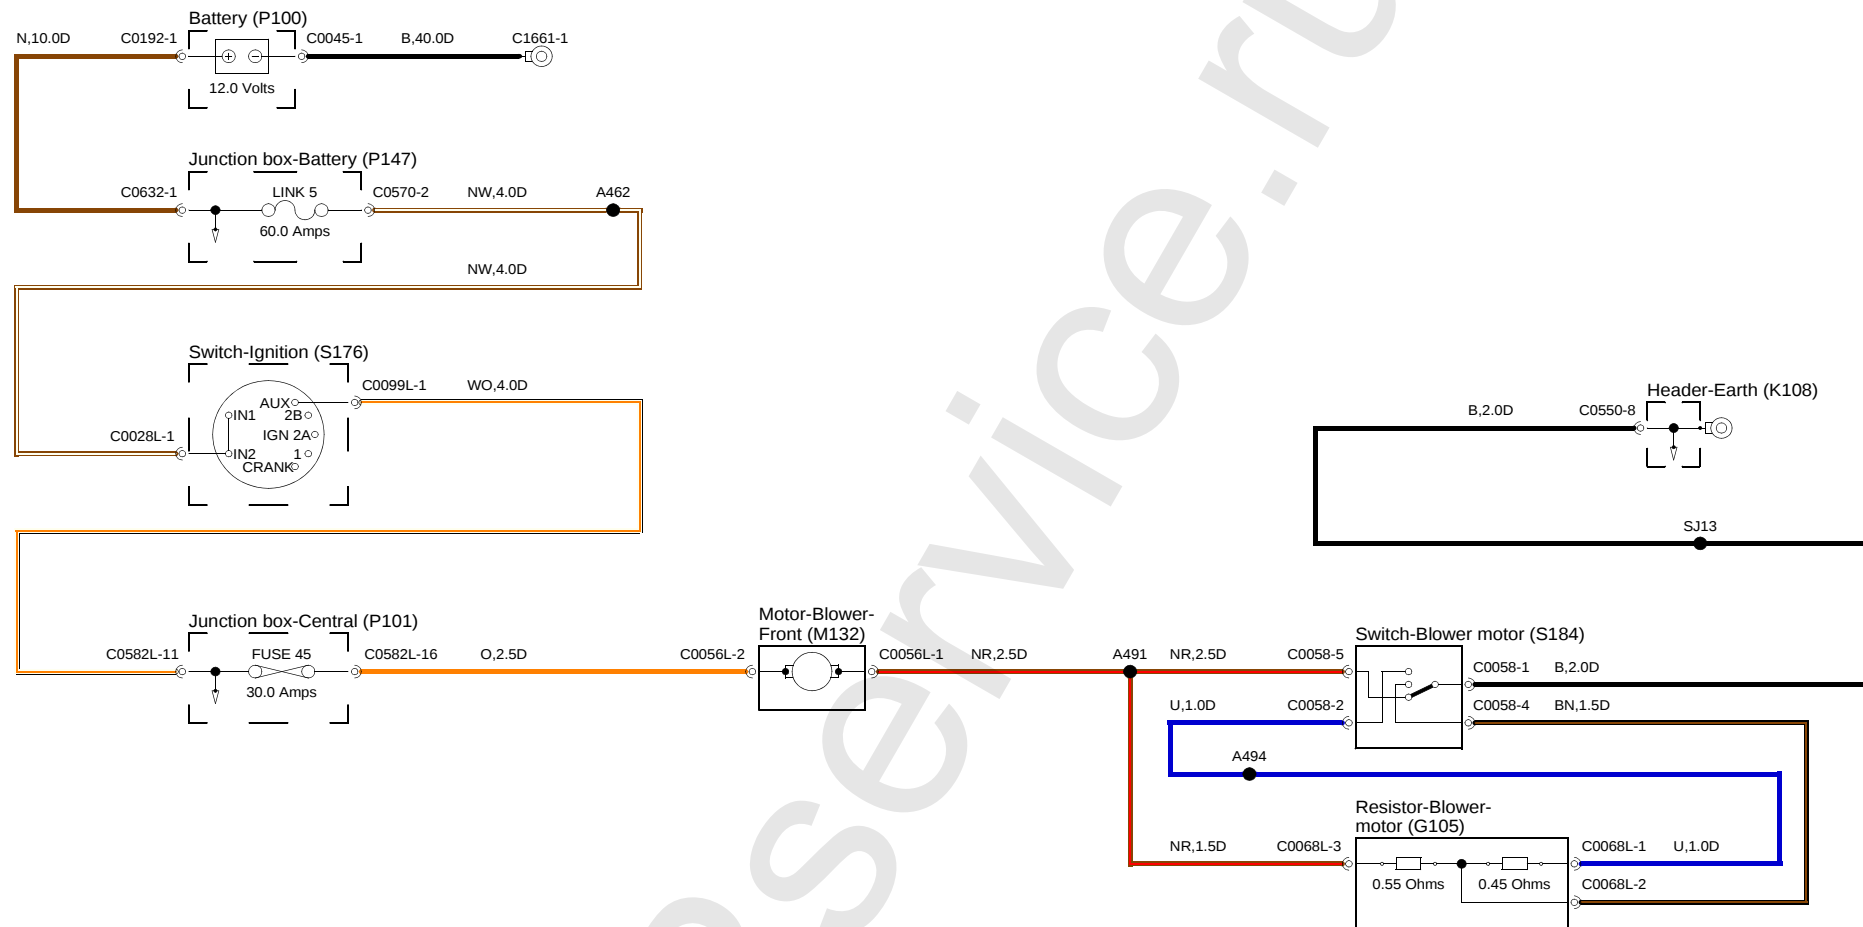

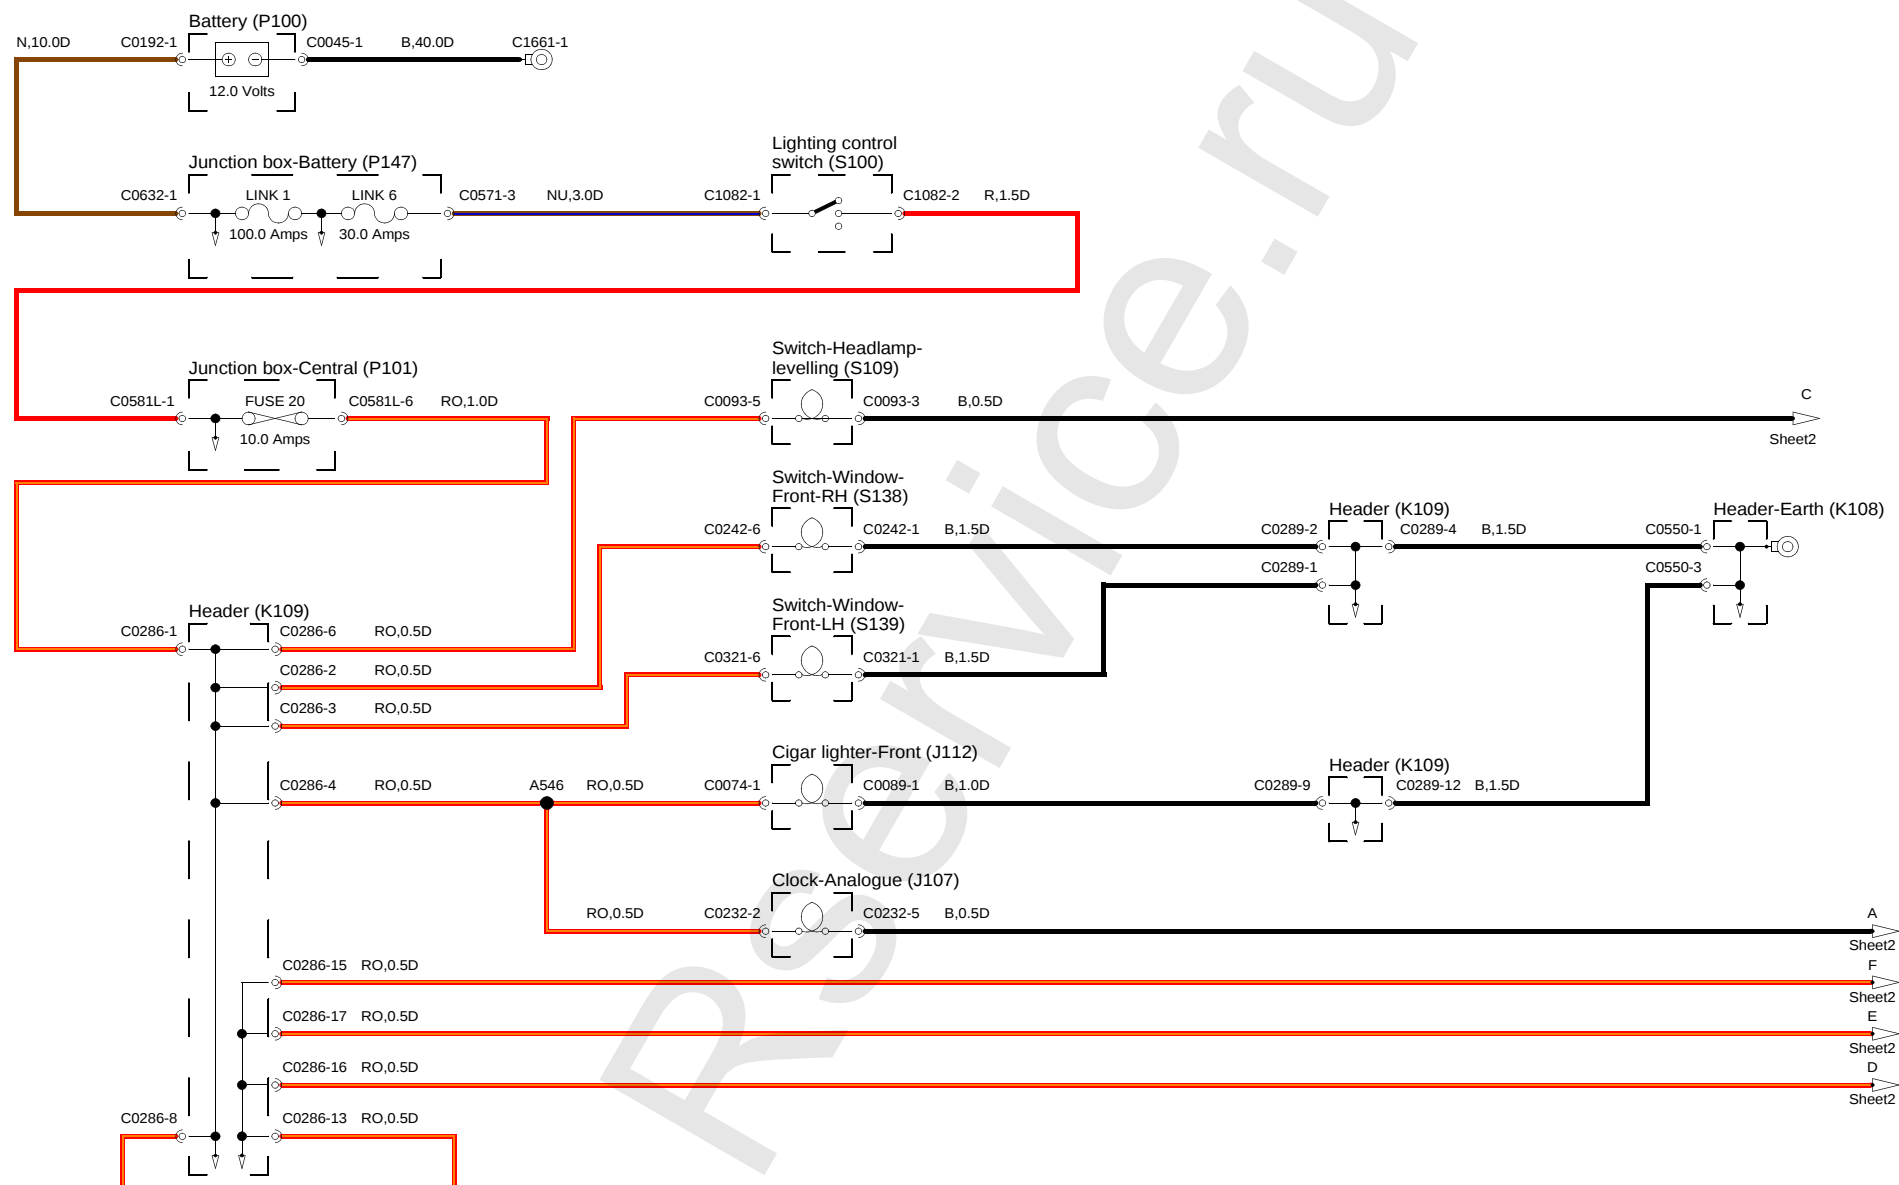



413-00 - INSTRUMENT CLUSTER AND PANEL ILLUMINATION

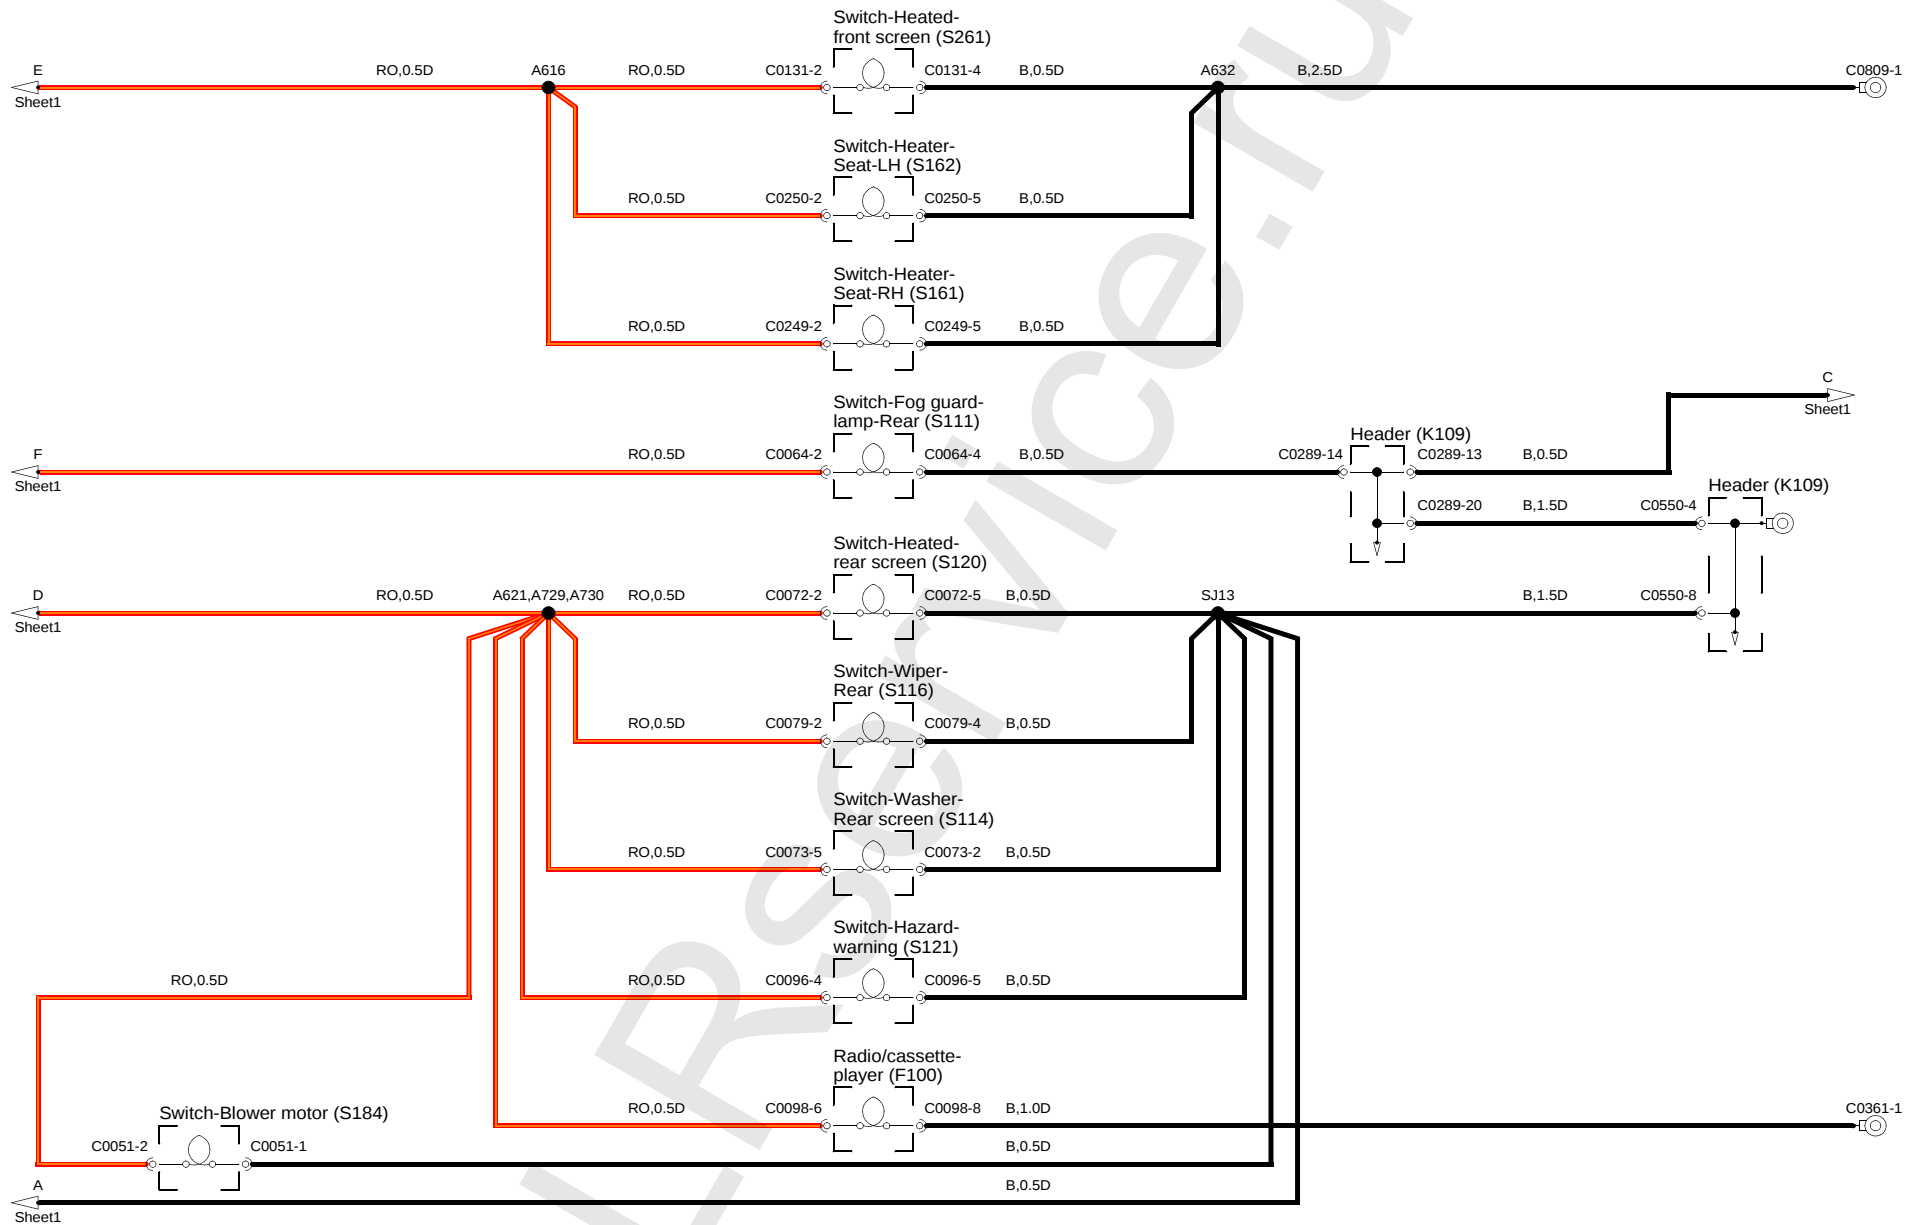


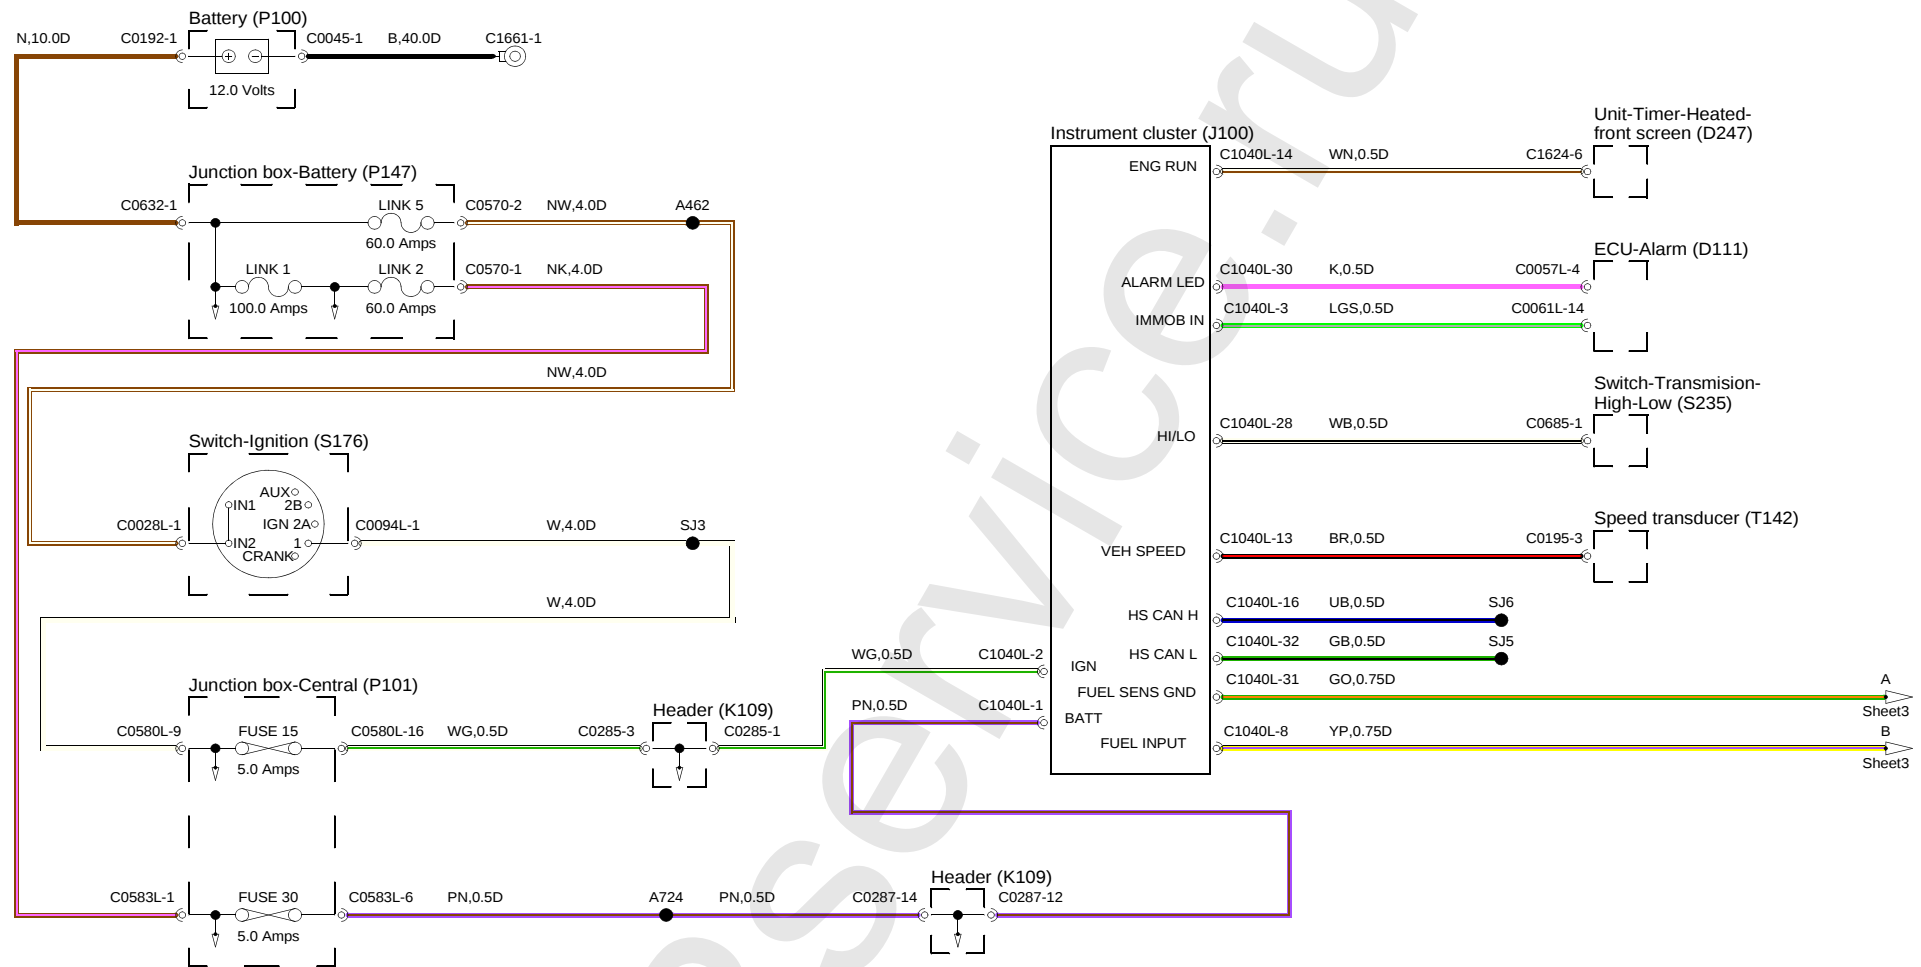



413-01 - INSTRUMENT CLUSTER

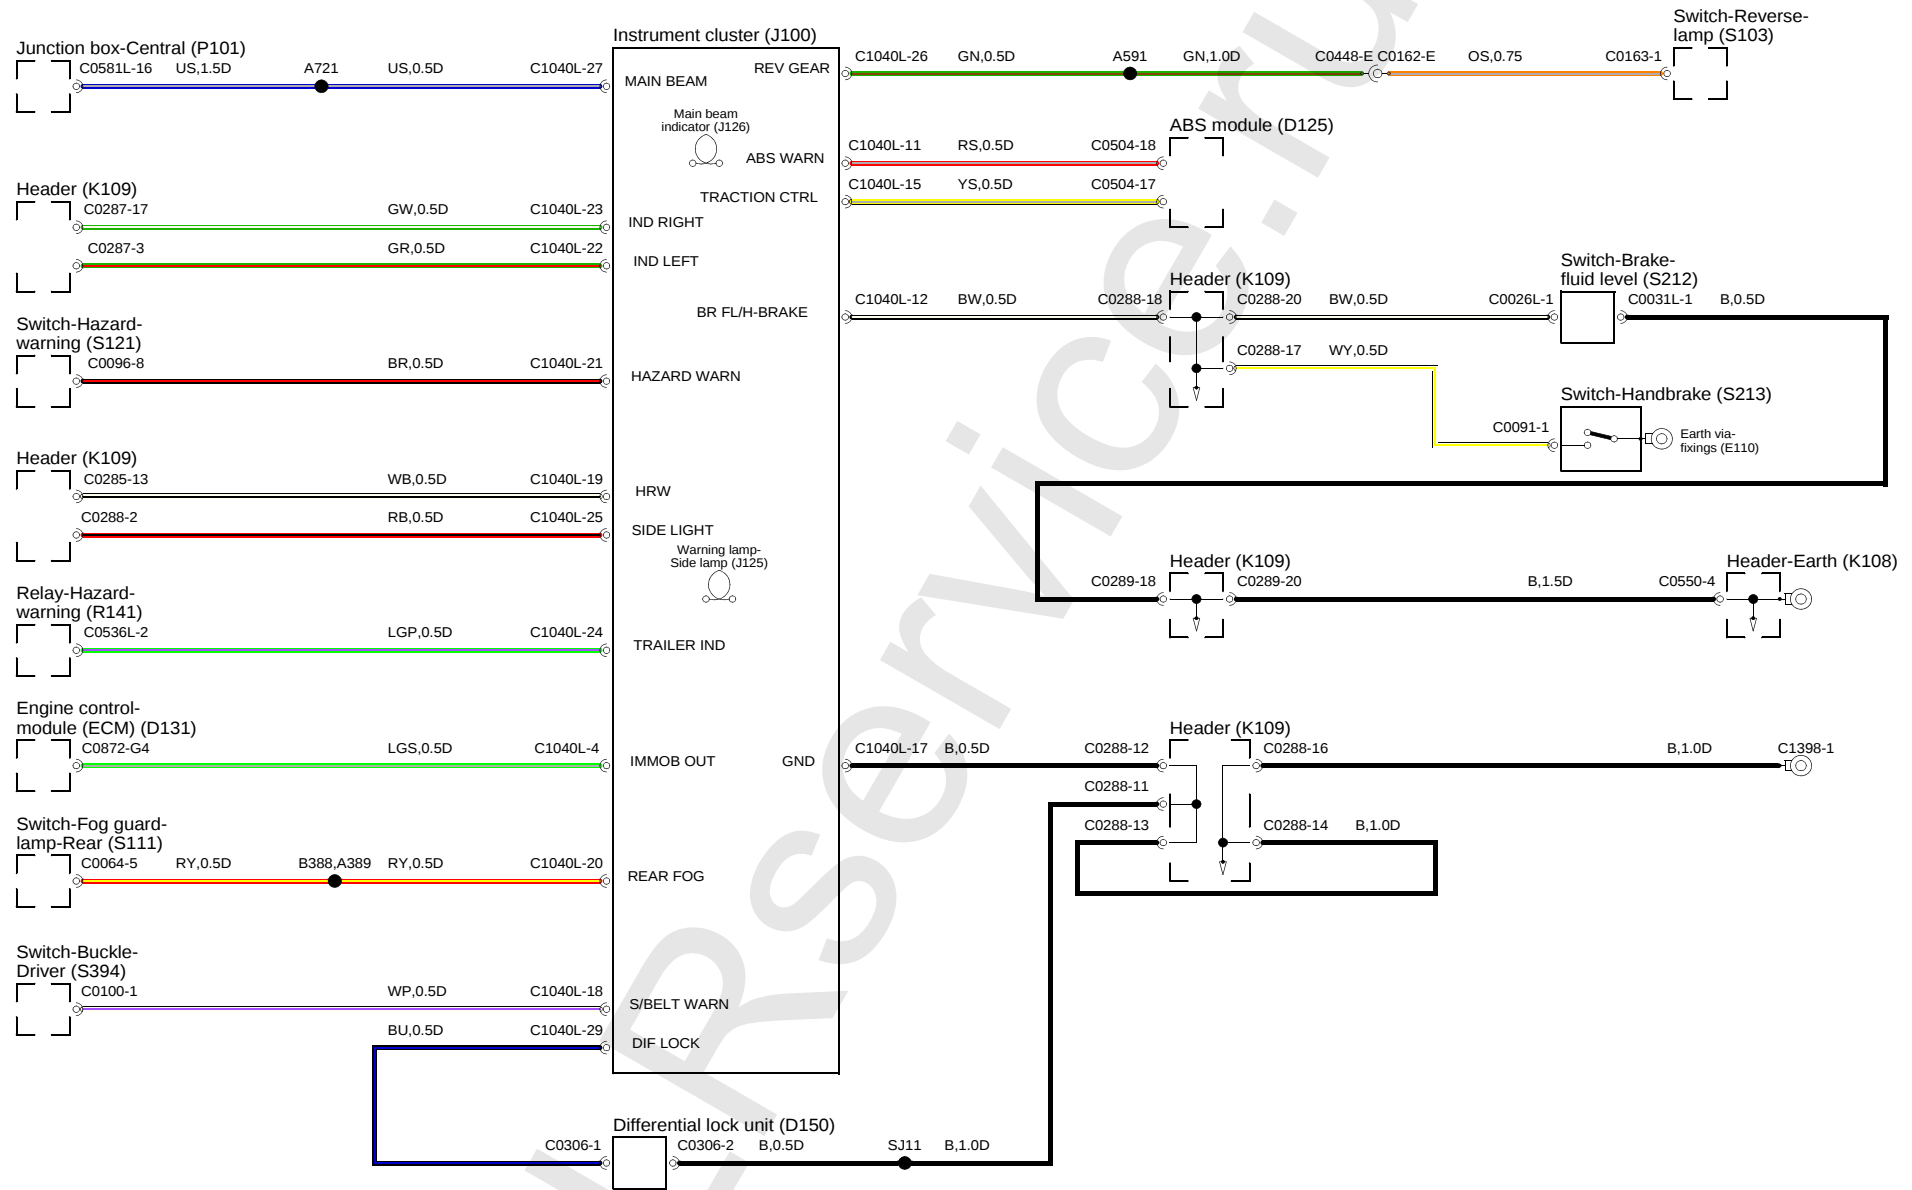


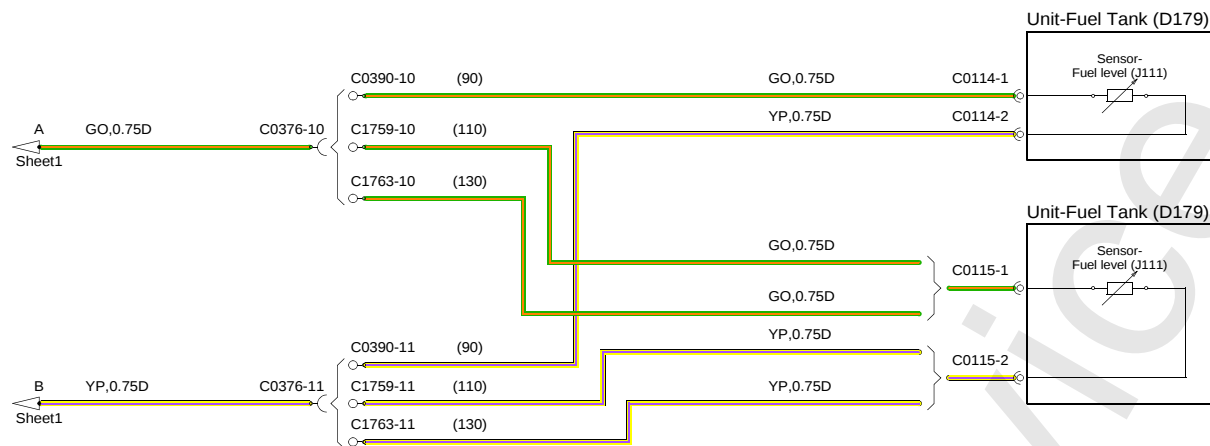


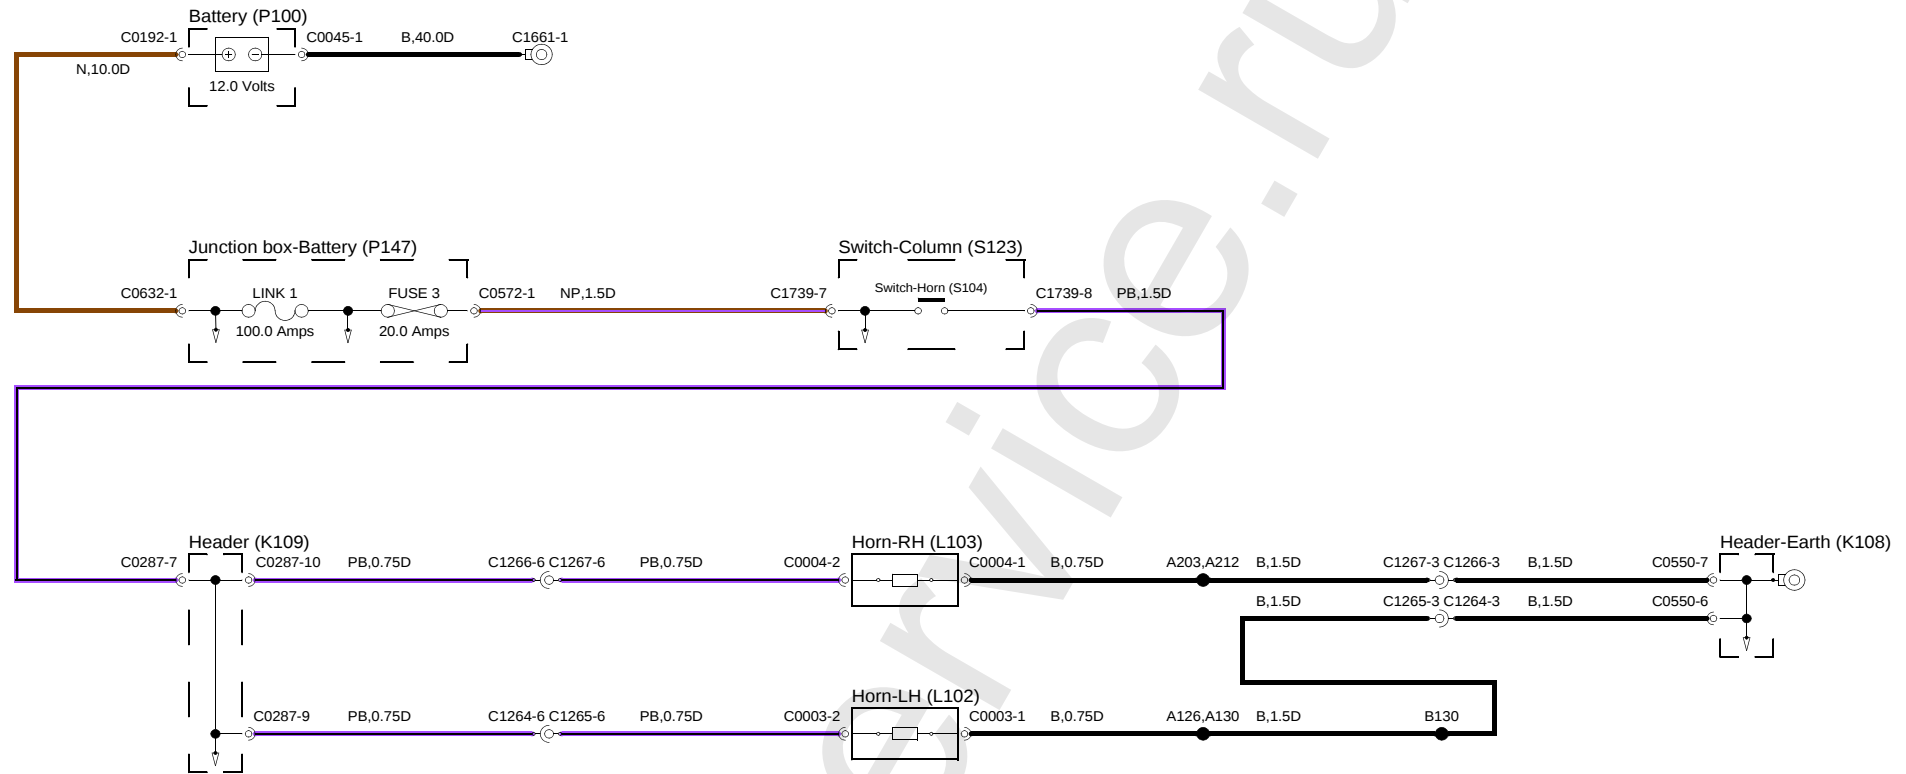


 


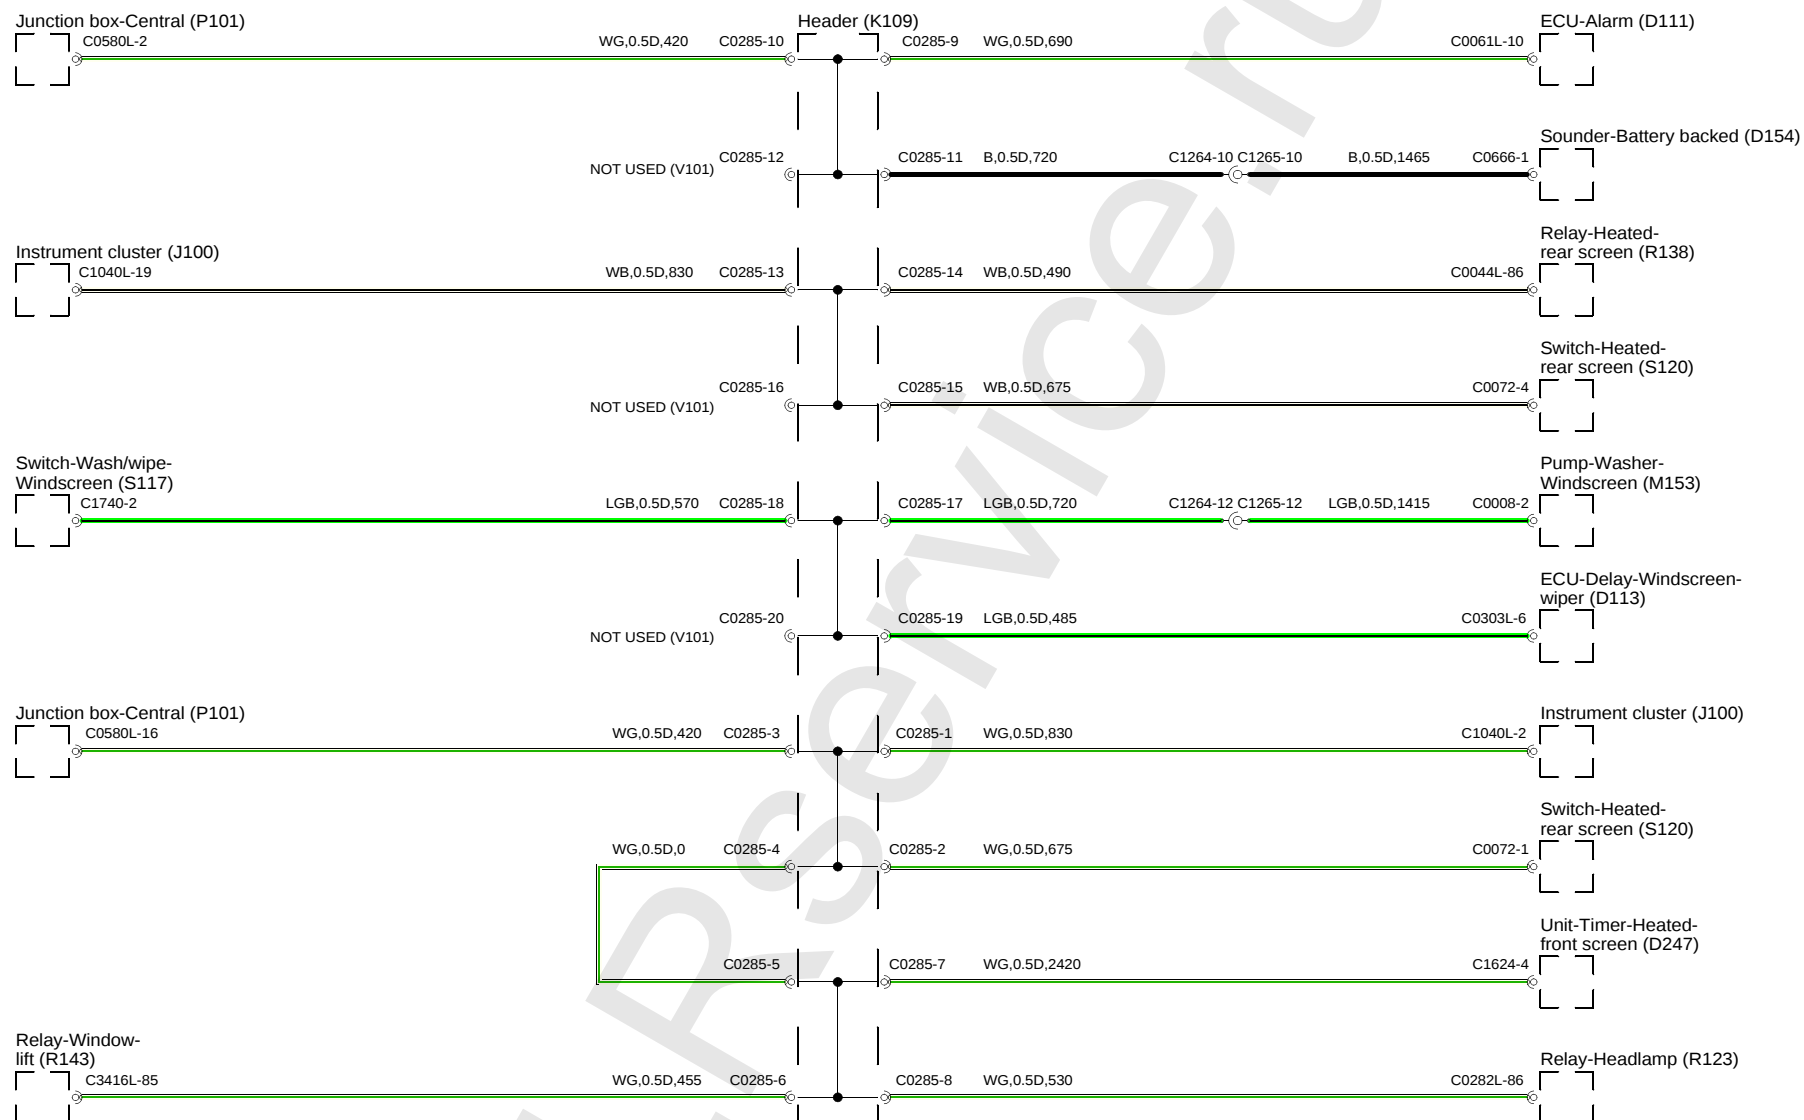


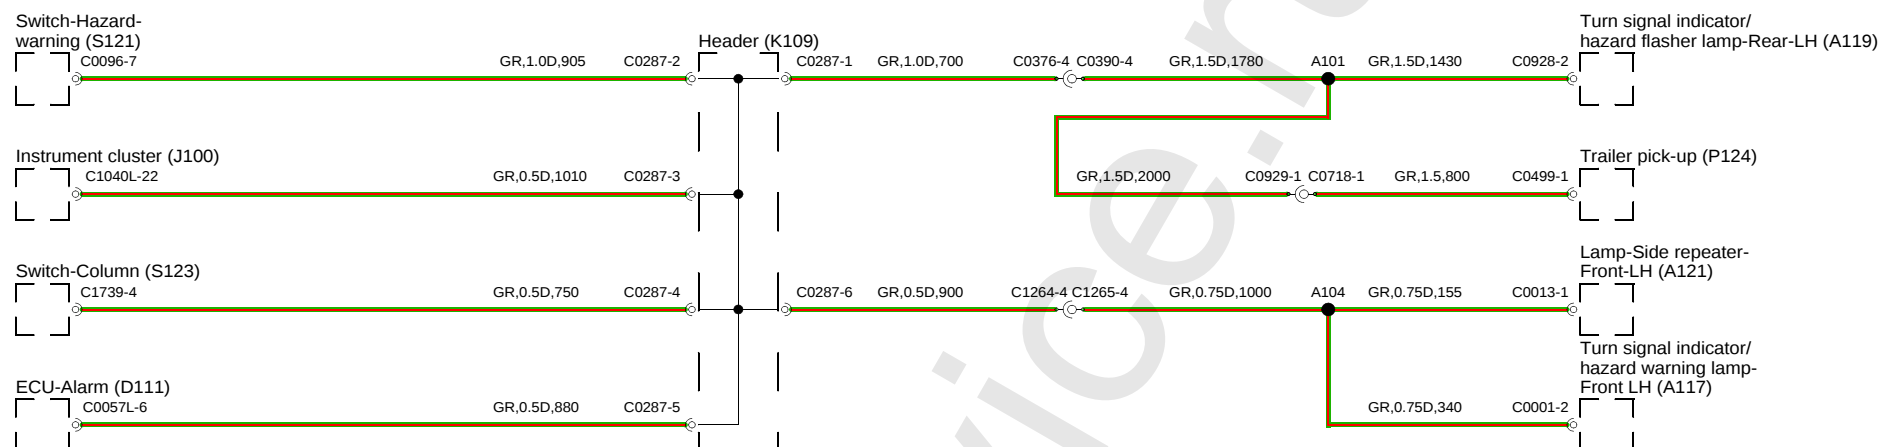


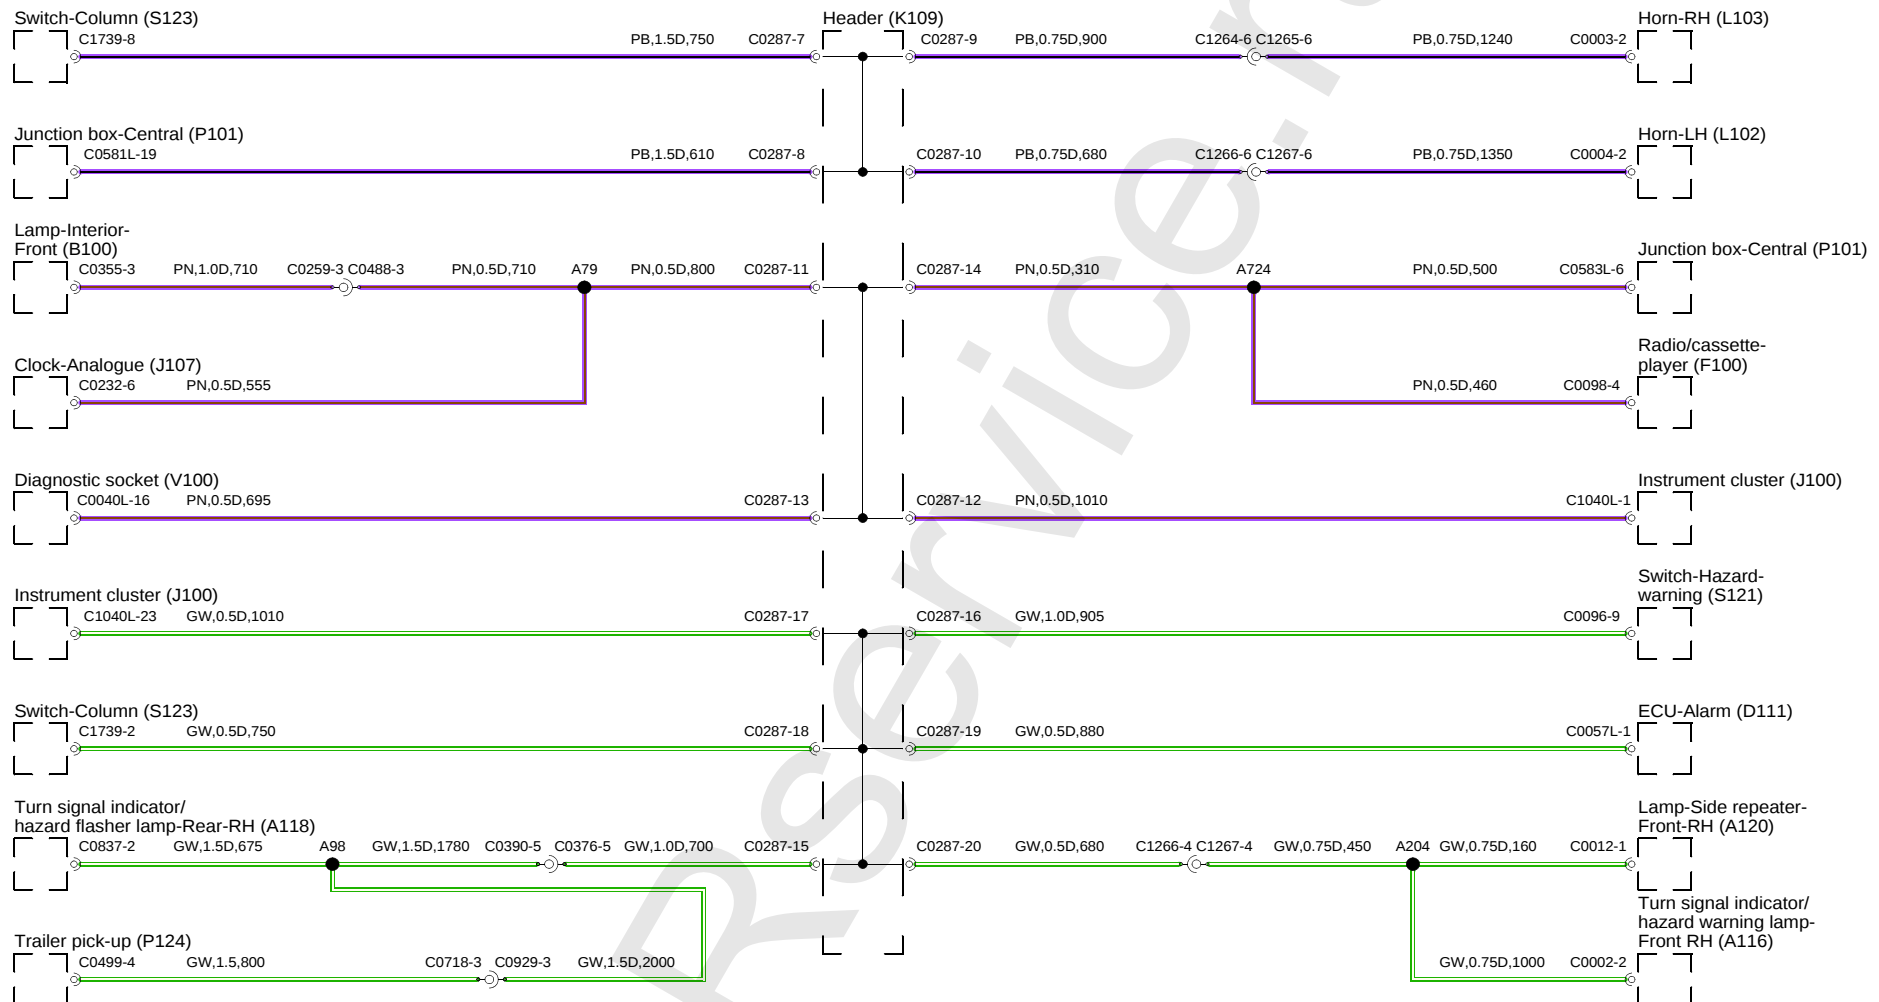


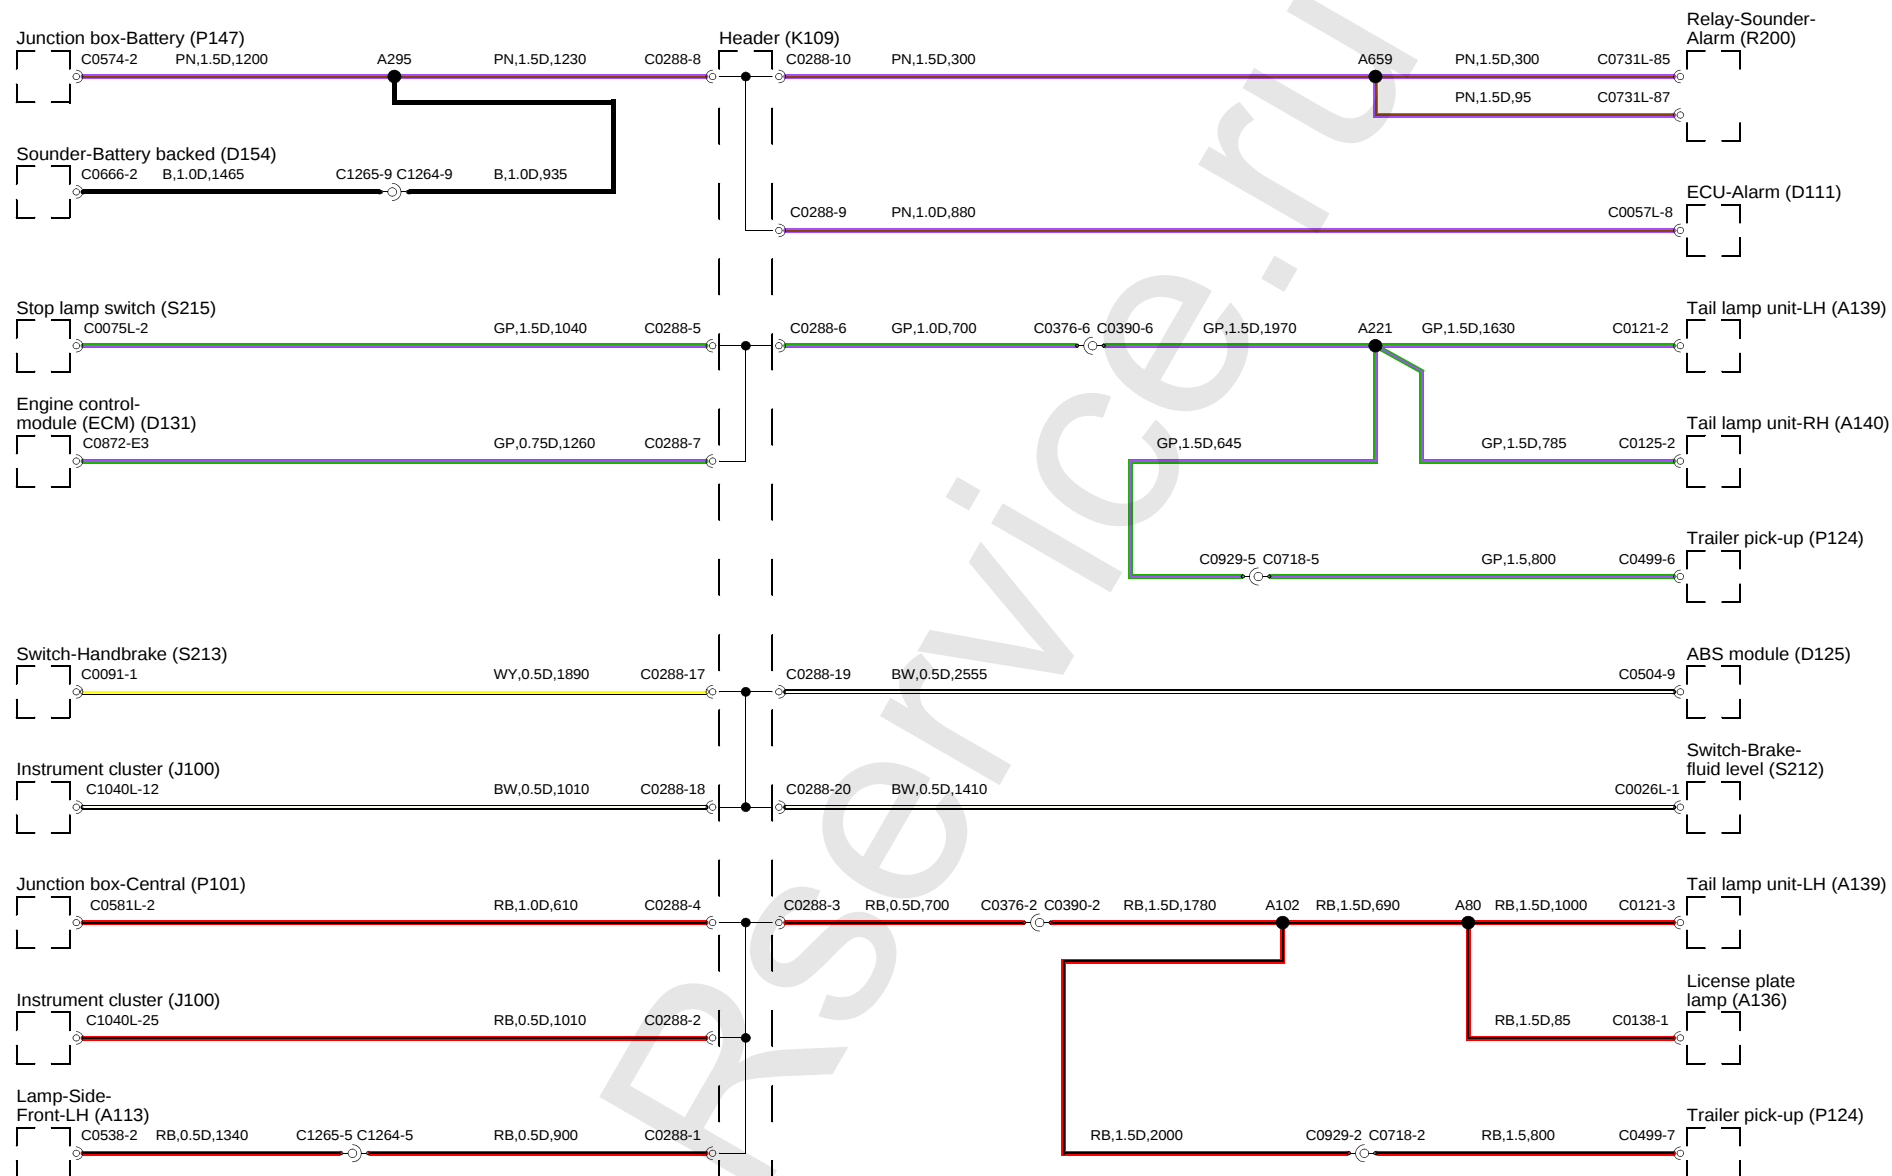


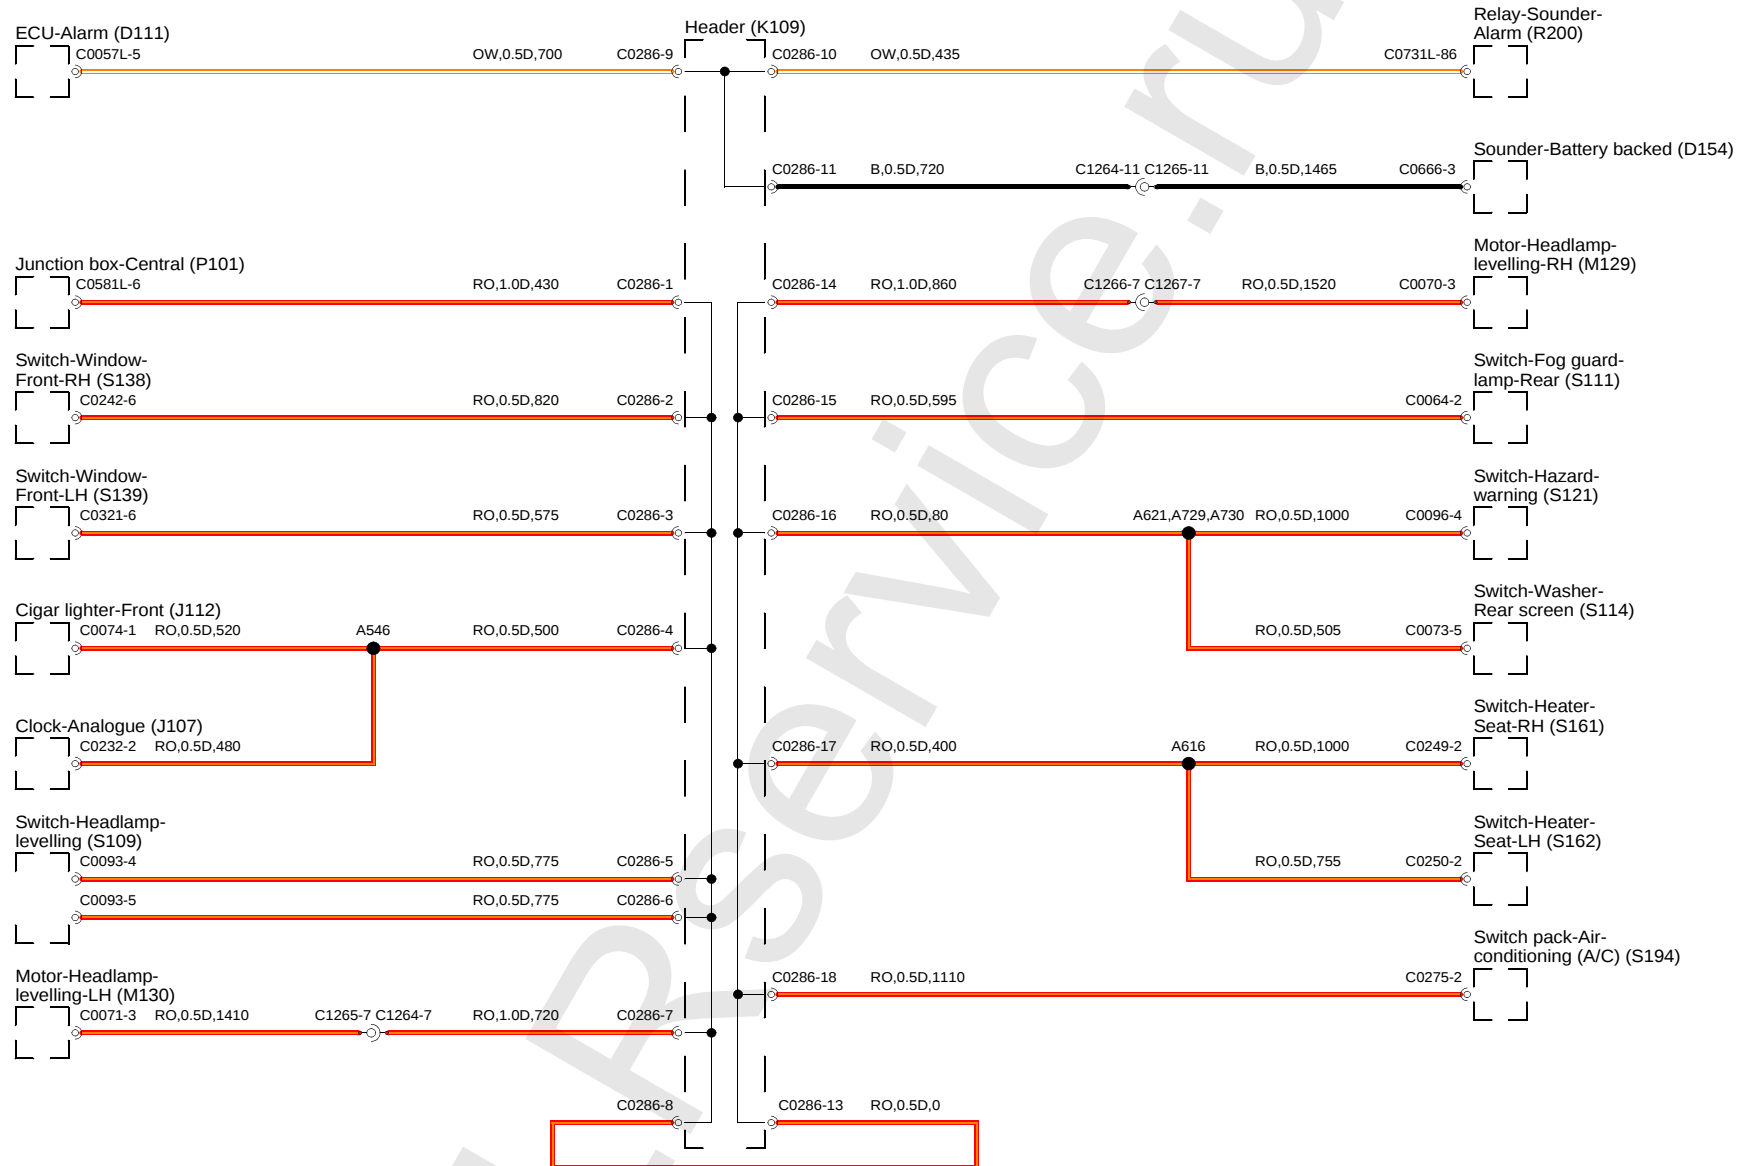


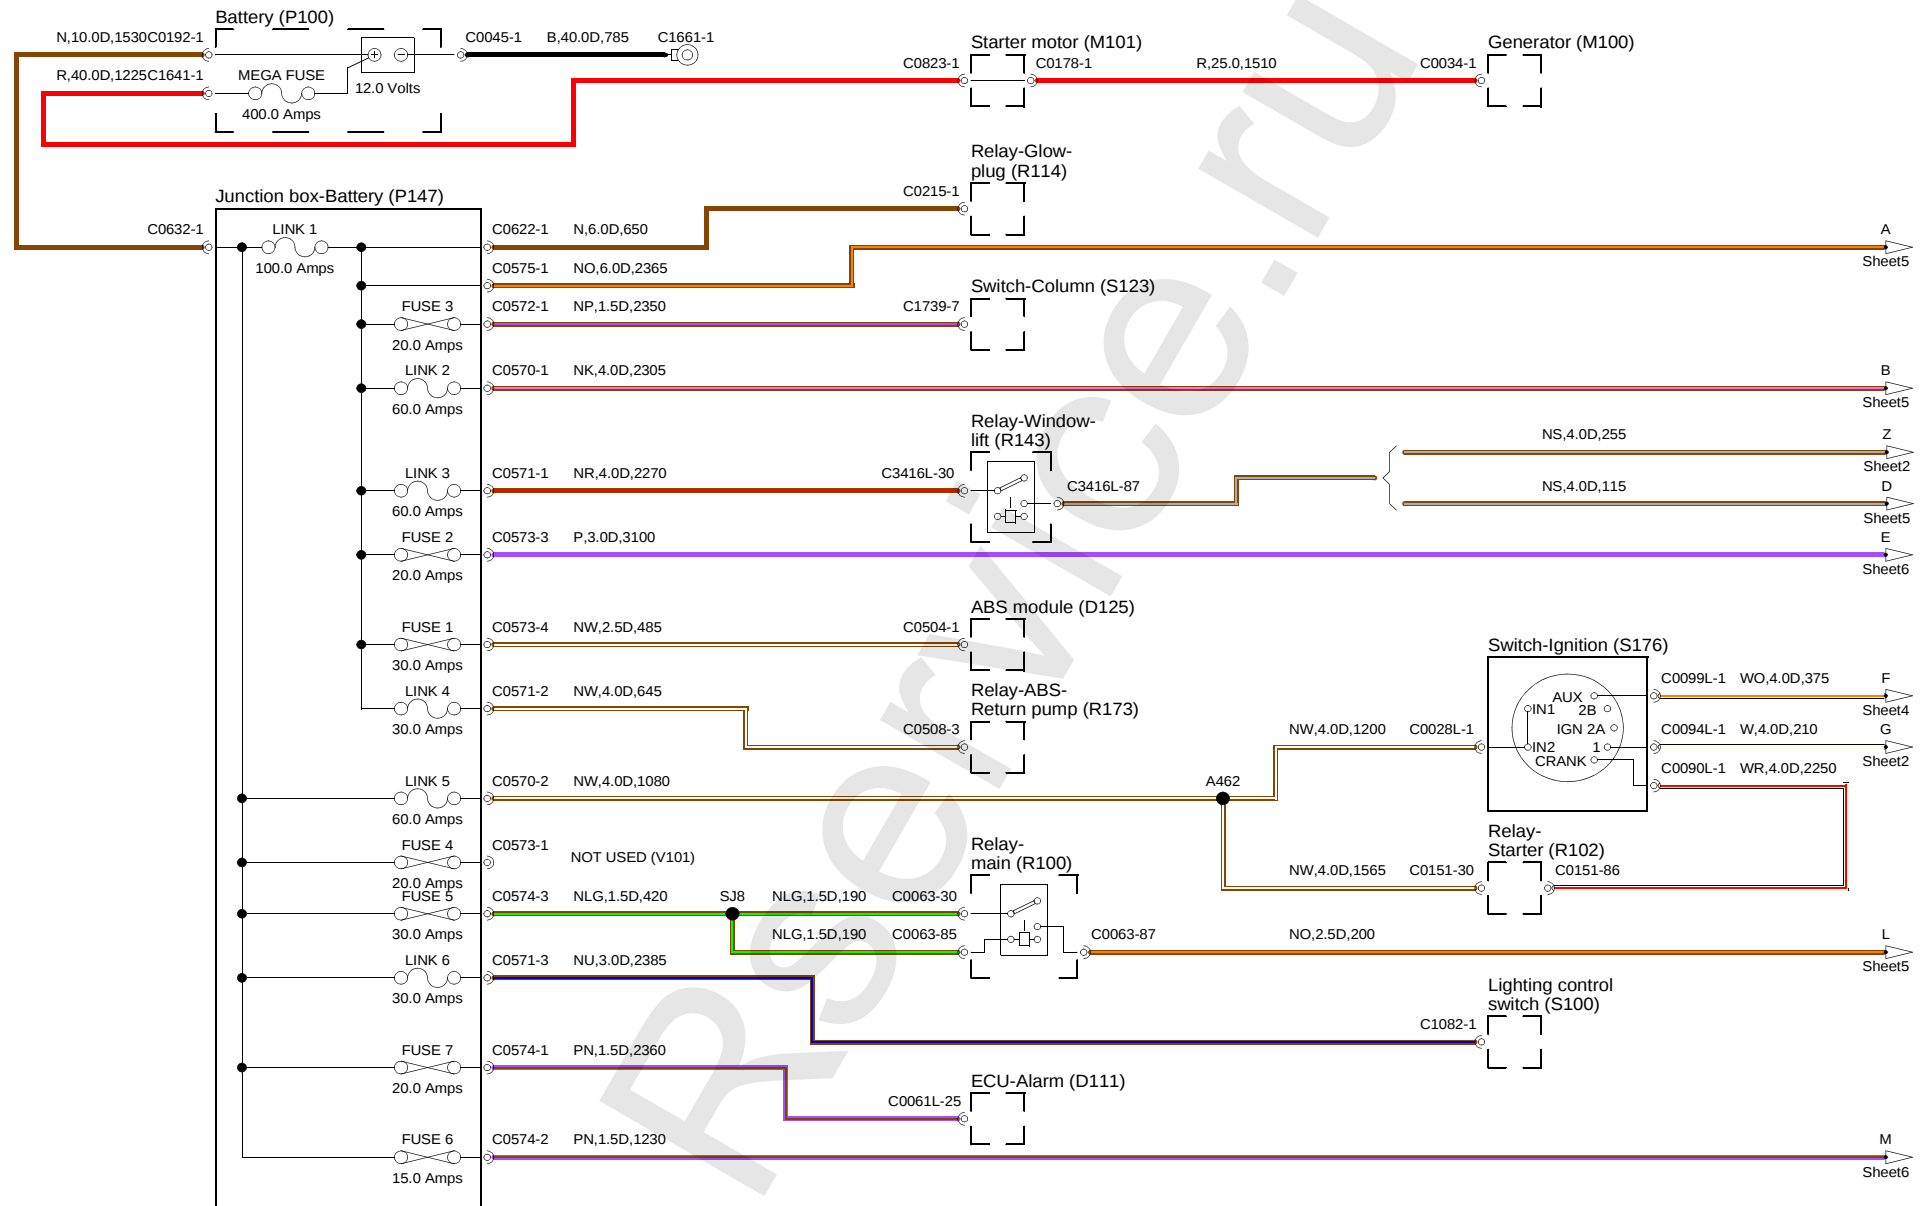


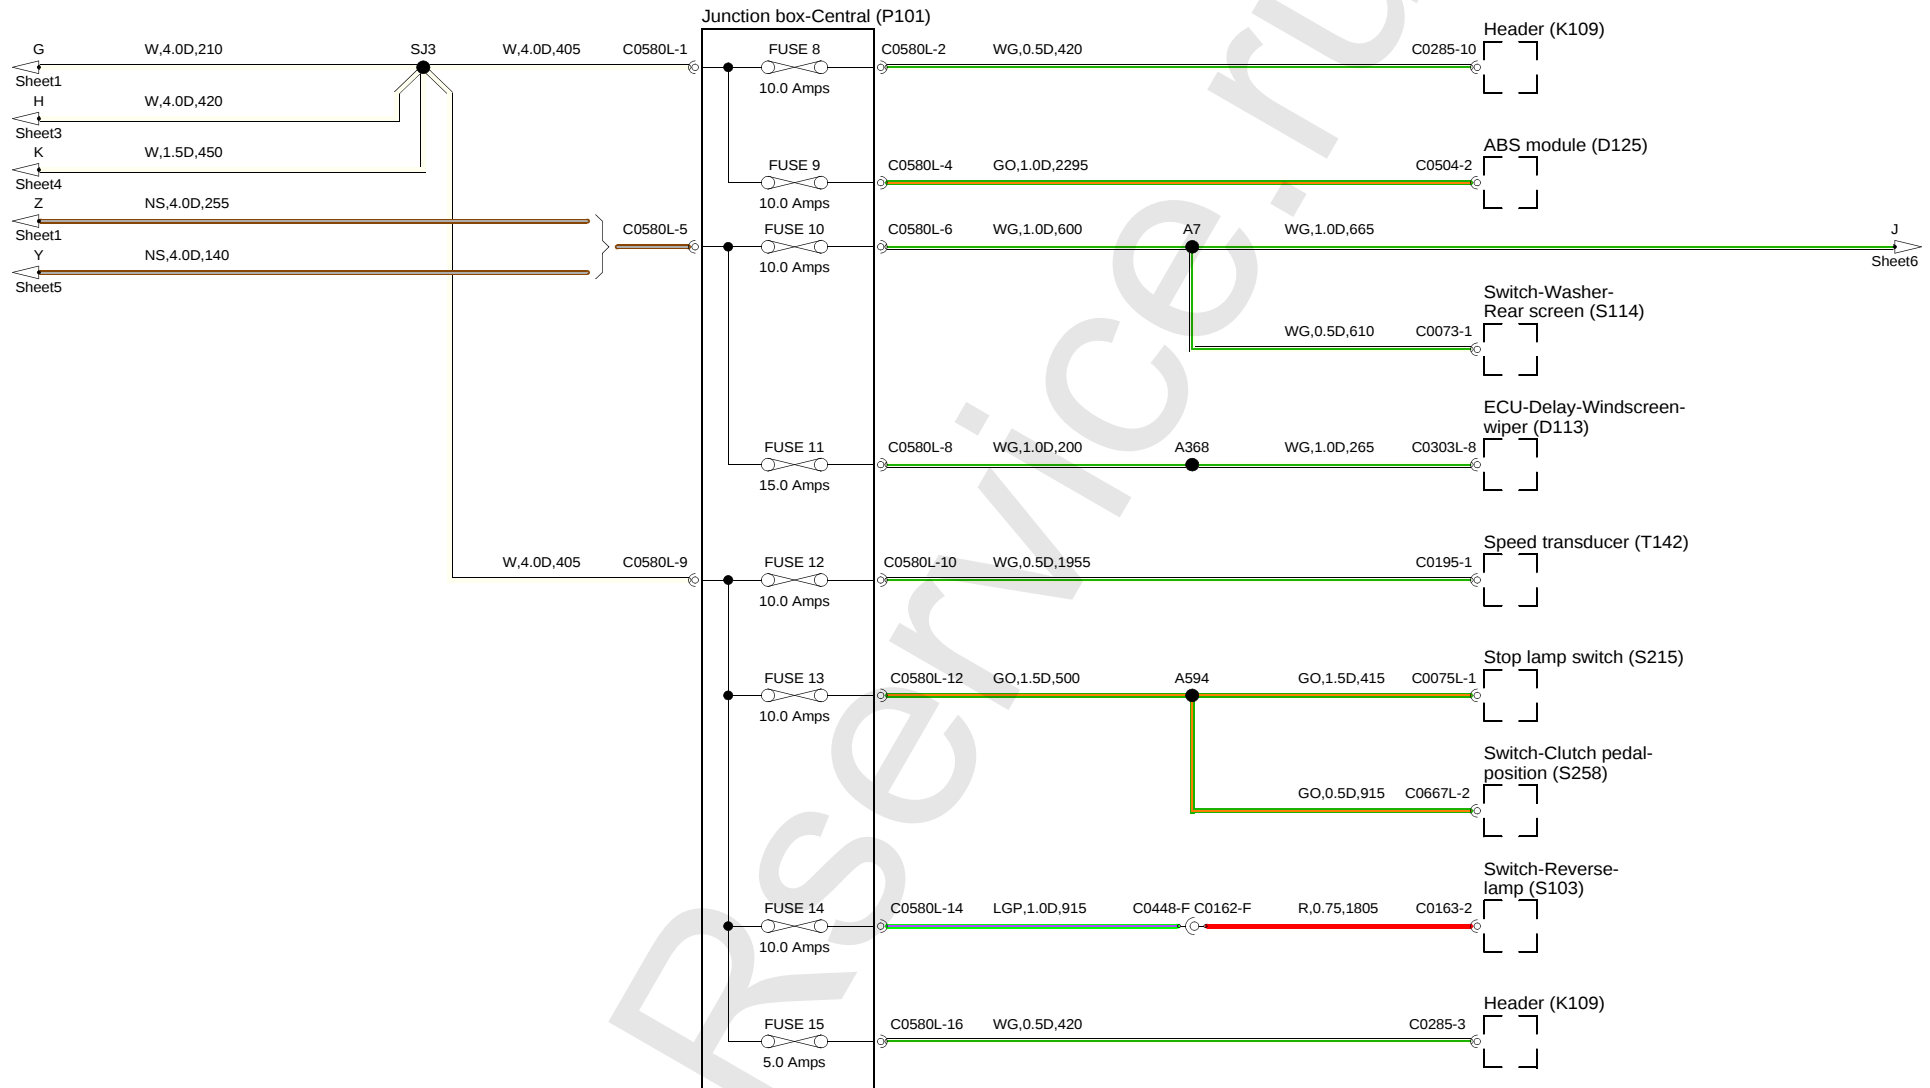


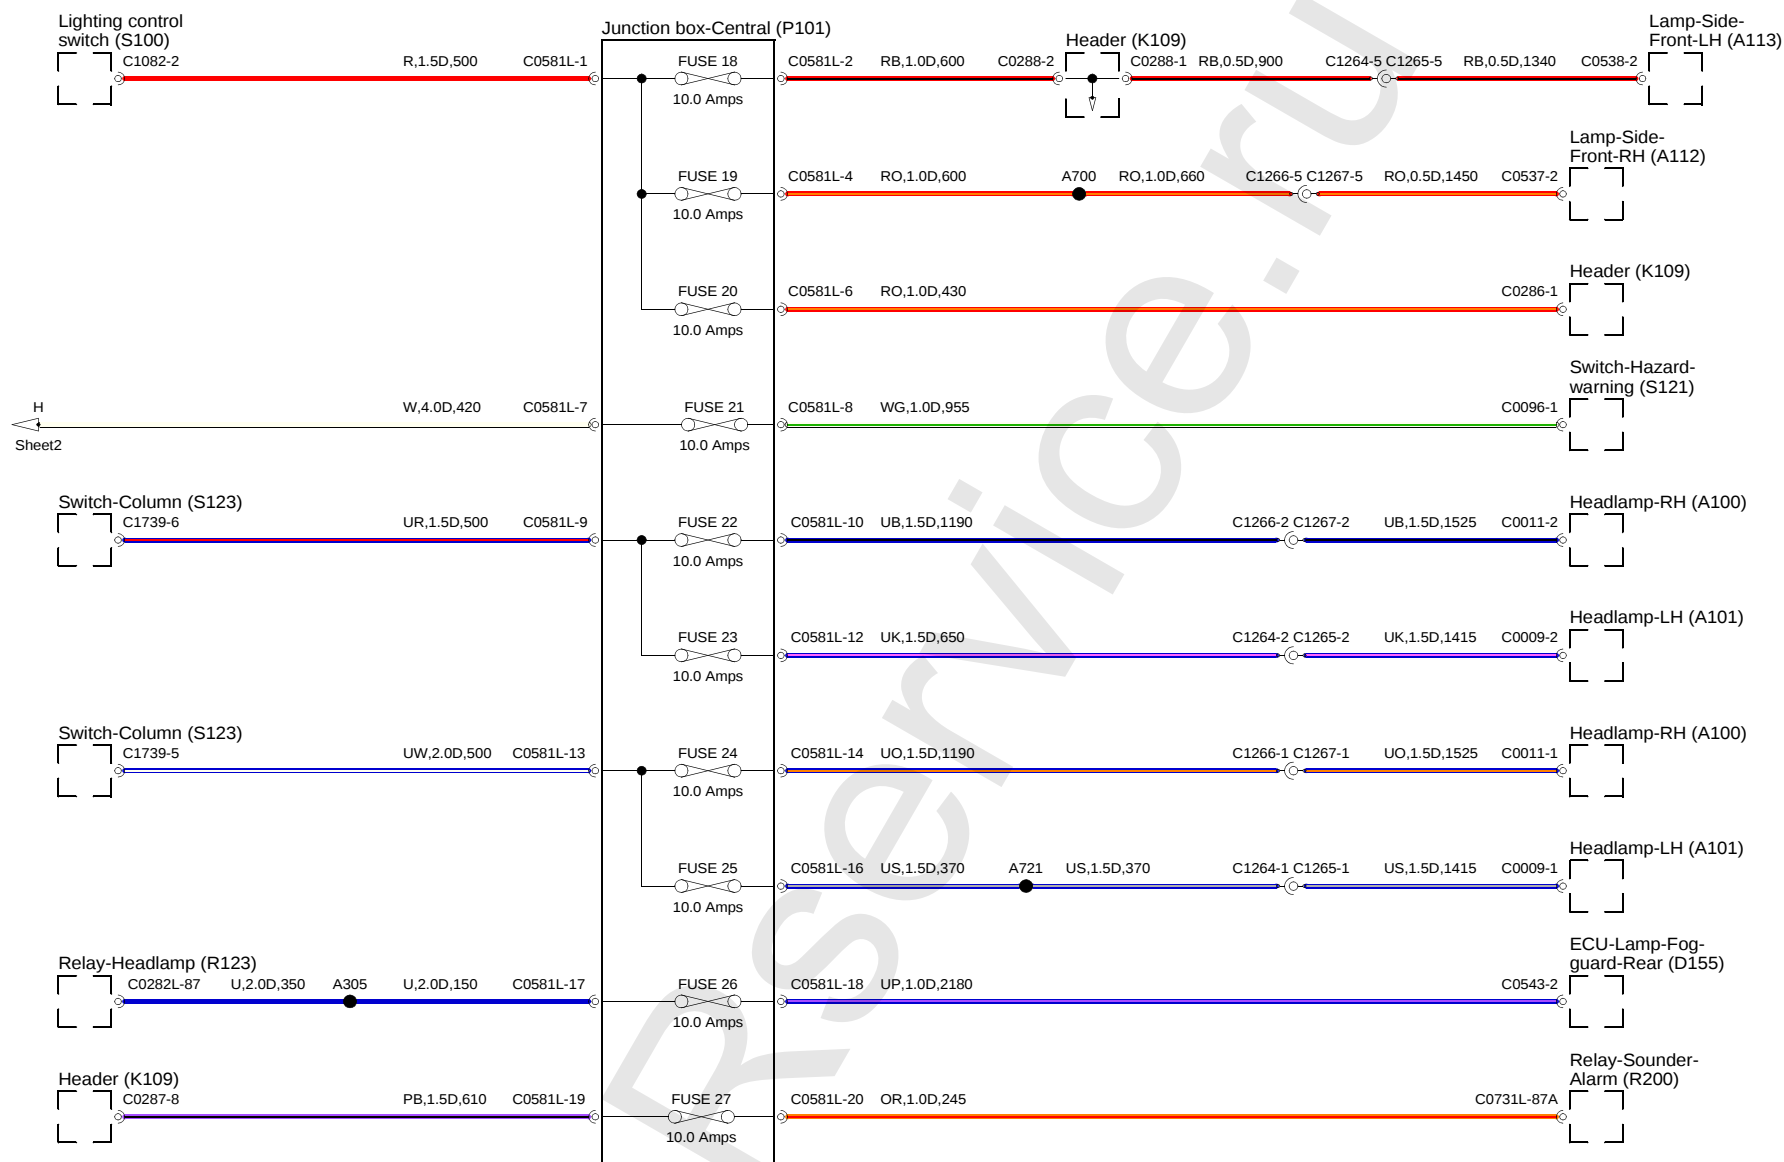


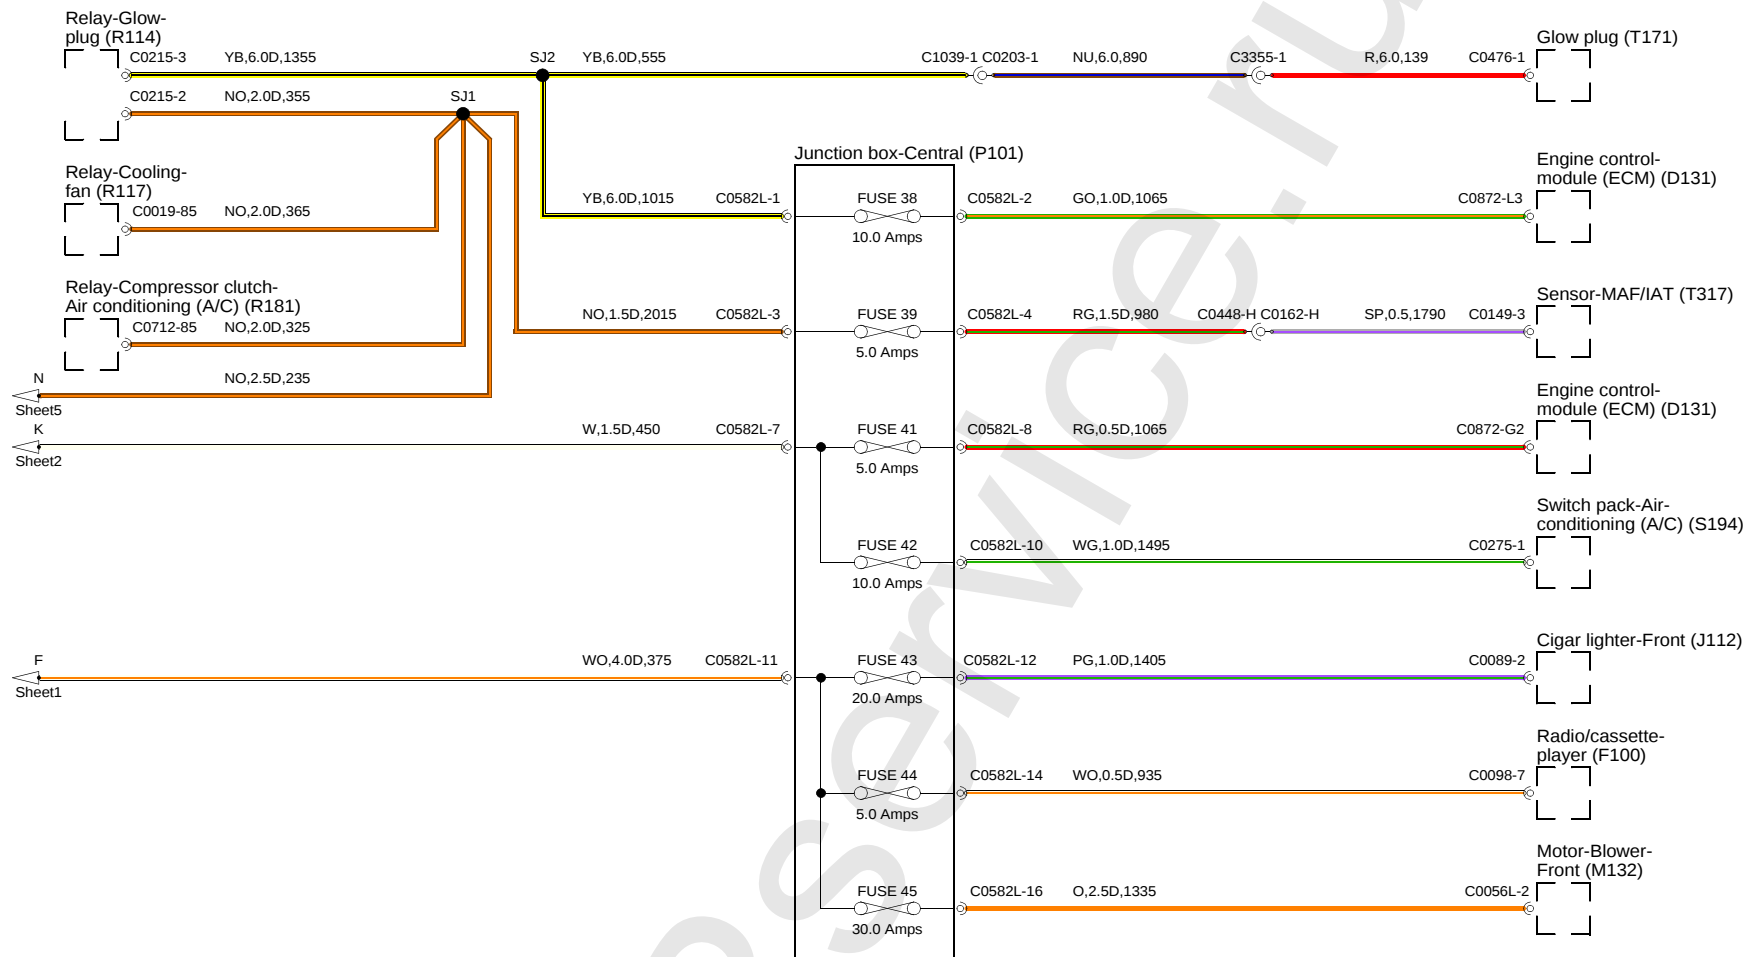


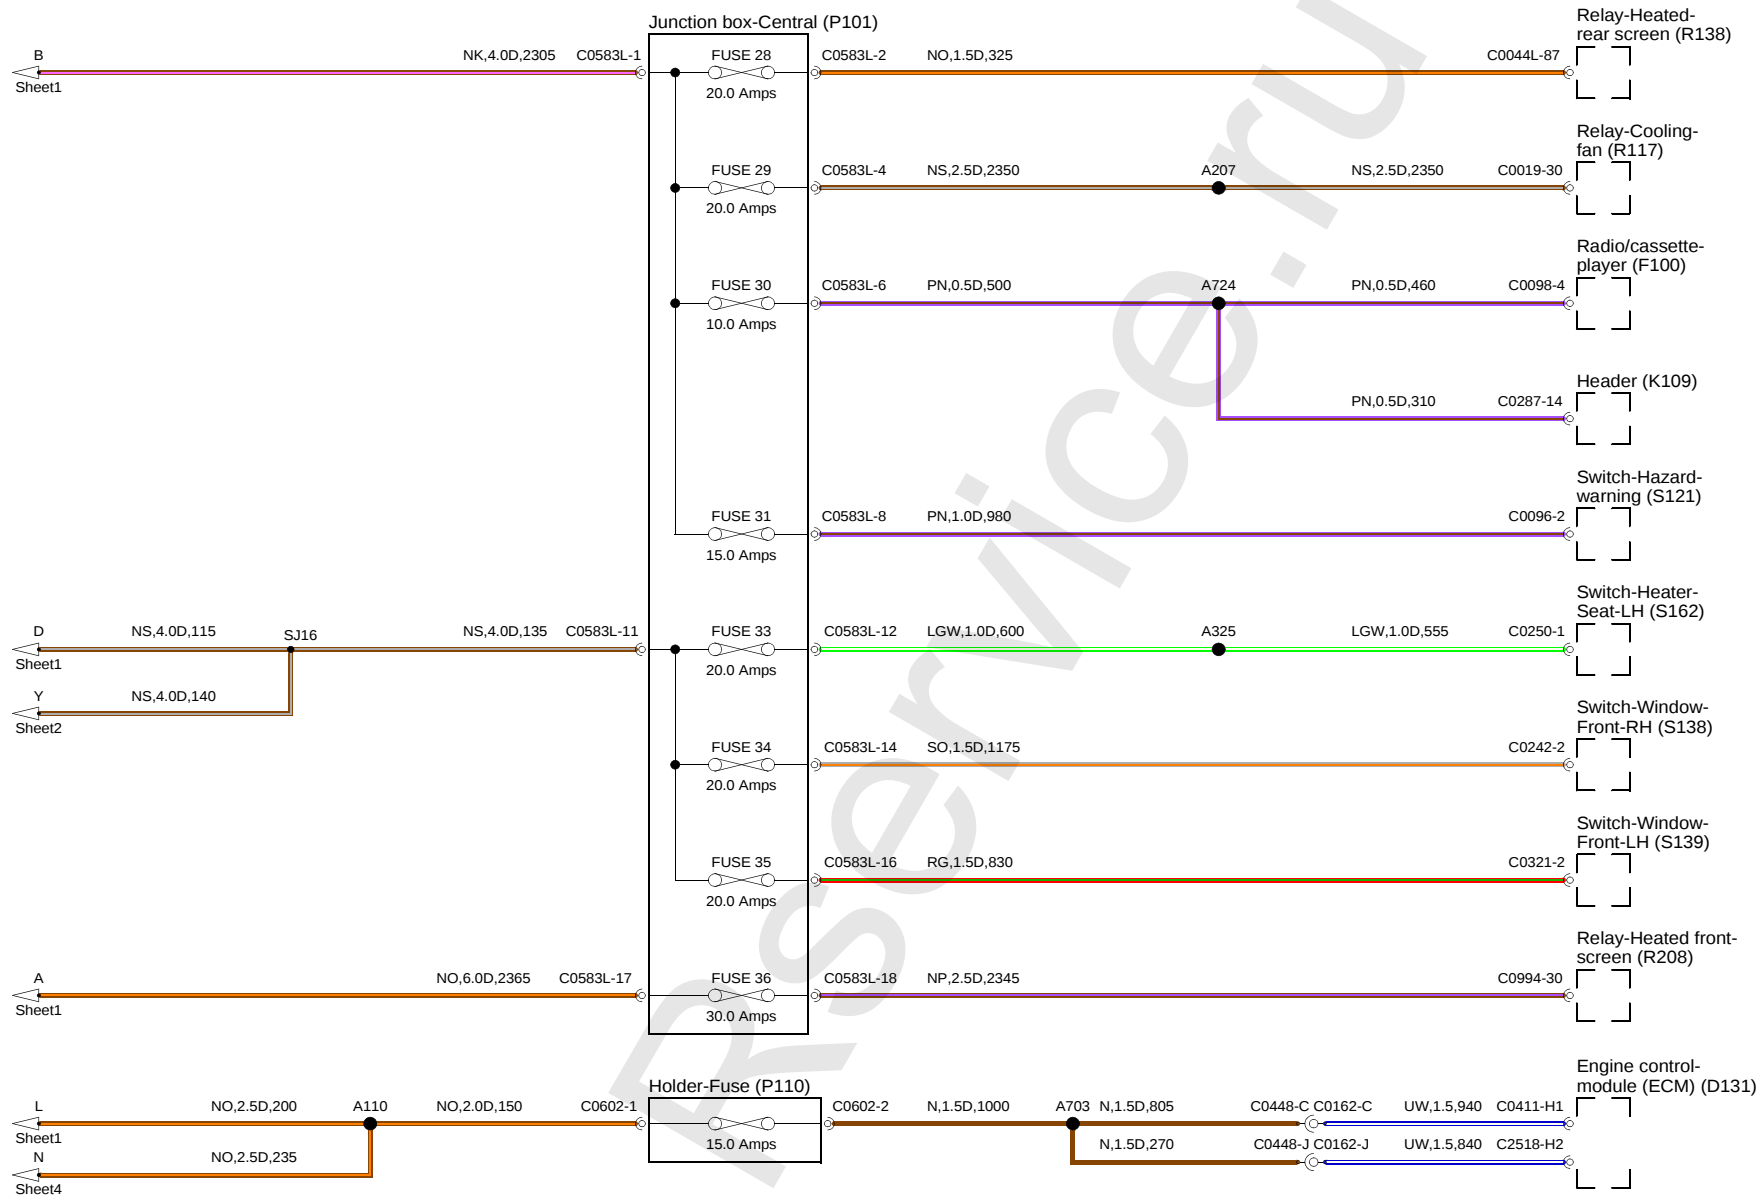


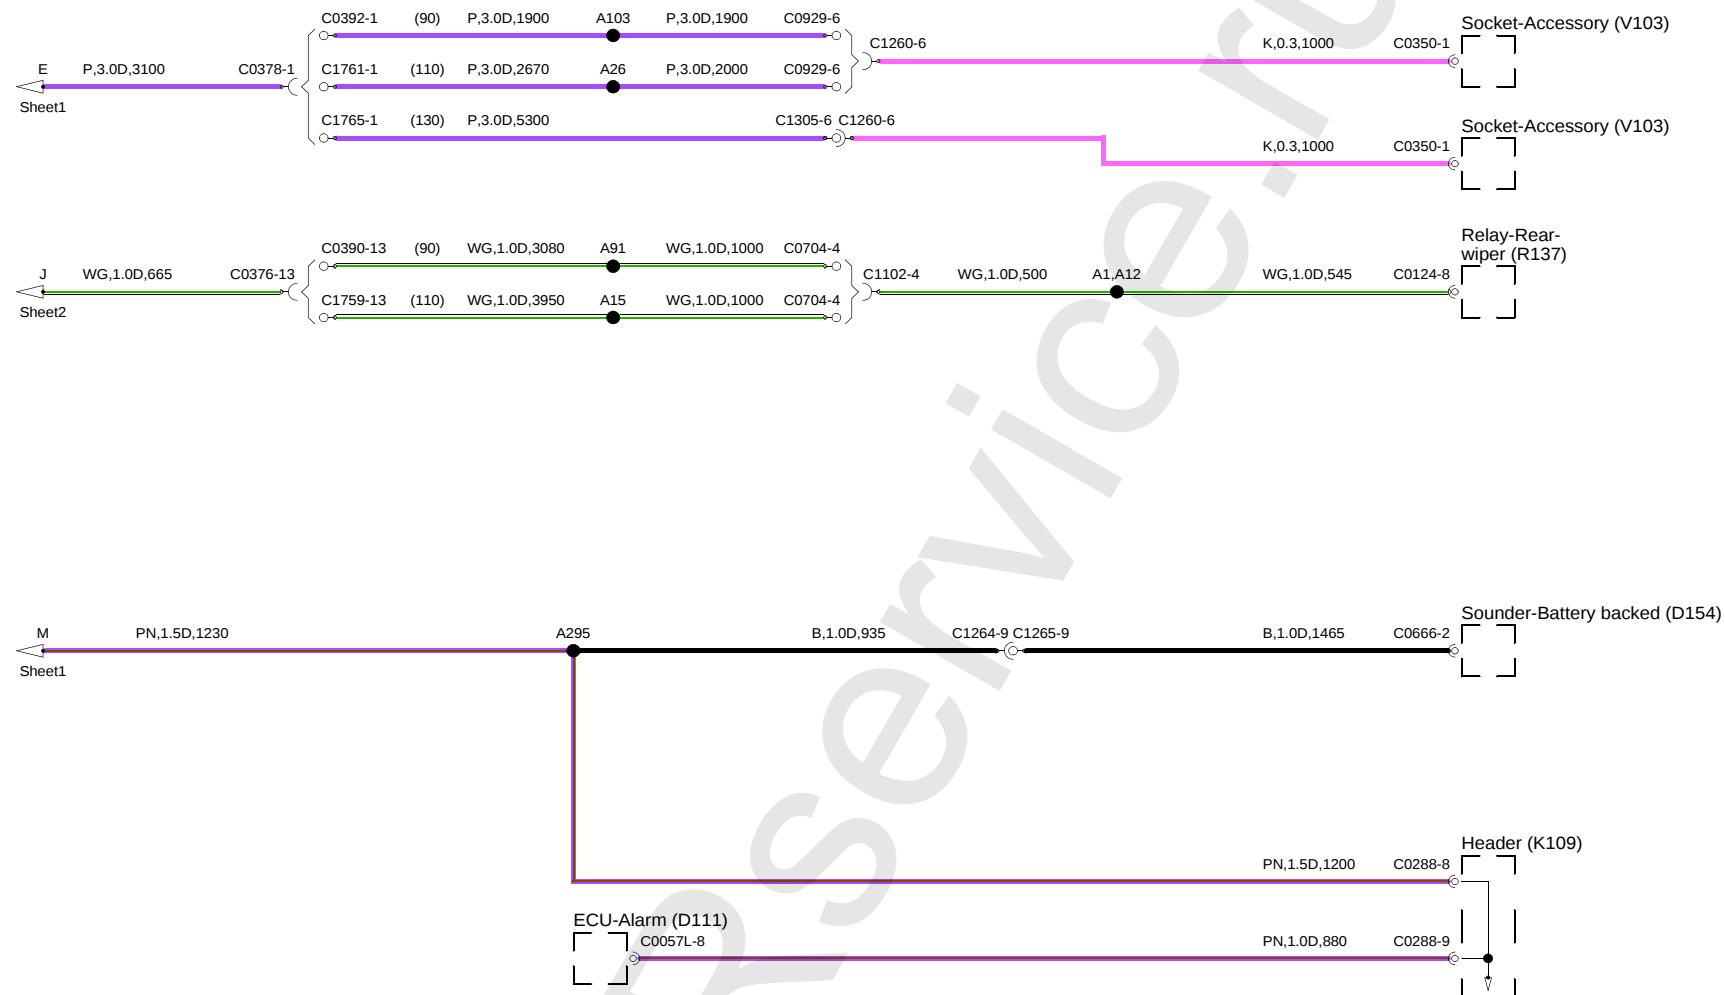


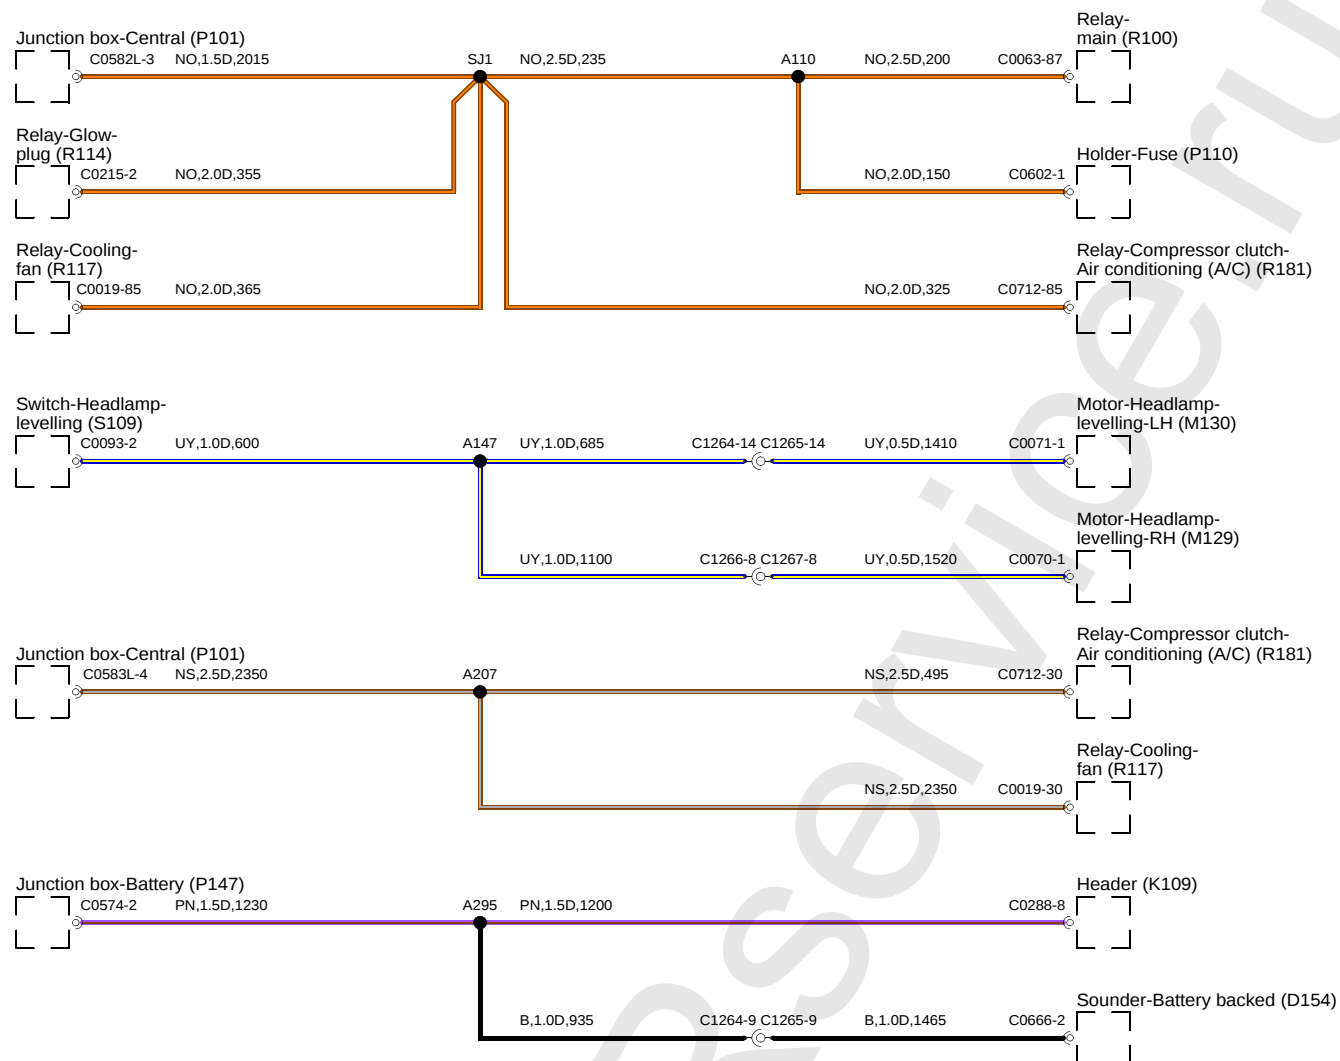


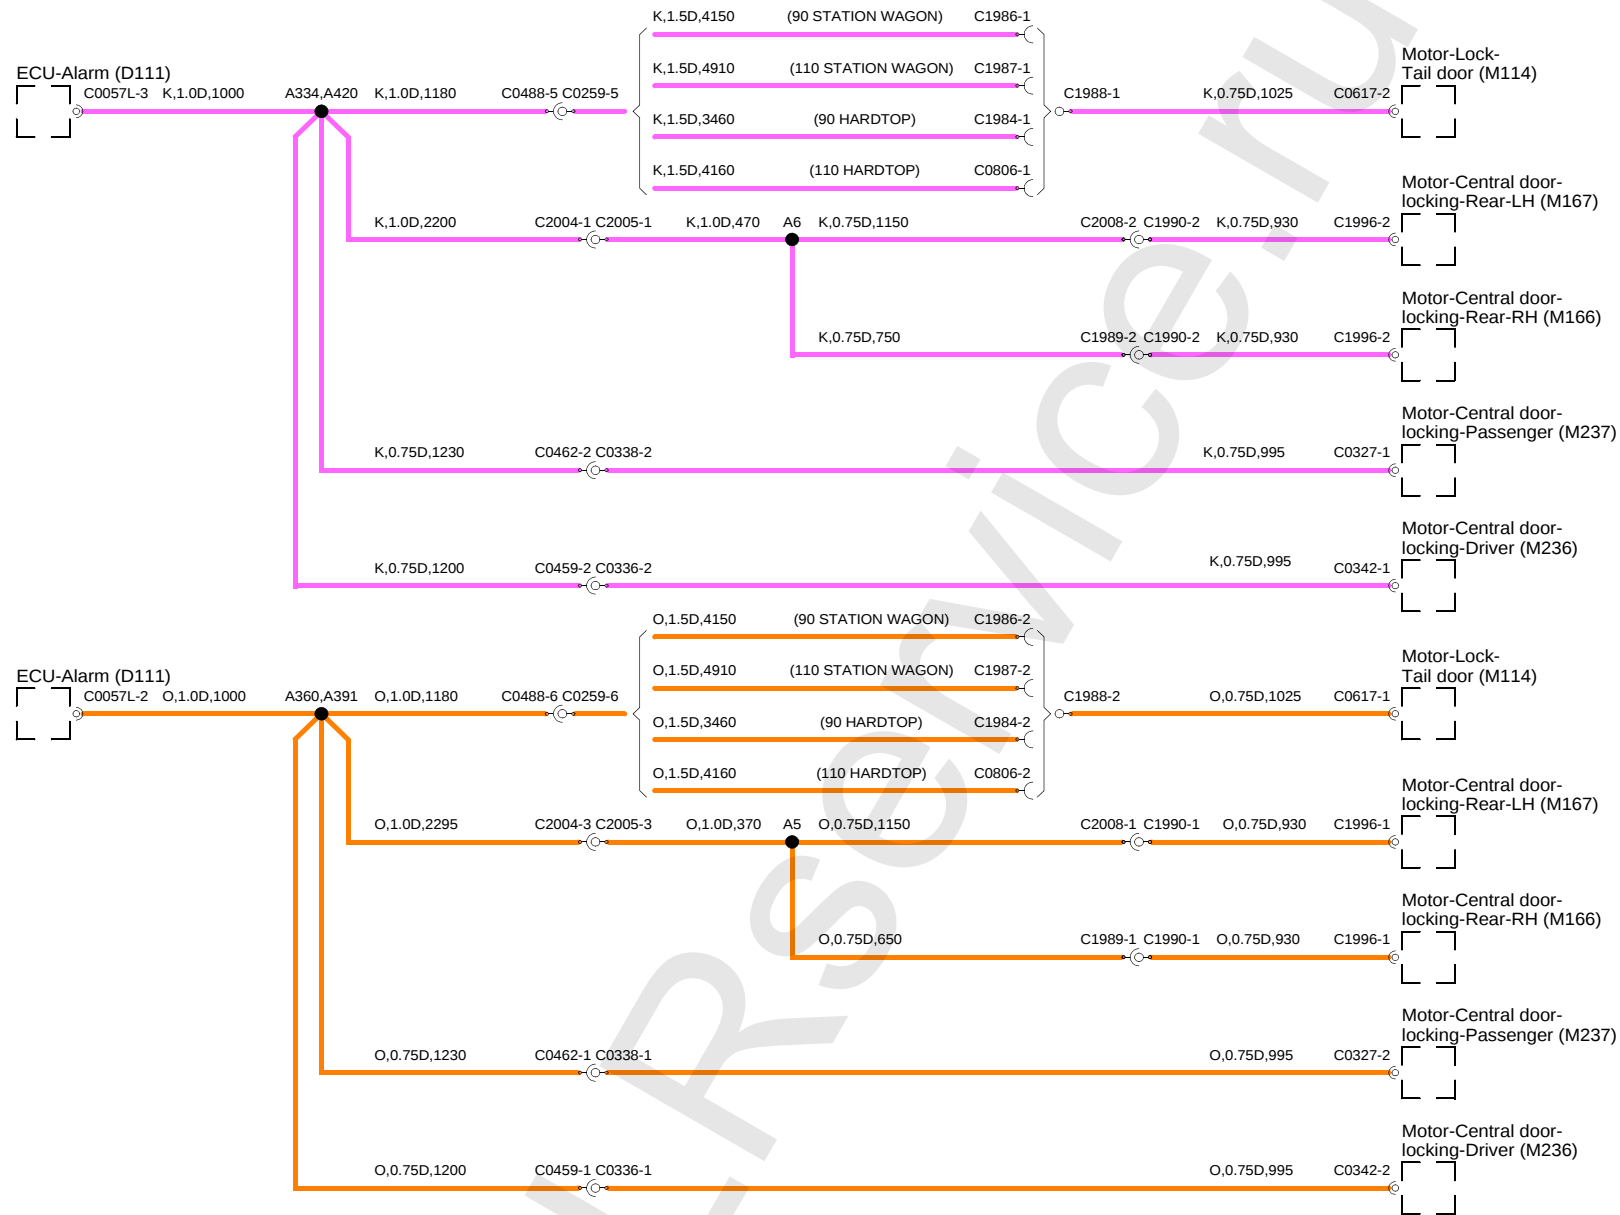


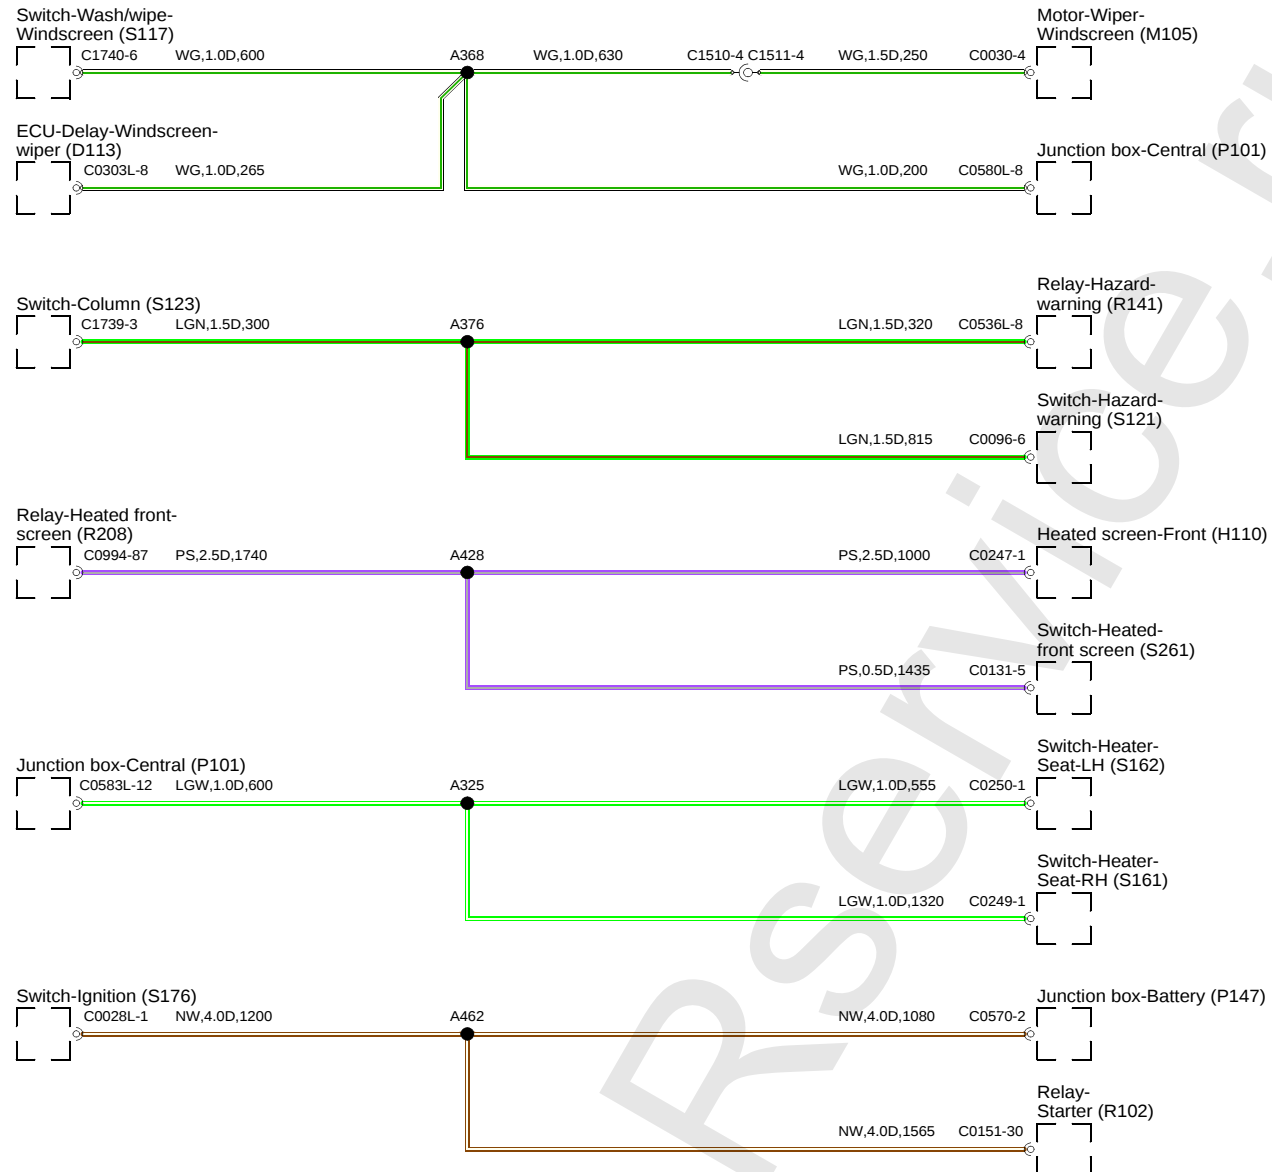


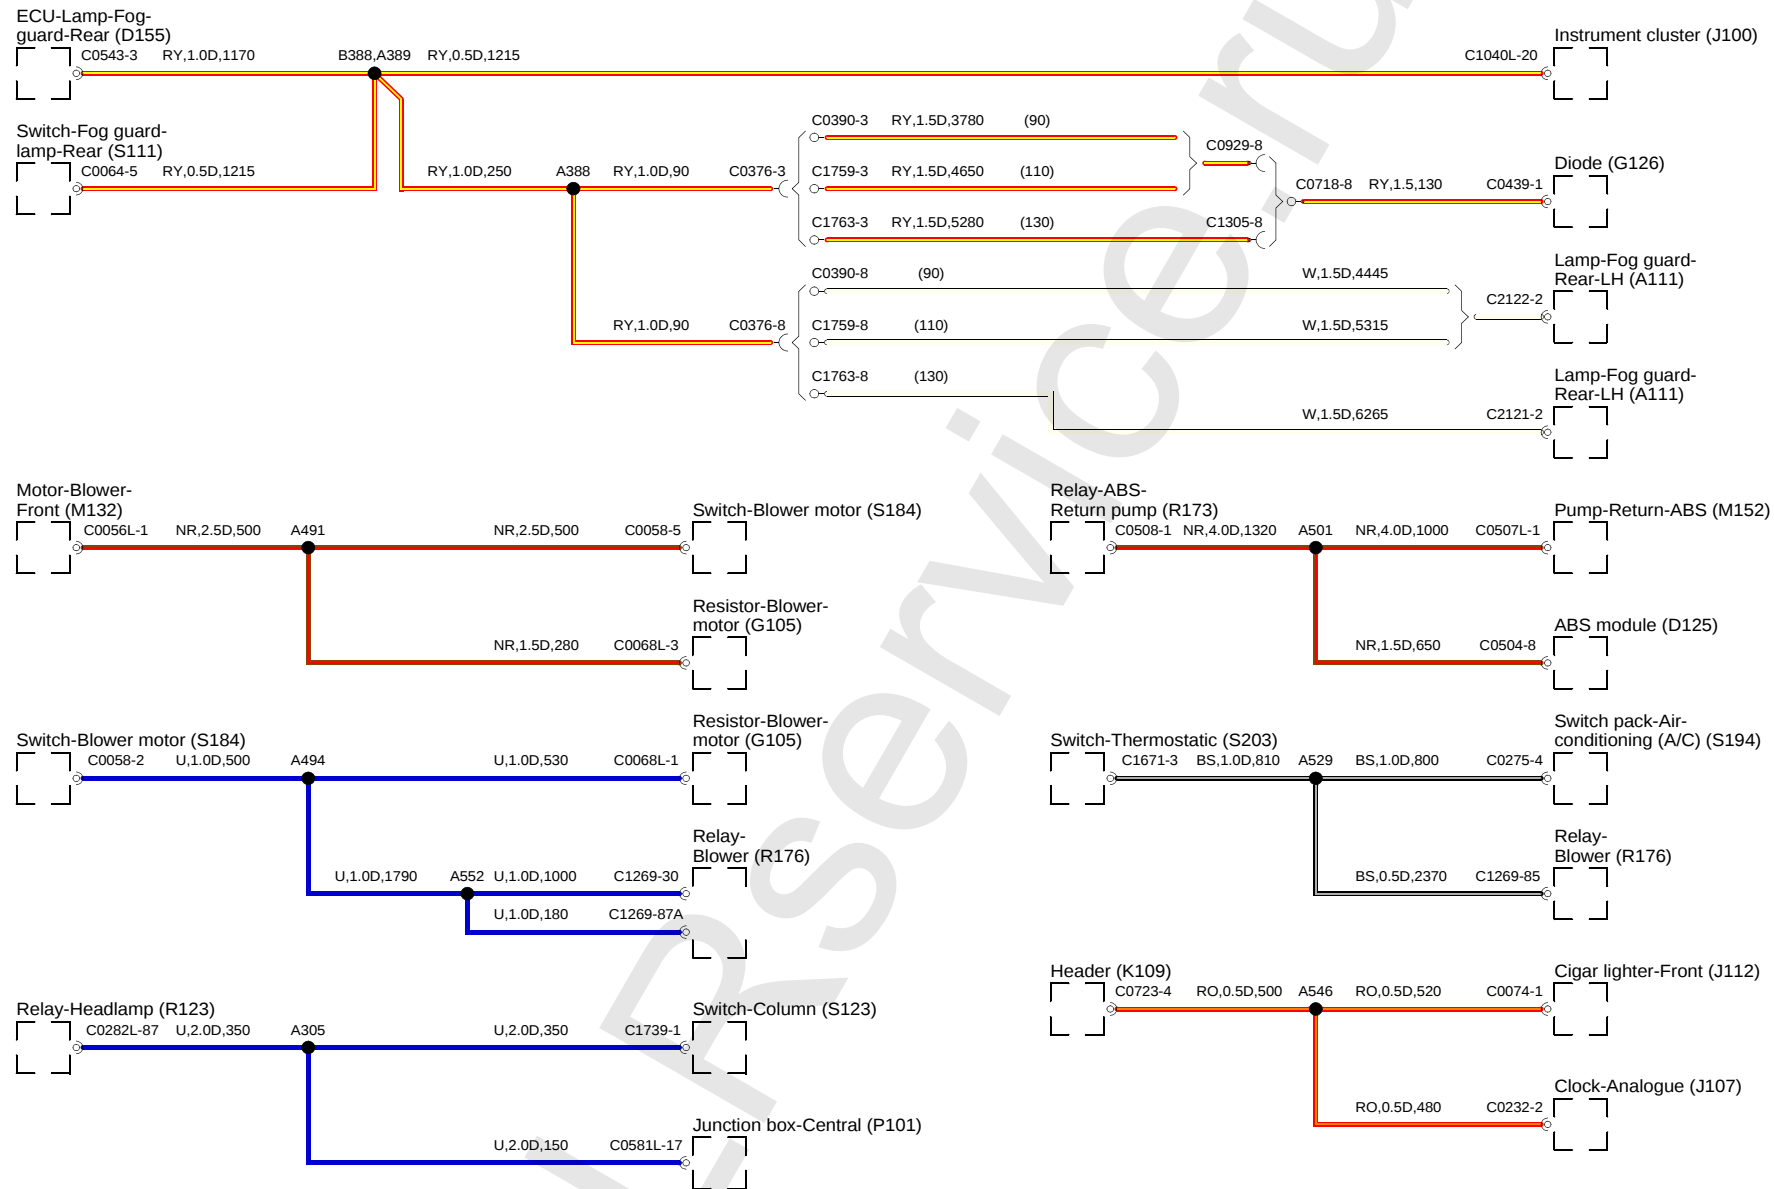


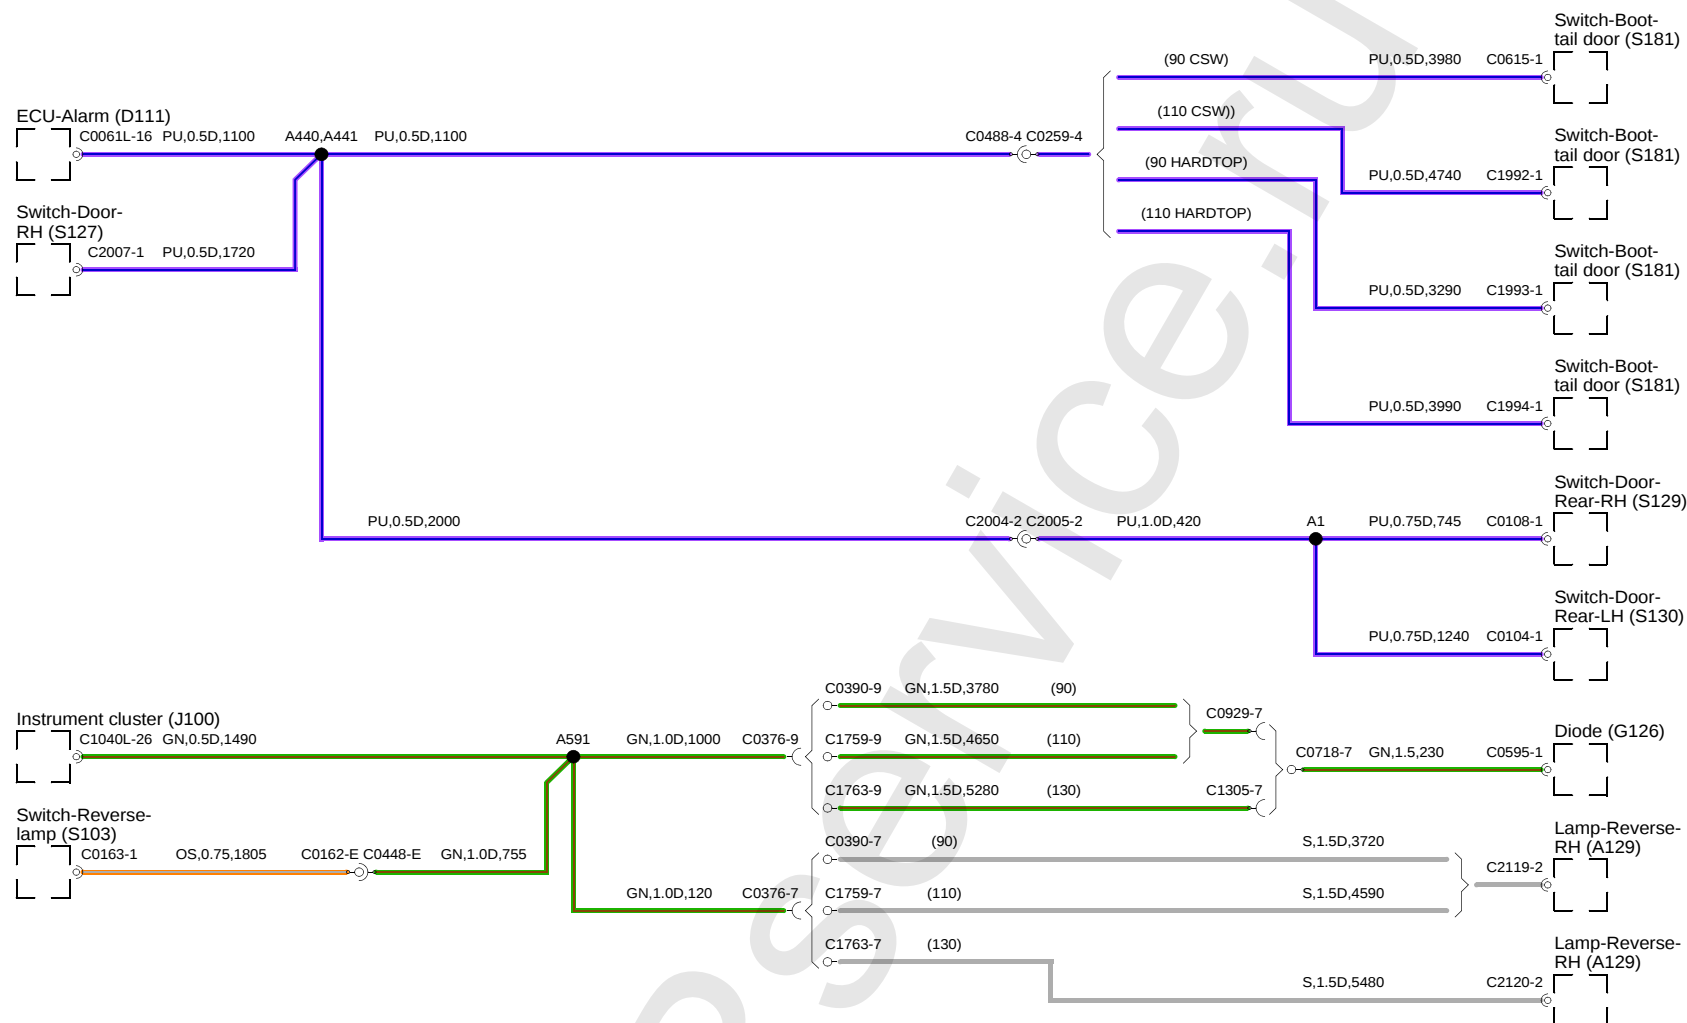


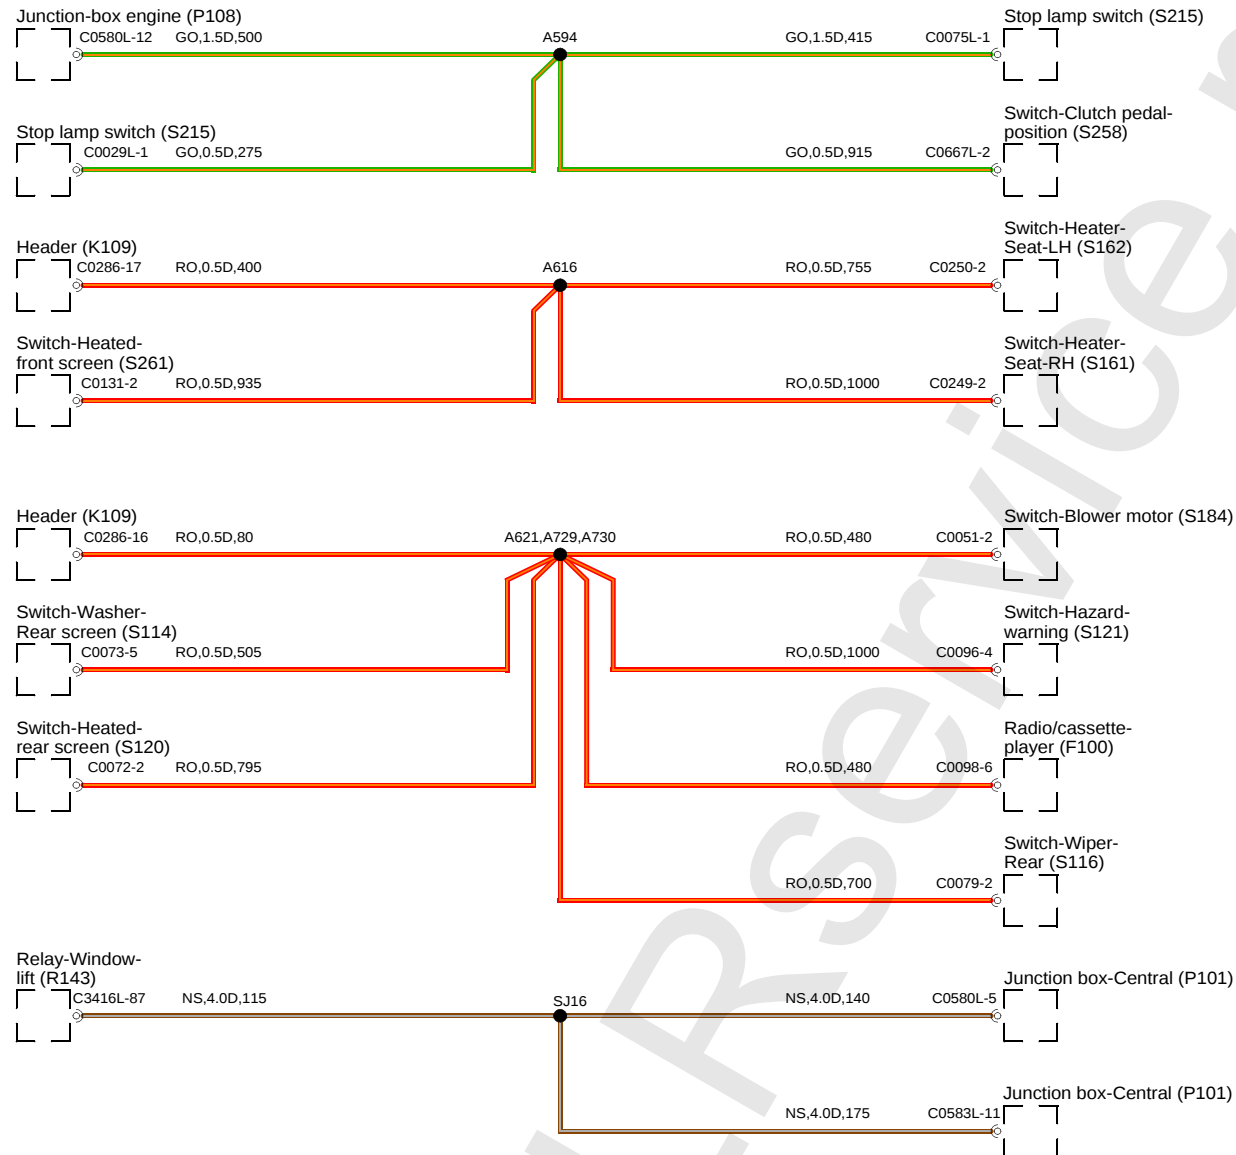


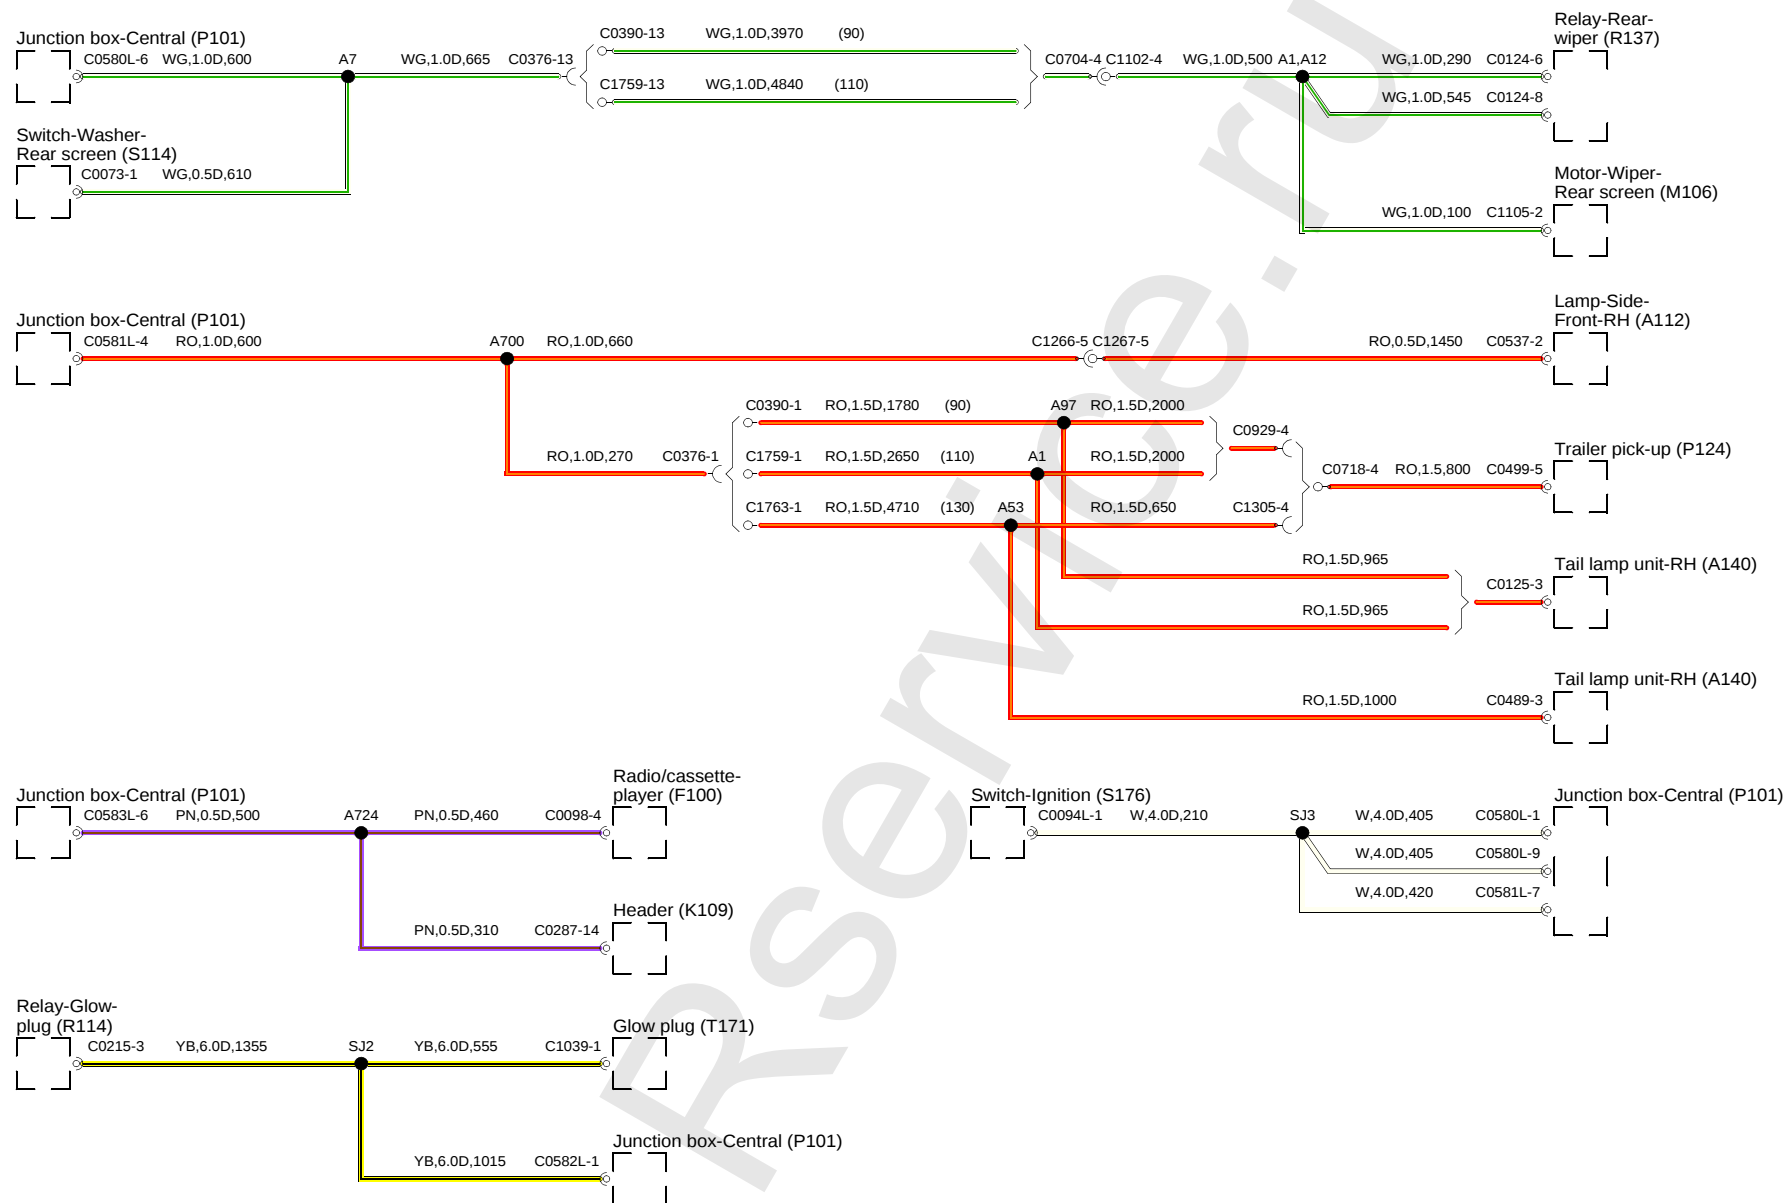


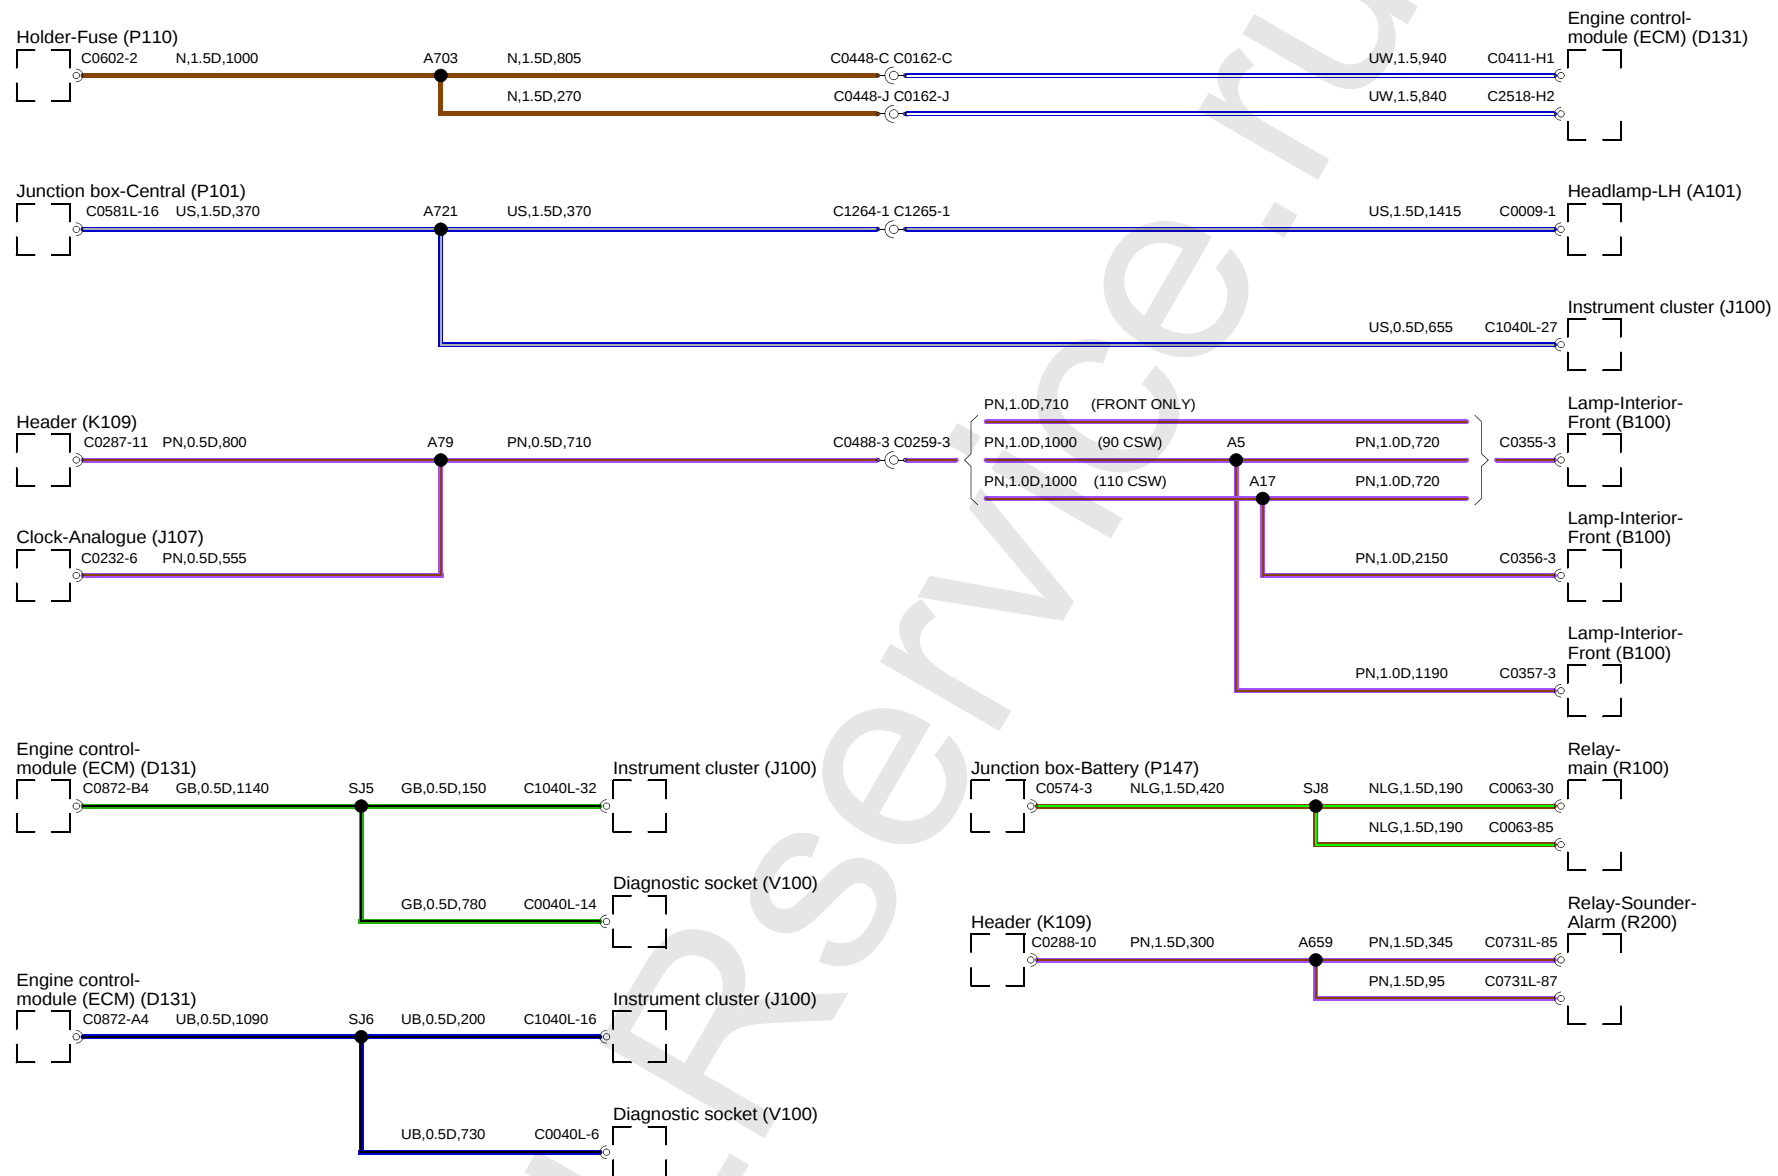



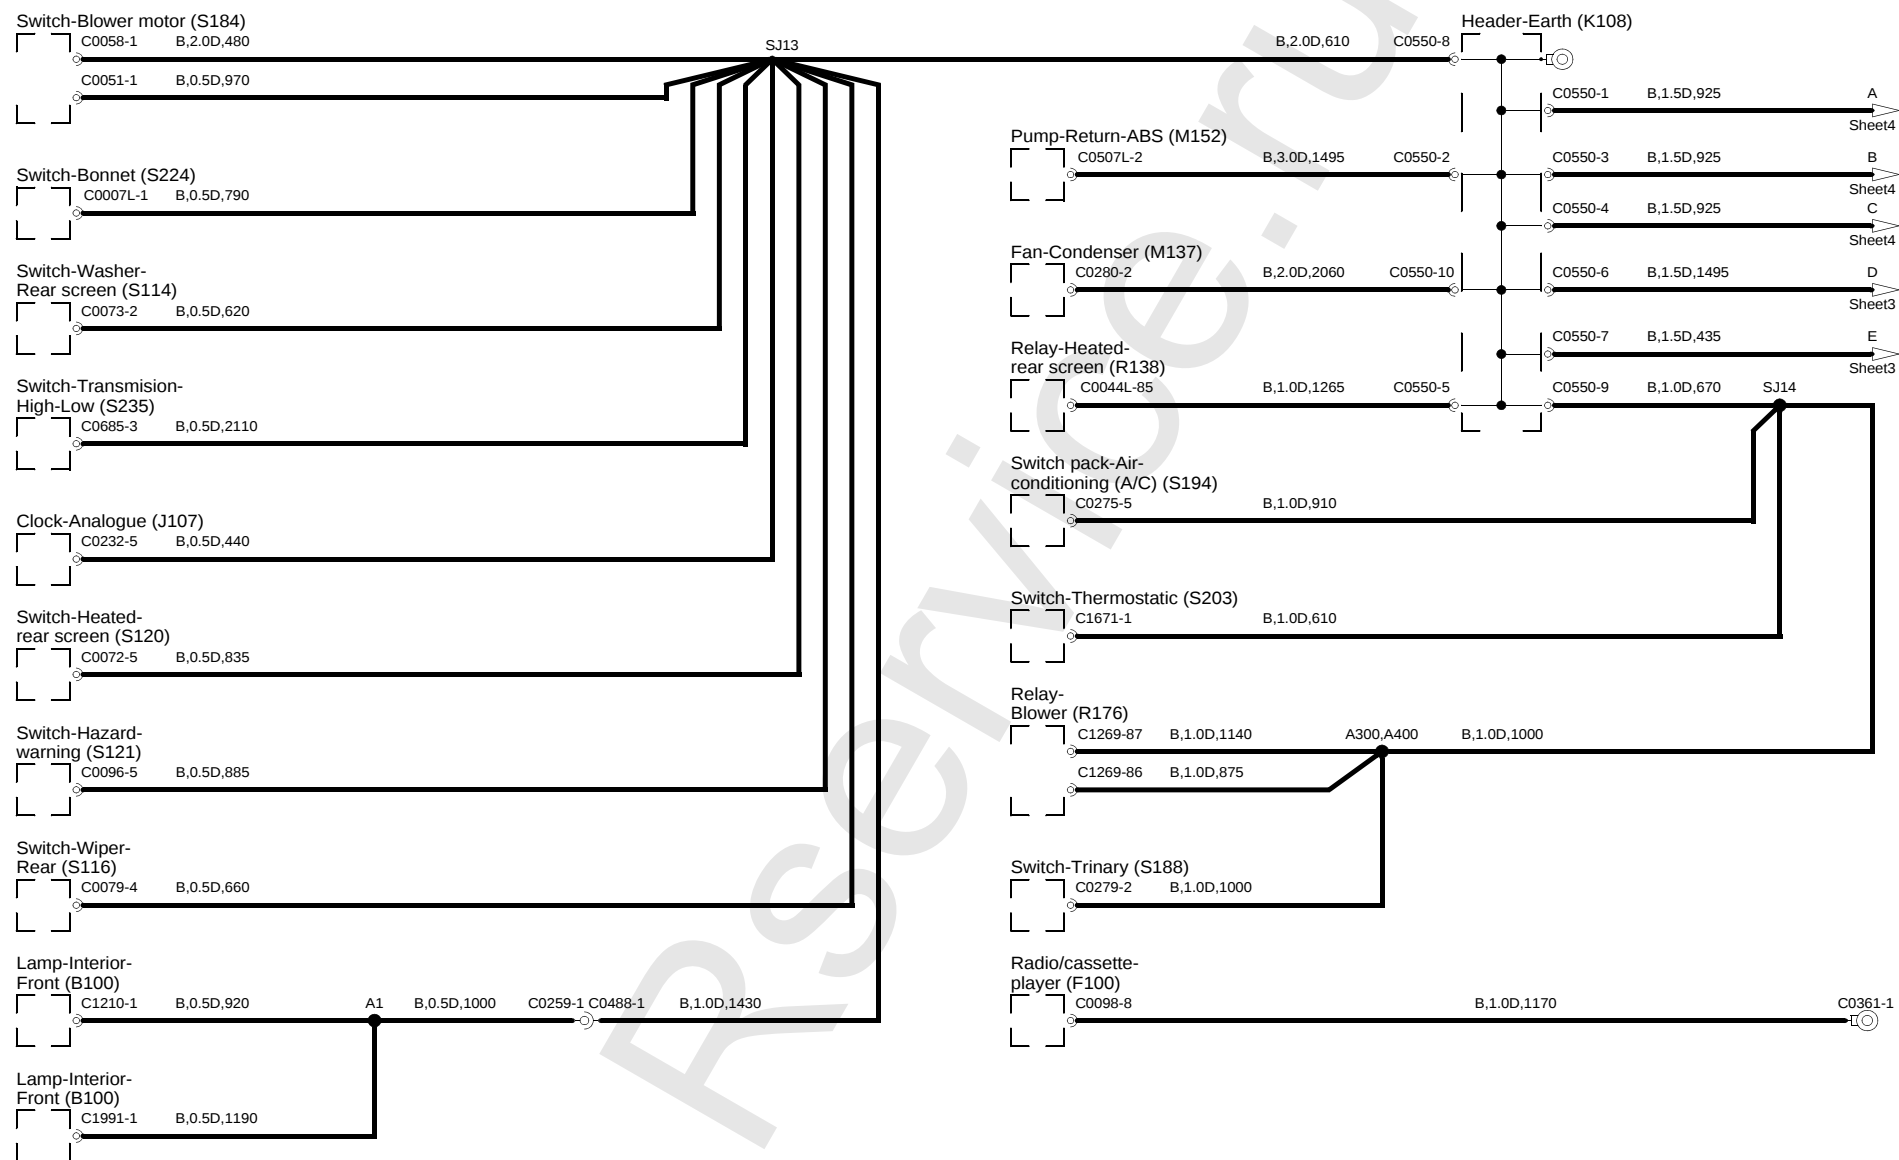


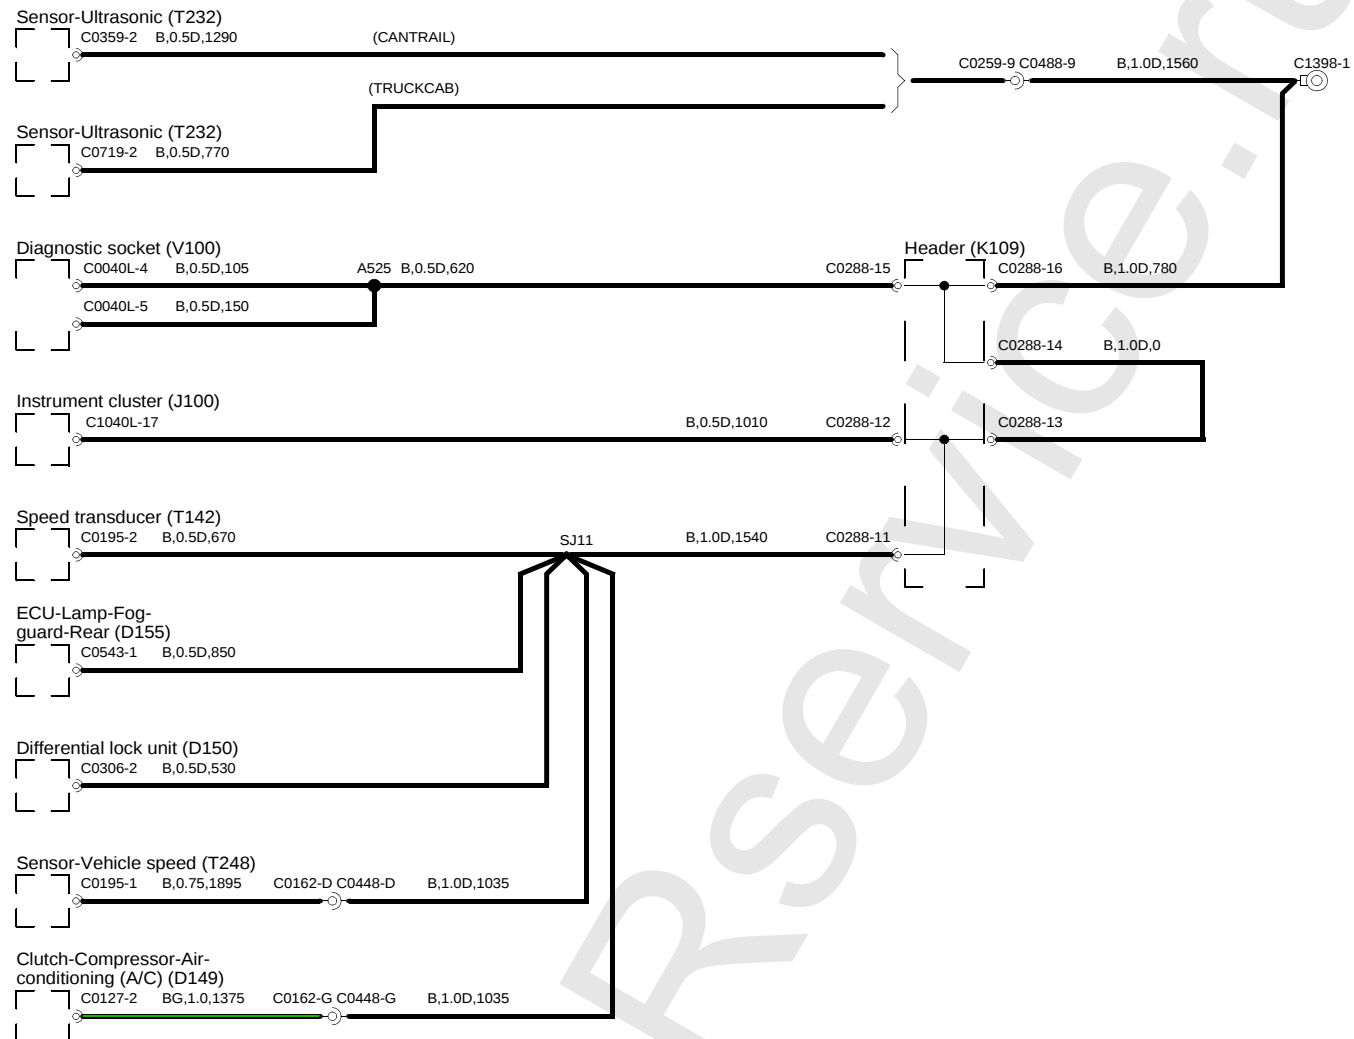


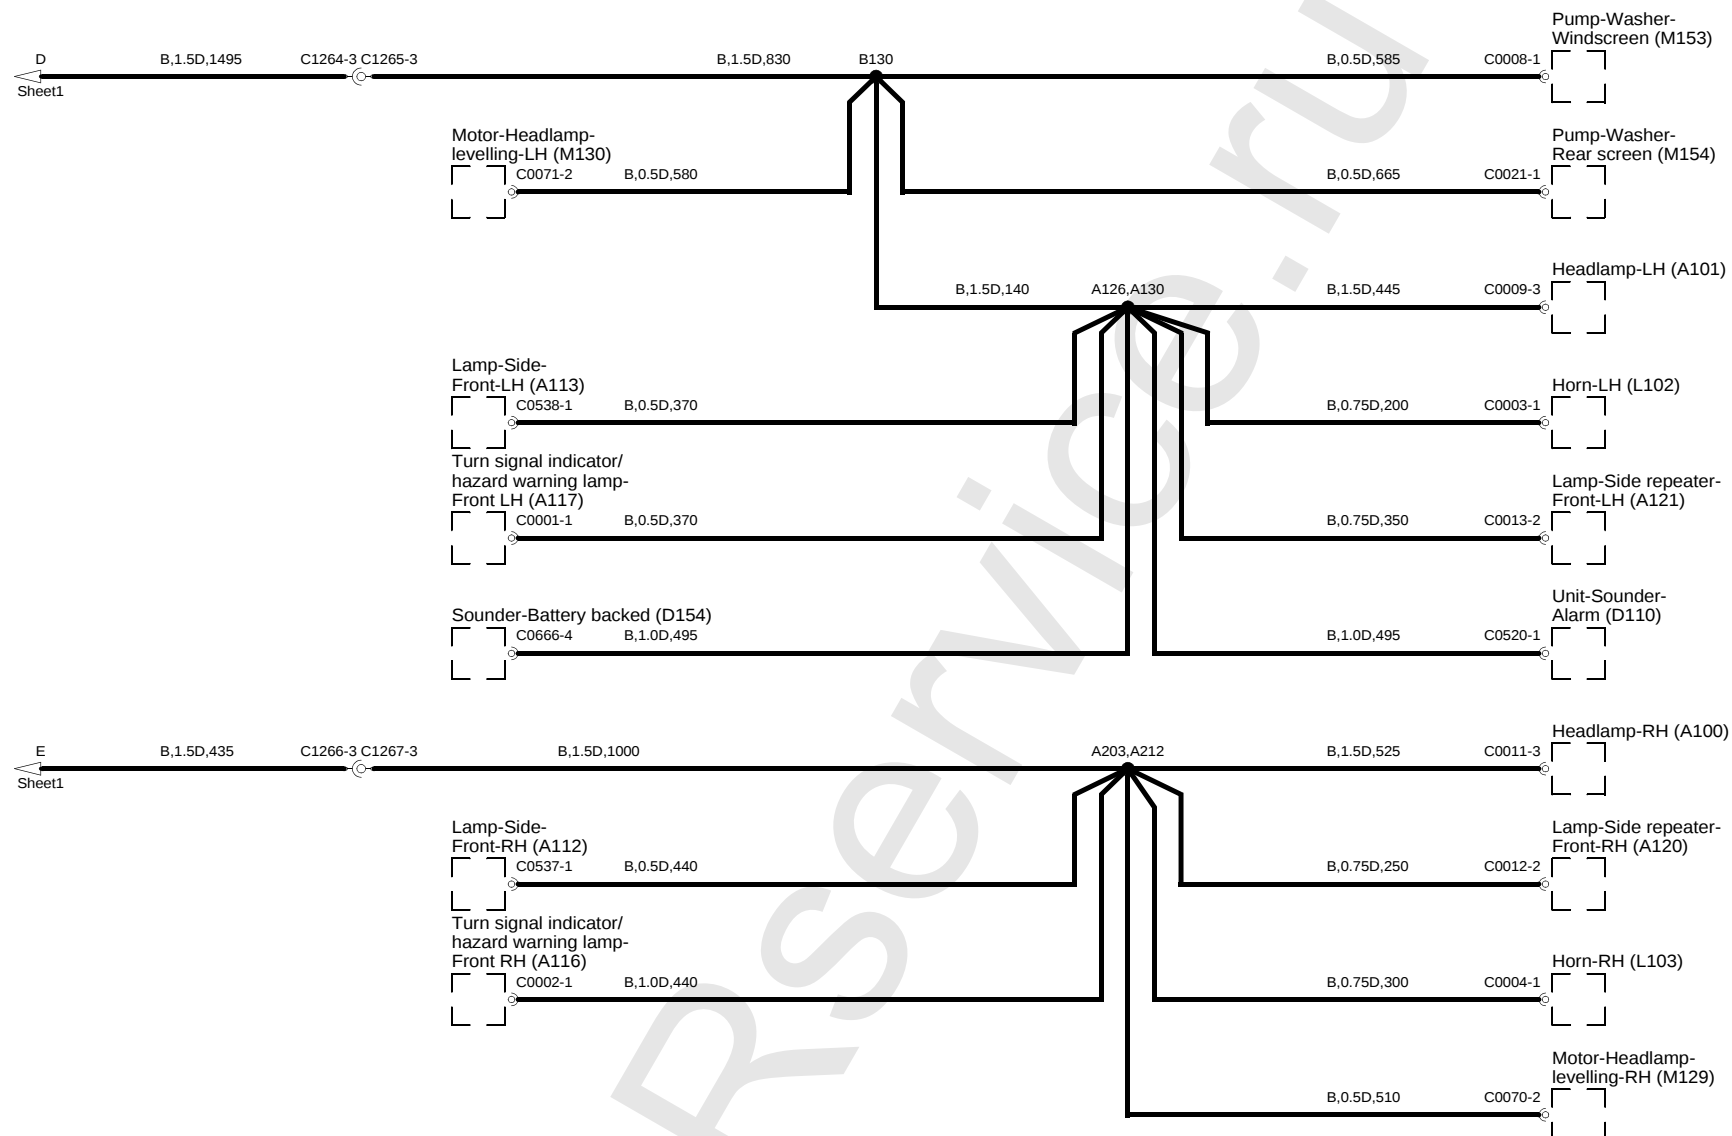


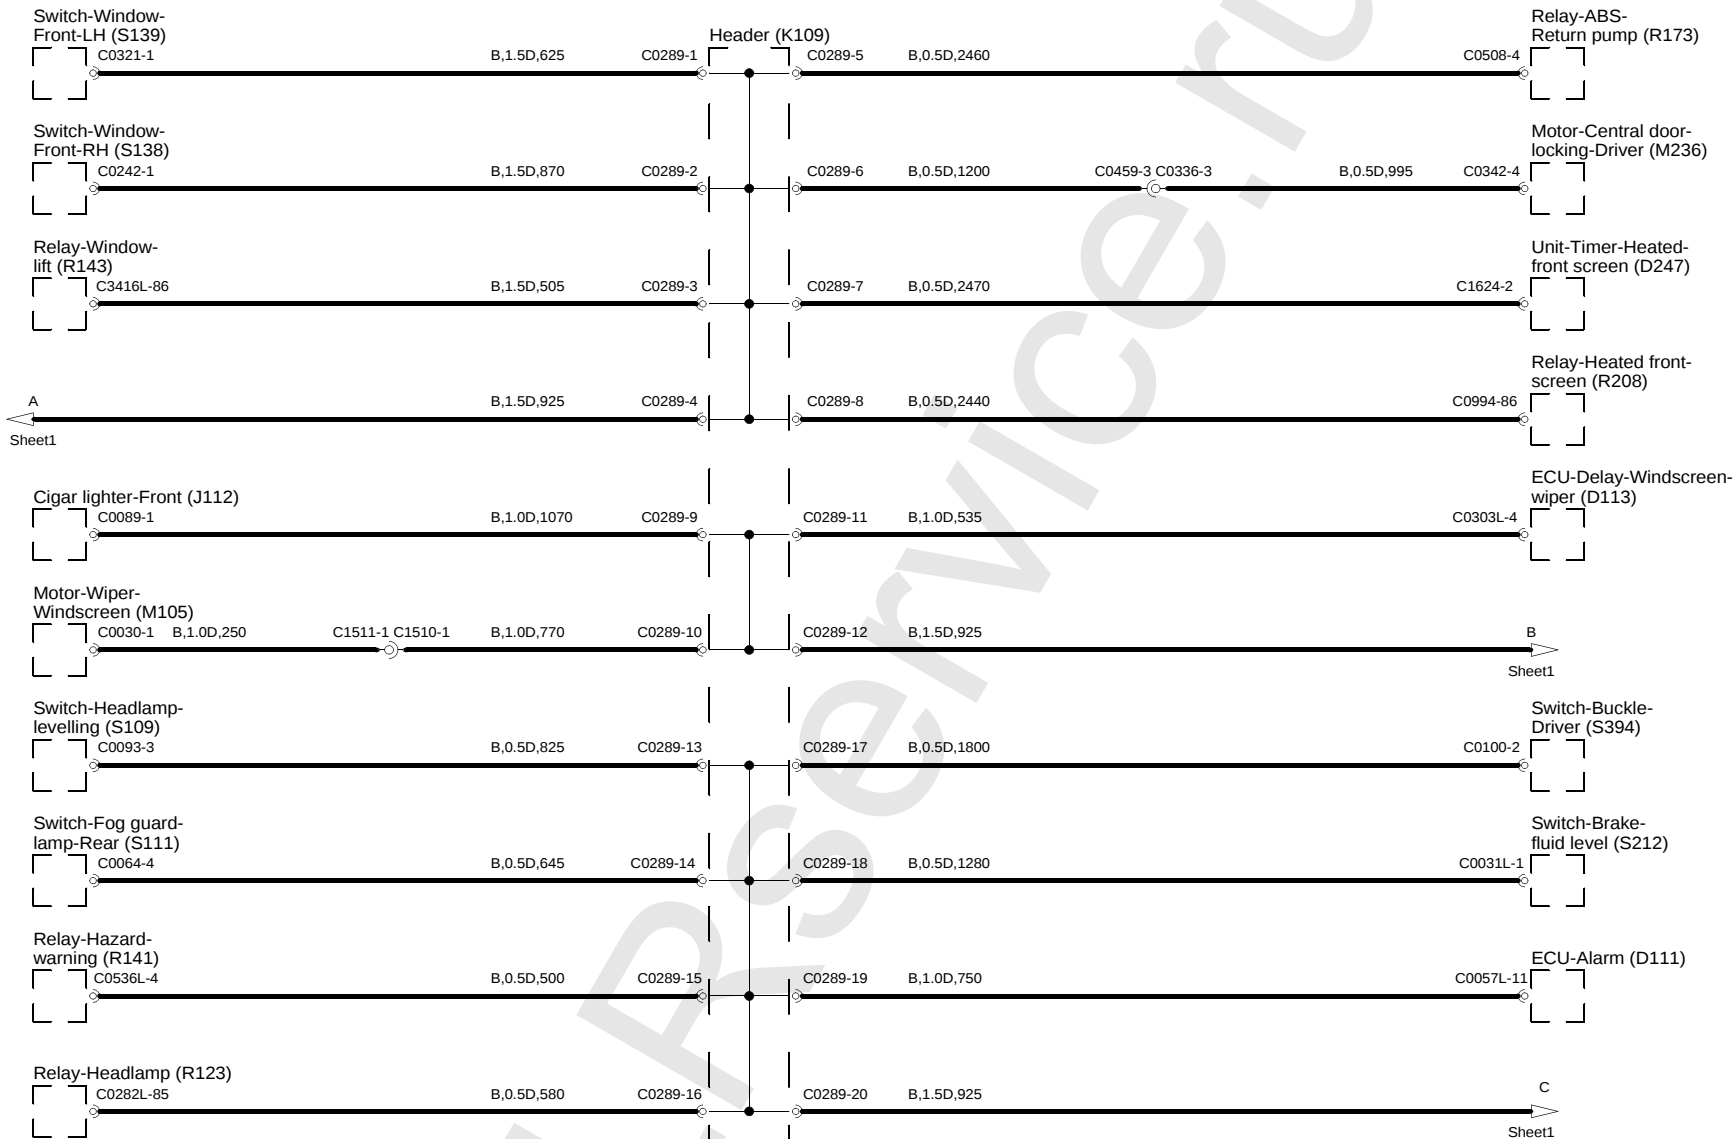


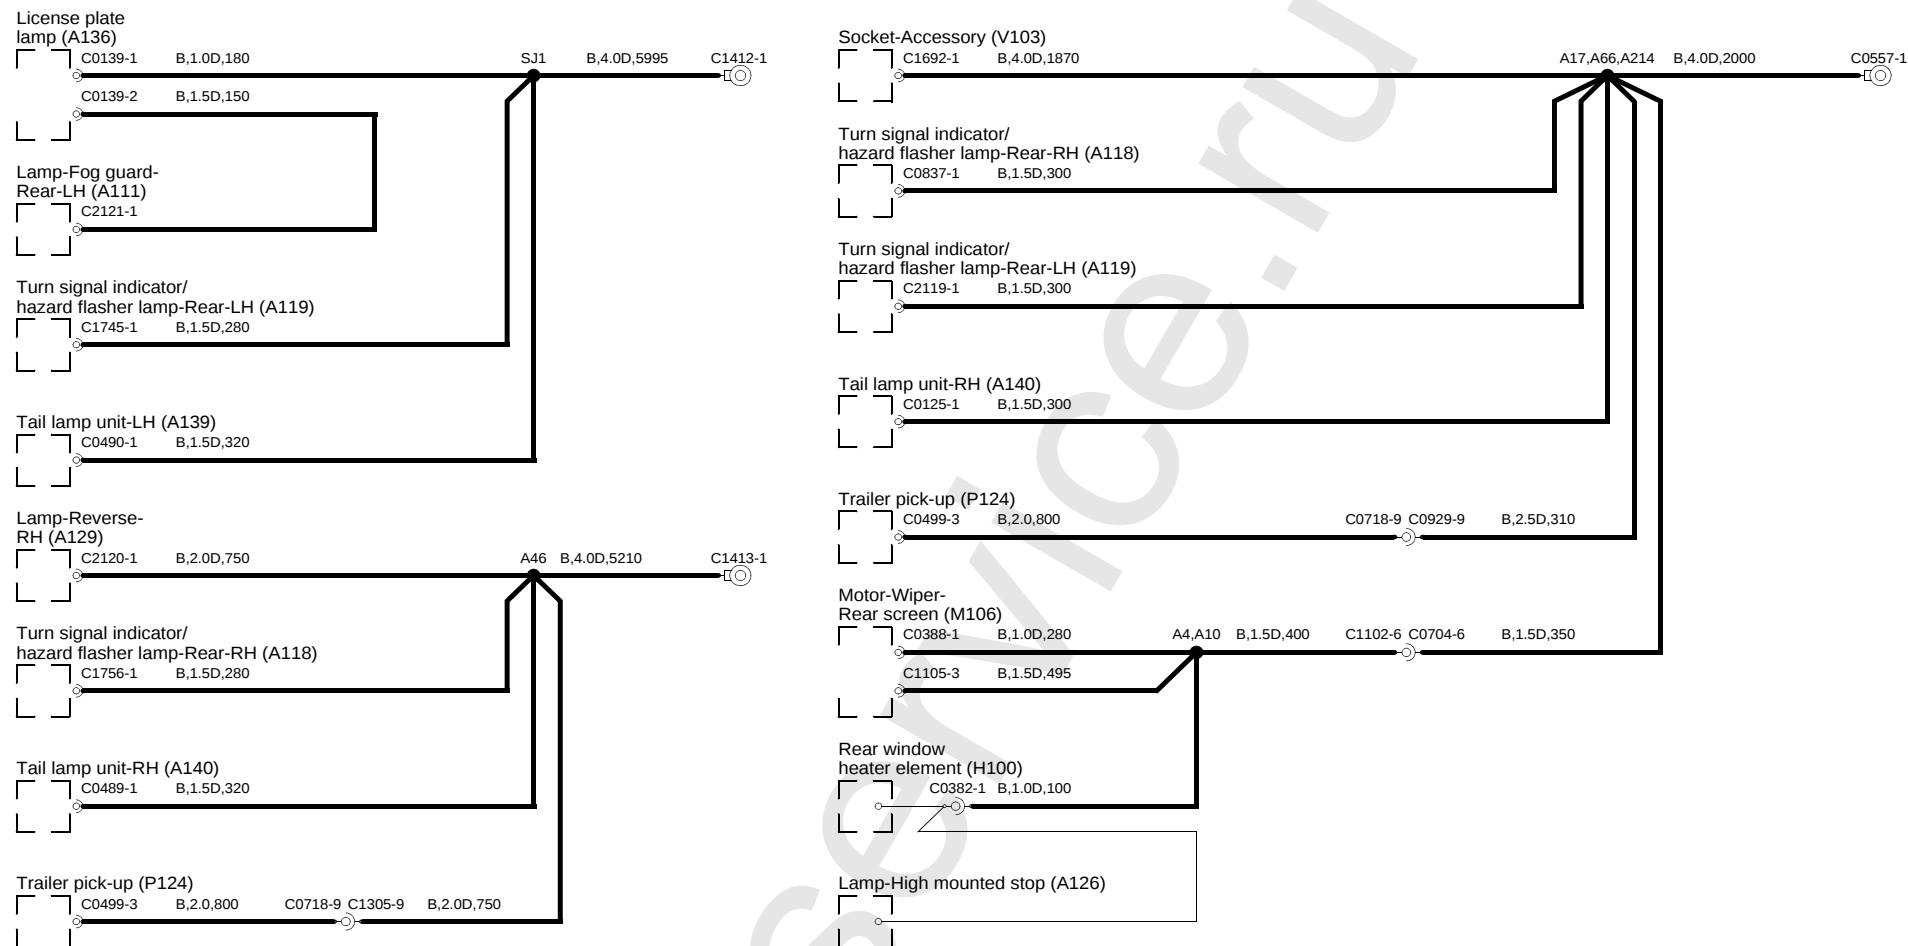


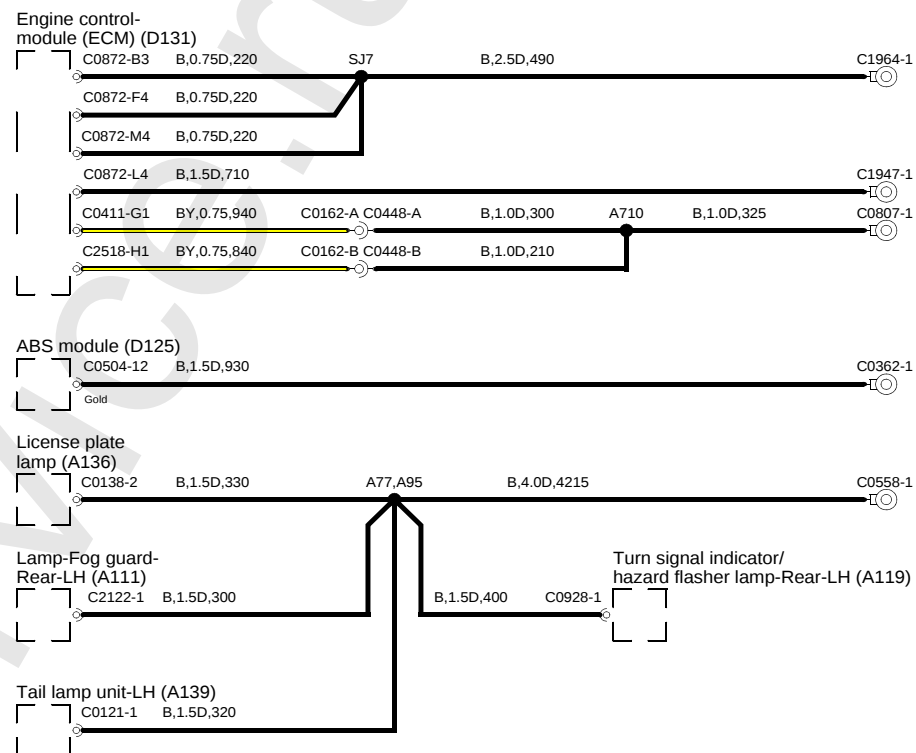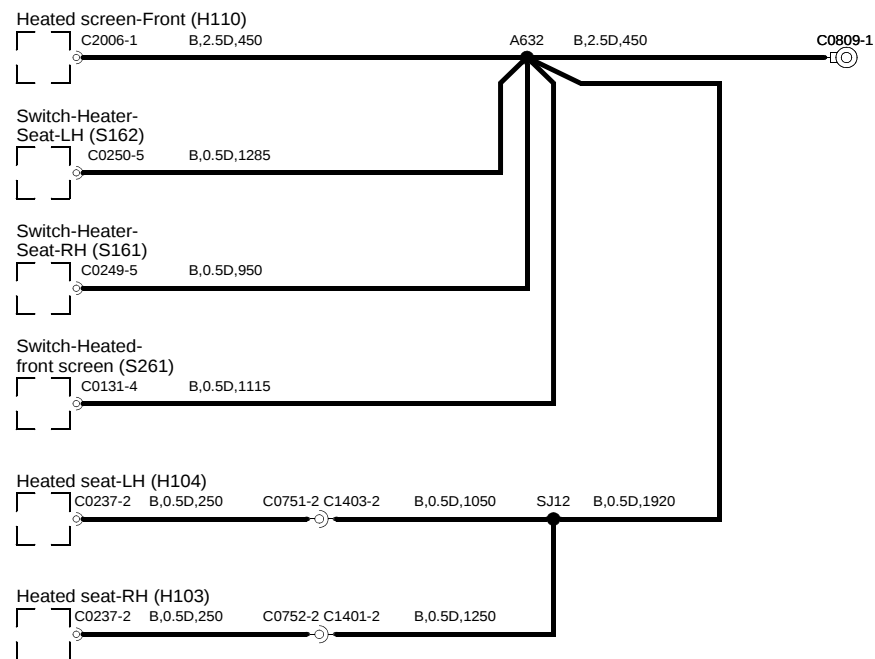


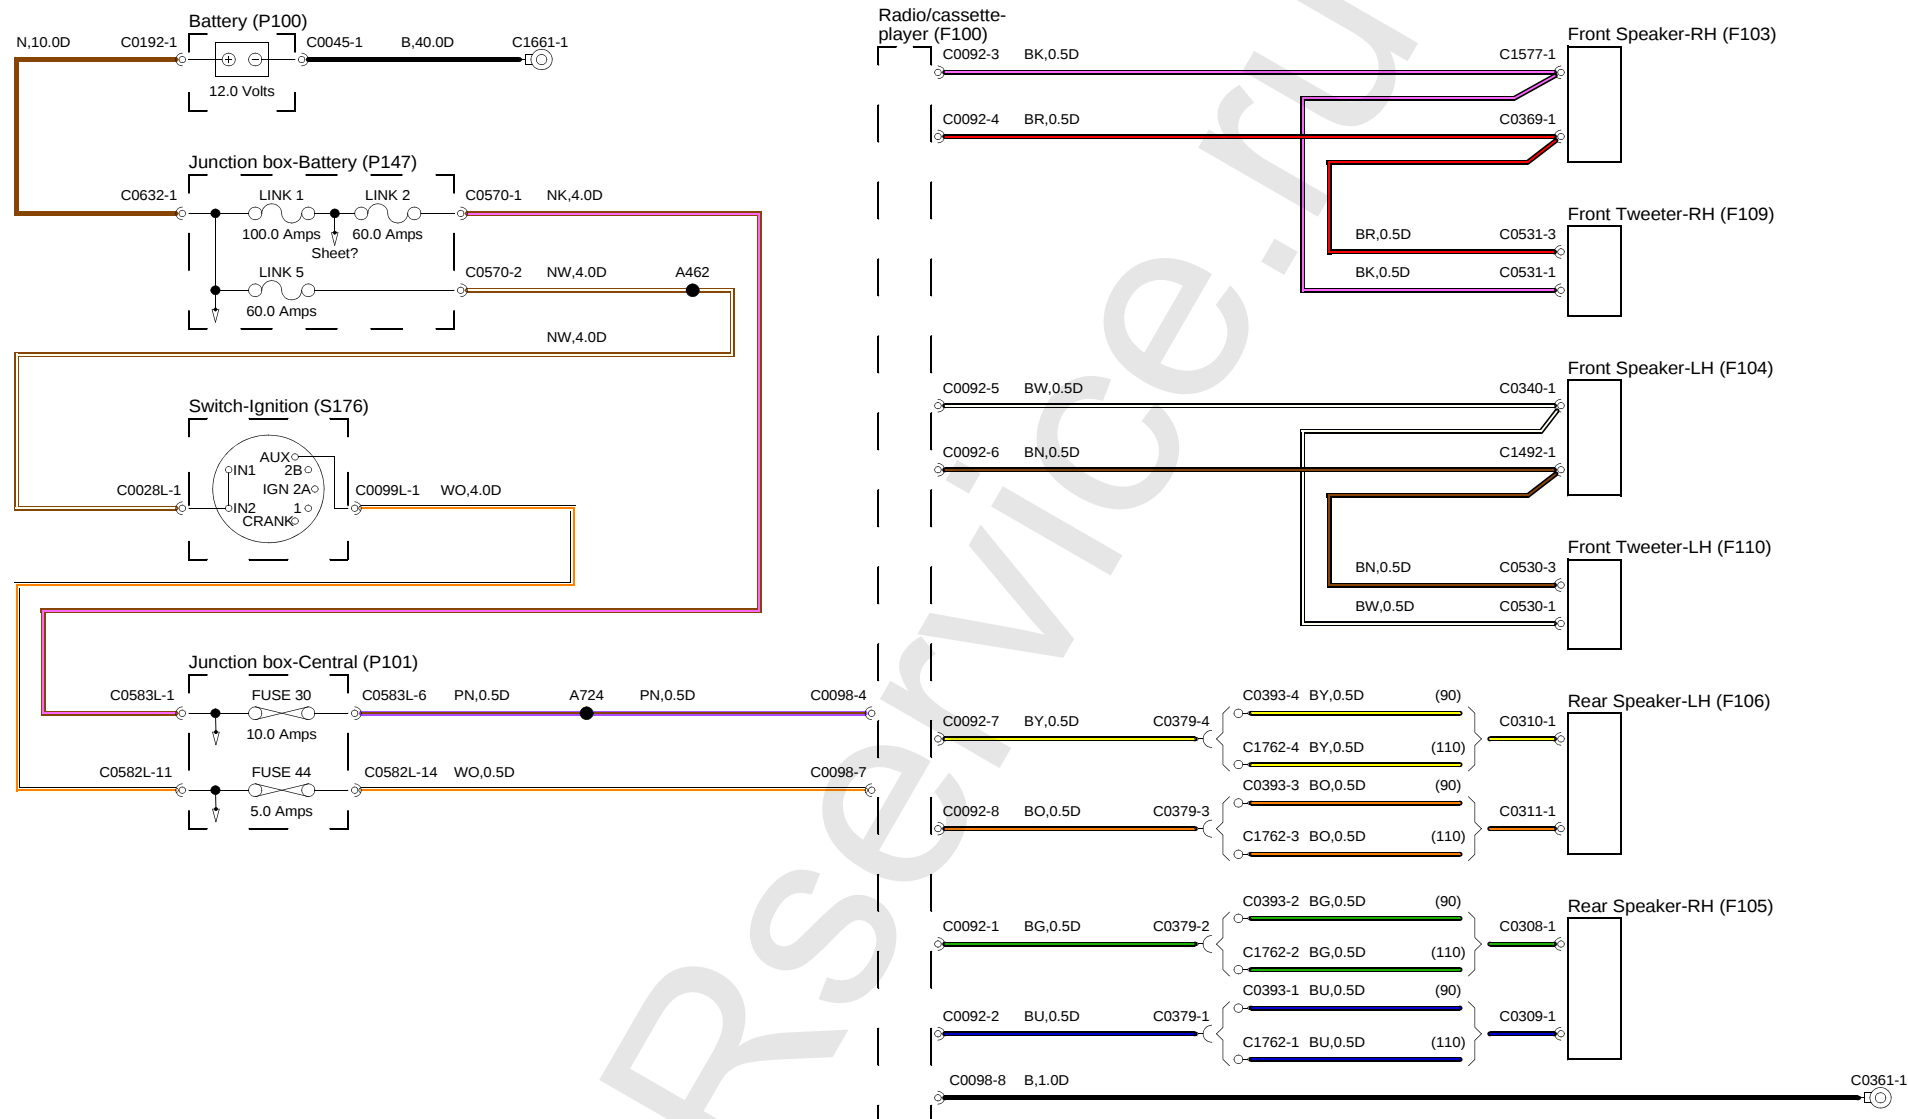


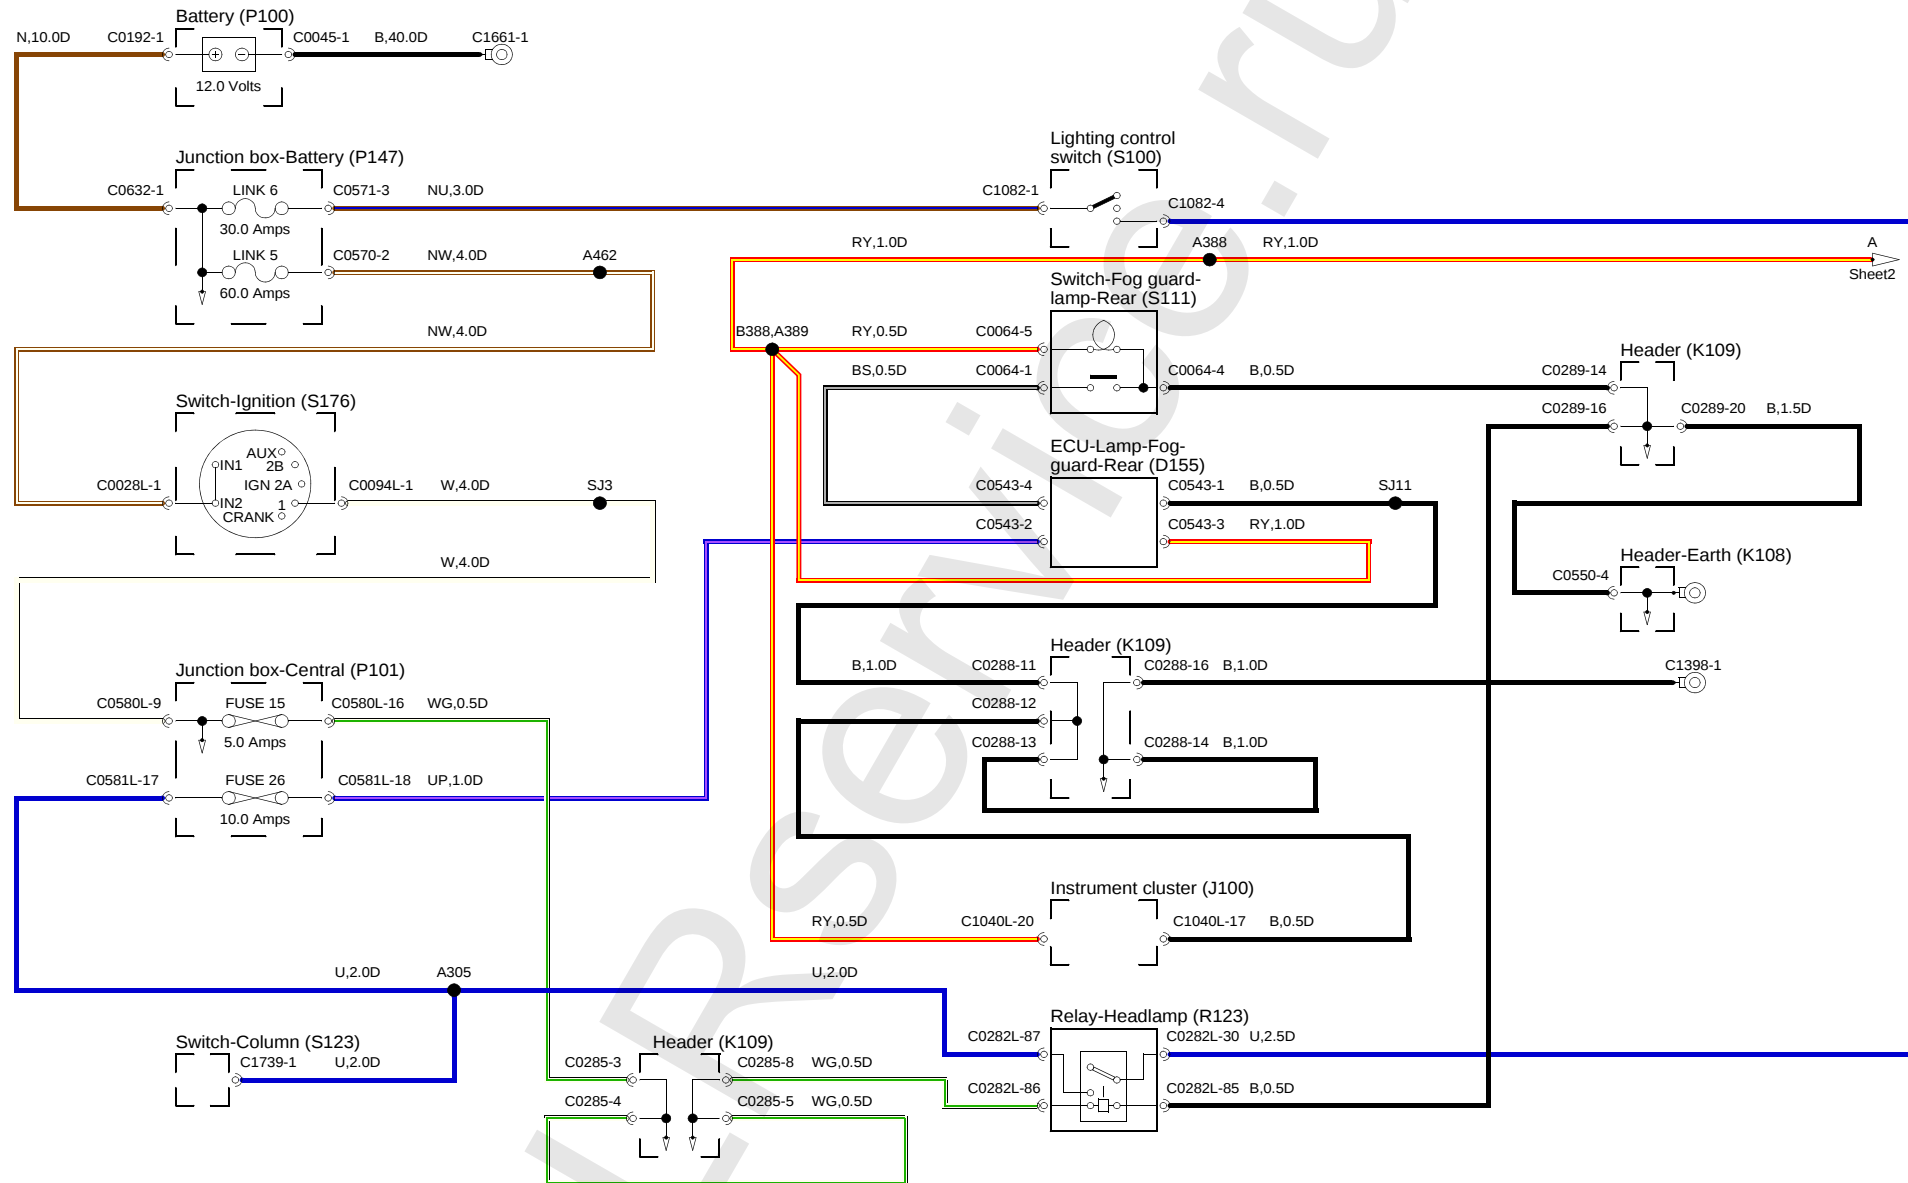


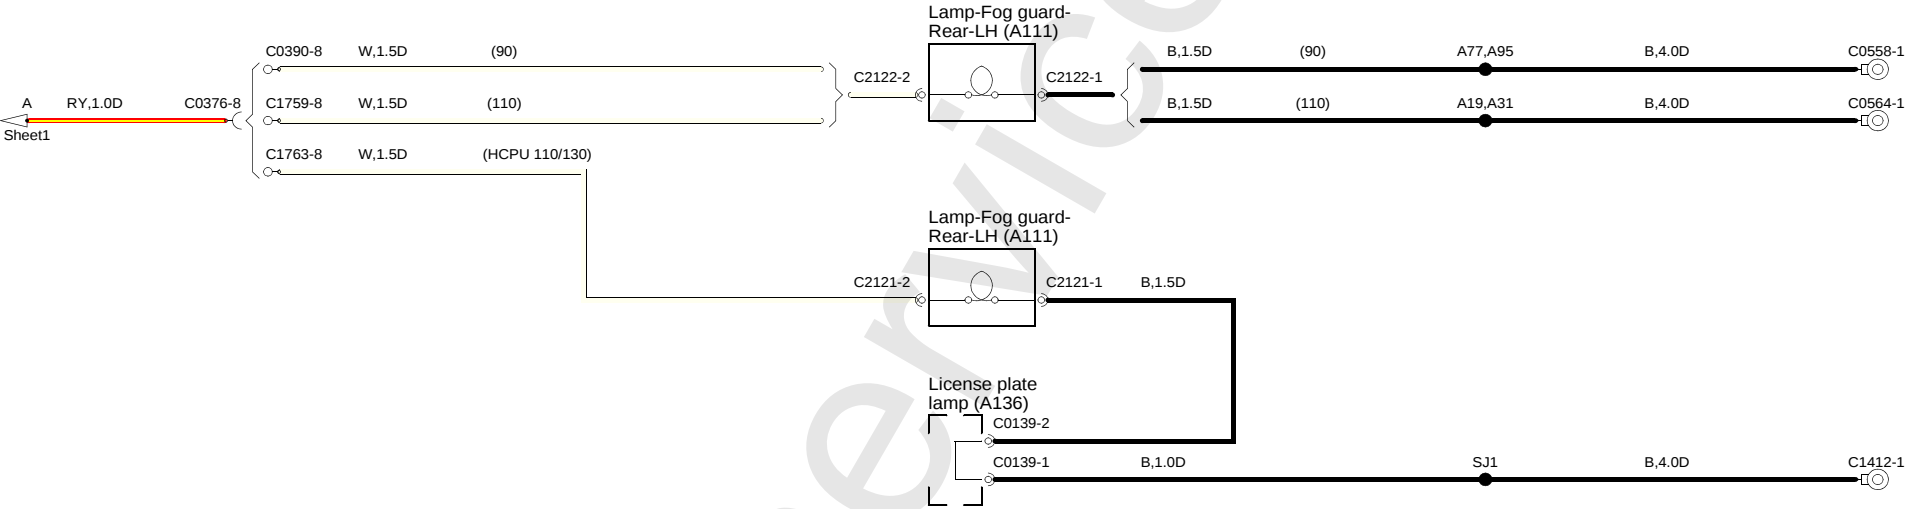


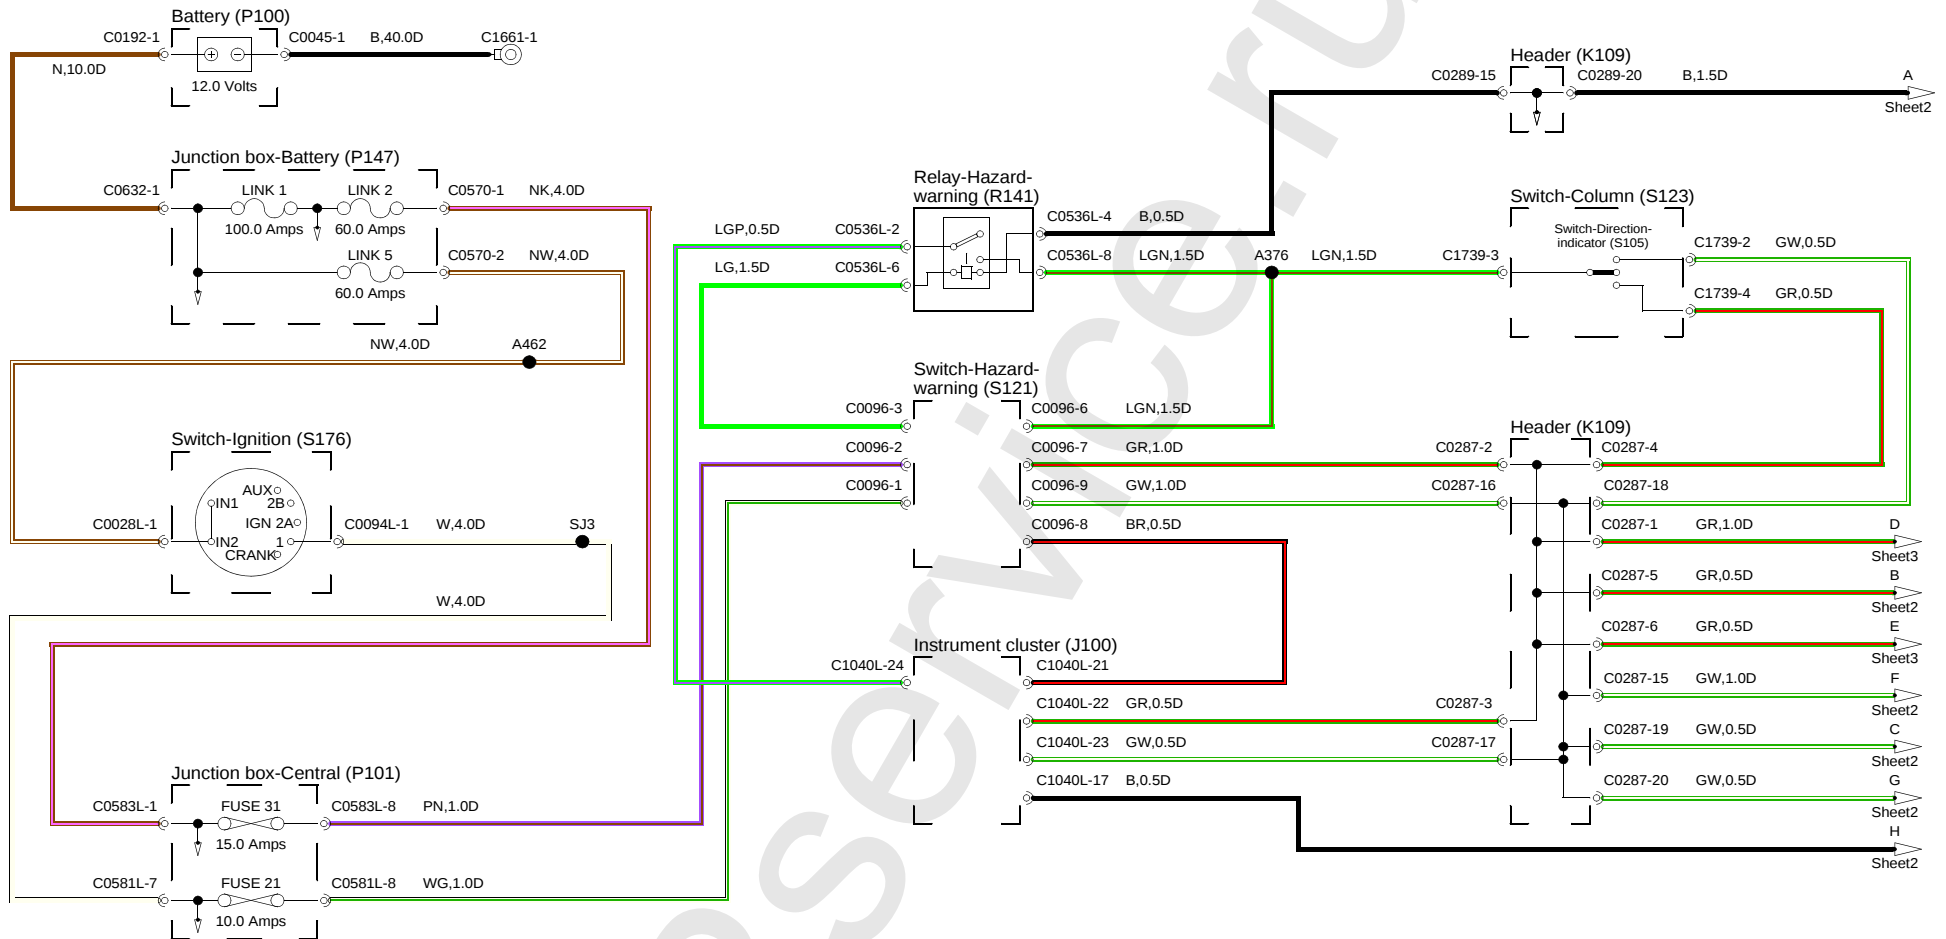


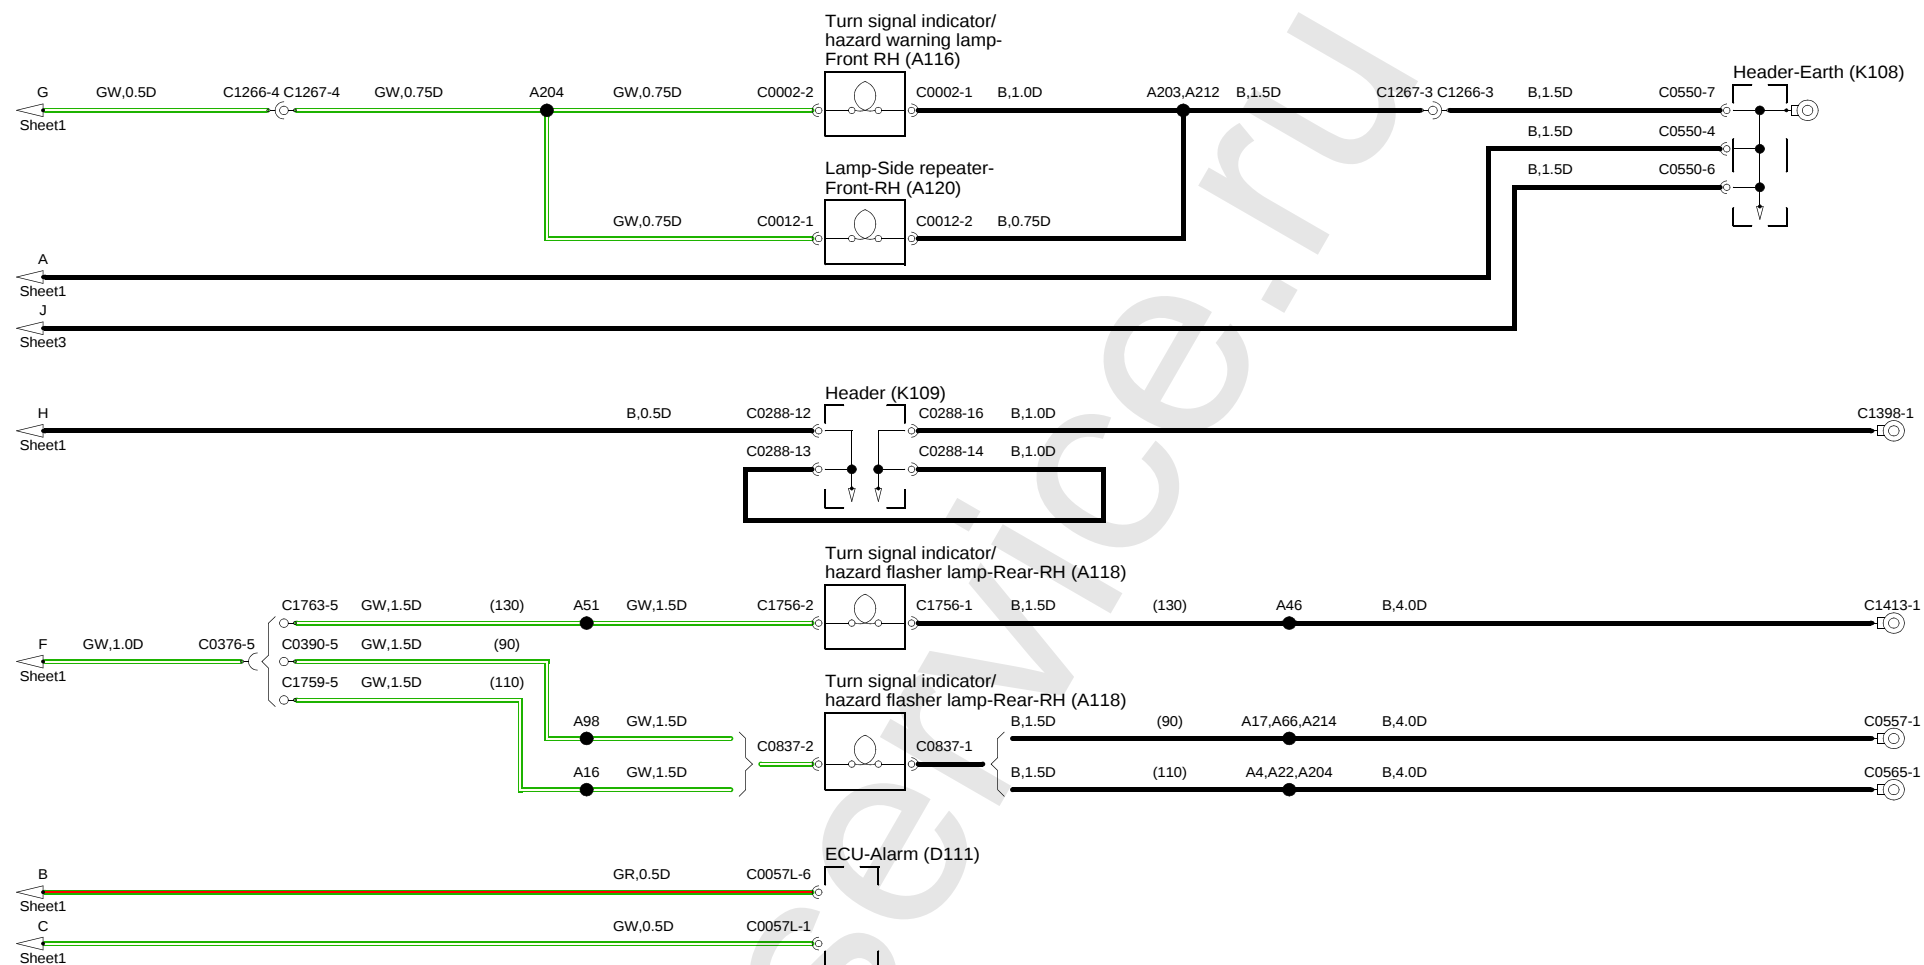


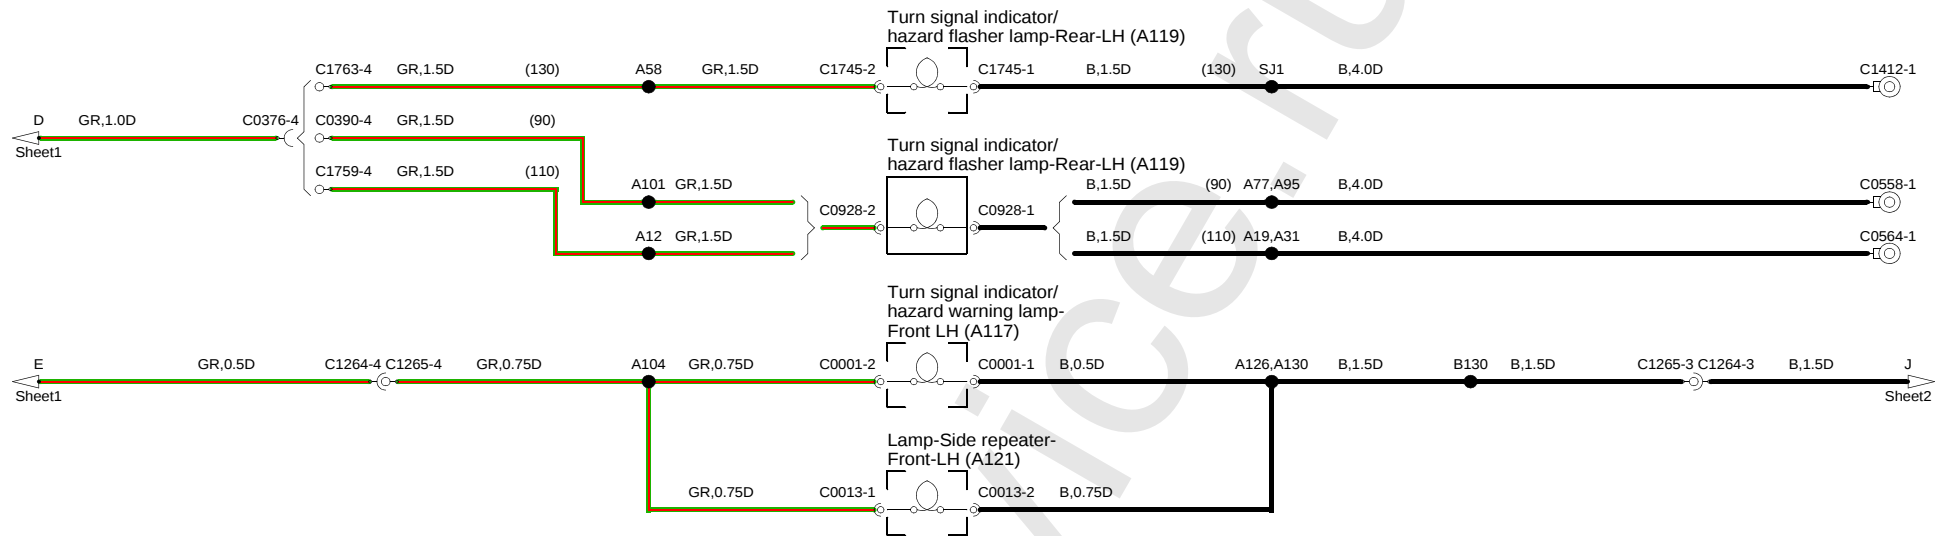


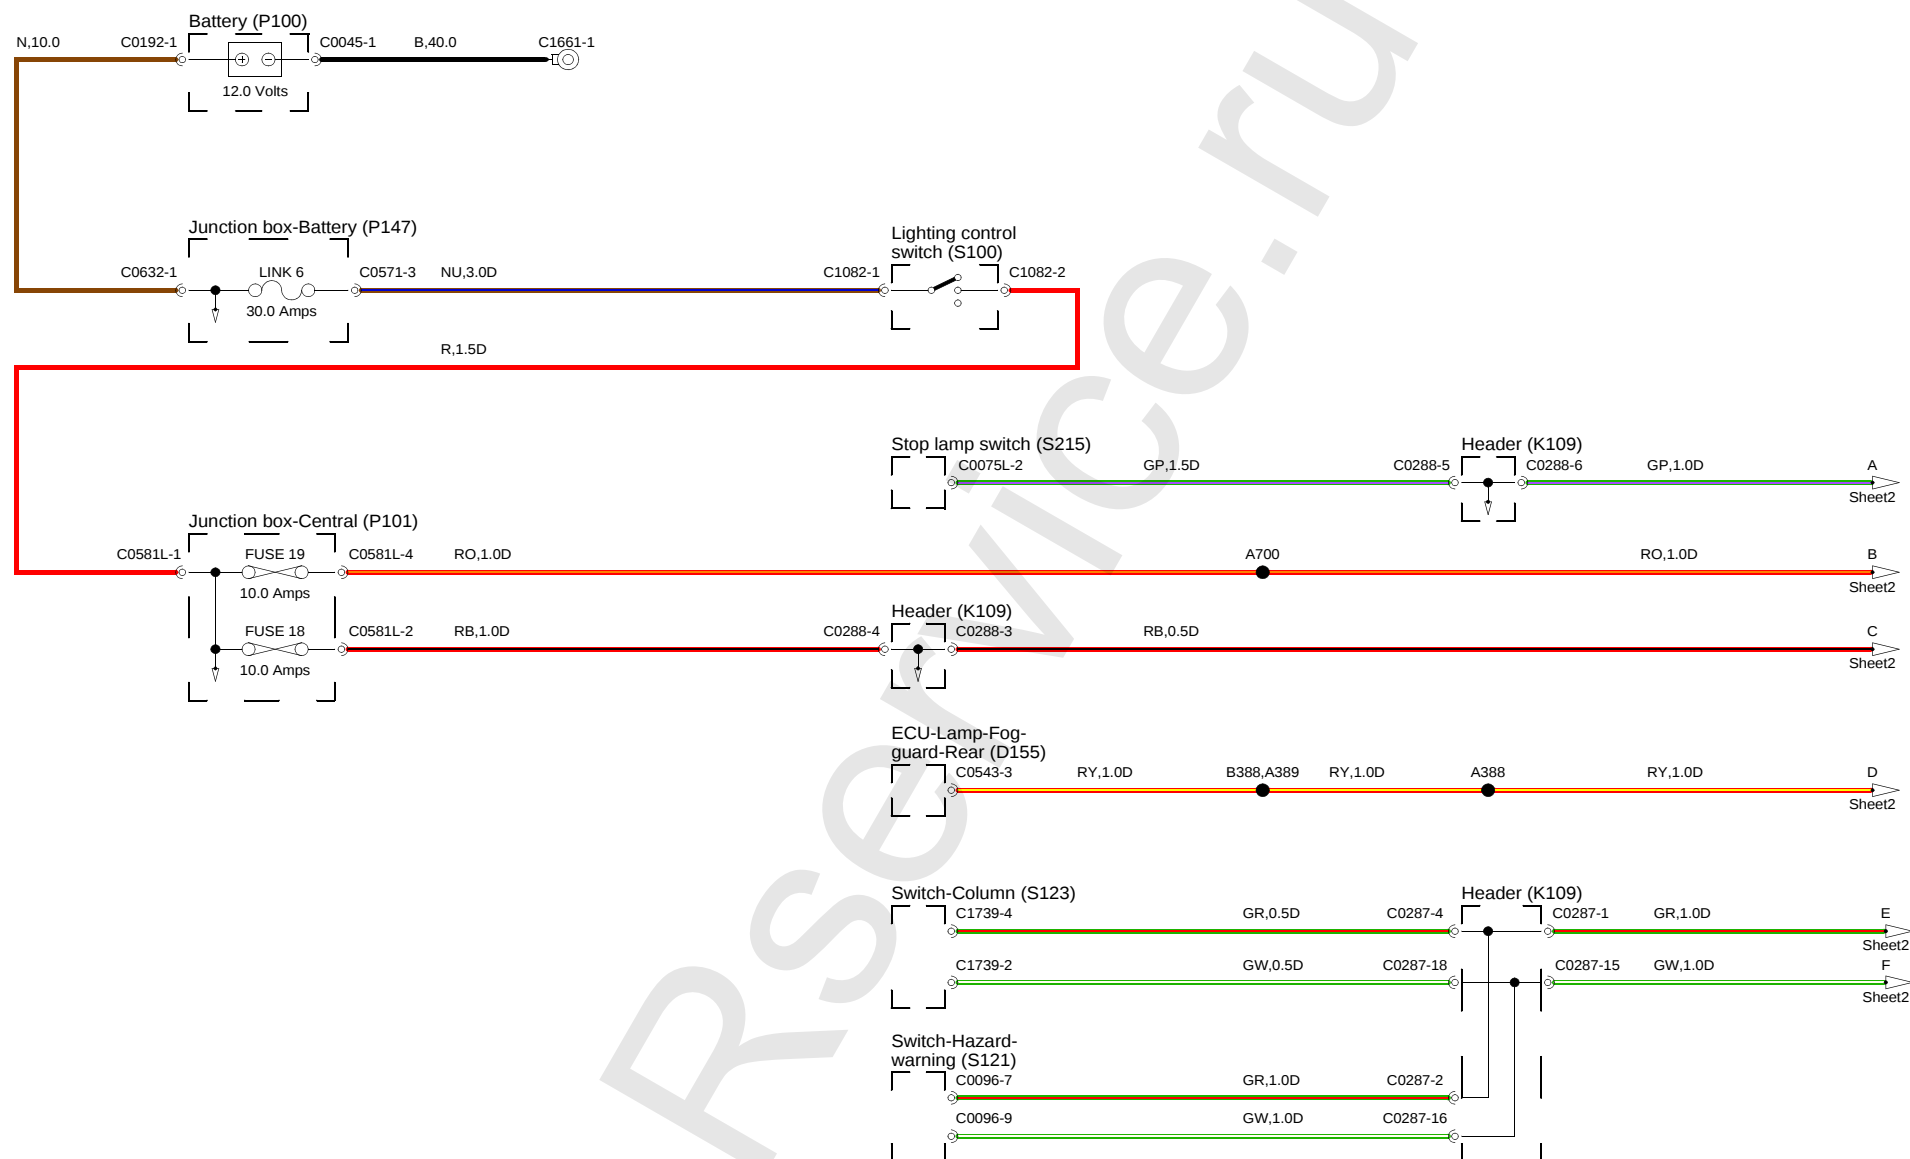


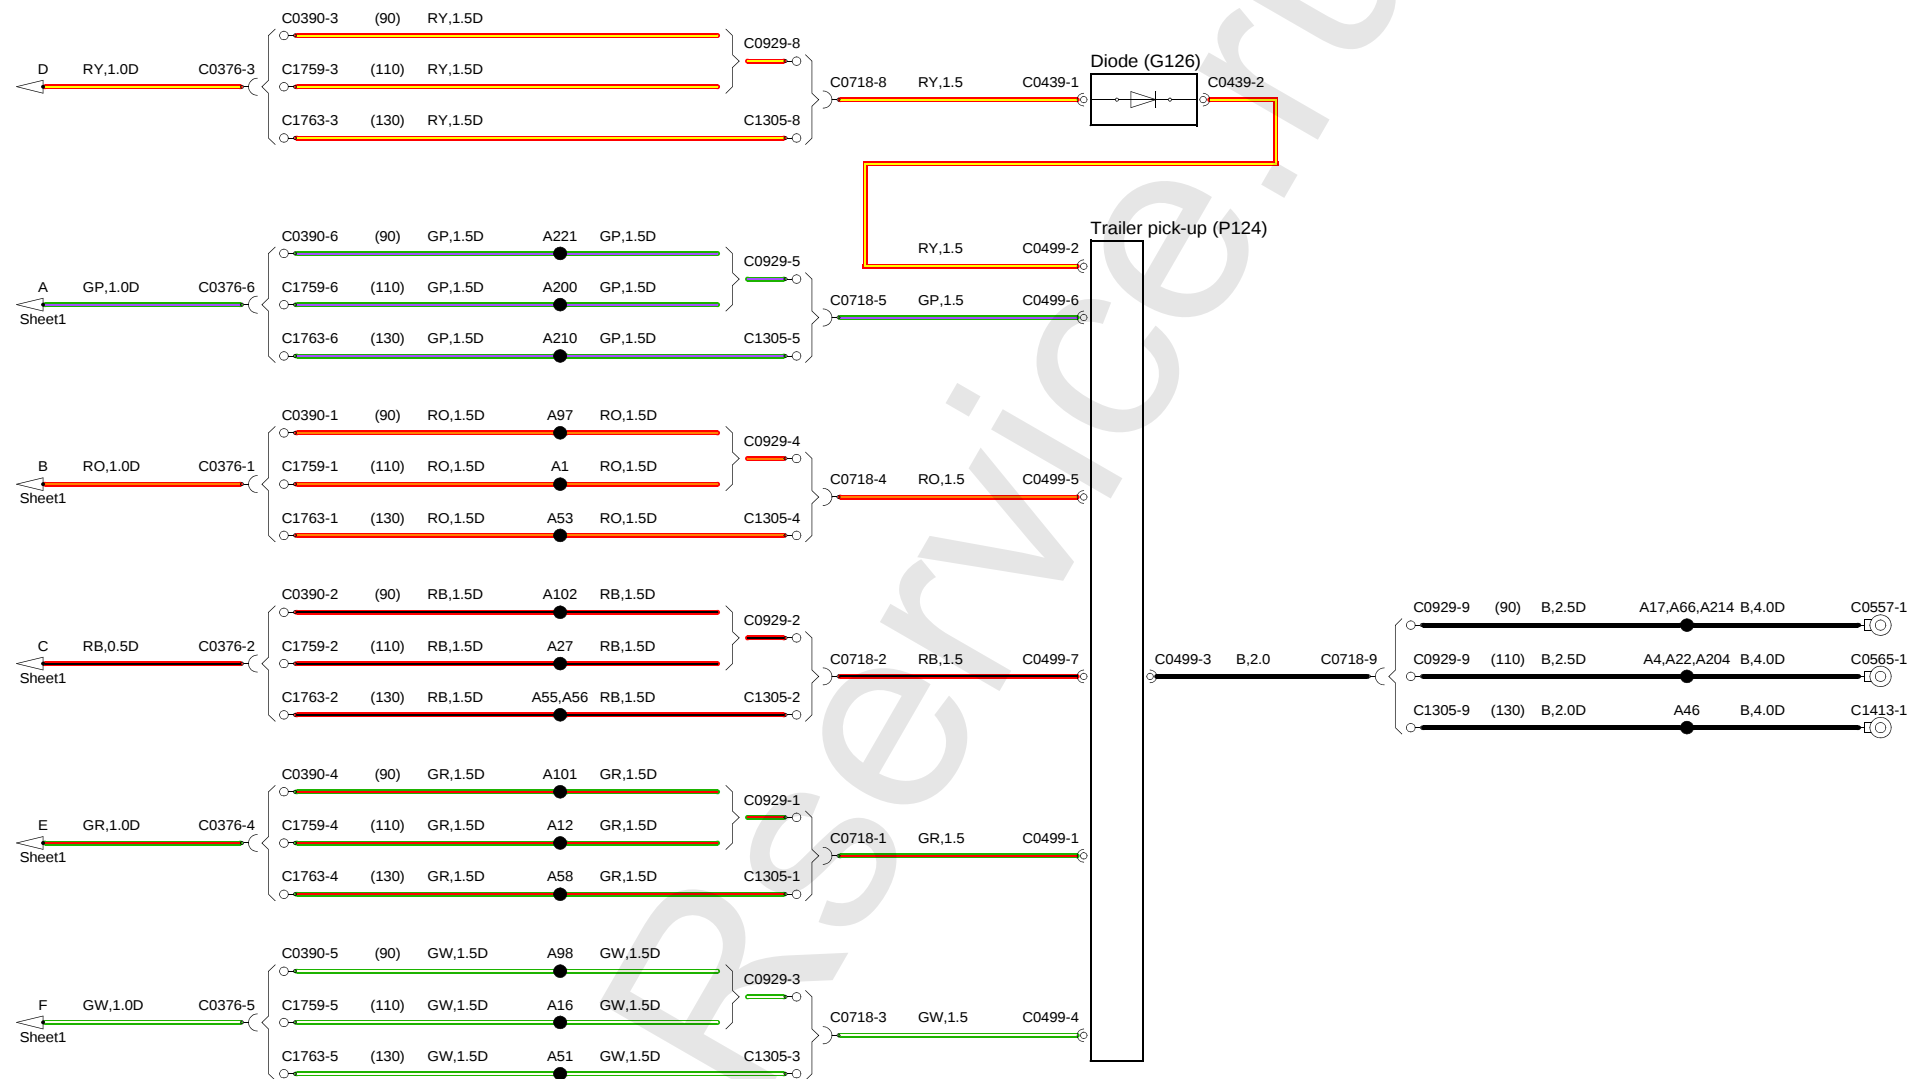


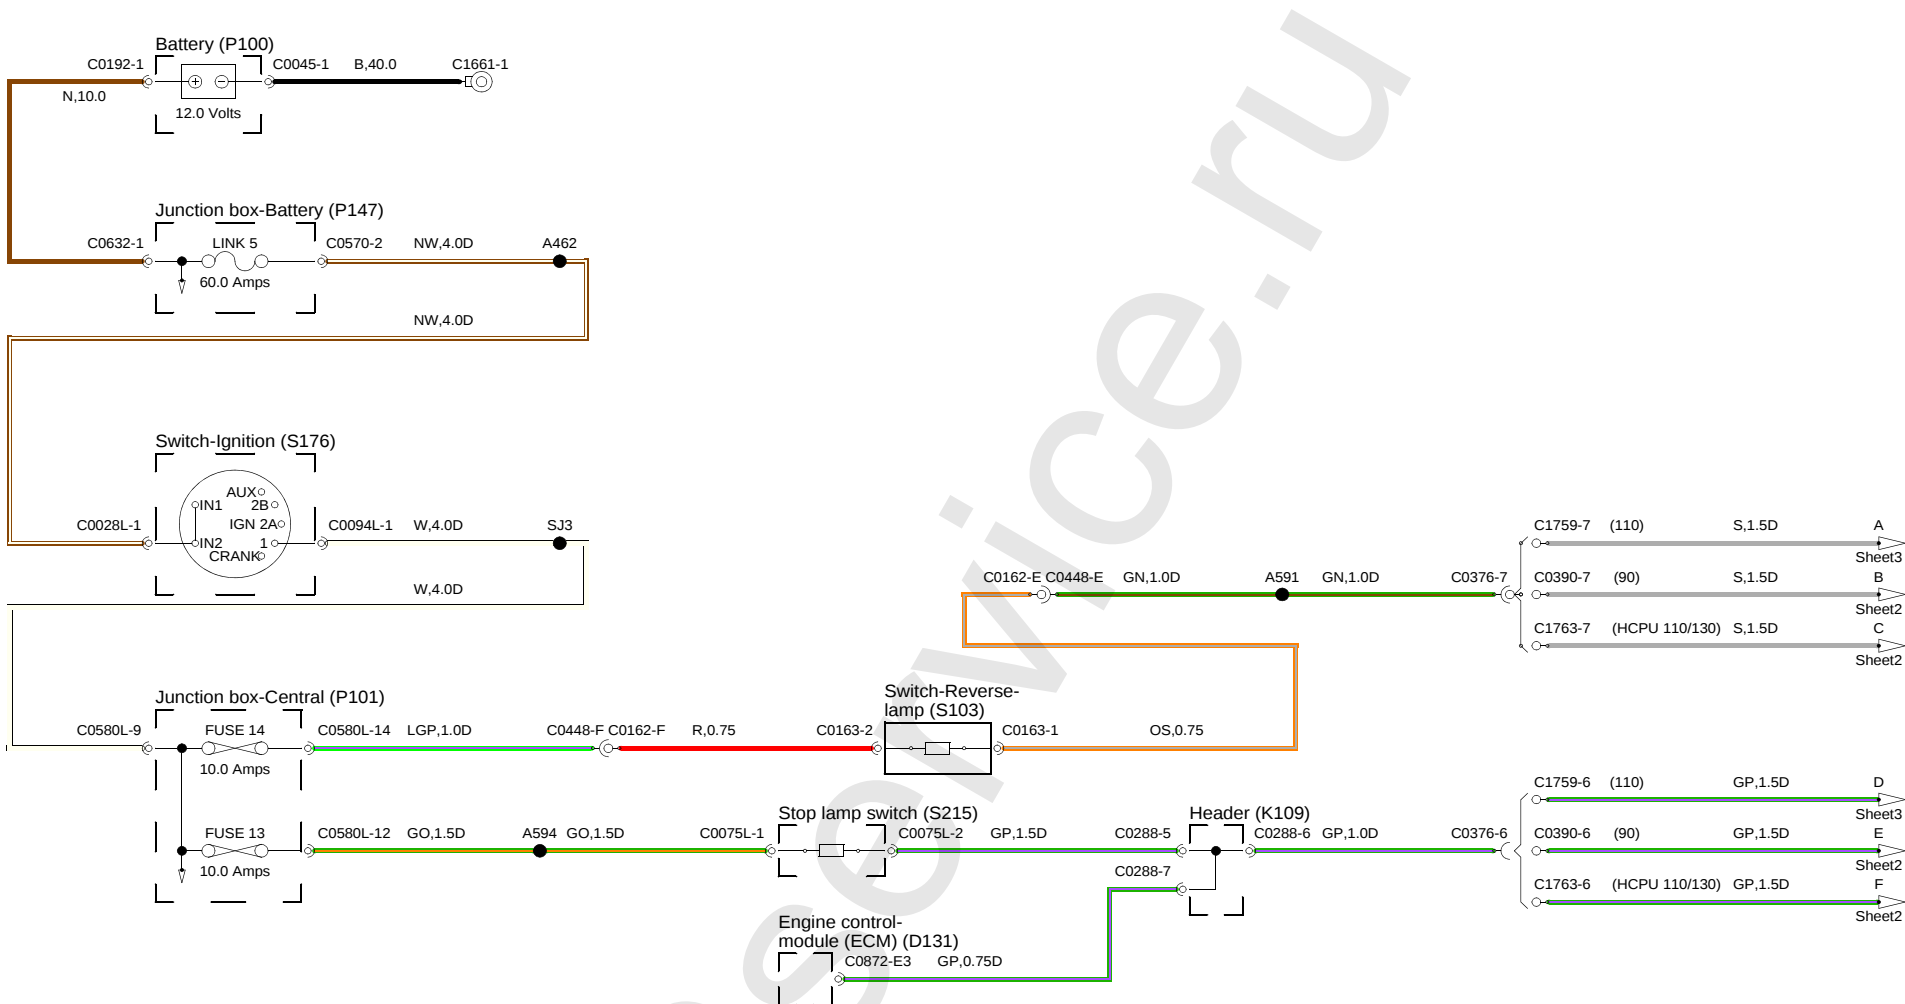


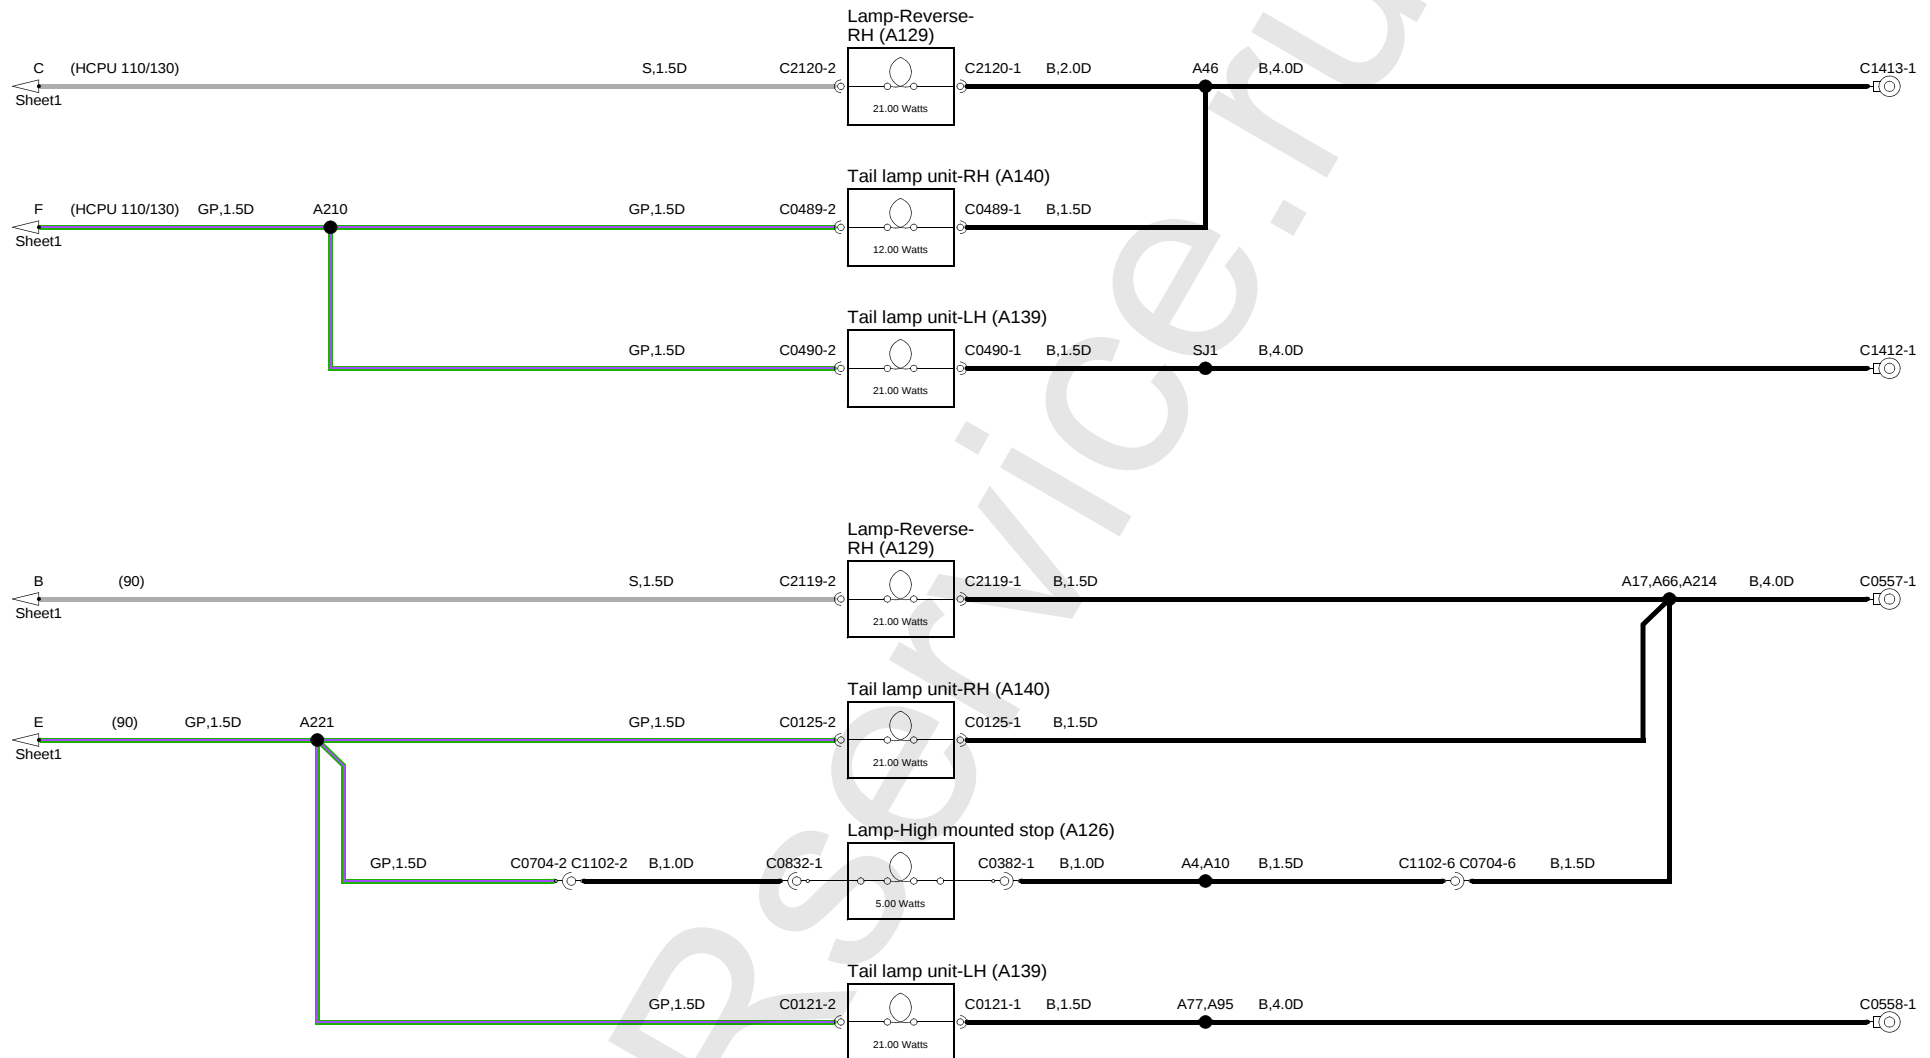


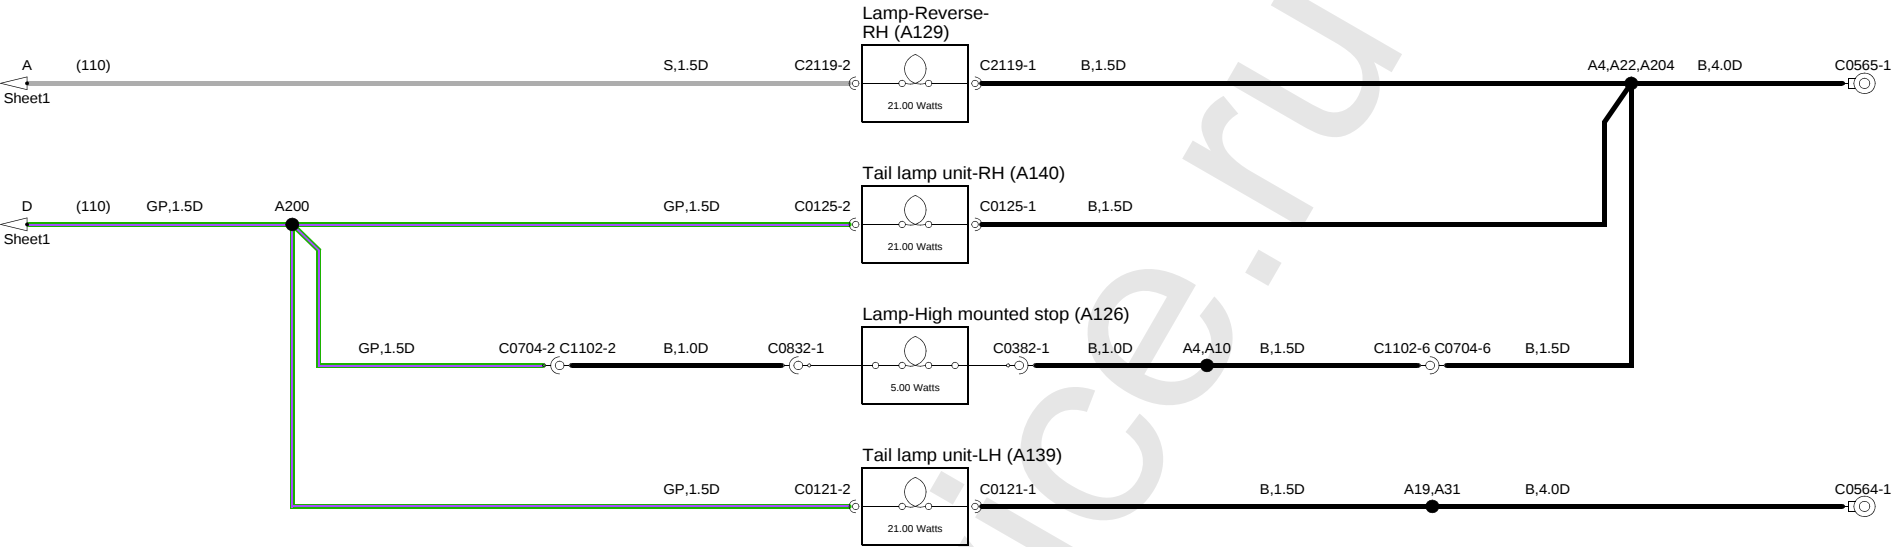

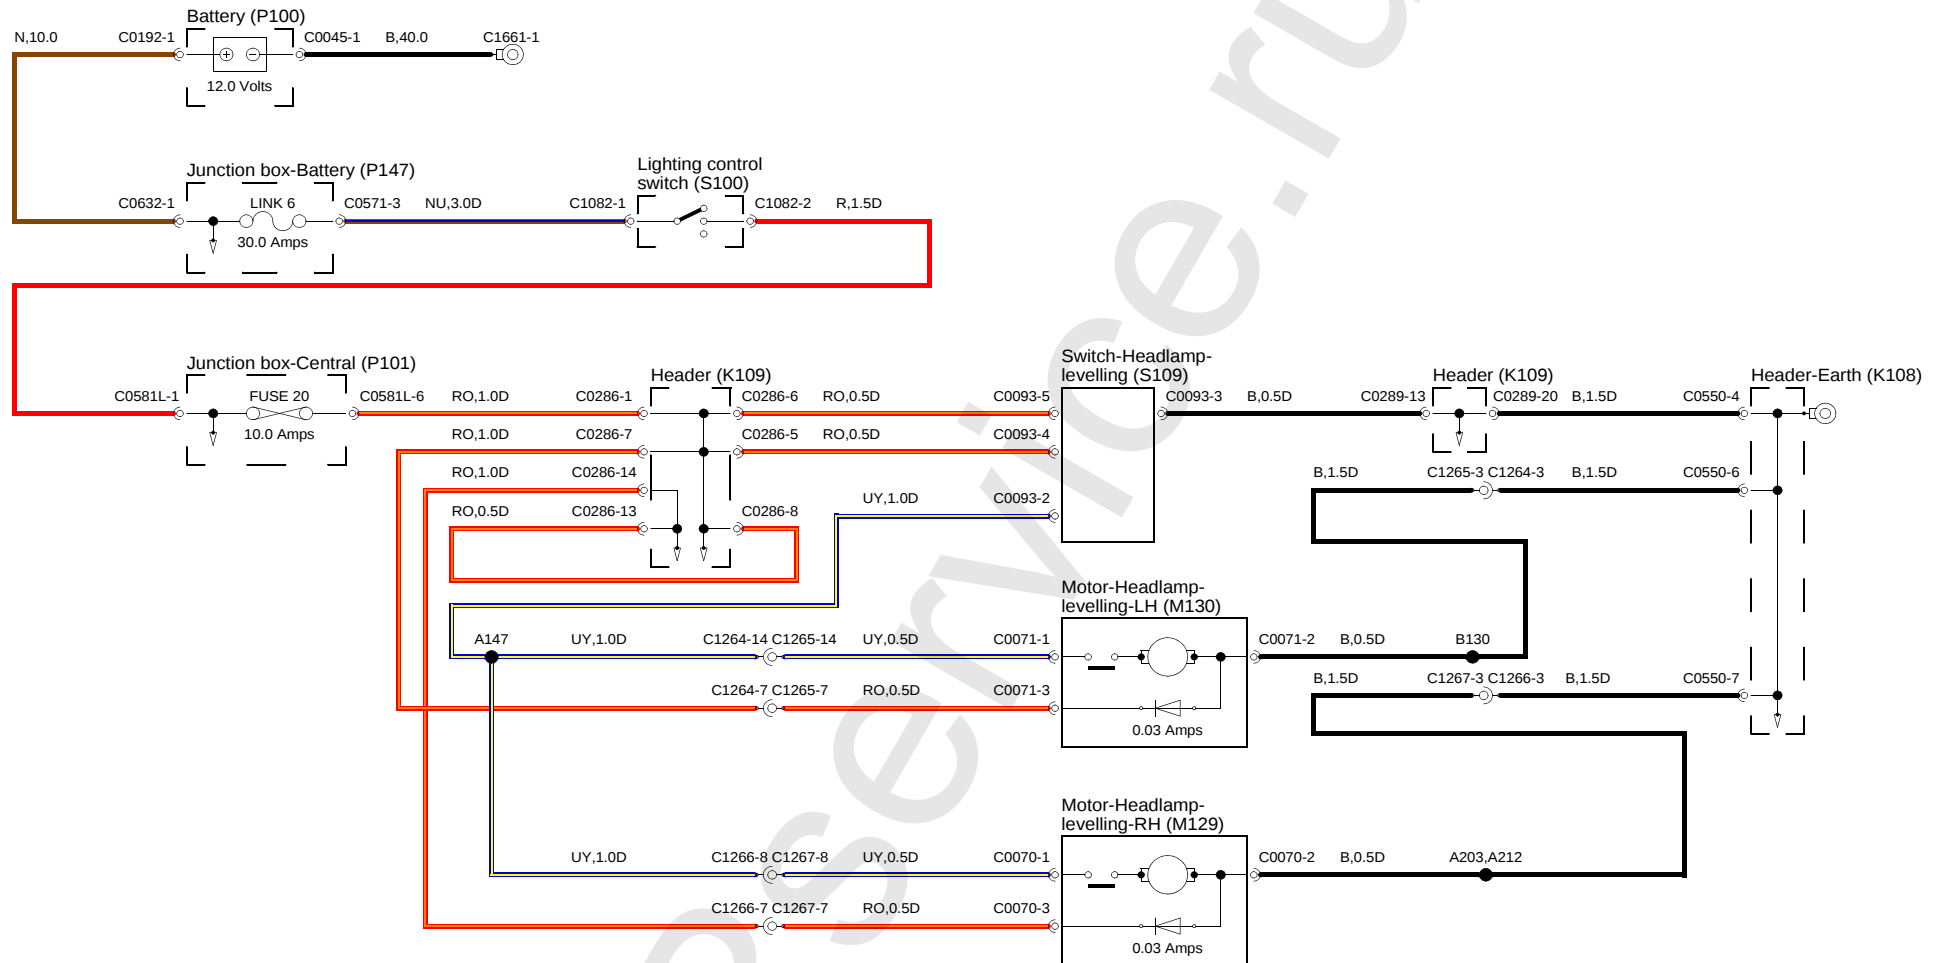

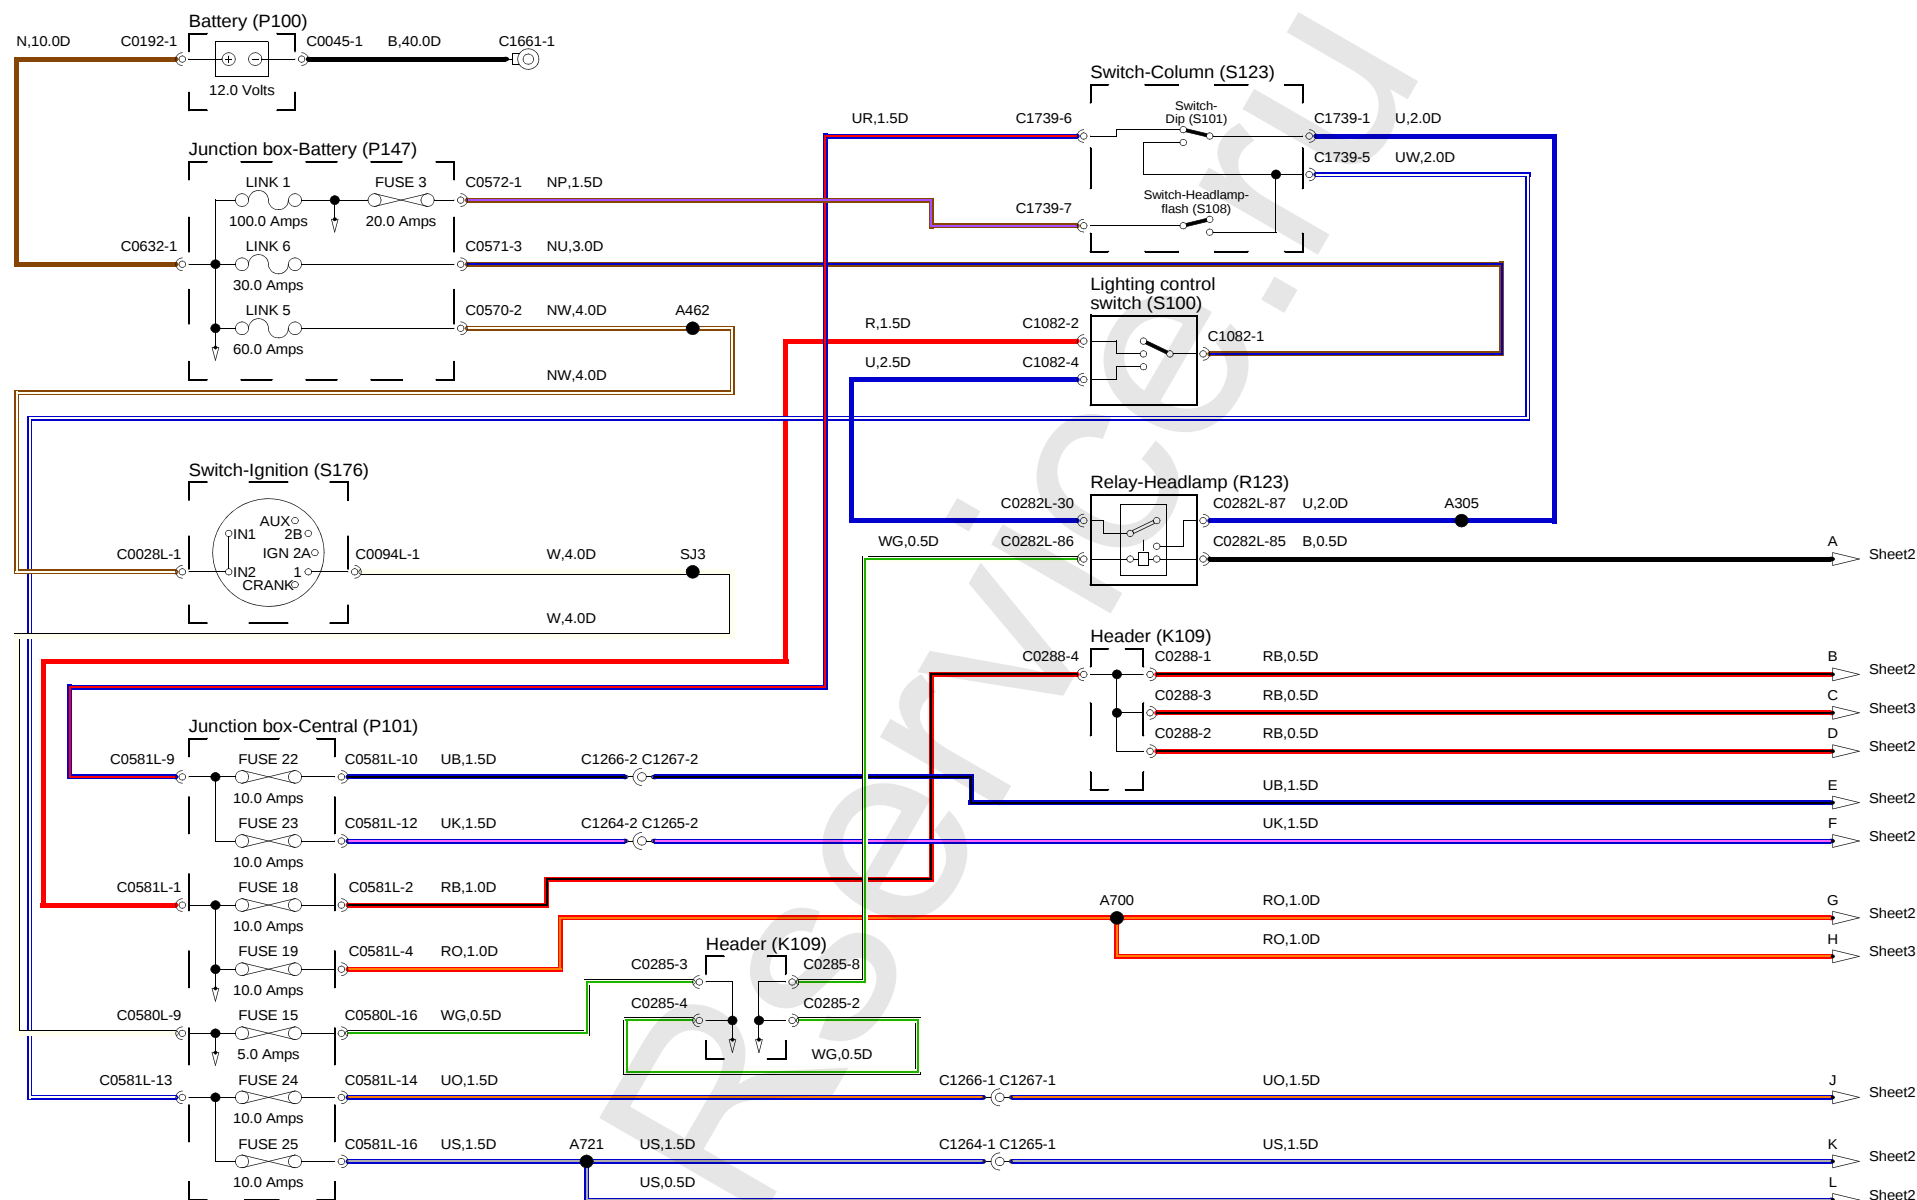

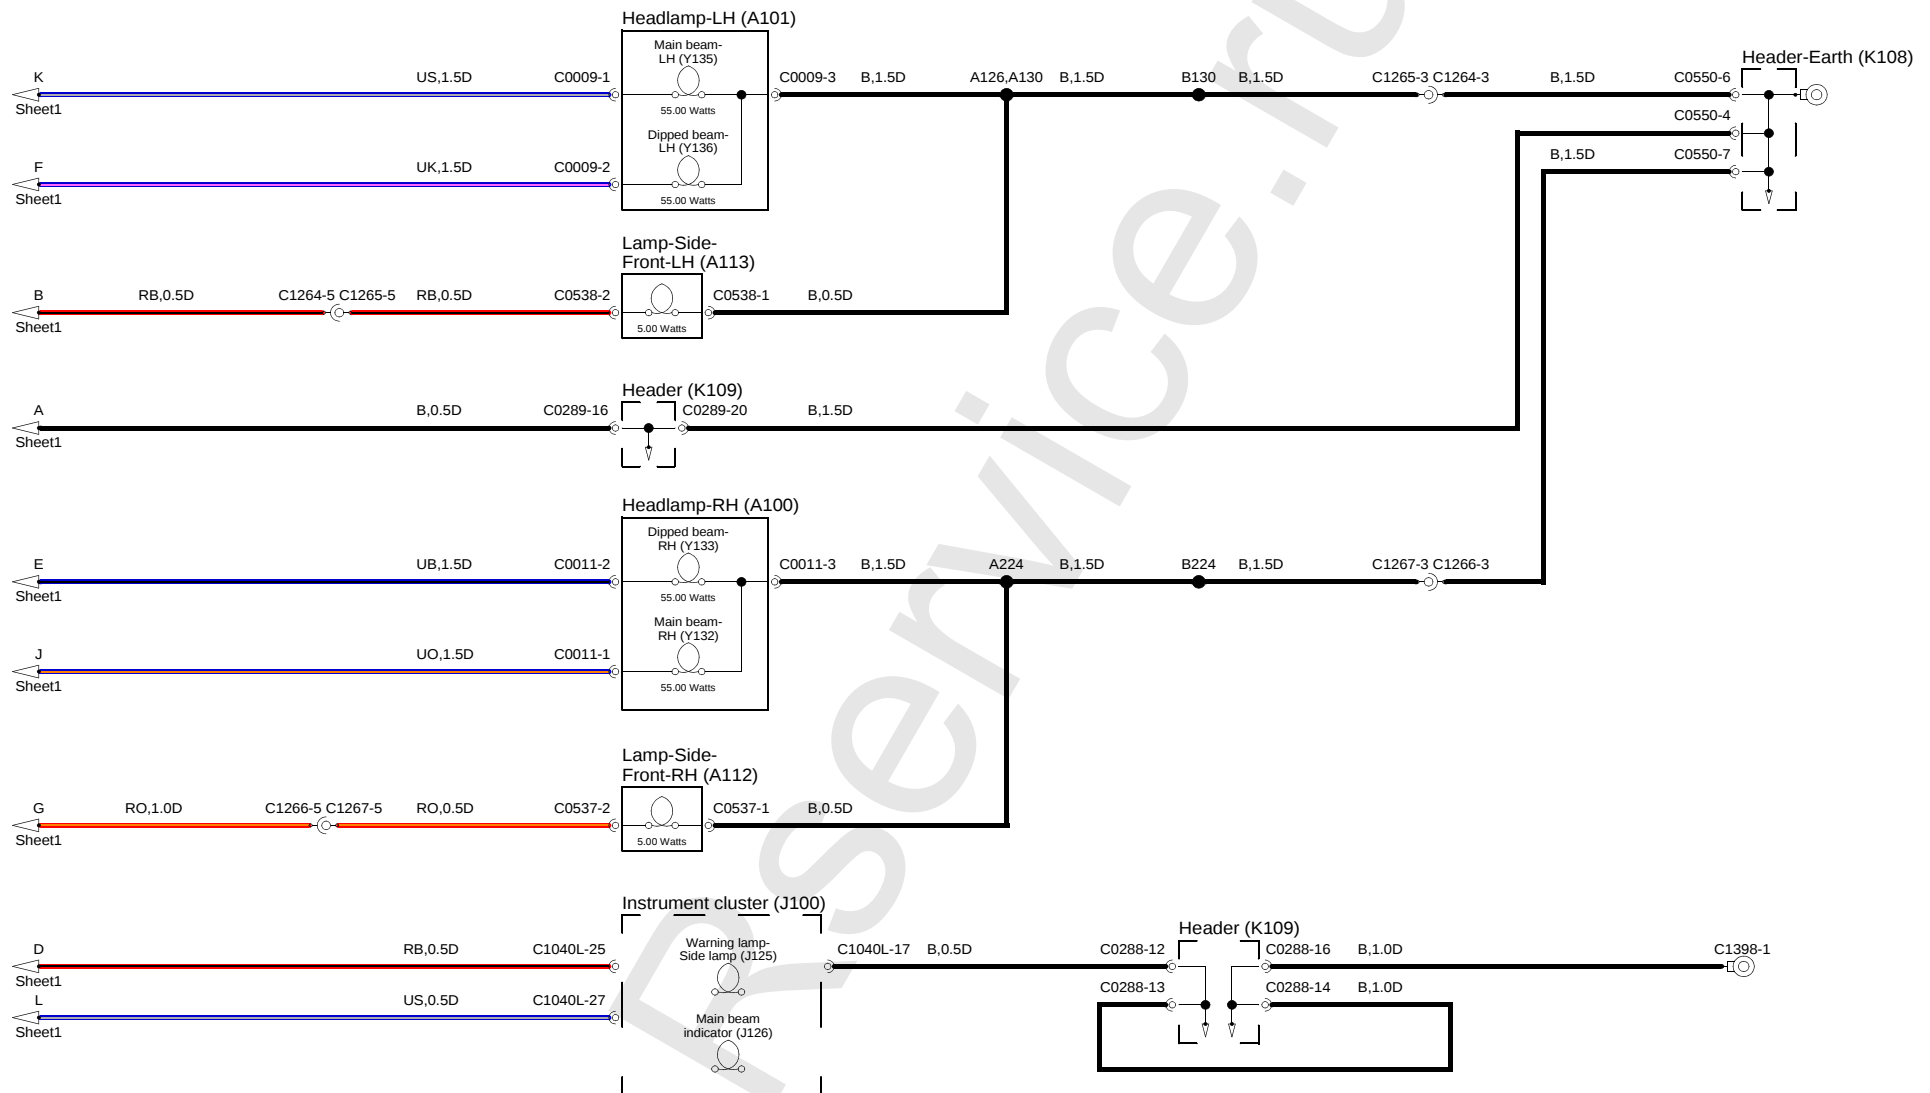

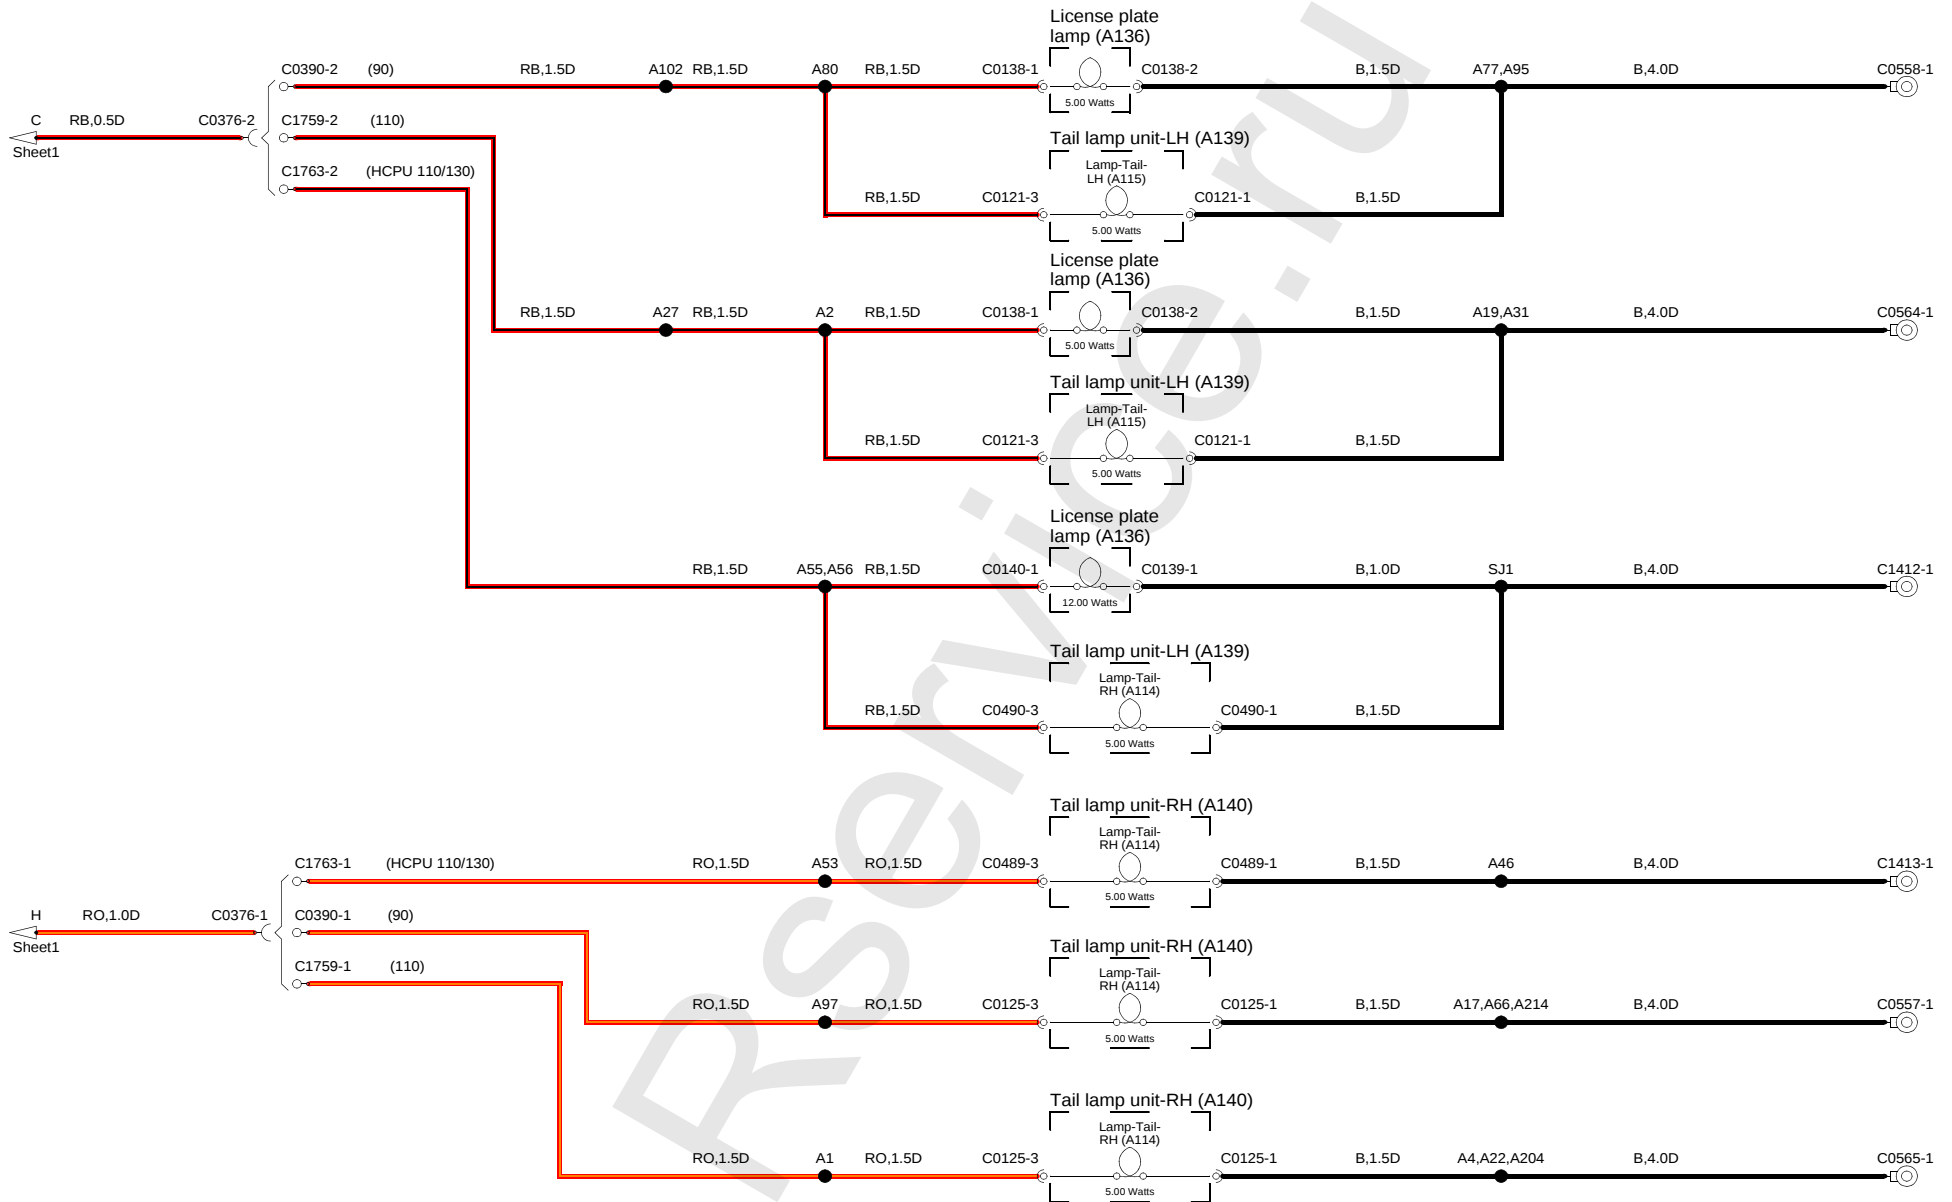

417-02 - INTERIOR LIGHTING

