



RANGE ROVER

Electrical Circuit Diagrams



RANGE ROVER

Electrical Circuit Diagrams

Publication Part No. LRL 0499ENX

Published by Land Rover

© 2001 Land Rover

All rights reserved. No part of this publication may be reproduced, stored in a retrieval system or transmitted in any form, electronic, mechanical, recording or other means without prior written permission from Land Rover.

COLOUR CODES**DRAADKLEURCODES****CODICI COLORI DEI CAVI****CODES DES COULEURS DES FILS****CODIGOS DE COLORES DE LOS CABLES****KABELFARBCODES****CÓDIGOS DAS CORES DOS FIOS**

CODE	COLOUR	CODE	KLEUR	CODE	COULEUR	CODE	FARBE	CODICE	COLORE	CODIGO	COLOR	CÓDIGO	COR
B	BLACK	B	ZWART	B	NOIR	B	SCHWARZ	B	NERO	B	NEGRO	G	PRETO
G	GREEN	G	GROEN	G	VERT	G	GRÜN	G	VERDE	G	VERDE	K	VERDE
K	PINK	K	ROZE	K	ROSE	K	ROSA	K	ROSA	K	ROSA	LG	ROSA
LG	LIGHT GREEN	LG	LICHTGROEN	LG	VERT CLAIR	LG	HELLGRÜN	LG	VERDE CHIARO	LG	VERDE CLARO	N	VERDE CLARO
N	BROWN	N	BRUIN	N	BRUN	N	BRAUN	N	MARRONE	N	MARRON	O	CASTANHO
O	ORANGE	O	ORANJE	O	ORANGE	O	ORANGE	O	ARANCIONE	O	NARANJA	P	LARANJA
P	PURPLE	P	PAARS	P	VIOLET	P	LILA	P	PORPORA	P	PURPURA	R	ROXO
R	RED	R	ROOD	R	ROUGE	R	ROT	R	ROSSO	R	ROJO	S	VERMELHO
S	SLATE (grey)	S	LEIGRIJS	S	GRIS	S	GRAU	S	ARDESIA (grigio)	S	PIZARRO (gris)	U	CINZENTO
U	BLUE	U	BLAUW	U	BLEU	U	BLAU	U	BLU	U	AZUL	W	AZUL
W	WHITE	W	WIT	W	BLANC	W	WEISS	W	BIANCO	W	BLANCO	Y	BRANCO
Y	YELLOW	Y	GEEL	Y	JAUNE	Y	GELB	Y	GIALLO	Y	AMARILLO	Y	AMARELO

CONTENTS

1 POWER DISTRIBUTION	8	9 STEERING WHEEL	60	35 ANTI-LOCK BRAKING SYSTEM (ABS)	104
Engine Compartment Fuse Box	8	Adjustable	60	36 SUPPLEMENTARY RESTRAINT SYSTEM	
Passenger Compartment Fuse Box	10	Adjustable - Memory	62	(SRS)	106
Rear Fuse Box	16	Heated	64	38 AIR CONDITIONING	108
2 EARTH DISTRIBUTION	18	9 STEERING	66	Low-Line	108
3 ANTI-THEFT ALARM	26	10 DIAGNOSTIC SOCKET	68	High Line	110
3 ENGINE IMMOBILISATION	28	11 BODY CONTROL UNIT	70	Rear	112
Td6	28	15 CHARGING AND STARTING	74	39 FUEL BURNING HEATER	114
V8	30	Td6	74	Td6	114
4 CENTRAL DOOR LOCKING	32	V8	76	V8	116
5 WINDOWS	34	20 ENGINE MANAGEMENT SYSTEM	78	40 HEATED FRONT SCREEN	118
Front	34	Td6	78	40 HEATED REAR SCREEN	120
Rear	36	V8	82	42 WIPERS AND WASHERS	122
6 SUNROOF	38	20 FUEL PUMP	88	Front	122
7 DOOR MIRRORS	40	20 SECONDARY AIR INJECTION	90	Rear	124
Memory	42	22 COOLING FANS	92	Heated	126
Folding	44	Fuel System	94	Headlamps	128
7 INTERIOR MIRROR	46	31 CRUISE CONTROL	96	43 EXTERIOR LAMPS	130
8 SEATS	48	32 ELECTRONIC AUTOMATIC TRANSMISSION ..	98	Head, side and tail lamps	130
Front	48	GM5	98	Head, side and tail lamps - Xenon	132
Memory	50	ZF	100	Headlamp levelling - Automatic	134
Memory - Comfort	52	34 AIR SUSPENSION	102	Direction indicator lamps\hazard warning	136
Lumbar Support	54			Brake and reverse lamps	138
Heated - Front	56			Fog lamps - Front	140
Heated - Rear	58			Fog lamps - Rear	142

CONTENTS

44 INTERIOR LAMPS	144	50 AUDIO SYSTEMS	168	70 COMMUNICATION DATA BUSES	210
46 INTERIOR ILLUMINATION	148	Amplifier	170	CAN Bus	210
47 INSTRUMENTS	154	Digital Signal Processor	172	K Bus, I Bus	212
47 ROTARY COUPLER	158	CD Player	174	73 TYRE PRESSURE MONITORING	214
48 CLOCK	160	55 NAVIGATION SYSTEMS	176	75 PARK DISTANCE CONTROL (PDC)	216
48 HORN (S)	162	Europe	176	76 TELECOMMUNICATION SYSTEMS	218
49 ACCESSORY SOCKET	164	NAS	178	Europe	218
49 CIGAR LIGHTER	166	57 TELEVISION	180	Voice Recognition - Europe	220
		Amplifier	182	80 TRAILER SOCKET	222
		Digital Signal Processor - Europe	186	Europe	222
		Digital Signal Processor - NAS	188		
		65 SPLICES AND CENTRE TAPS	190		


HOW TO USE THE CIRCUIT DIAGRAMS

All of the information in this folder is intended for use with the Electrical Reference Library booklet.

The circuit diagrams are presented with Power and Earth distribution first, followed by individual circuits for each electrical system on the car.

Power Distribution

The Power Distribution diagram shows the connections from the battery to the engine and passenger compartment fuseboxes. It also shows the internal circuitry of the fuseboxes.

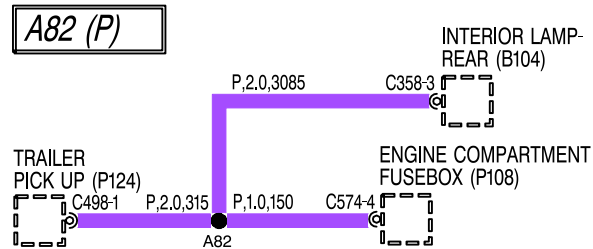

The fuse box details are followed by independent functionally specific circuits and then a Splices and centre taps section outlining the way in which internal harness splices and centre taps distribute power in the harnesses. This information should be used during diagnosis of electrical faults to check for symptoms in associated circuits and narrow down the search area.

Earth Distribution

The ground distribution section comprises a number of Headers and Splices tables. These are used in a similar manner to those in Power Distribution; to narrow the search area by checking for fault symptoms in associated circuits.

Splices and centre taps


Header and splice tables present the joint(s) and wiring up to the first component. Splices are identified by a number with an alphabetical prefix and the wire colour.

The splice information shown on individual system circuits is not complete. Always refer to the splices circuit for complete information on each splice.

Wire length (Power & Earth Distribution only)

The length of the wire in millimetres. This can be used to locate internal harness splices; look for the shortest wire between the joint and connector. For example, it can be seen that C574-4 is 150mm from joint A82.

Connectors

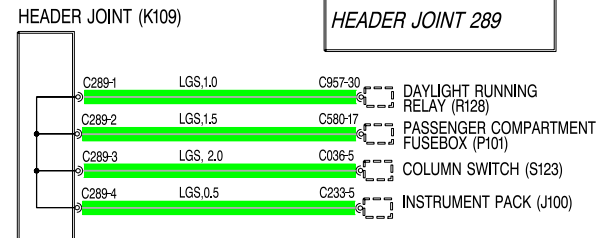


Header joints are identified by their corresponding connector number with a numbered suffix to indicate the pin-out detail of the wire, i.e. C289-1 identifies connector 289, pin number 1. Wire insulation colour is identified in the normal way. Where wires have a predominant colour with a secondary colour stripe, the main colour is identified first, i.e. LGS - Light Green with a Slate stripe.

Line Types



This means the wire connects to another circuit.

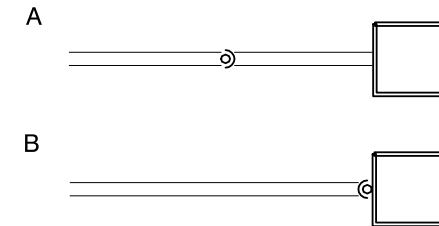


The cup and ball symbol indicates the male and female halves of connector.

A. Plug on lead (Flylead) wired directly to the component.

B. Connector plugs directly into component.

HOW TO USE THE CIRCUIT DIAGRAMS


Components

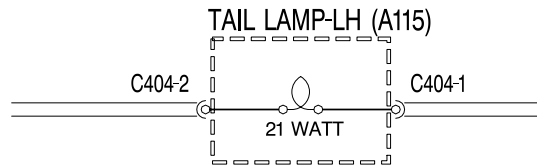

86M4231A

The name or description of the component is shown. A dotted outline indicates that the component is not shown in its entirety.


Earth points

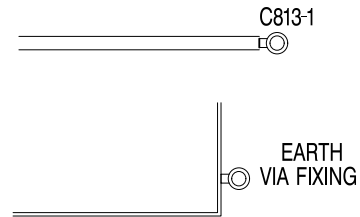

86M4232A

Earth points are identified with an eyelet symbol and a connector number, except where components are grounded through their fixings, when only the eyelet is shown.

Fuses and Diodes

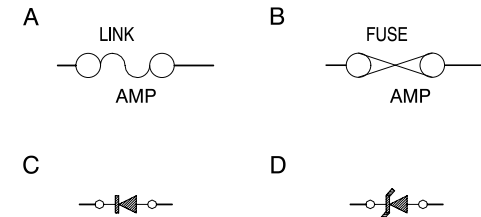

86M4234A


Fusible links (A) and current rated fuses (B) are identified as shown.


The direction of the arrow in a Diode symbol (C) indicates the direction of current flow. The Zener diode (D) - prevents current flow until a precise voltage is reached.


HOW TO USE THE CIRCUIT DIAGRAMS


1 POWER DISTRIBUTION

Engine Compartment Fuse Box

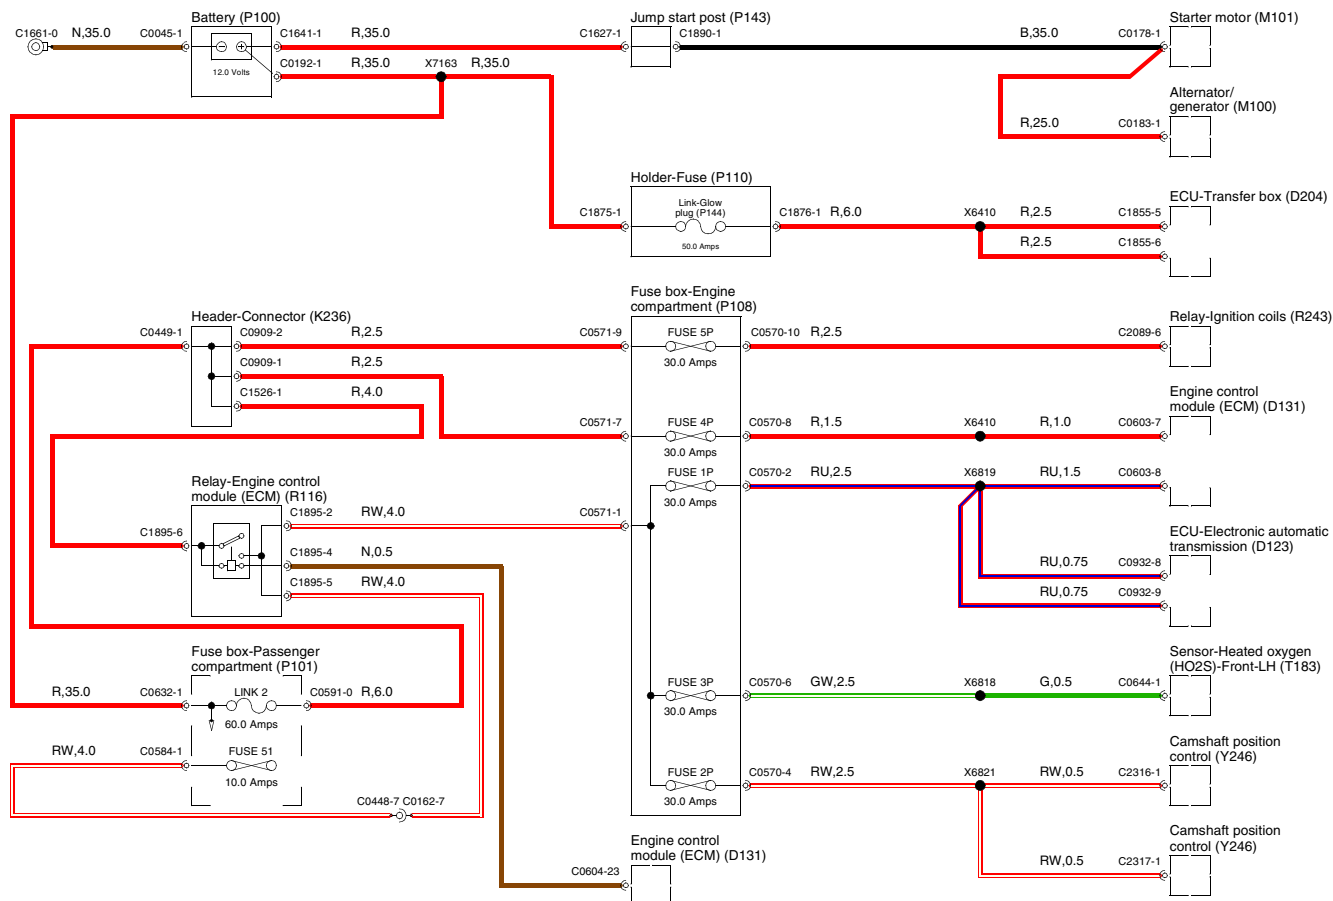

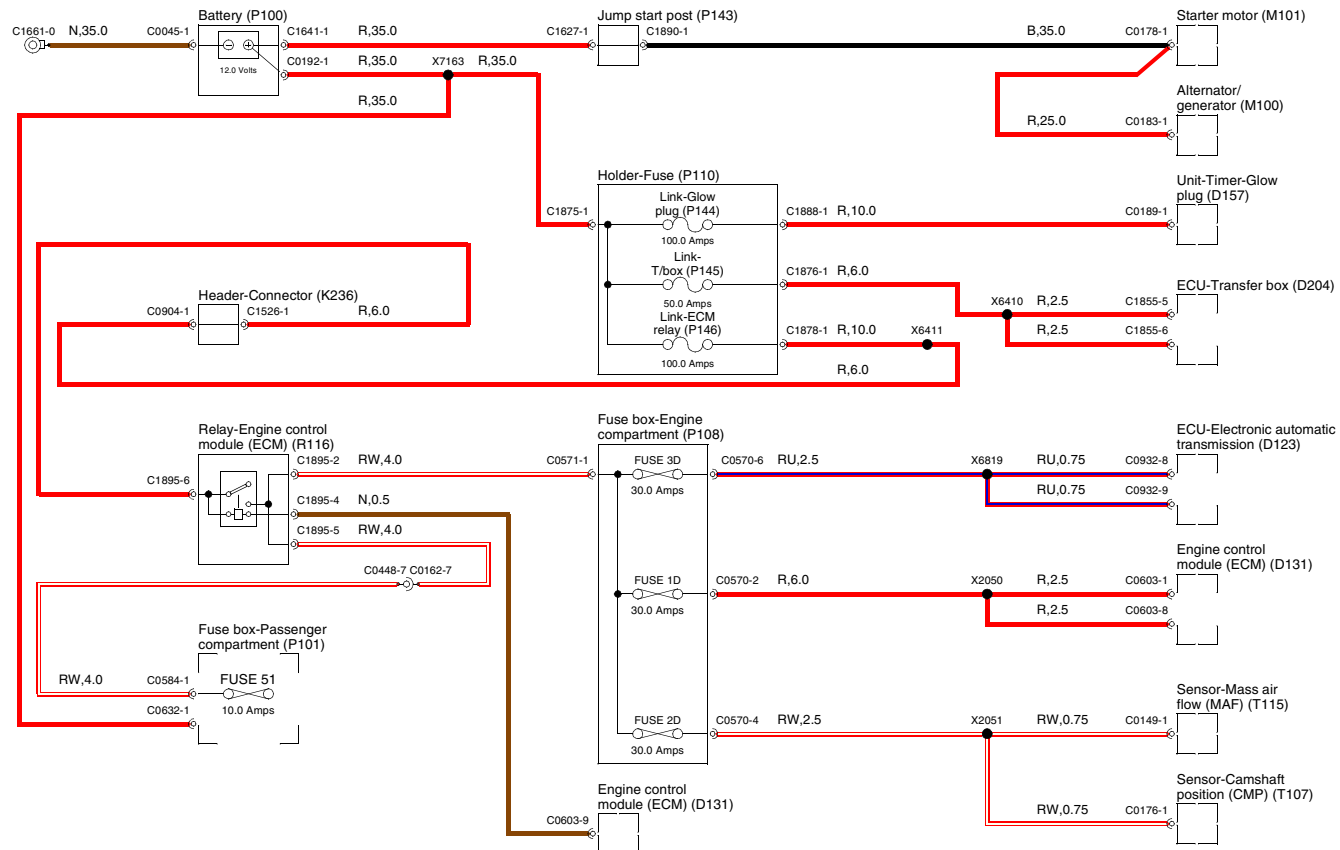


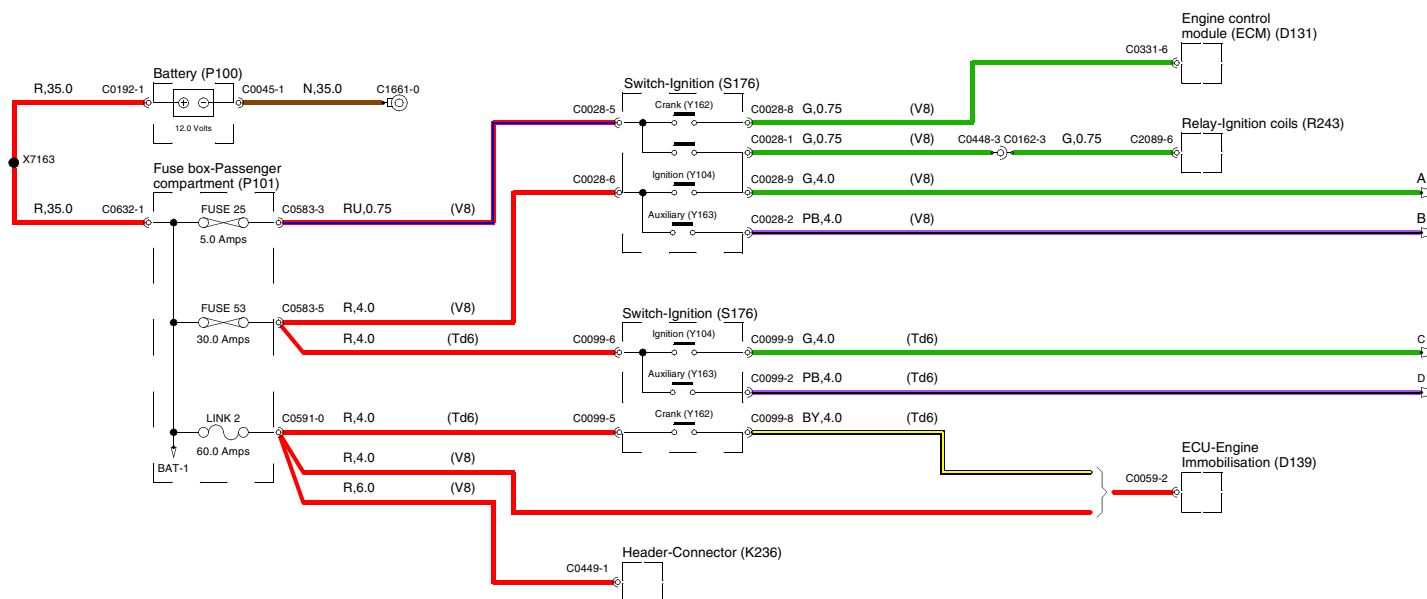


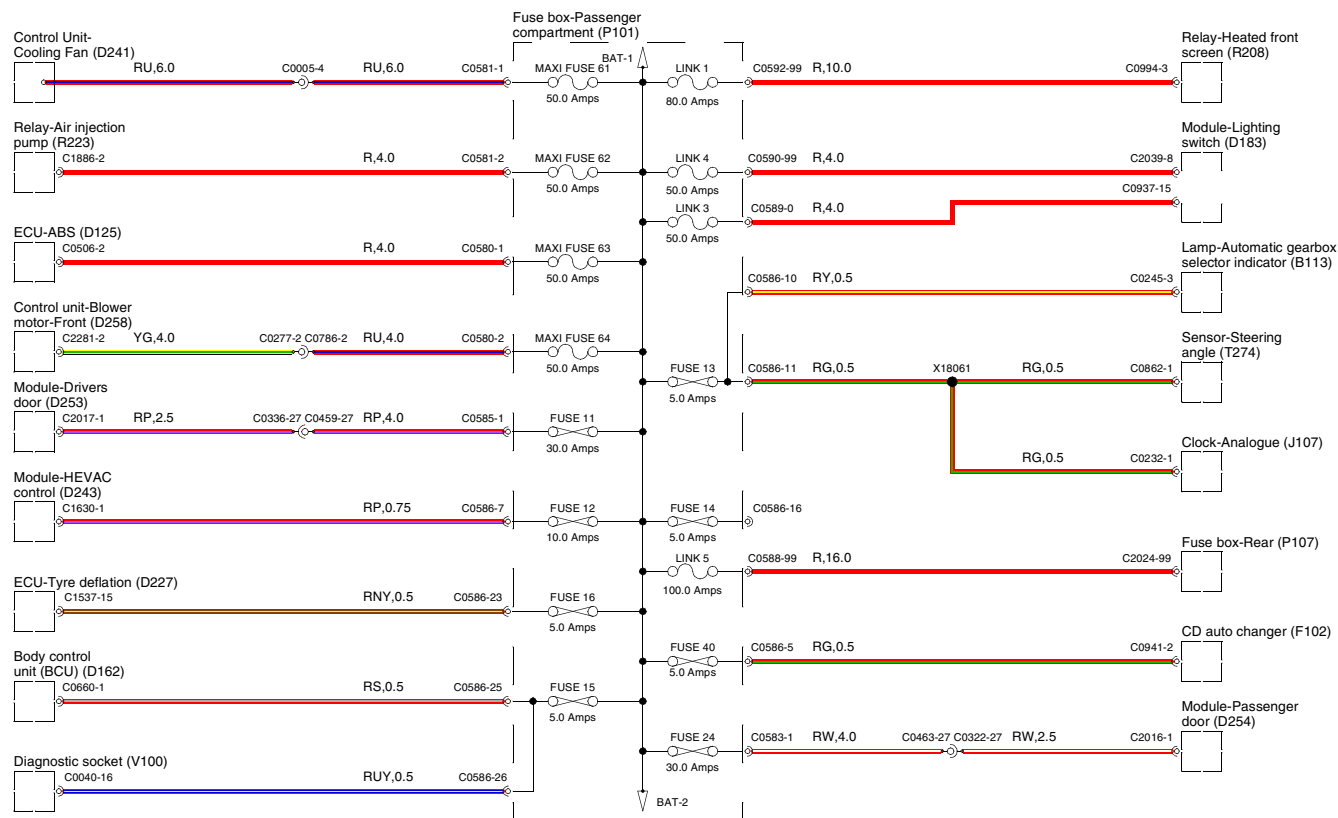



1 POWER DISTRIBUTION Passenger Compartment Fuse Box


1 POWER DISTRIBUTION Passenger Compartment Fuse Box

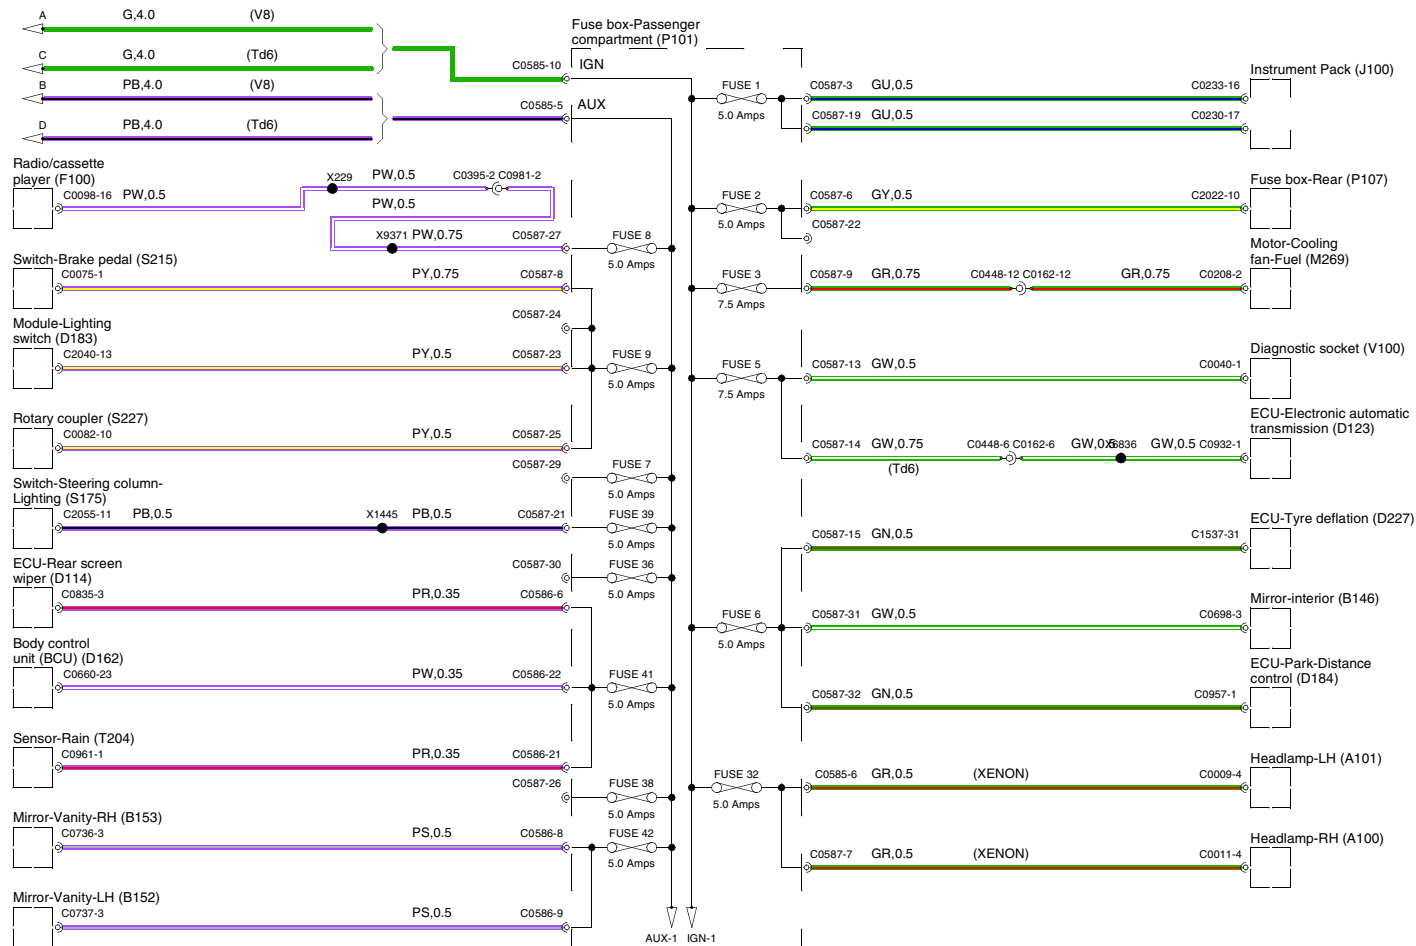


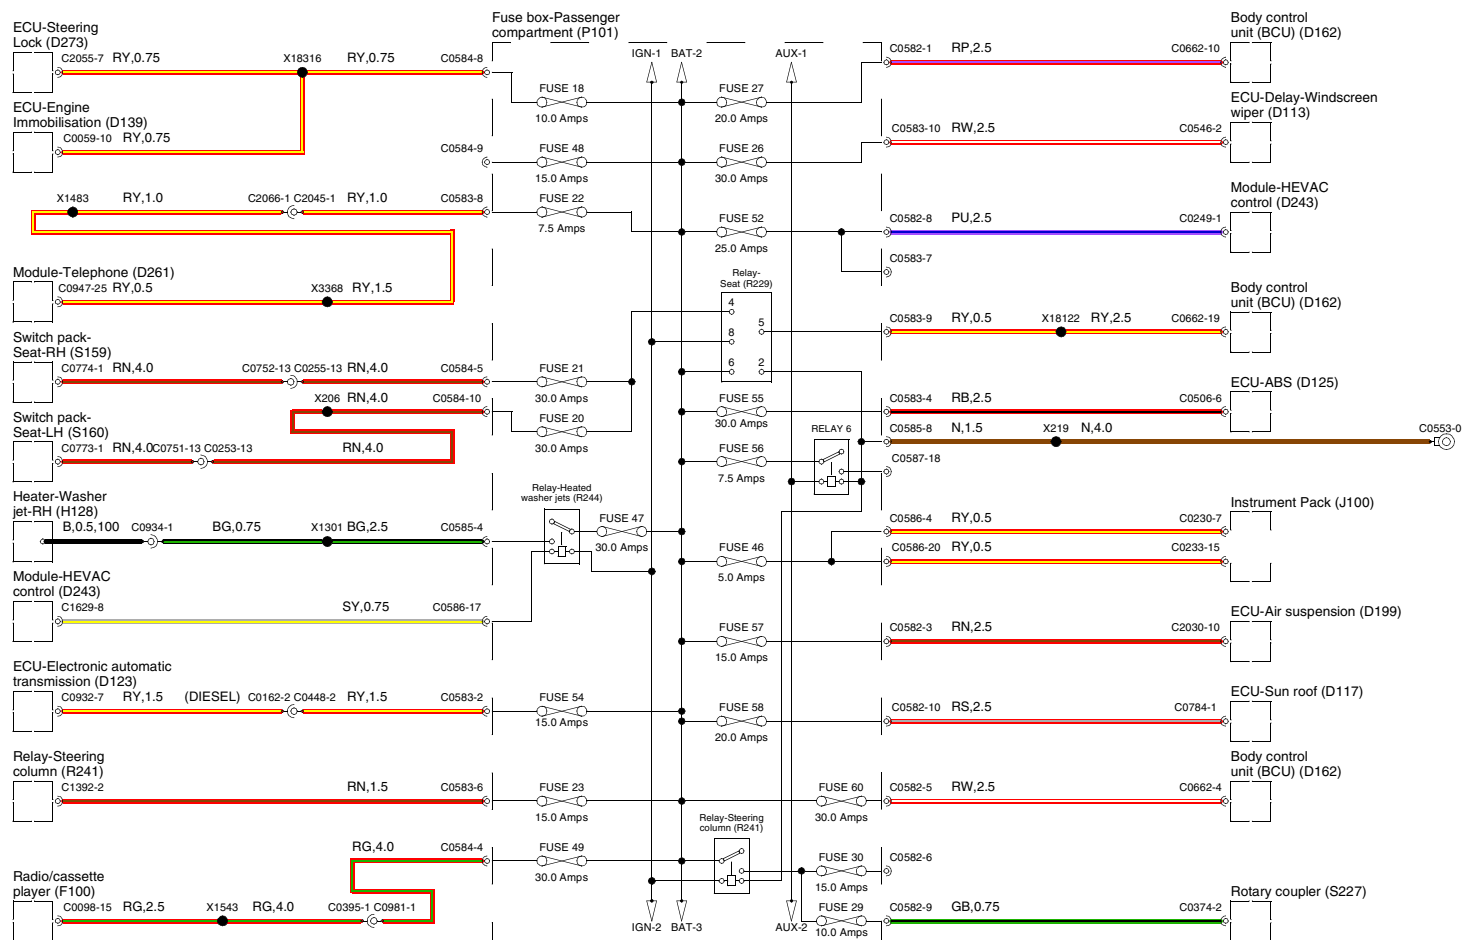

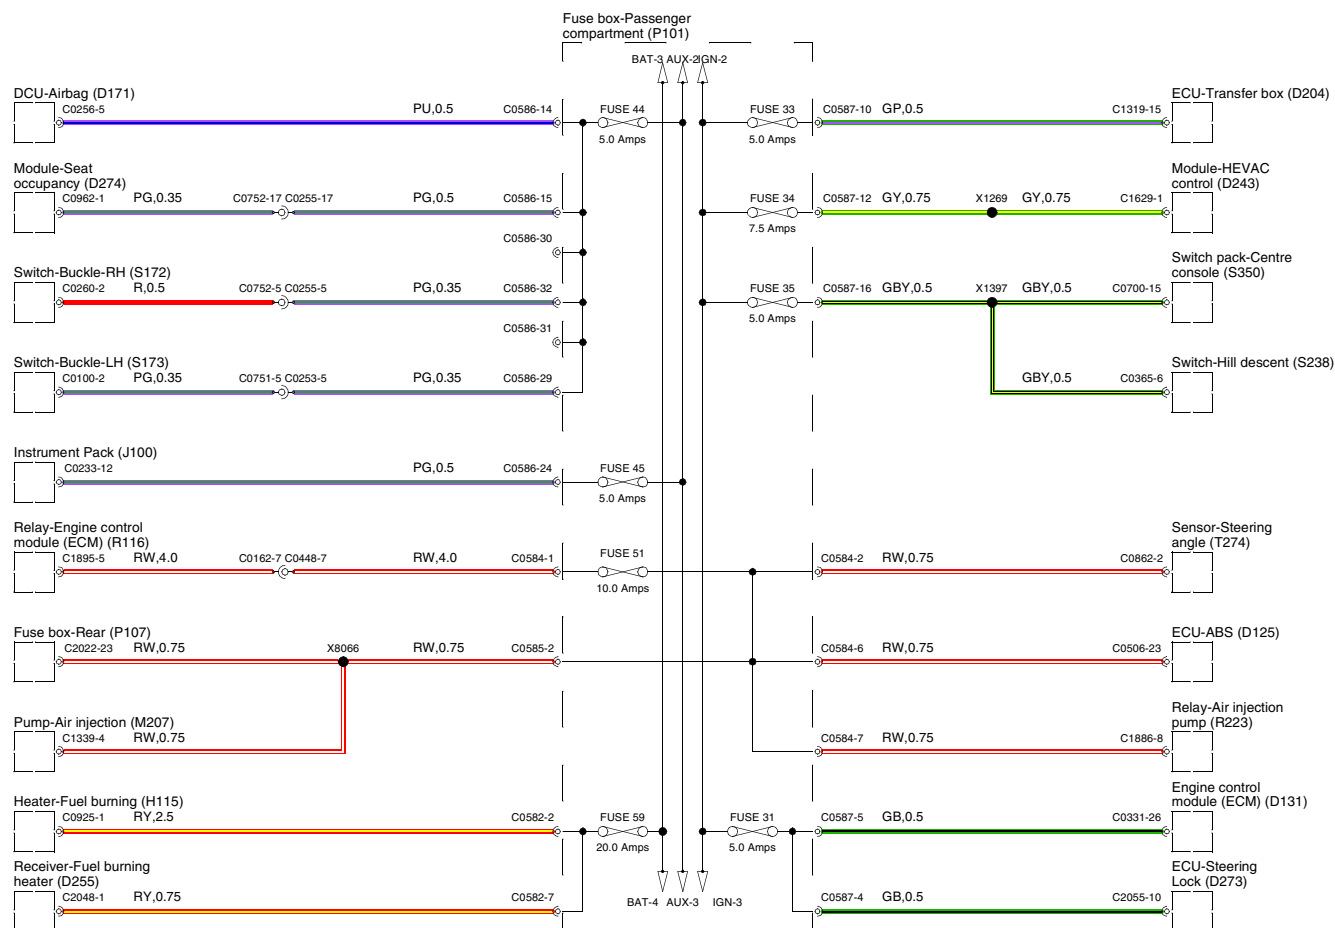


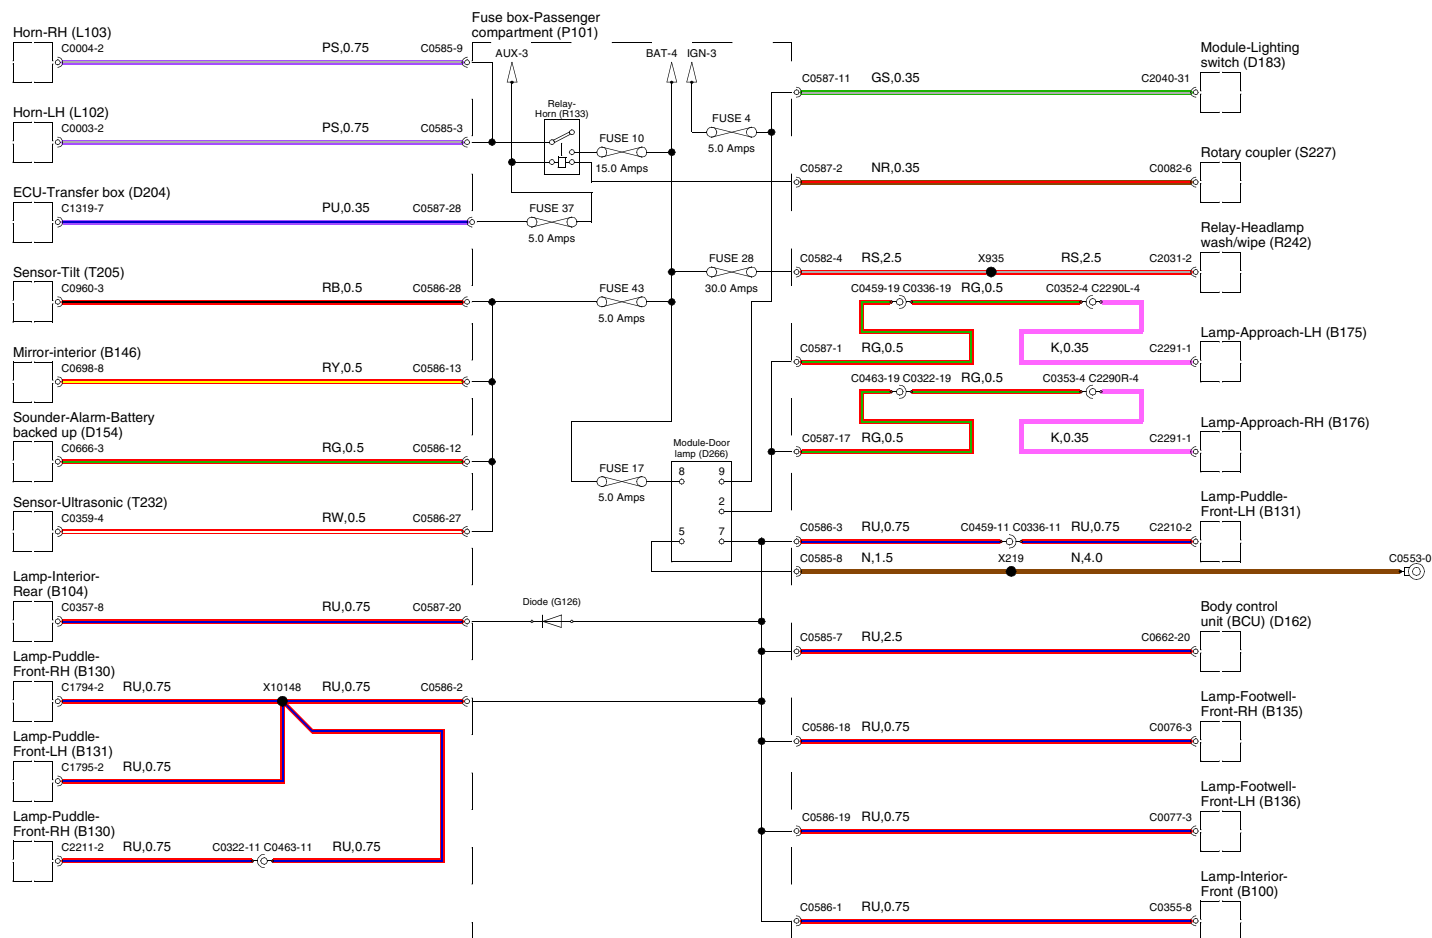

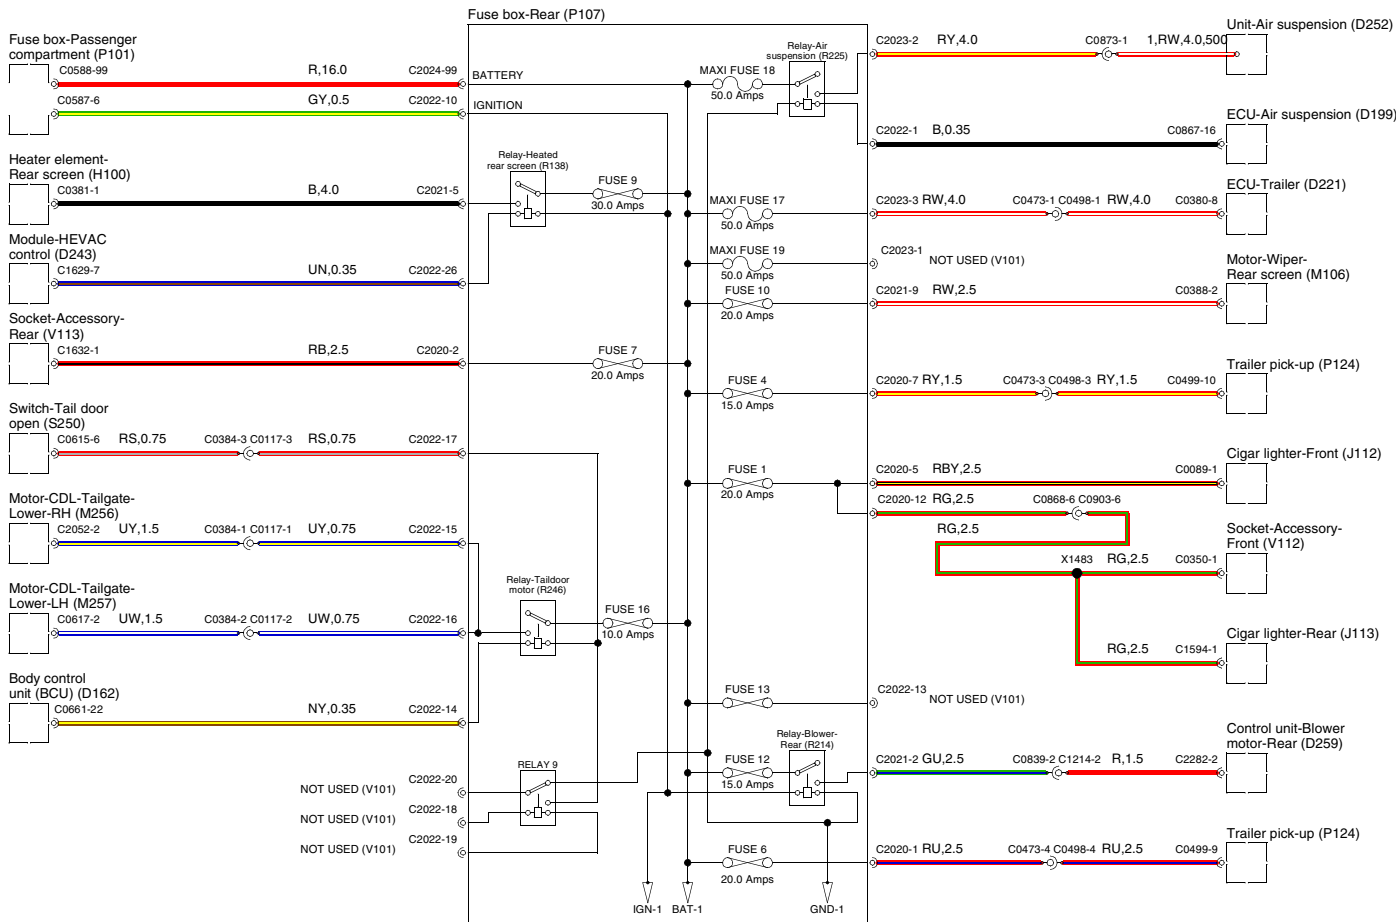


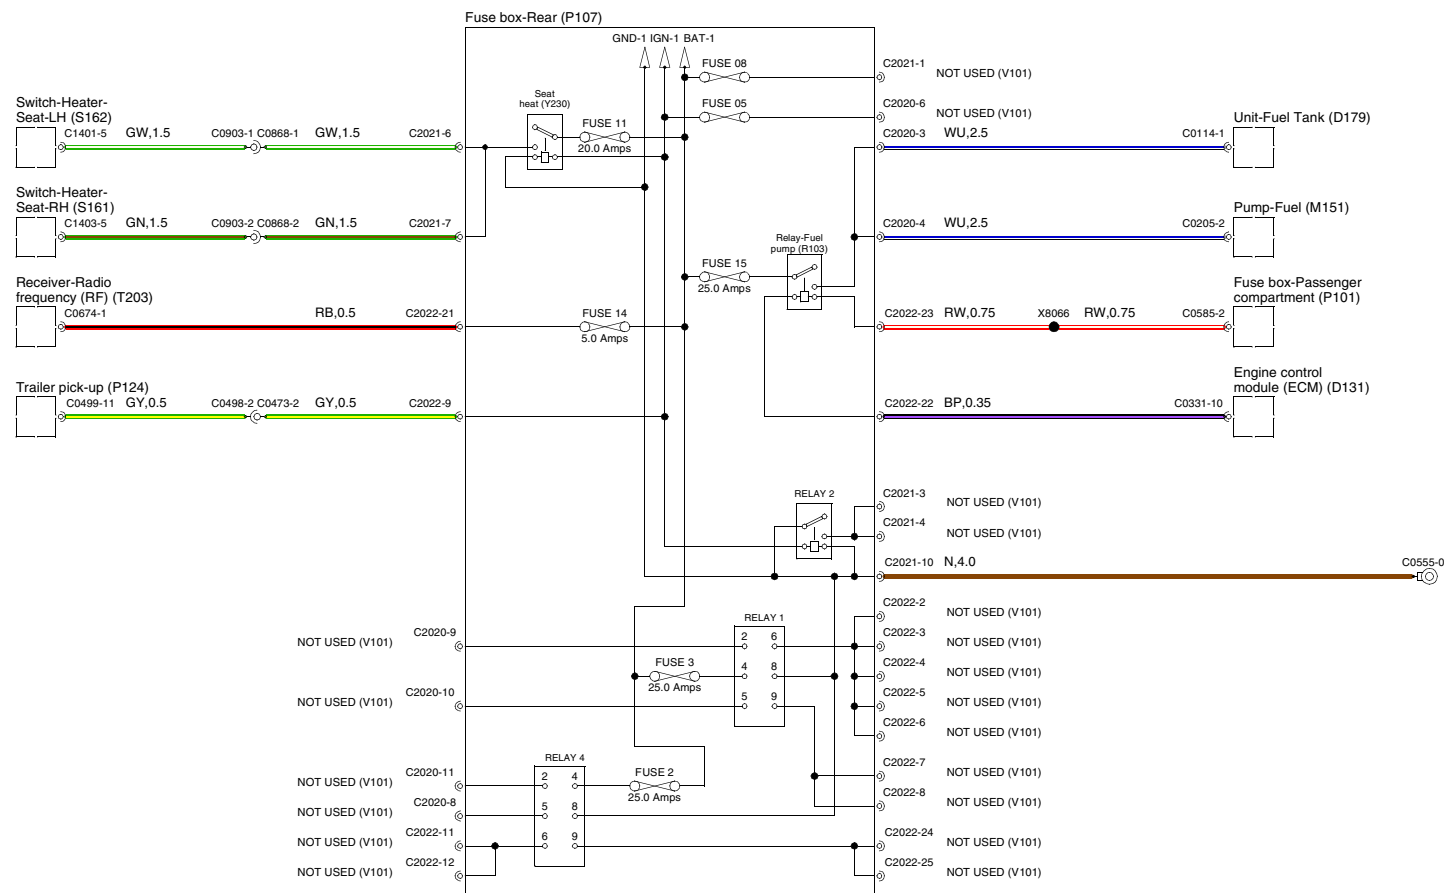


2 EARTH DISTRIBUTION

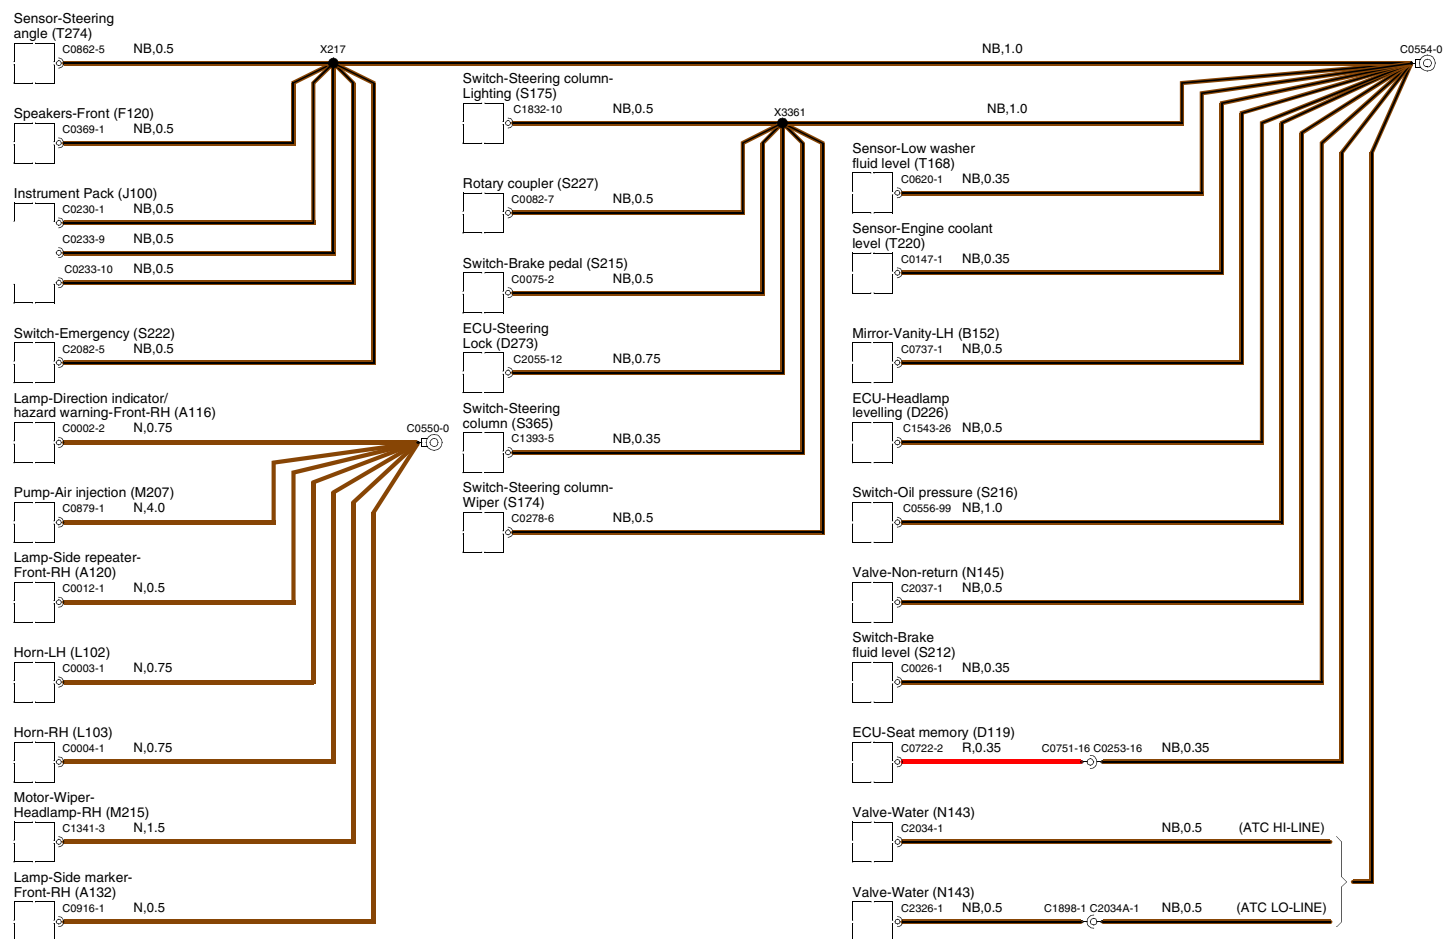


2 EARTH DISTRIBUTION

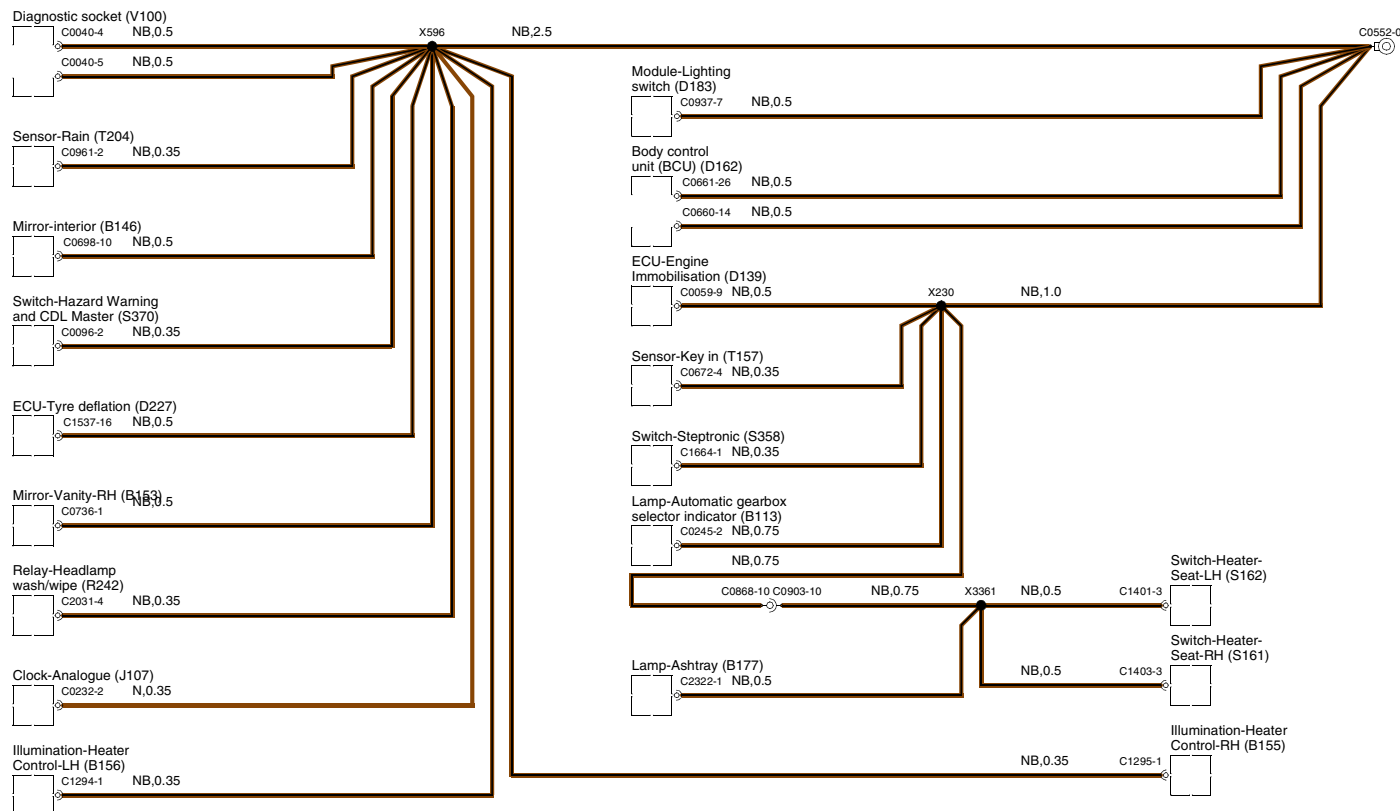


2 EARTH DISTRIBUTION

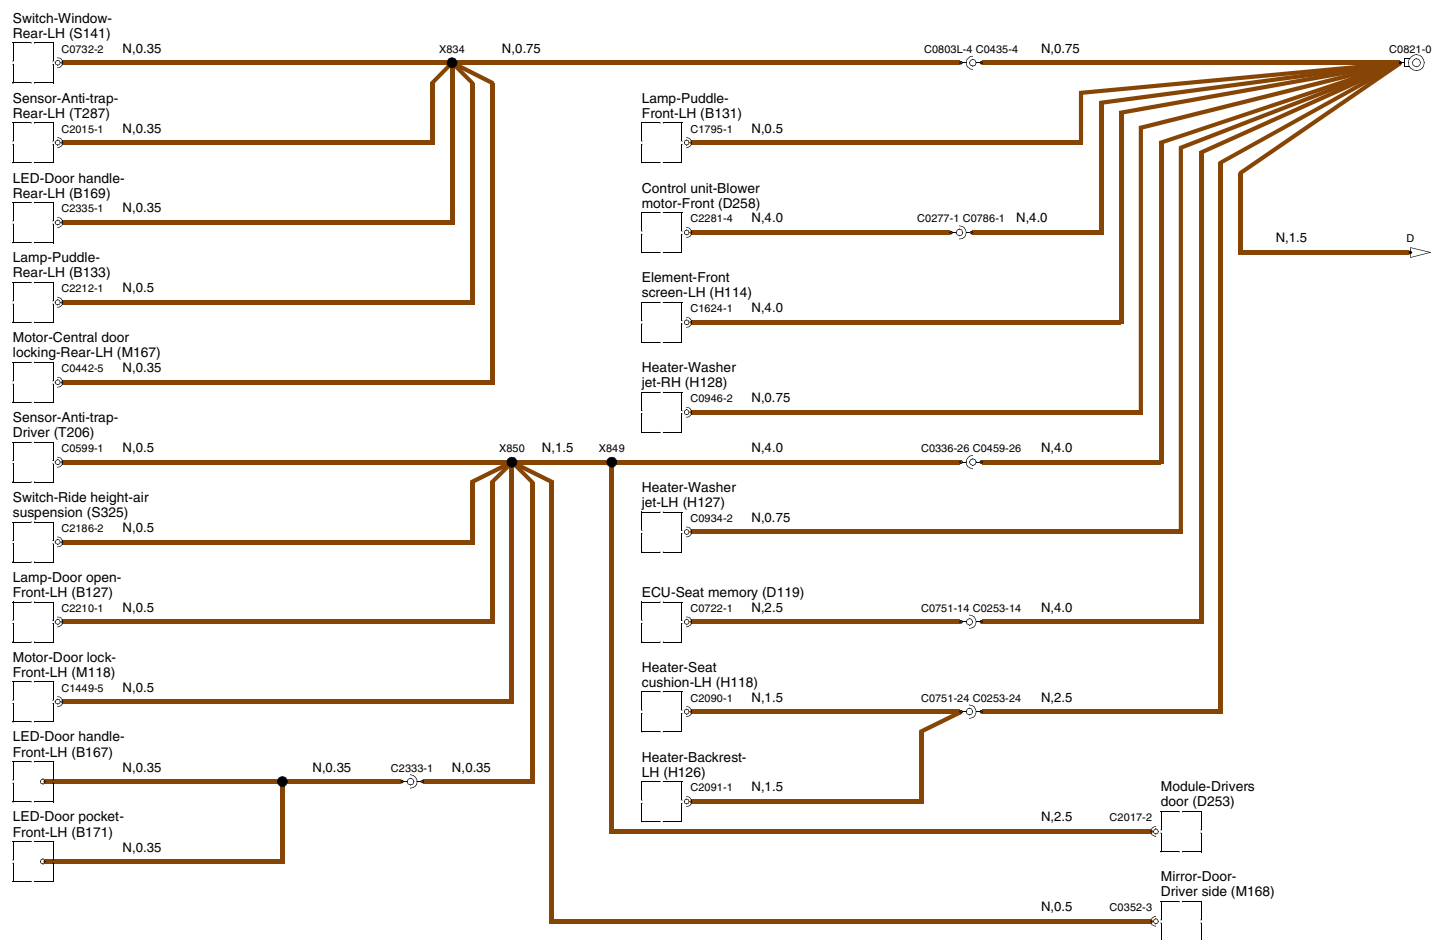


2 EARTH DISTRIBUTION

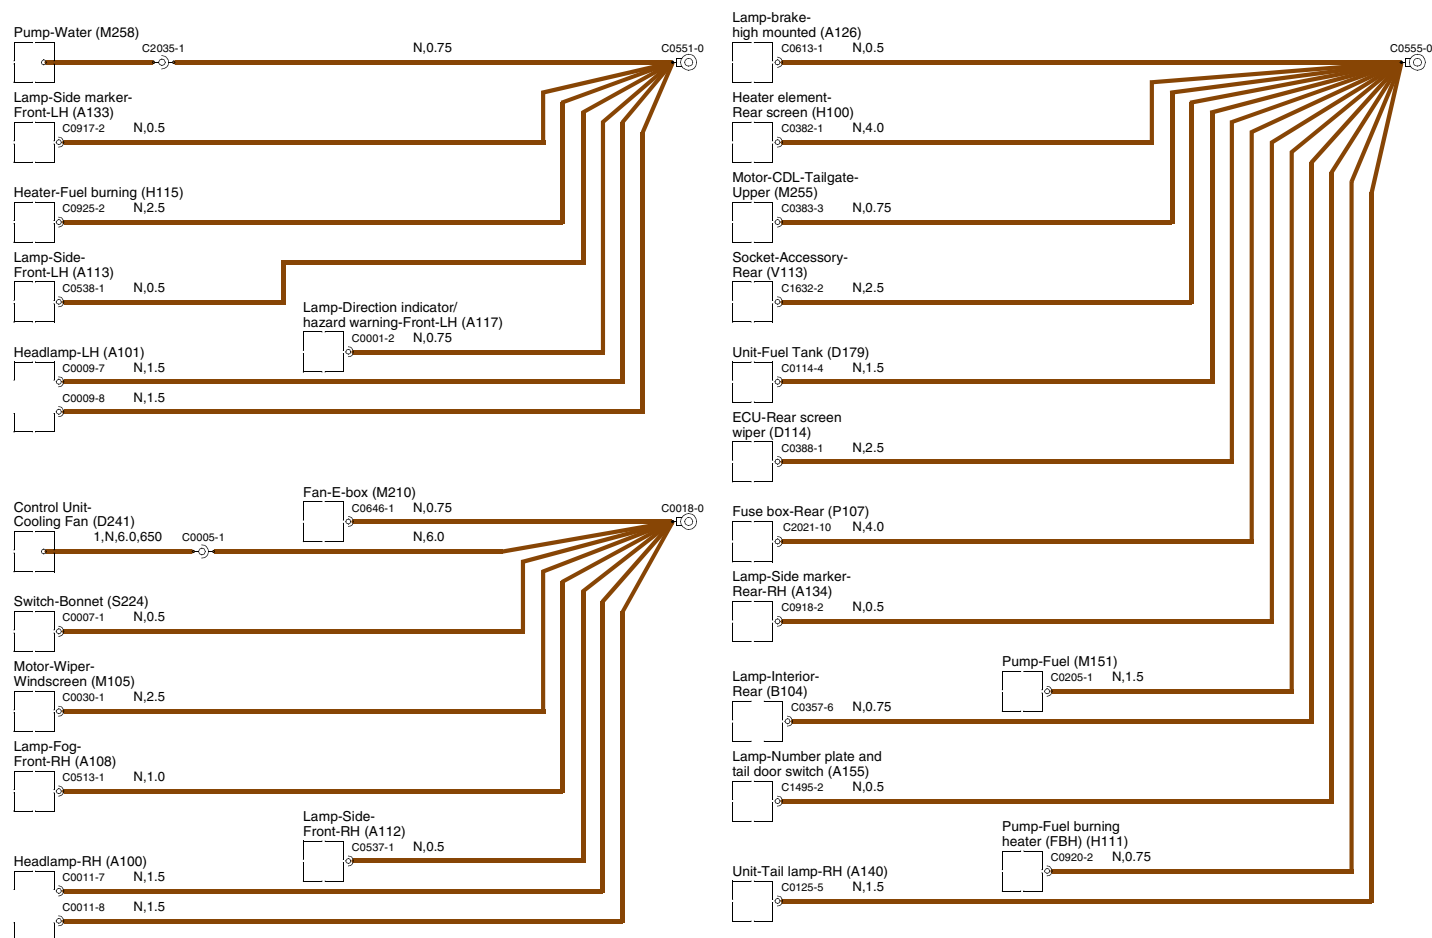


2 EARTH DISTRIBUTION


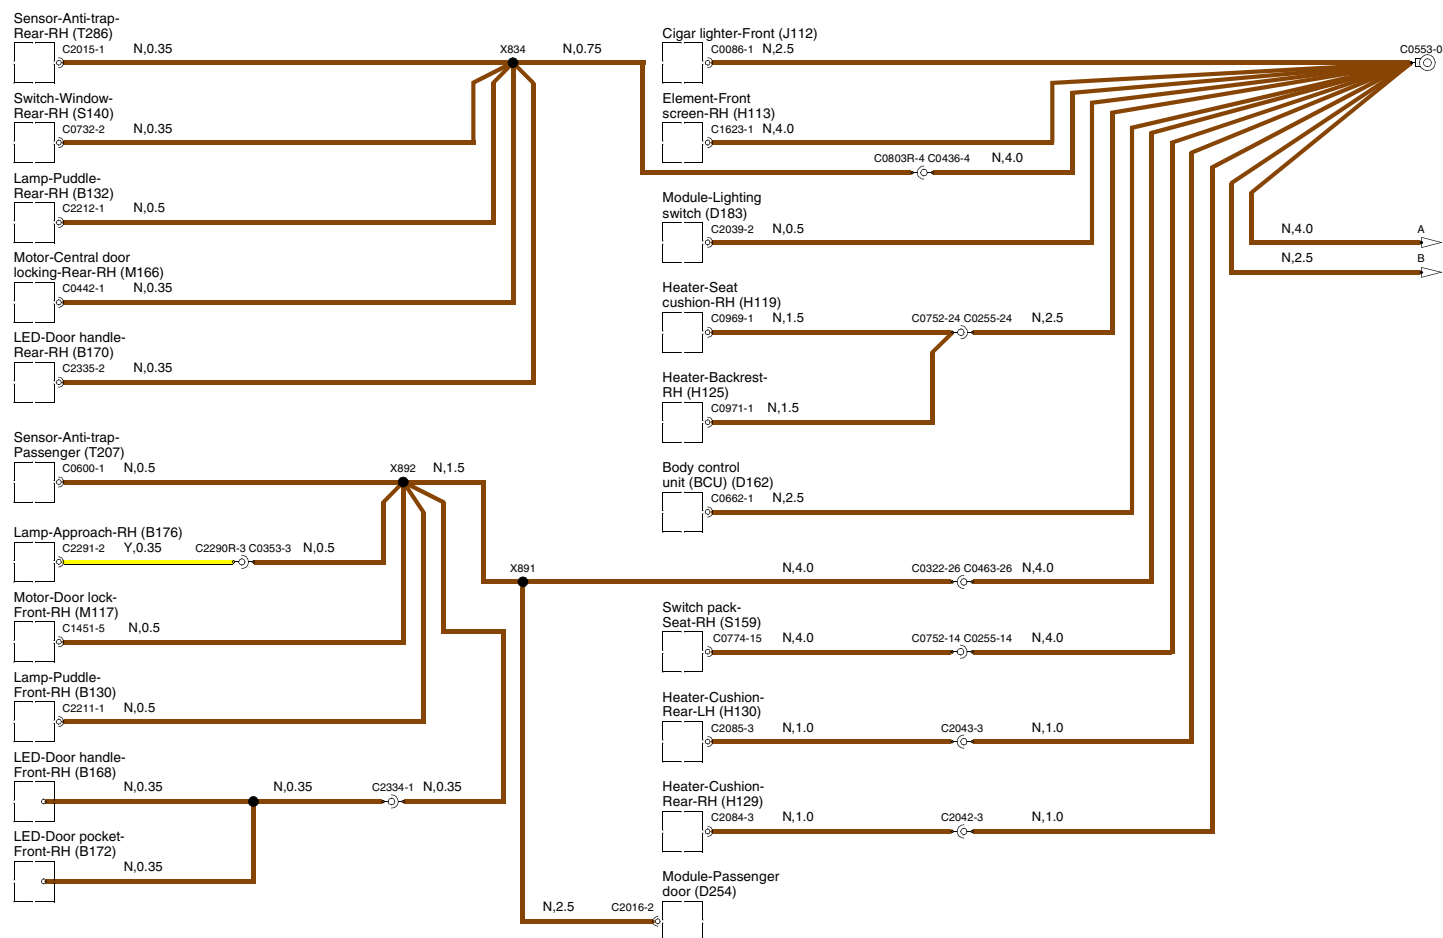


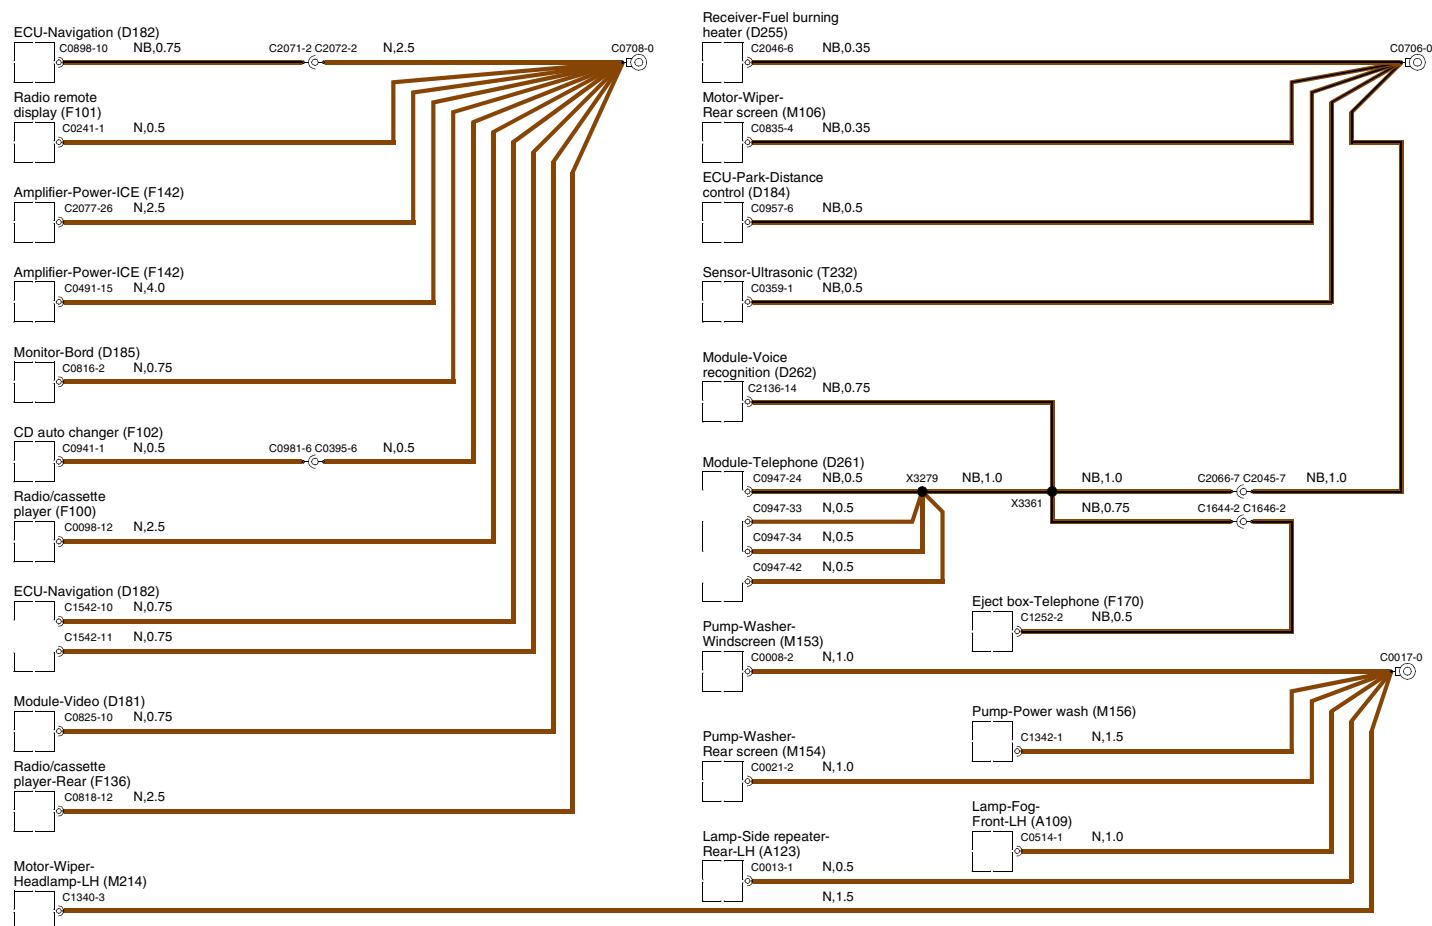


2 EARTH DISTRIBUTION

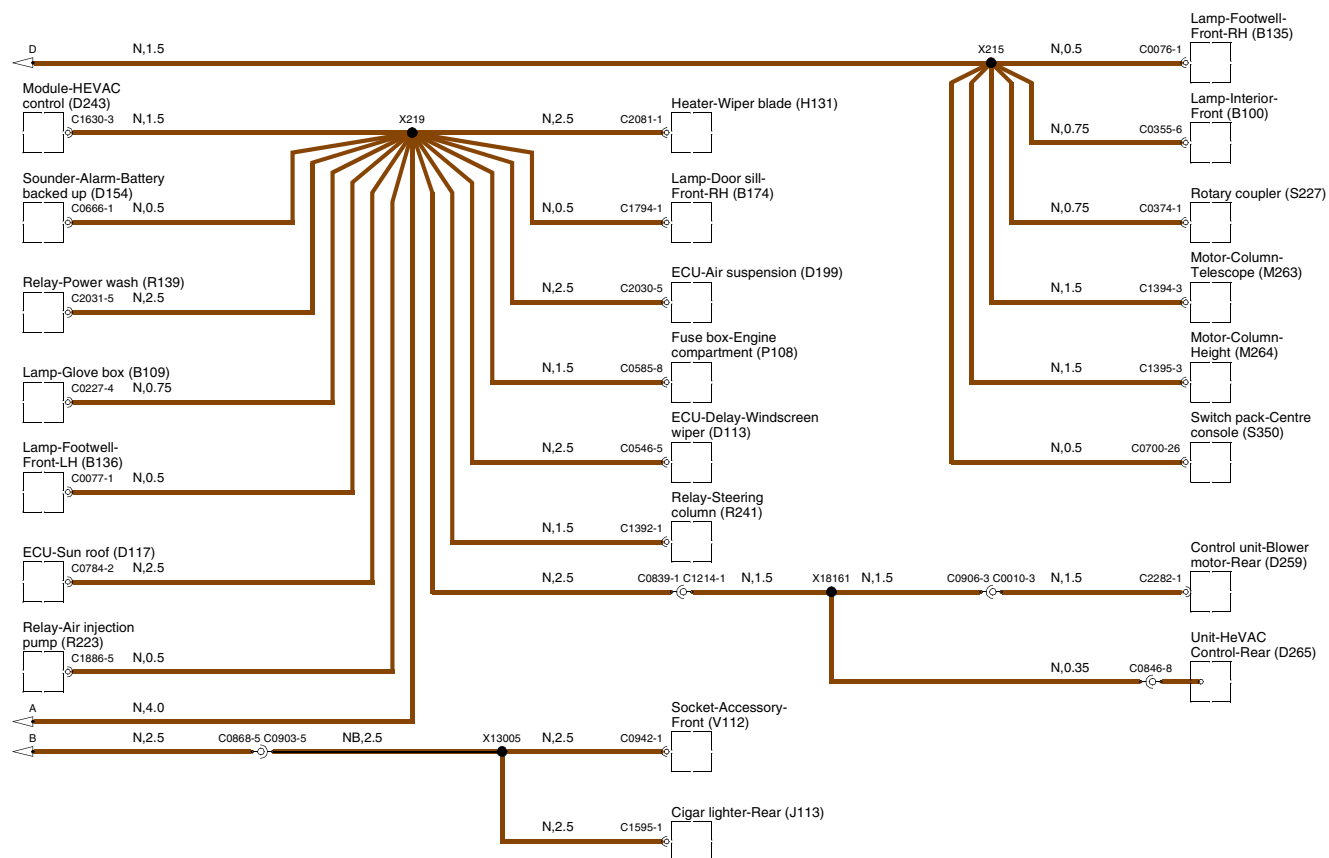


2 EARTH DISTRIBUTION

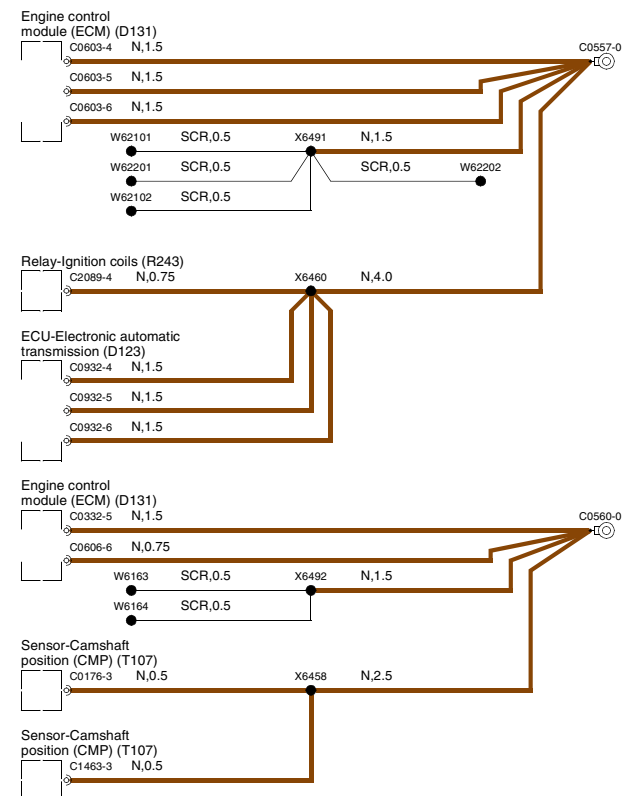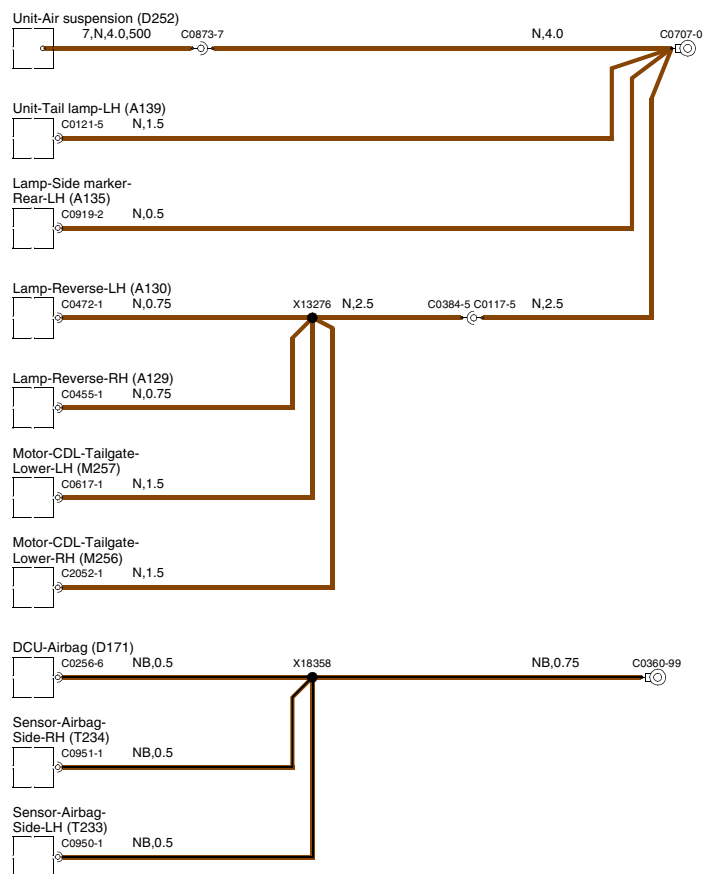



3 ANTI-THEFT ALARM

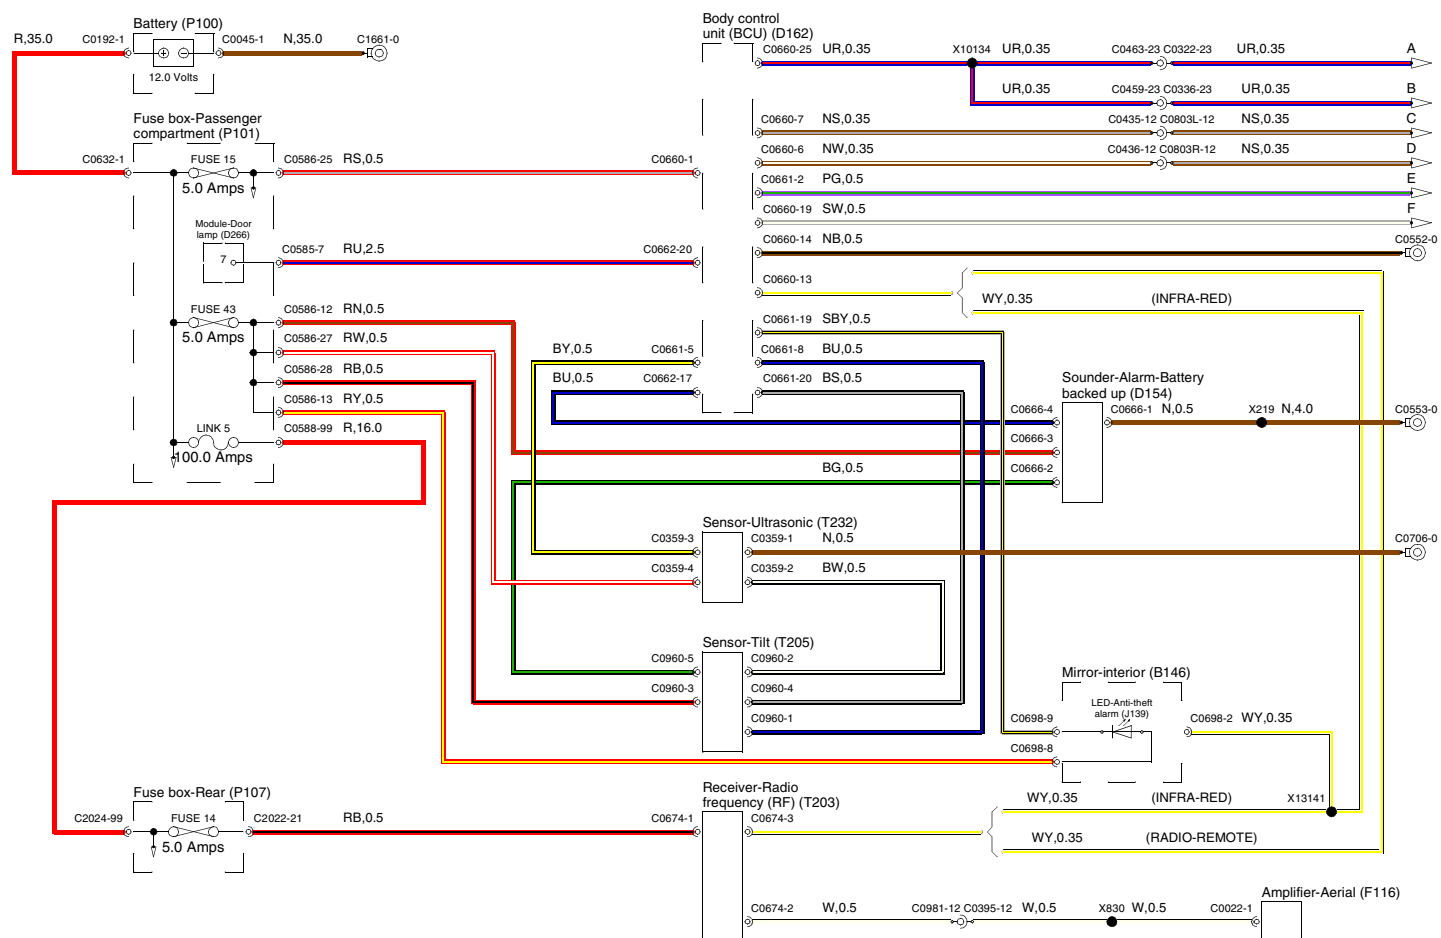


3 ANTI-THEFT ALARM

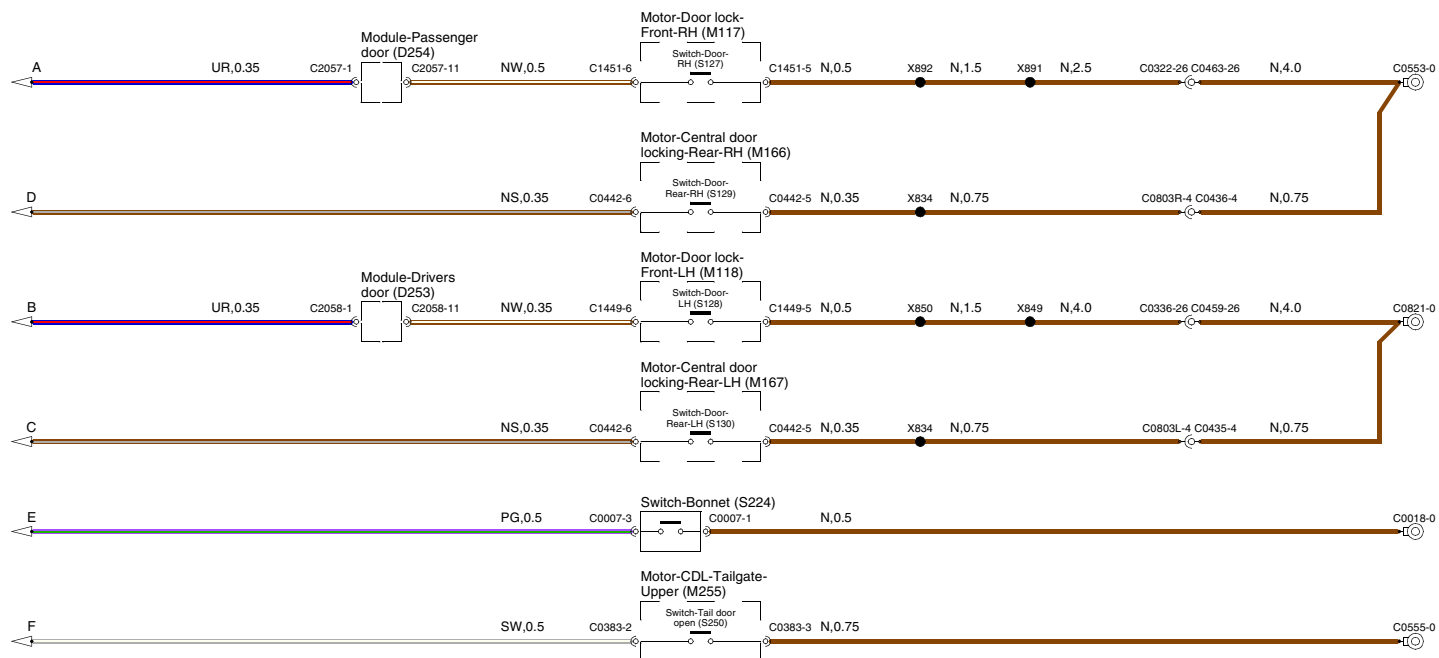

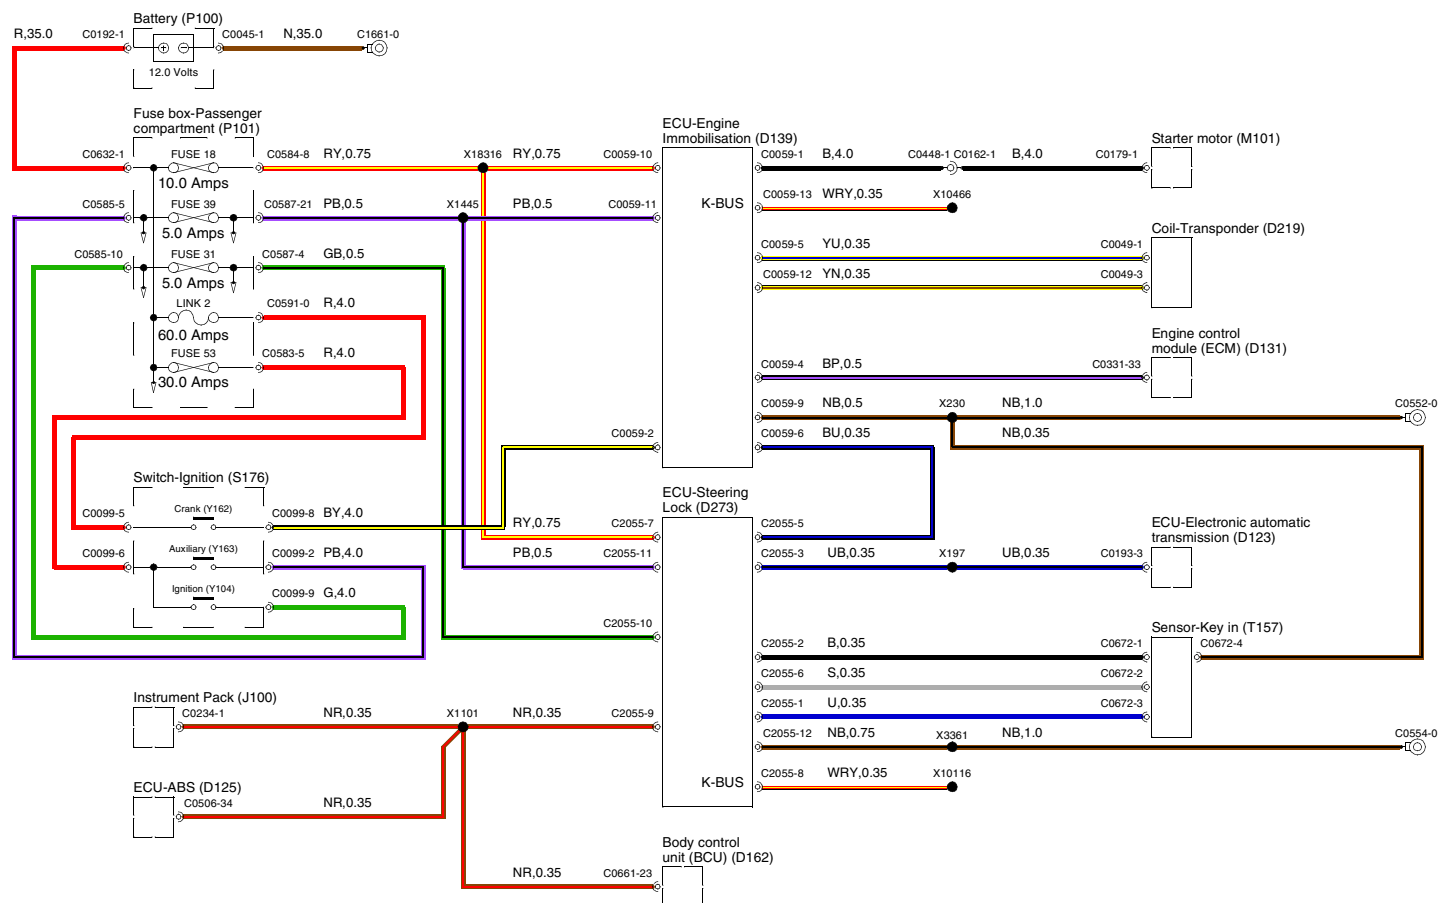


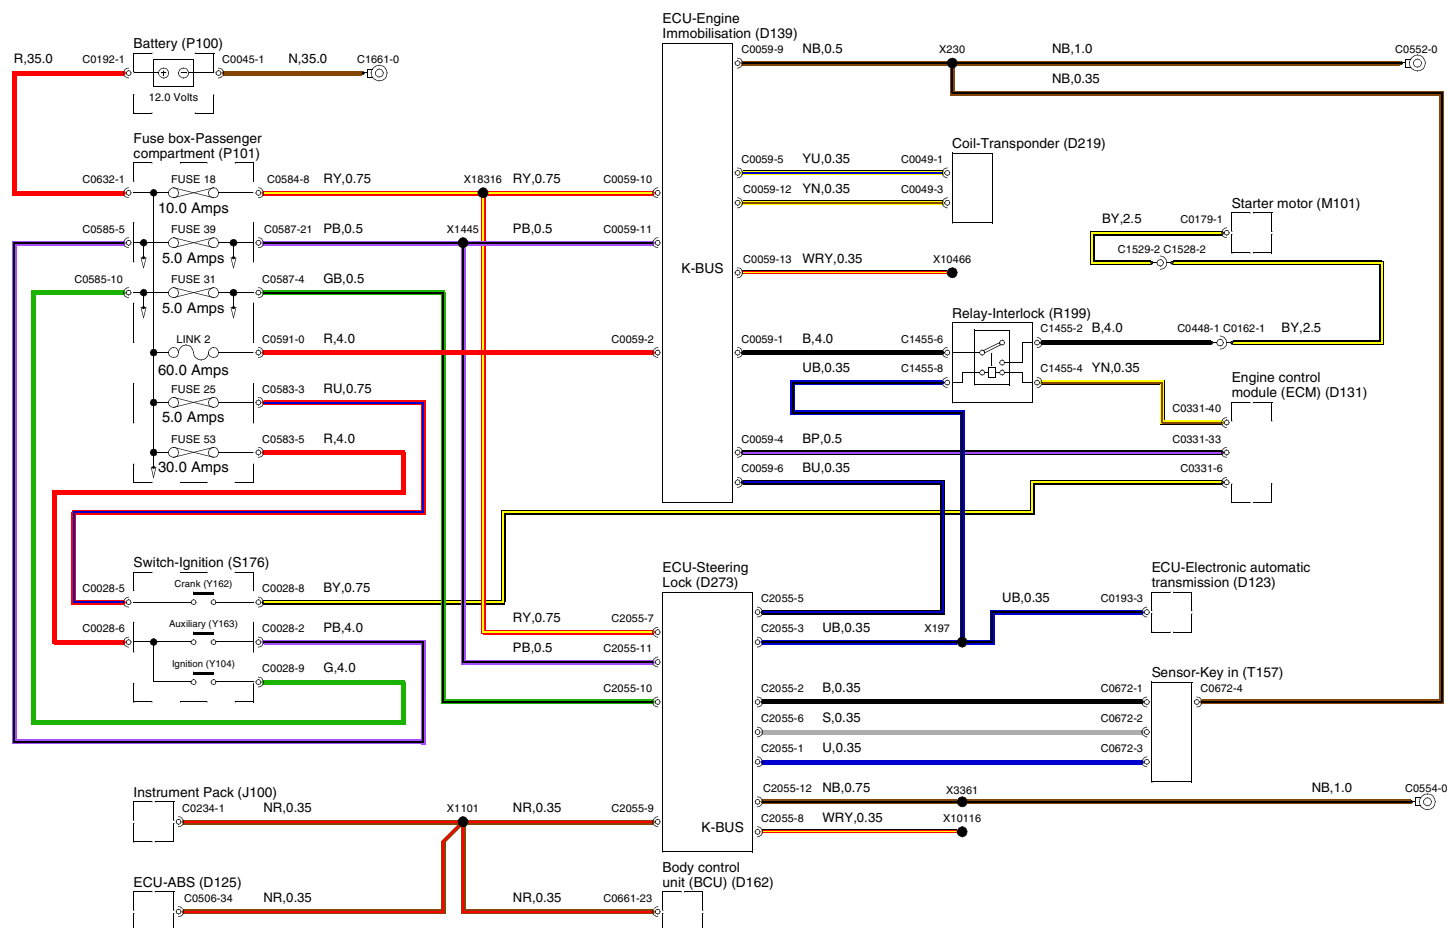



4 CENTRAL DOOR LOCKING

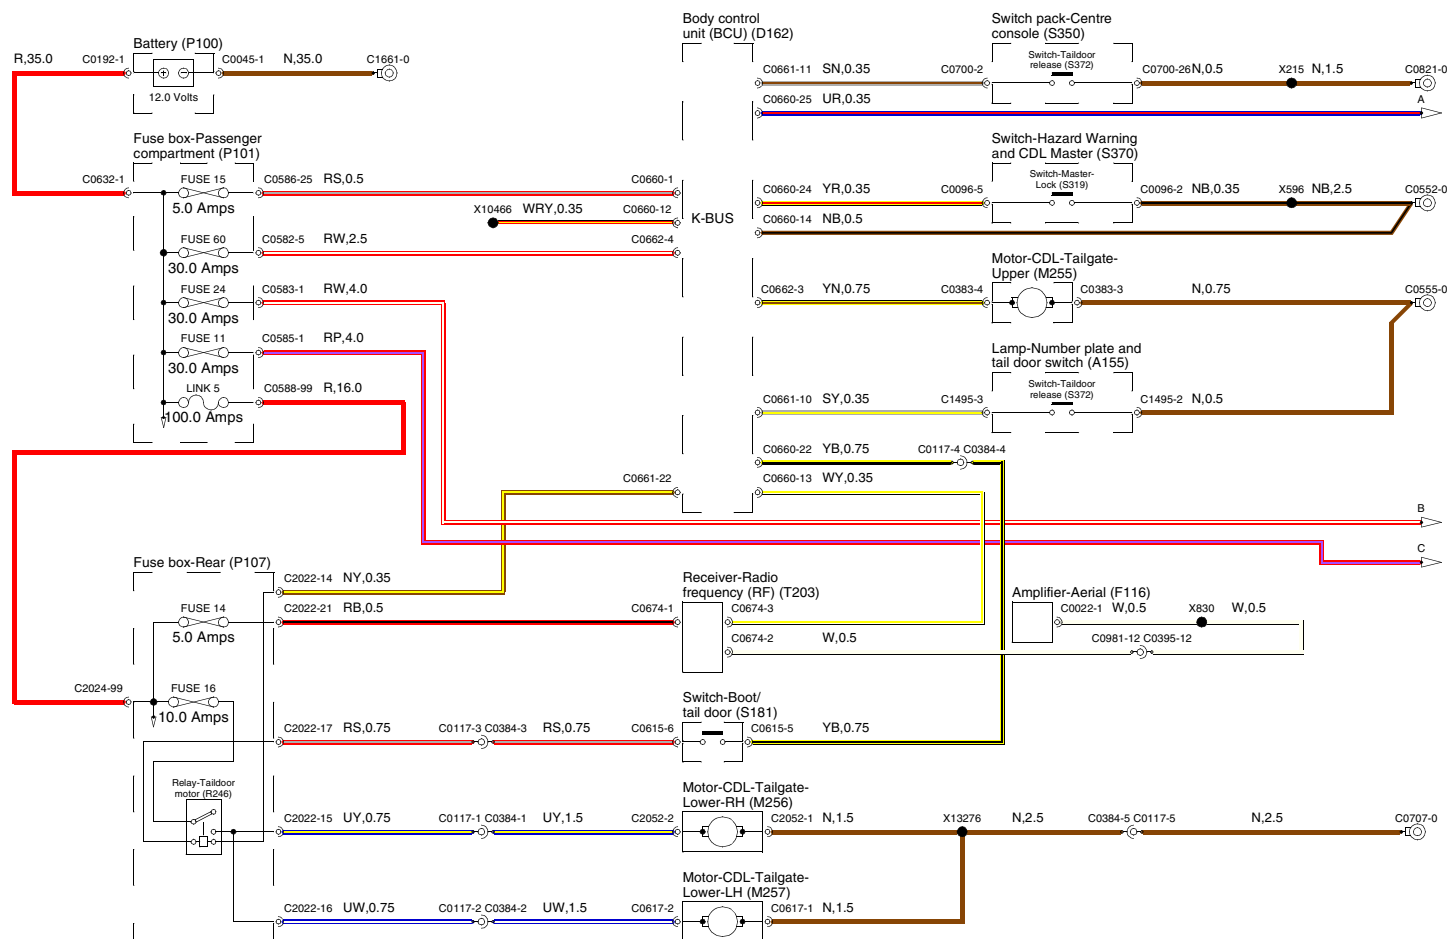


4 CENTRAL DOOR LOCKING

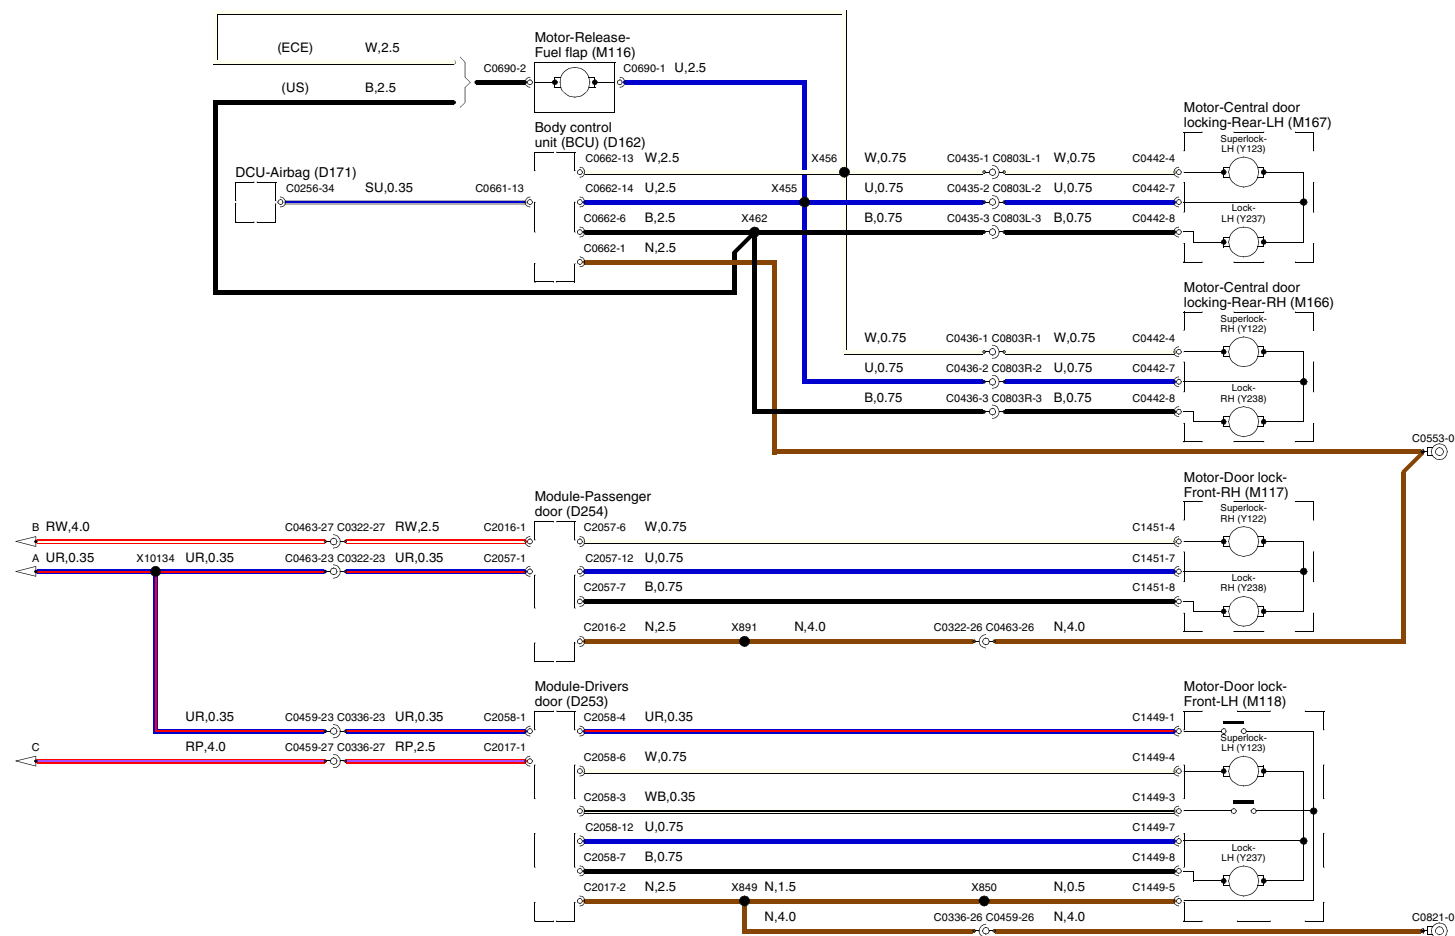


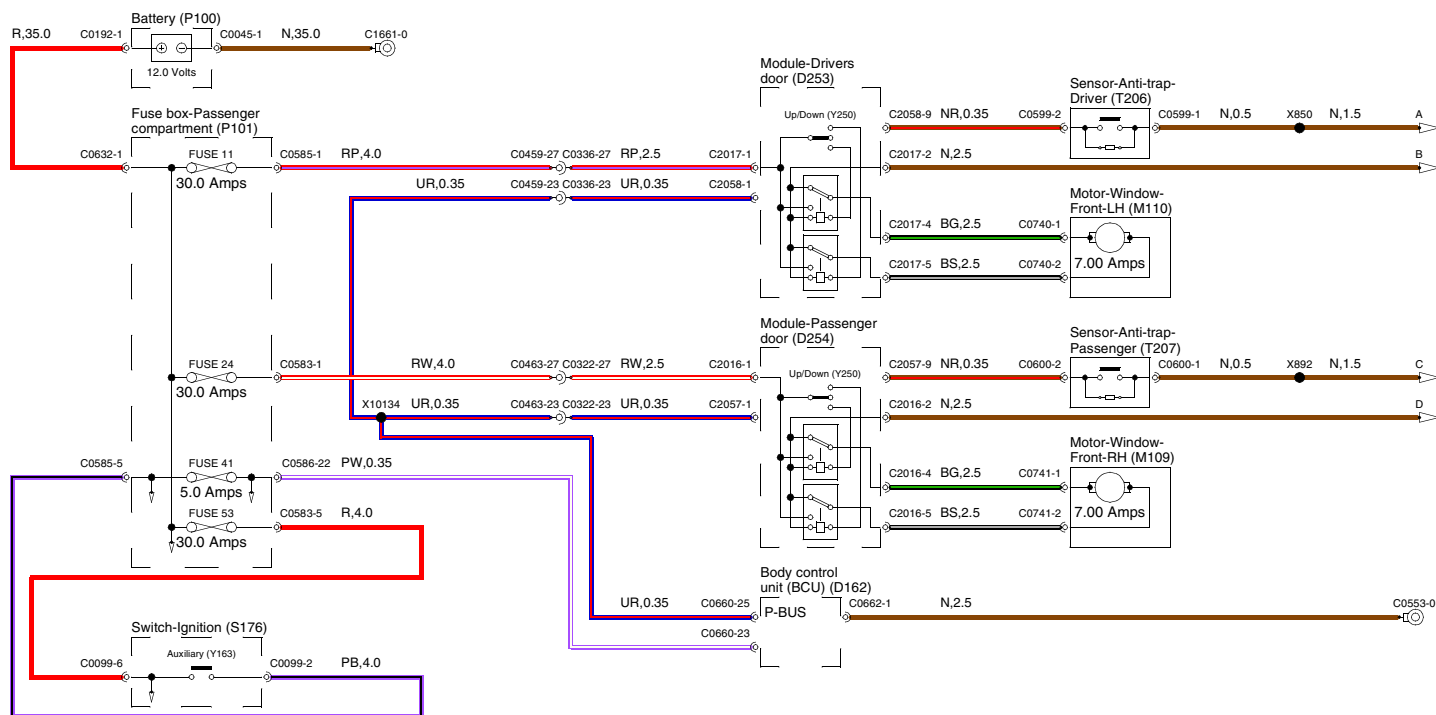

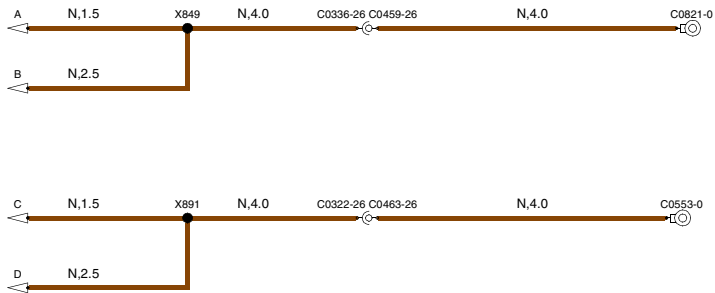


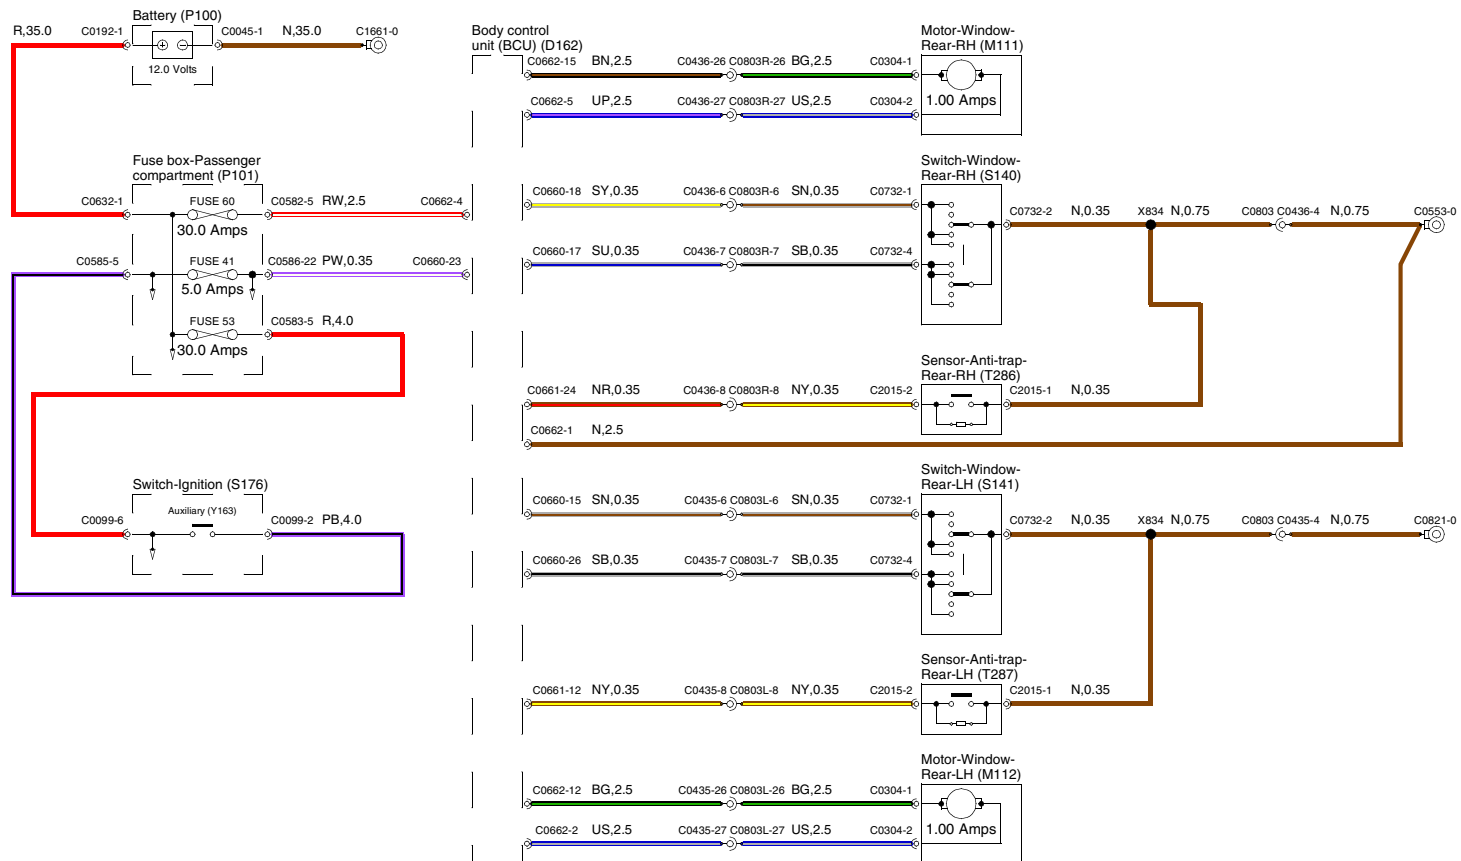



6 SUNROOF

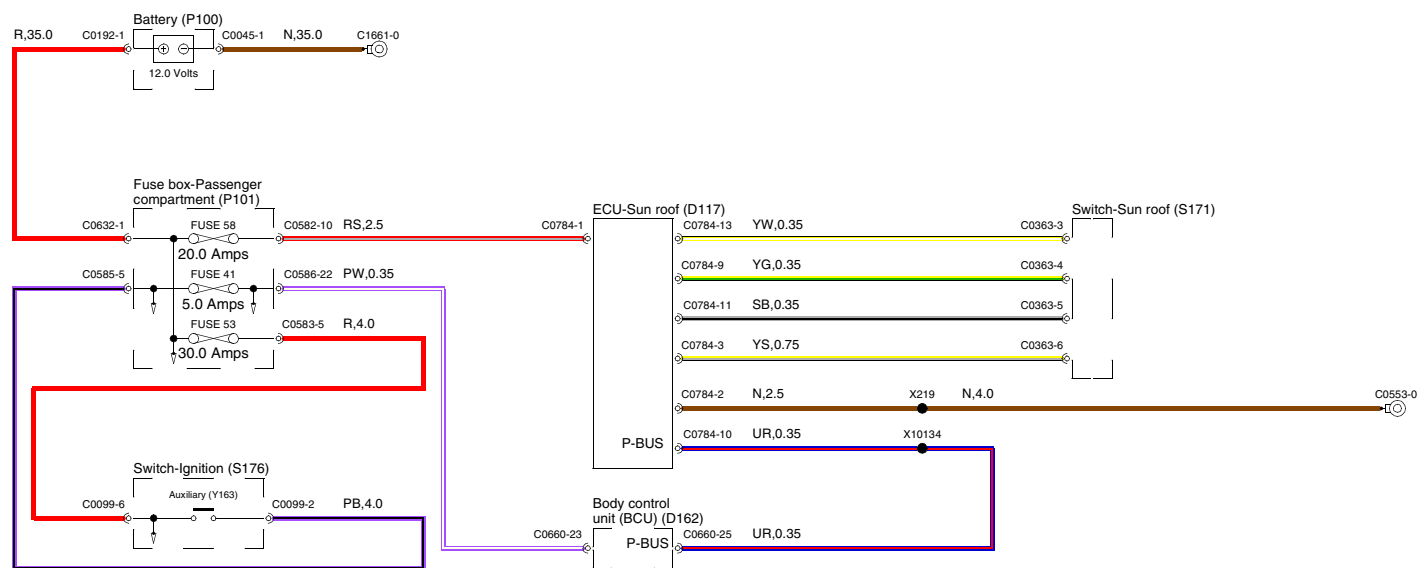


7 DOOR MIRRORS

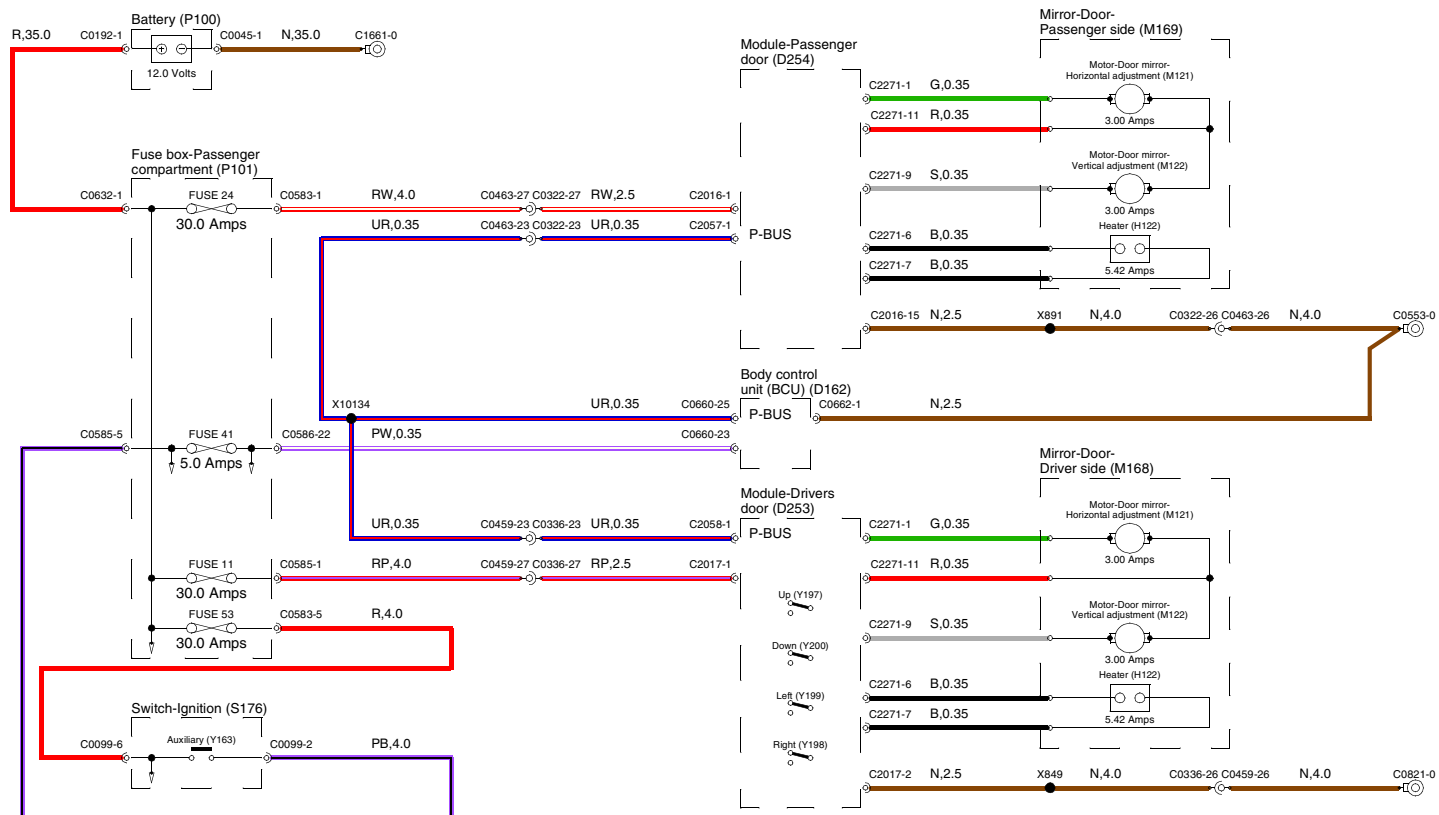


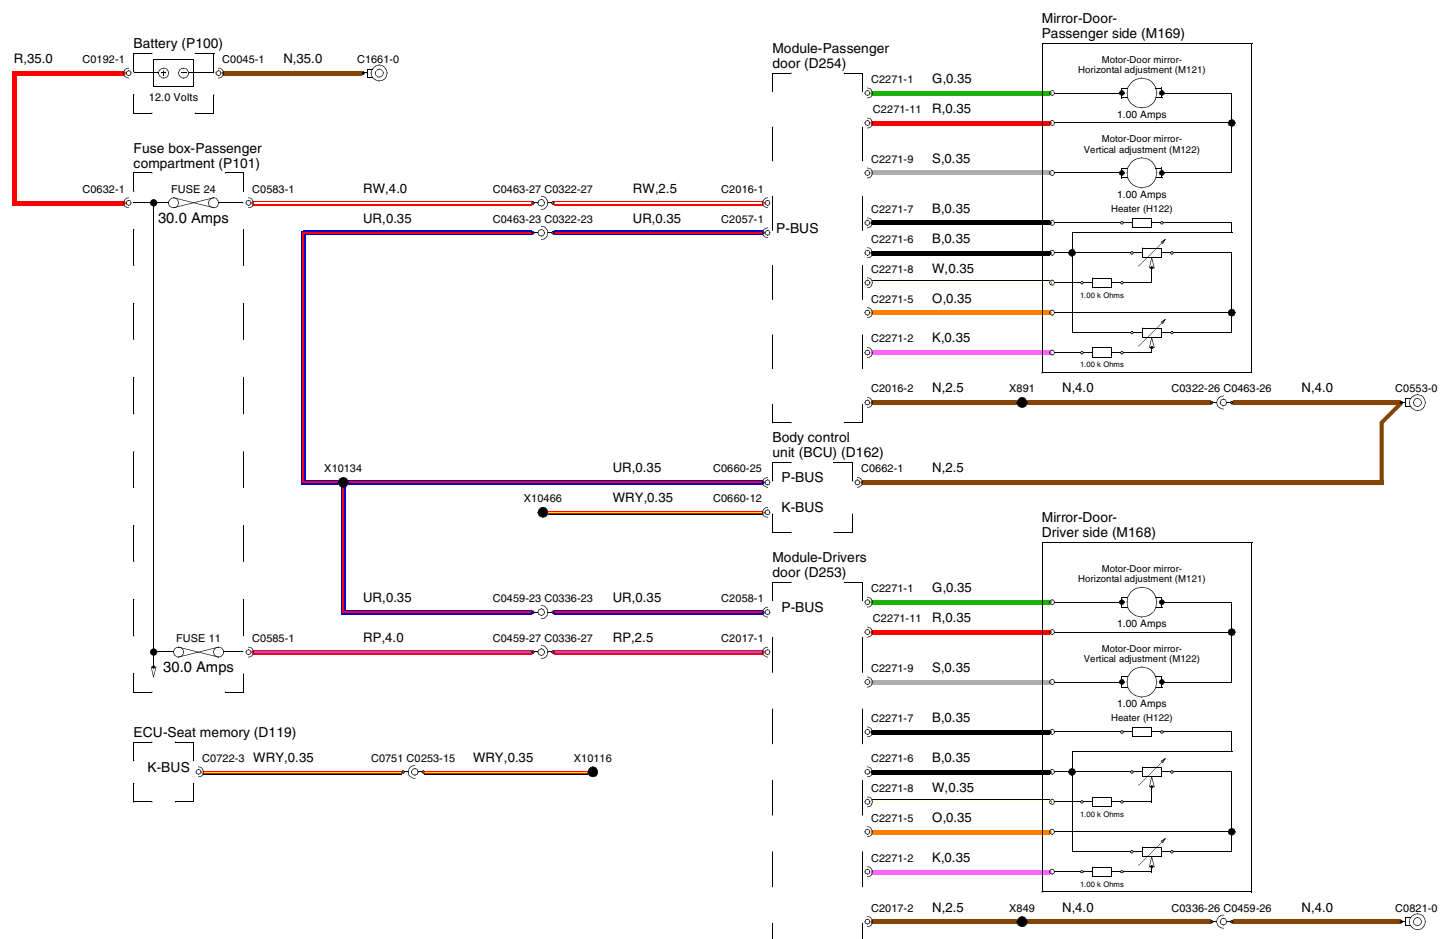


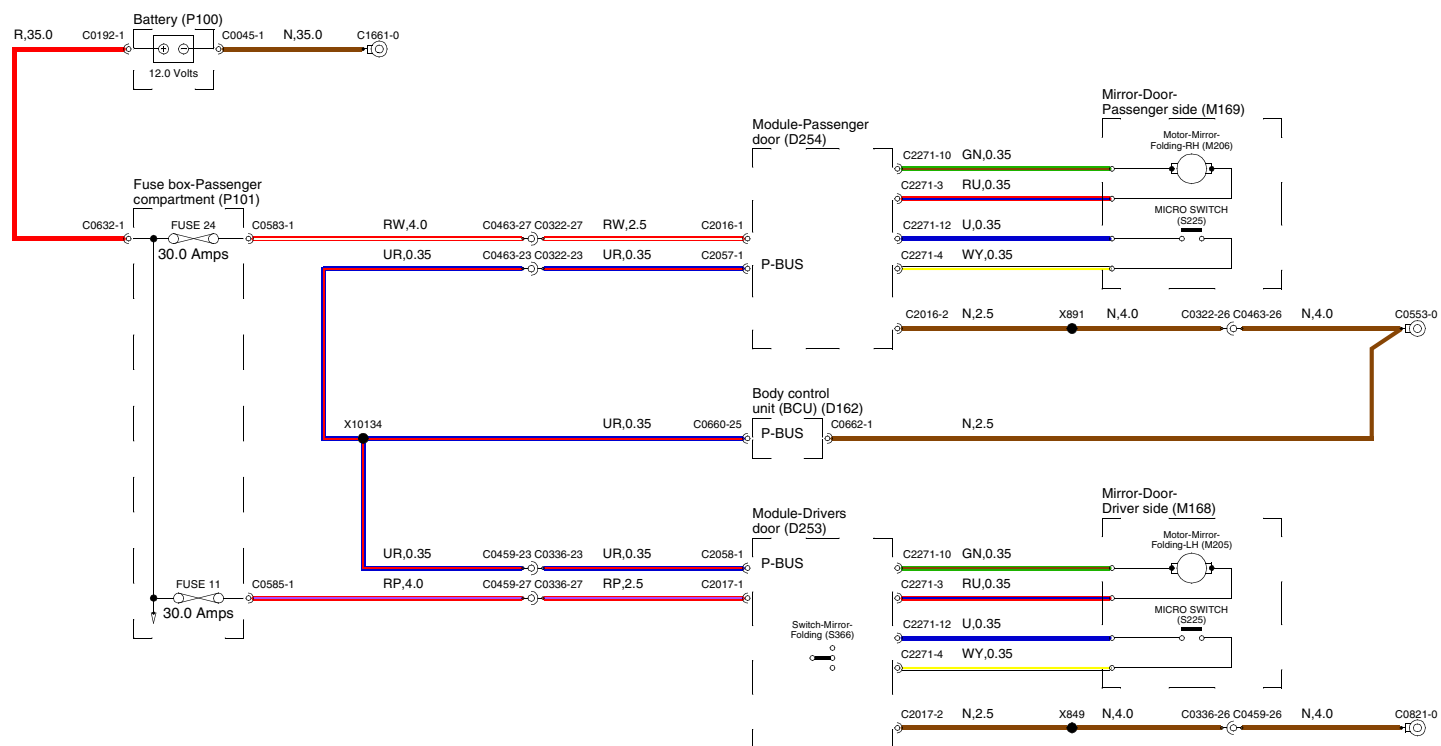



7 INTERIOR MIRROR

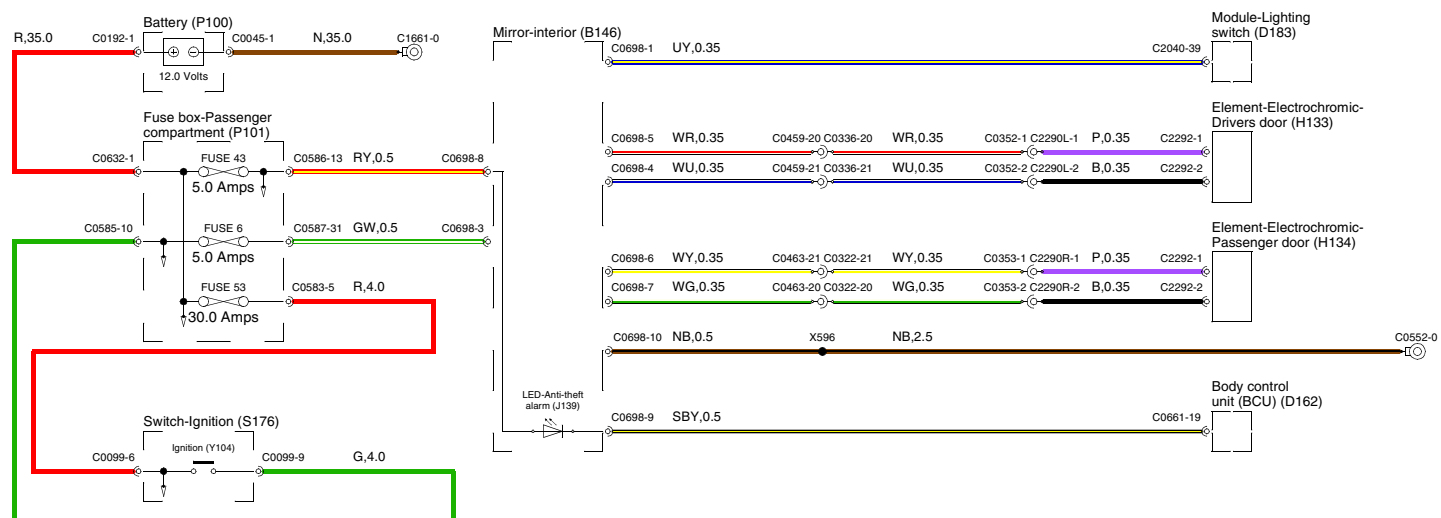


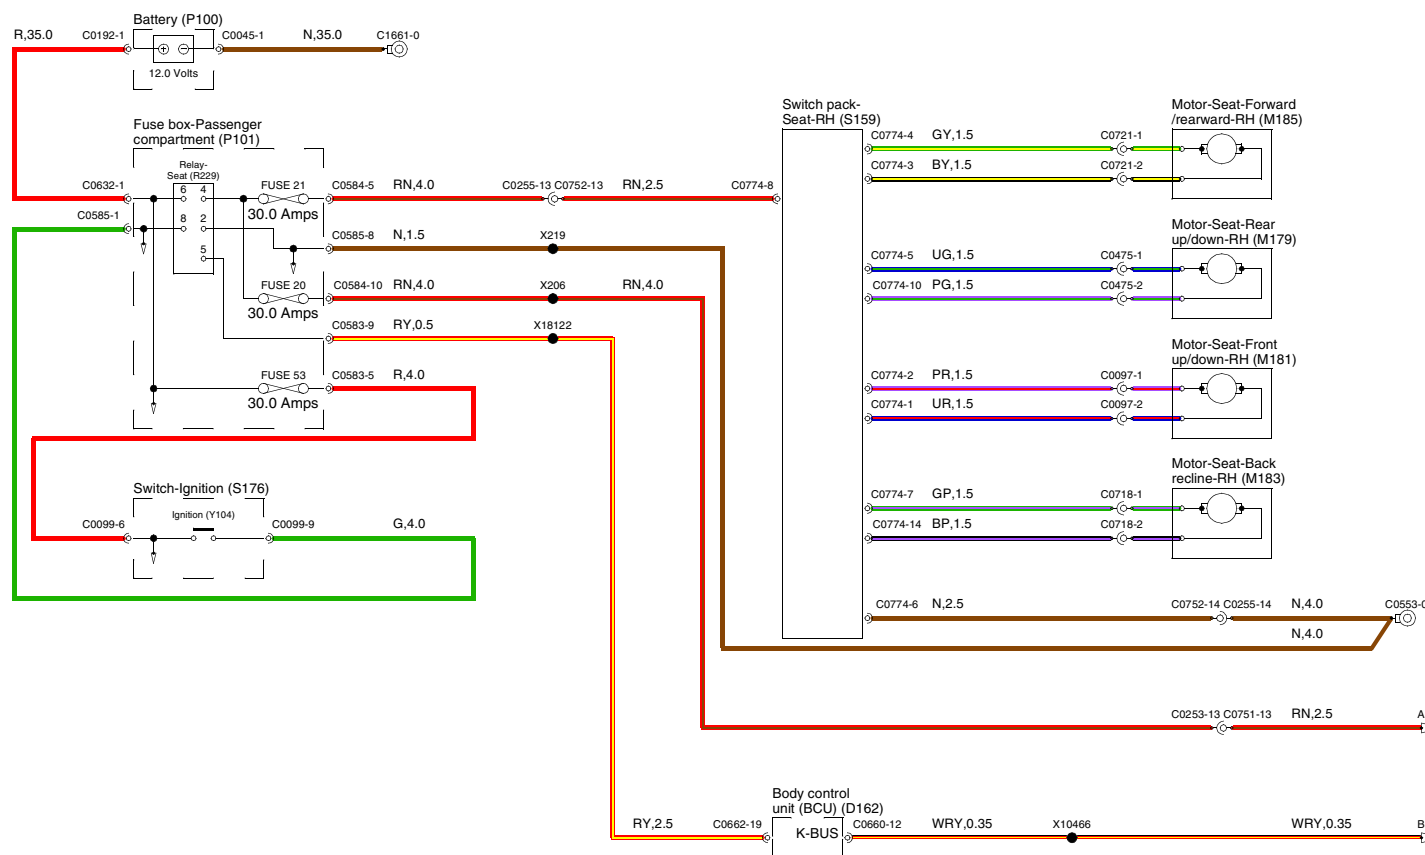


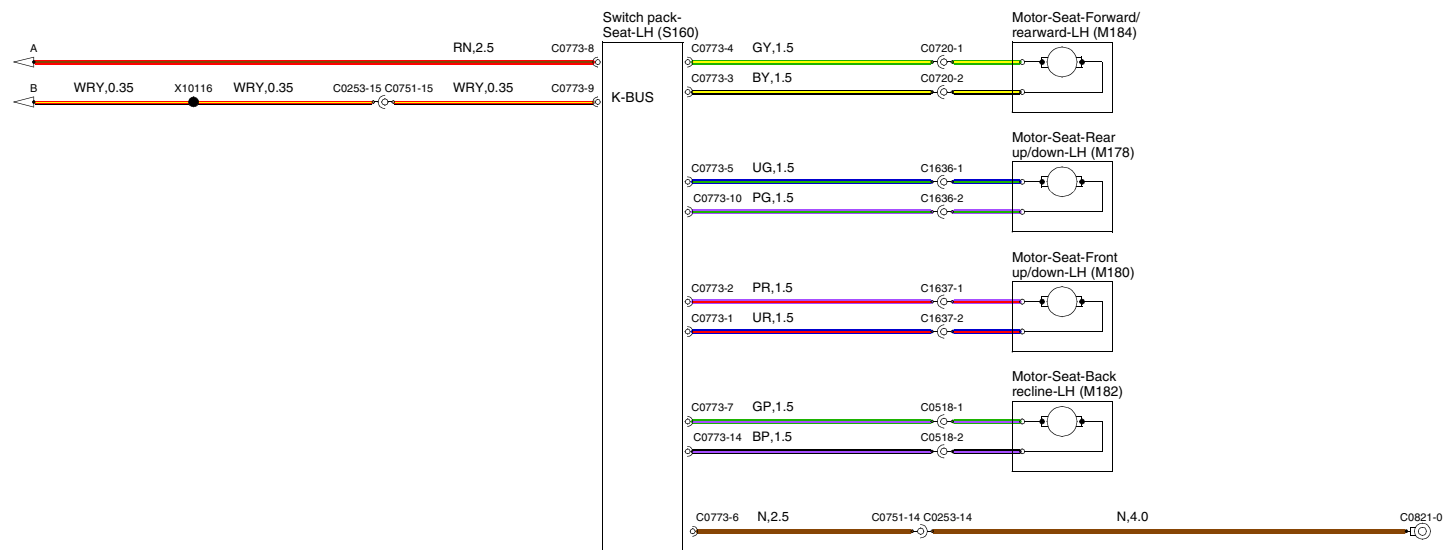


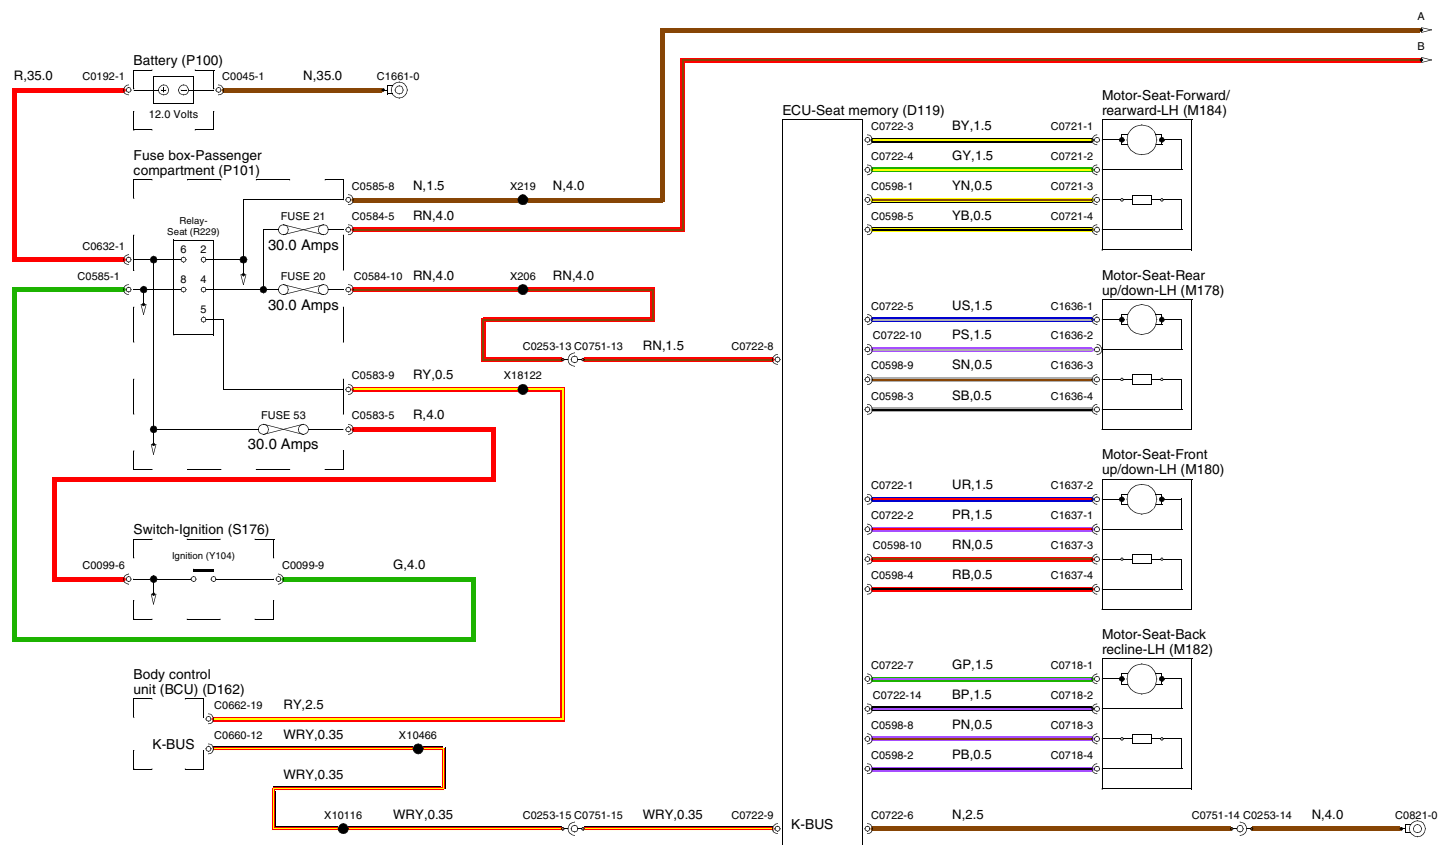


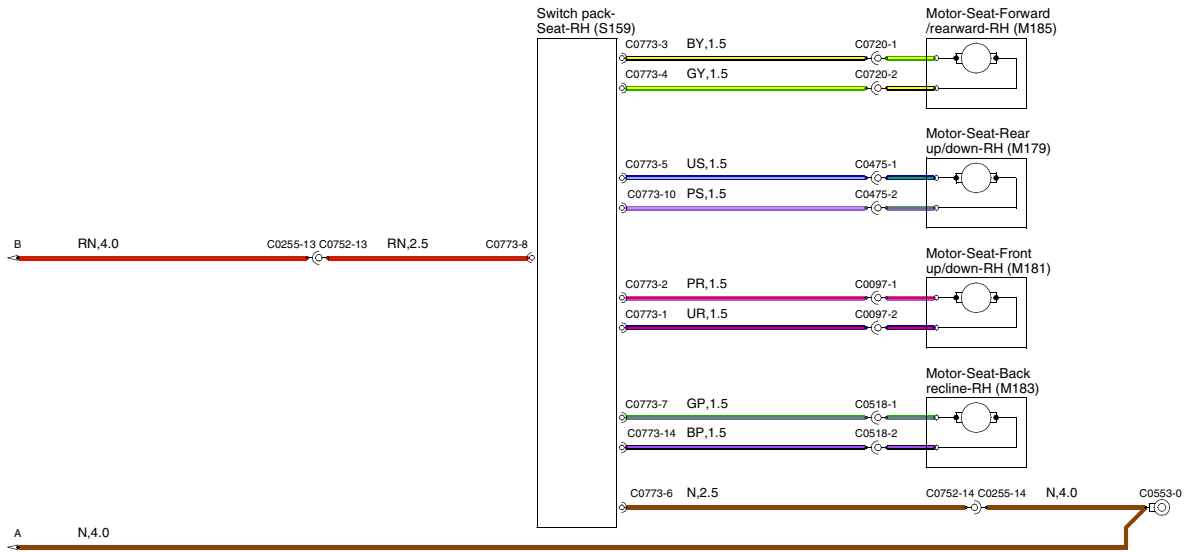


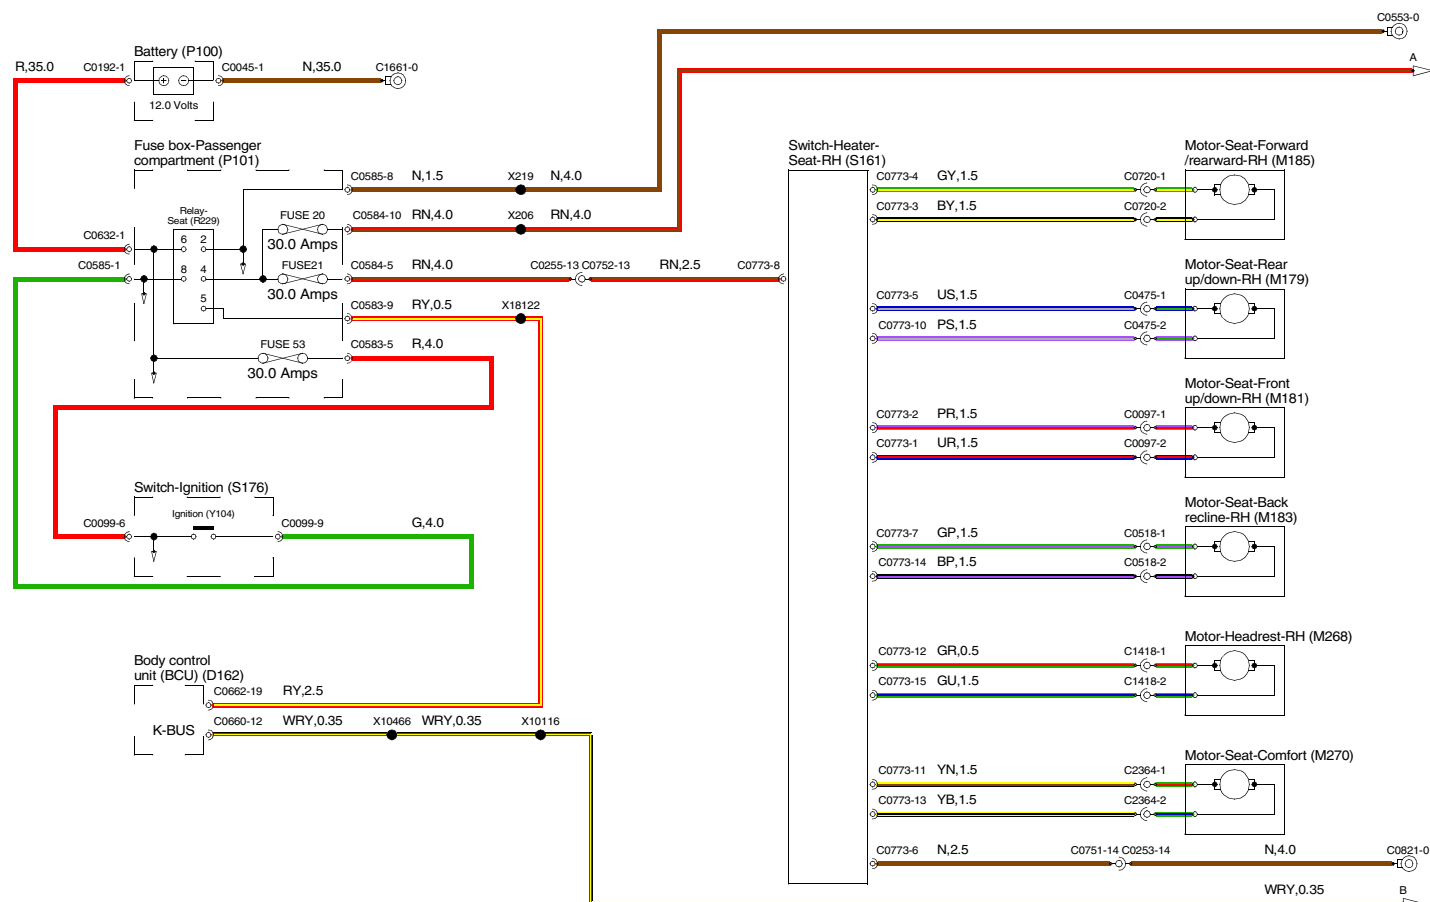


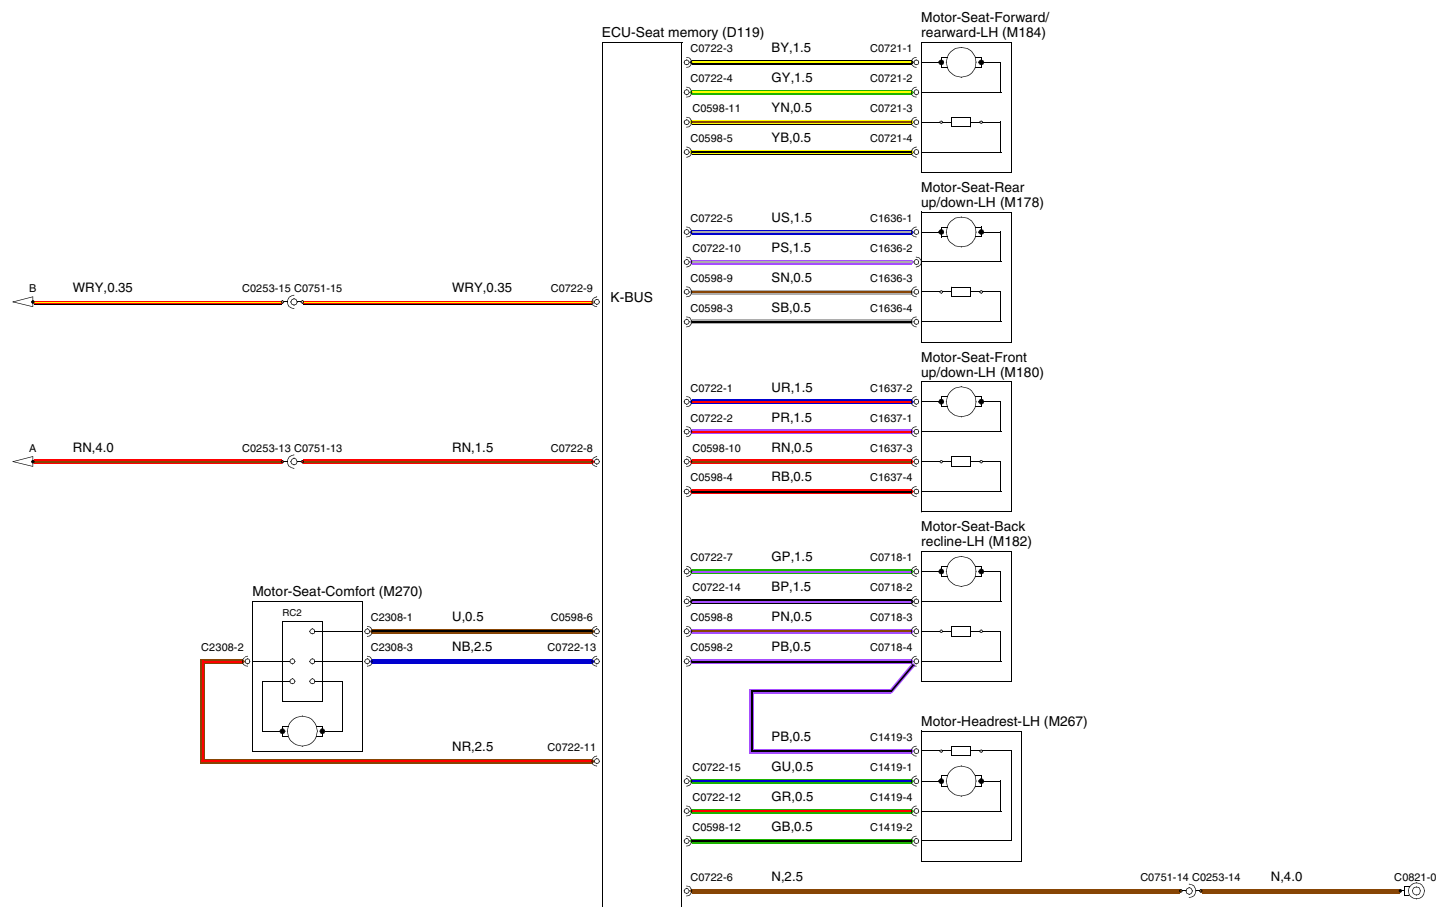


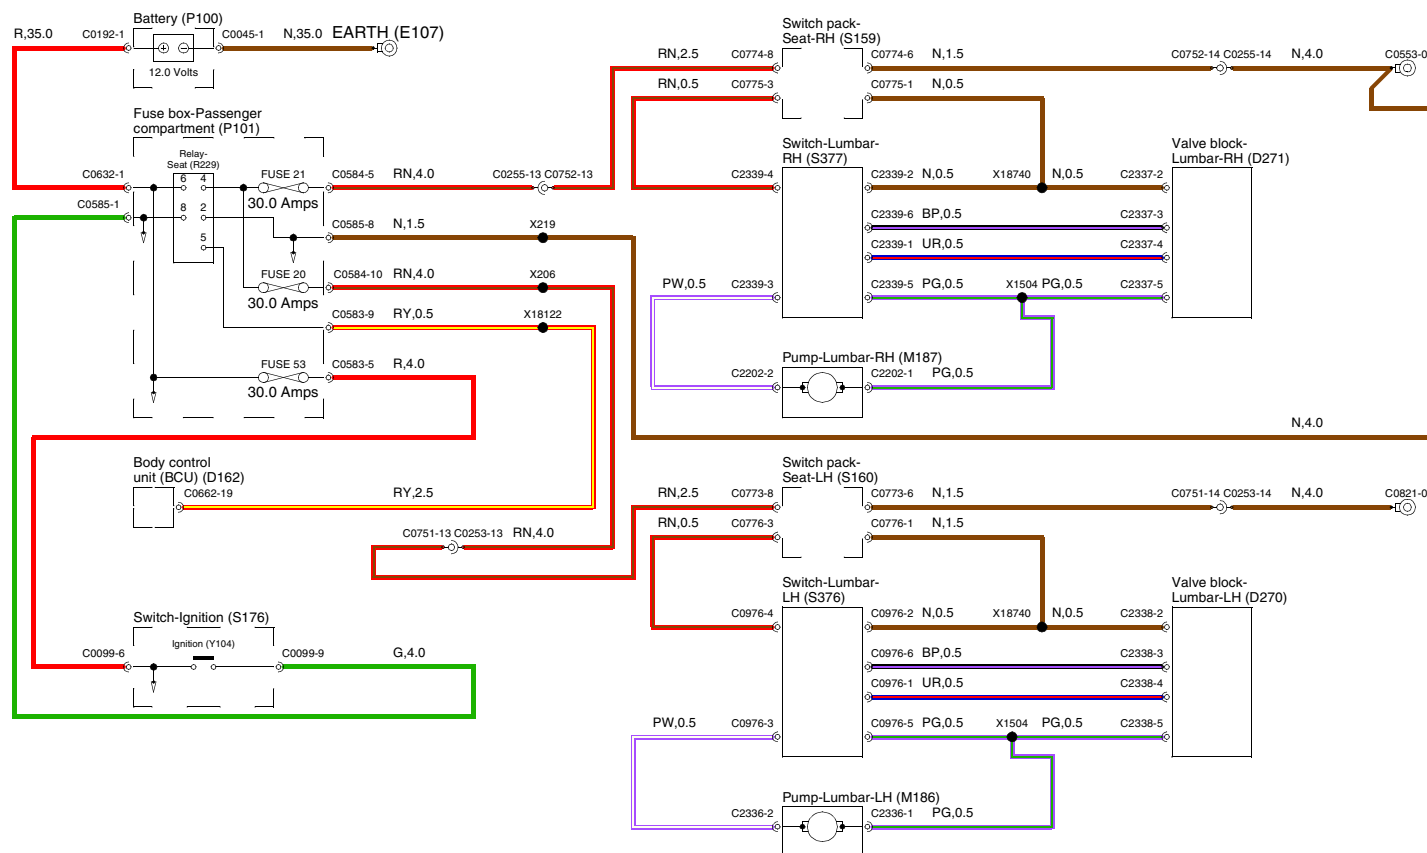


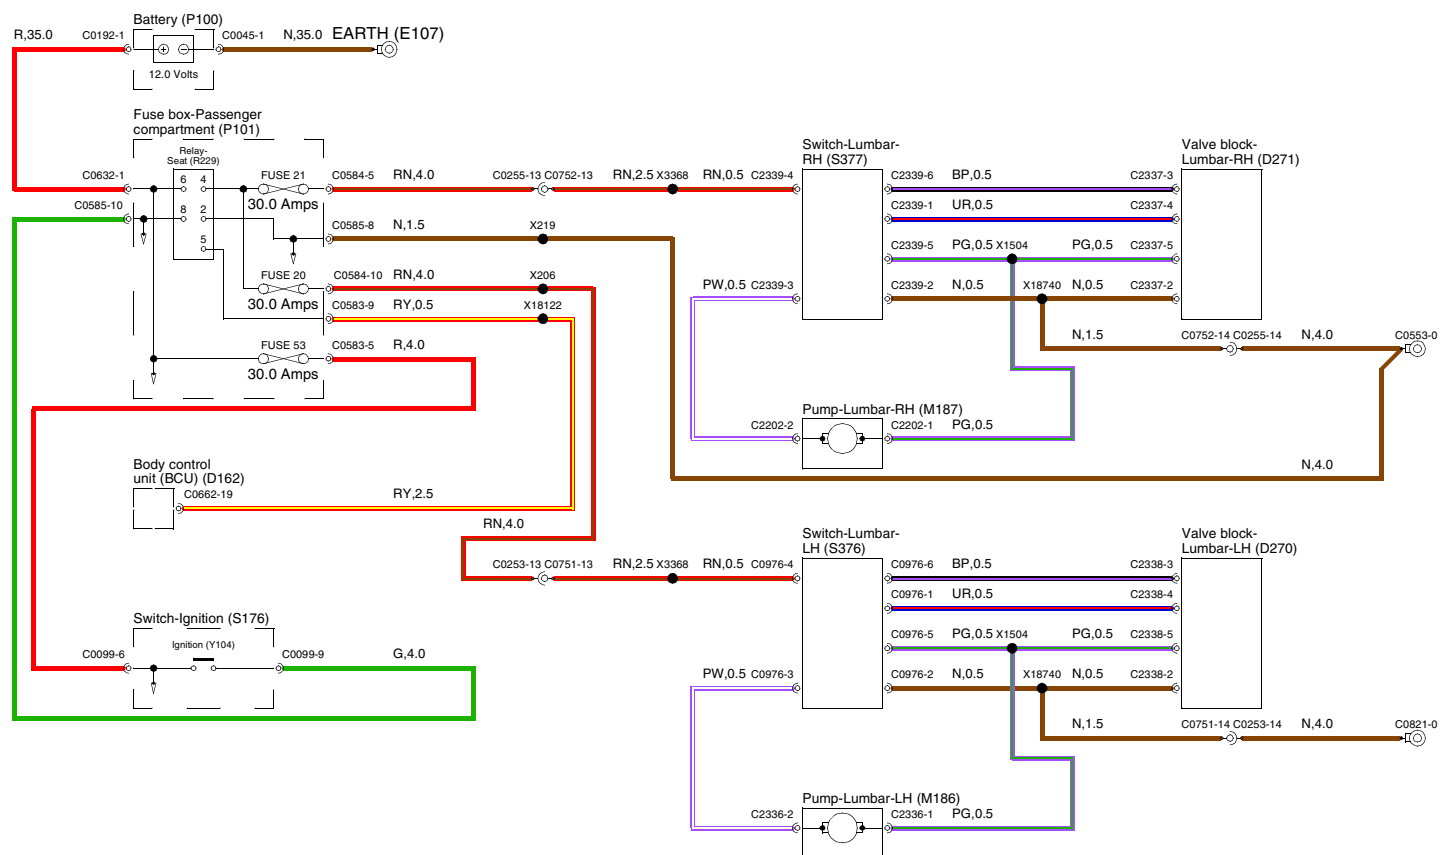


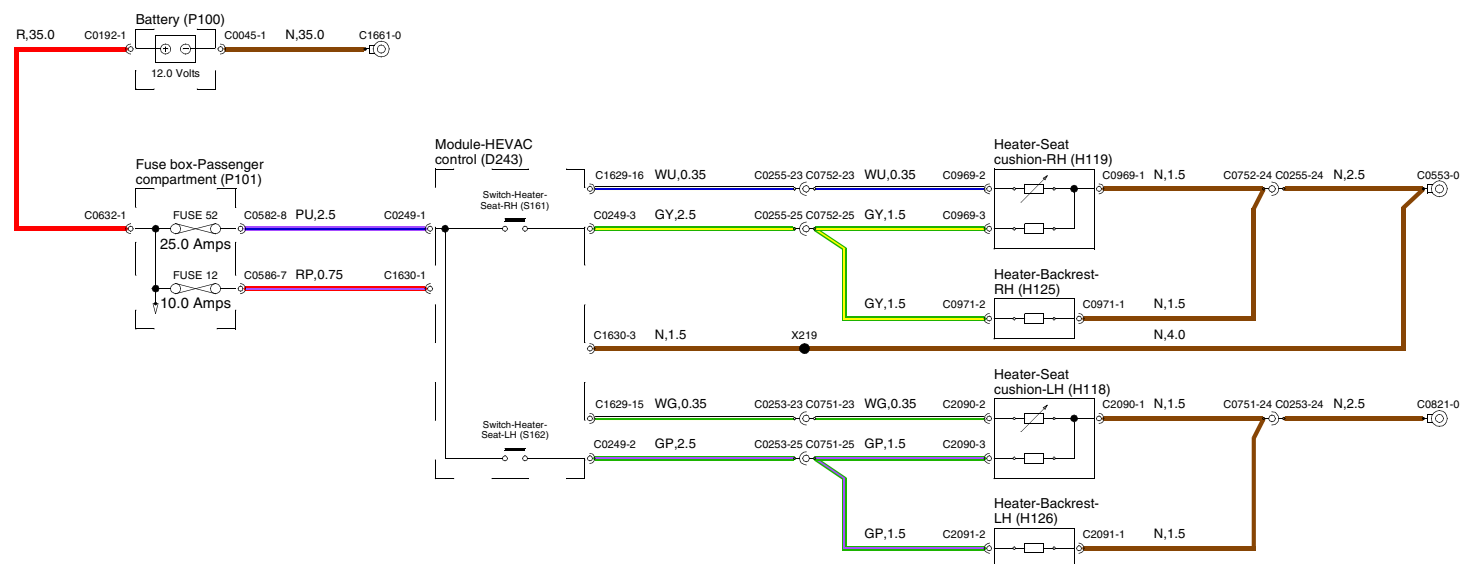

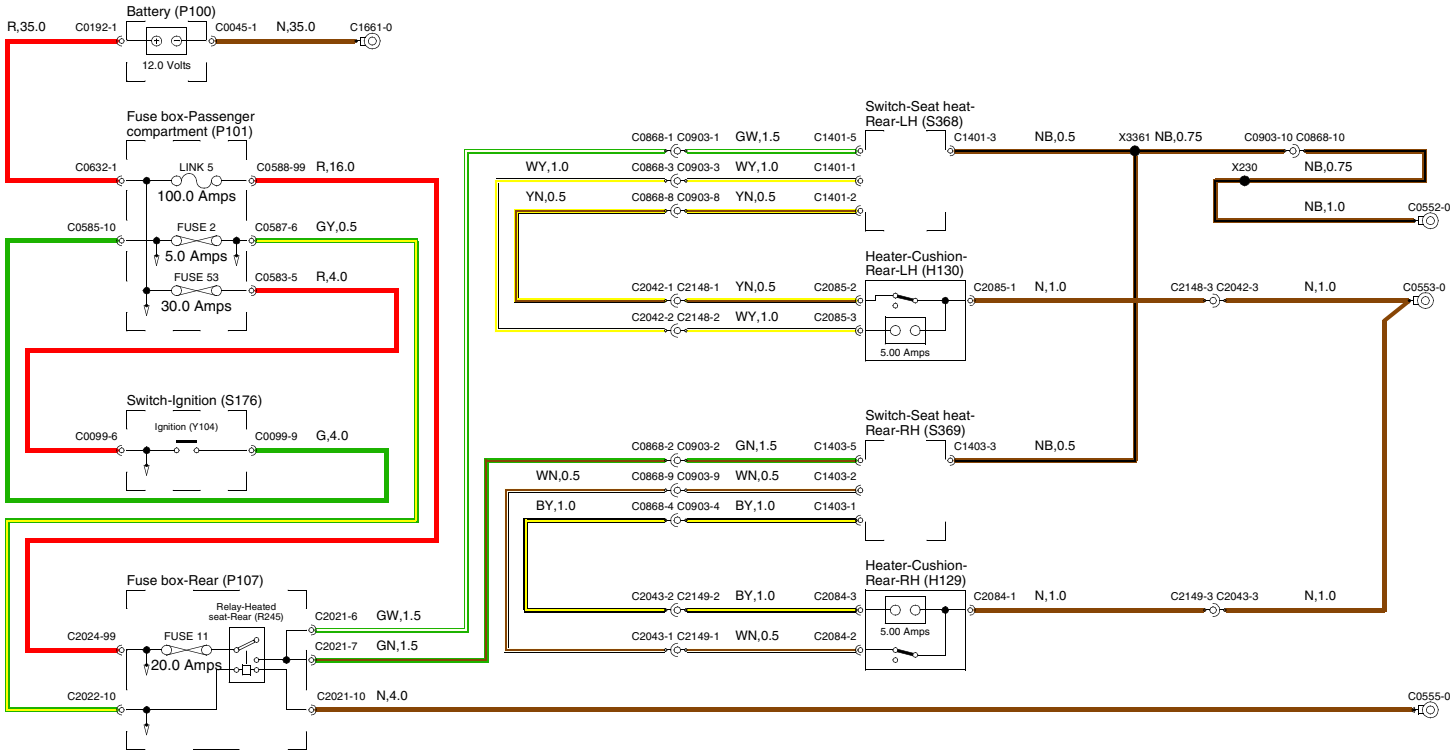


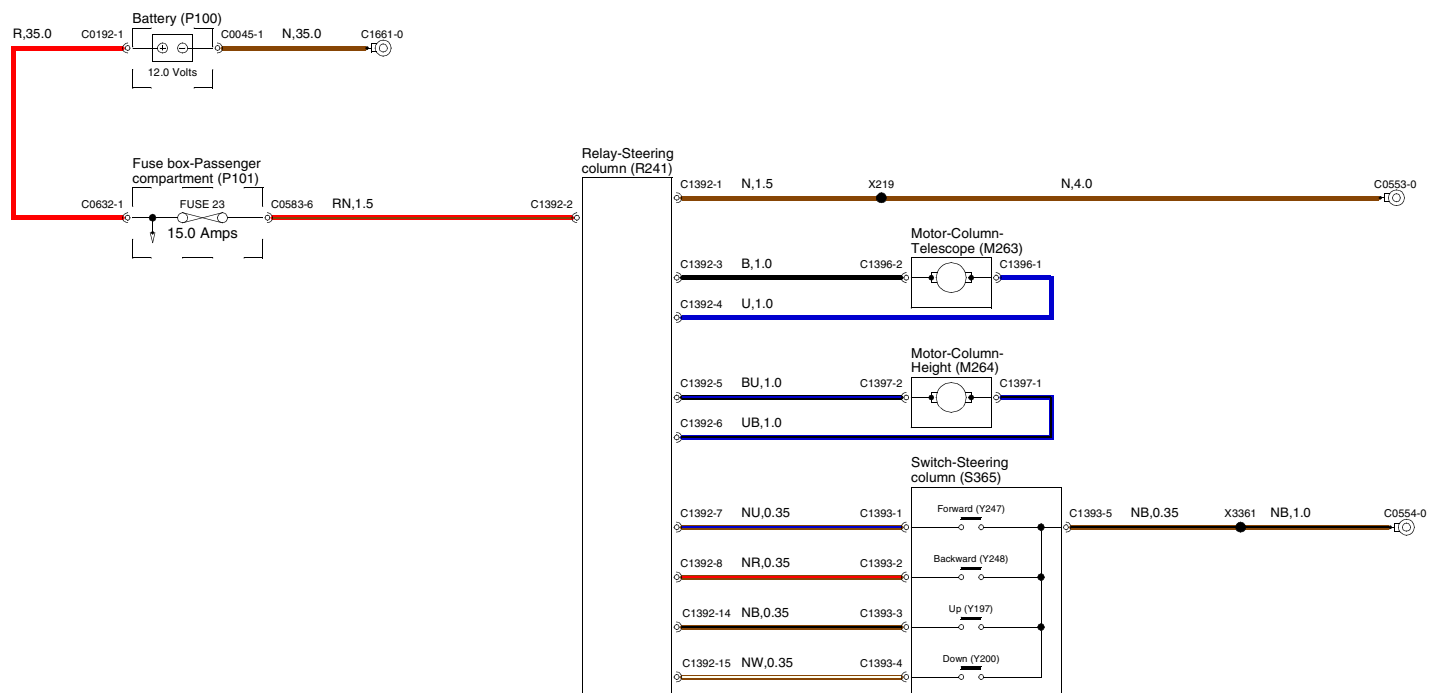

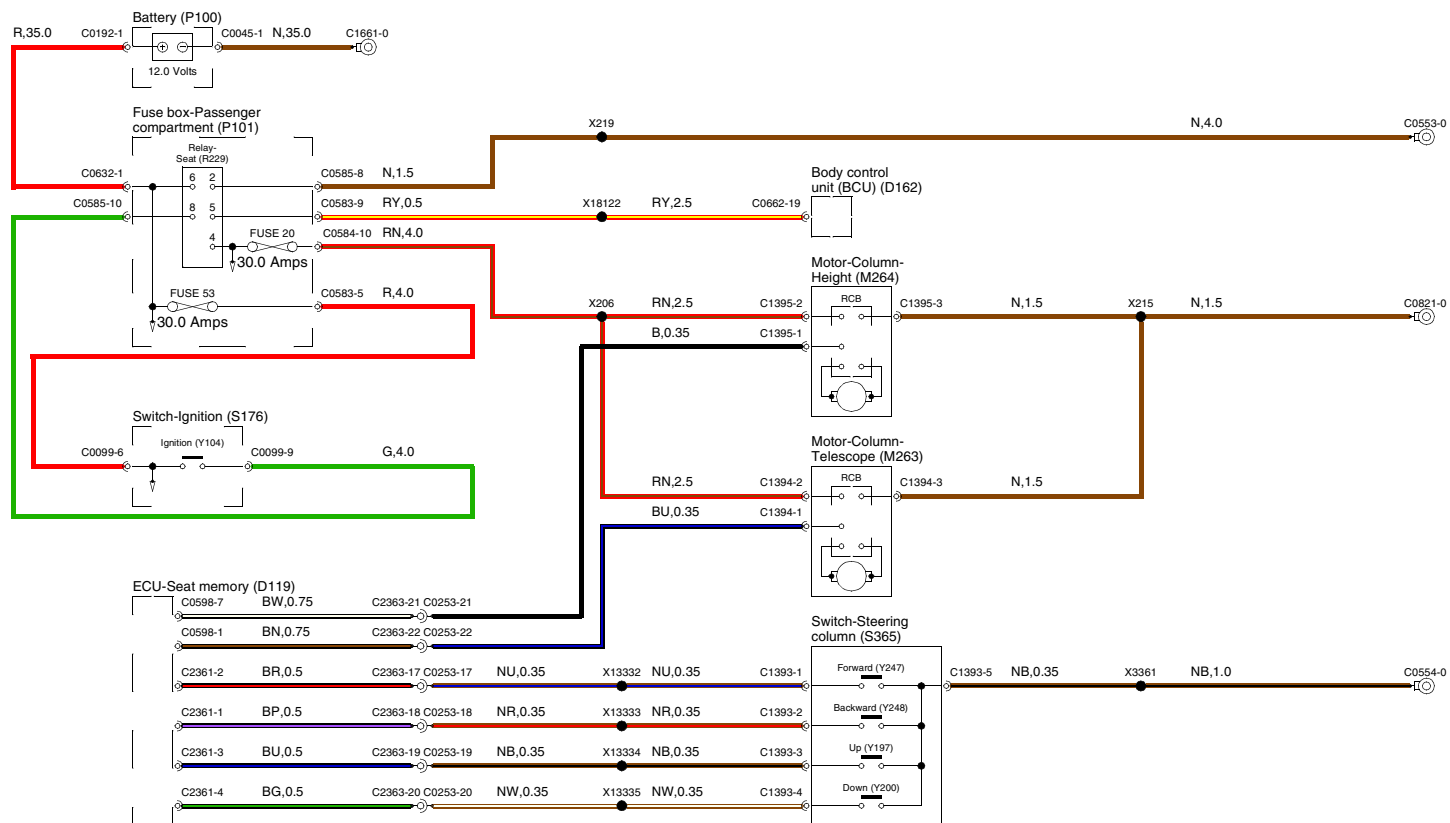


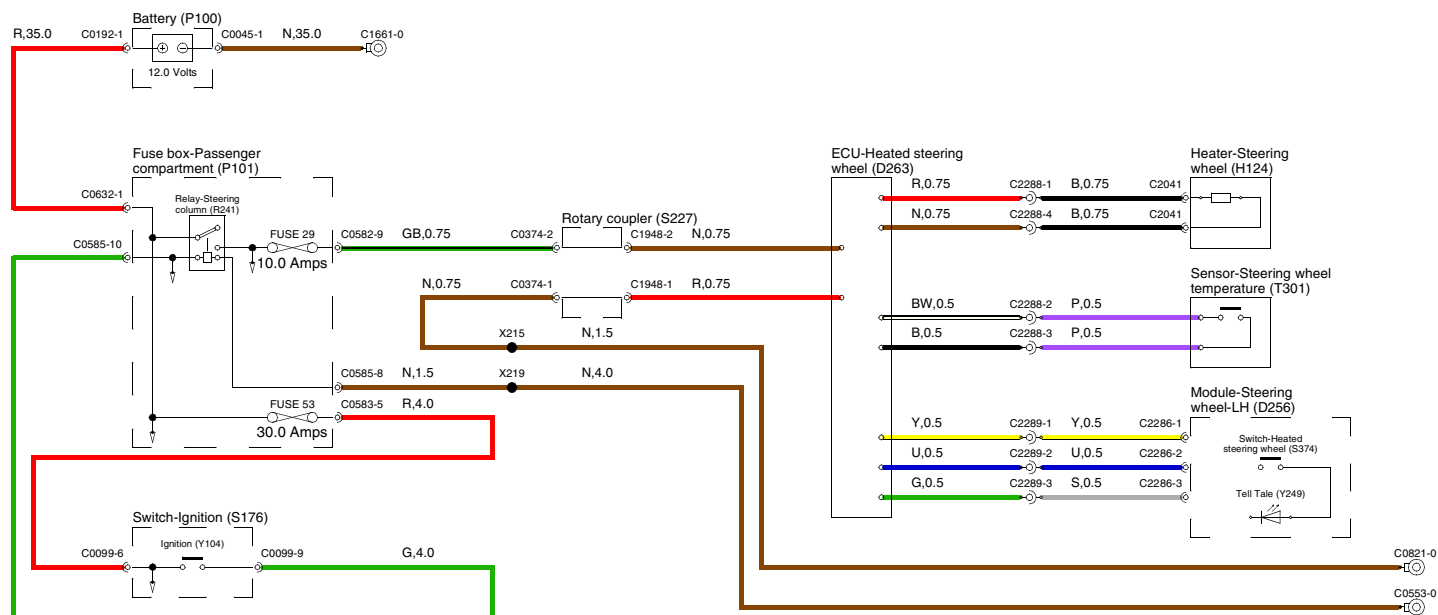


9 STEERING

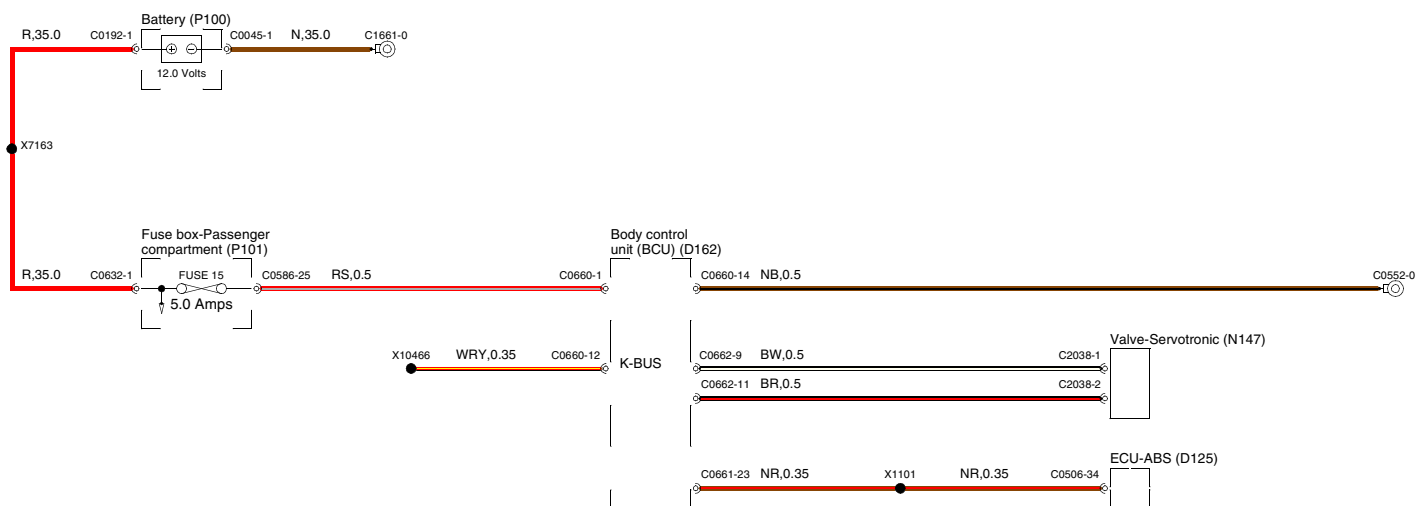


10 DIAGNOSTIC SOCKET

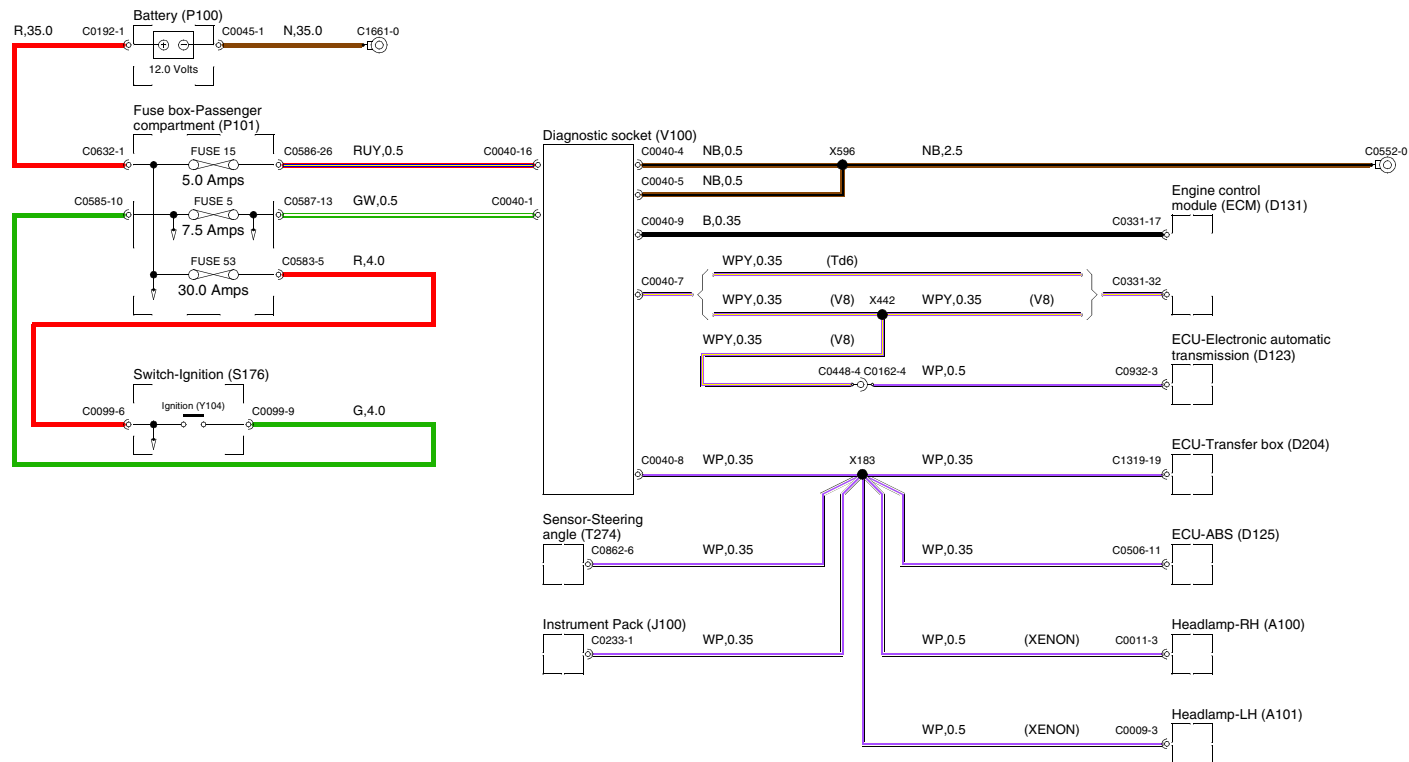


11 BODY CONTROL UNIT

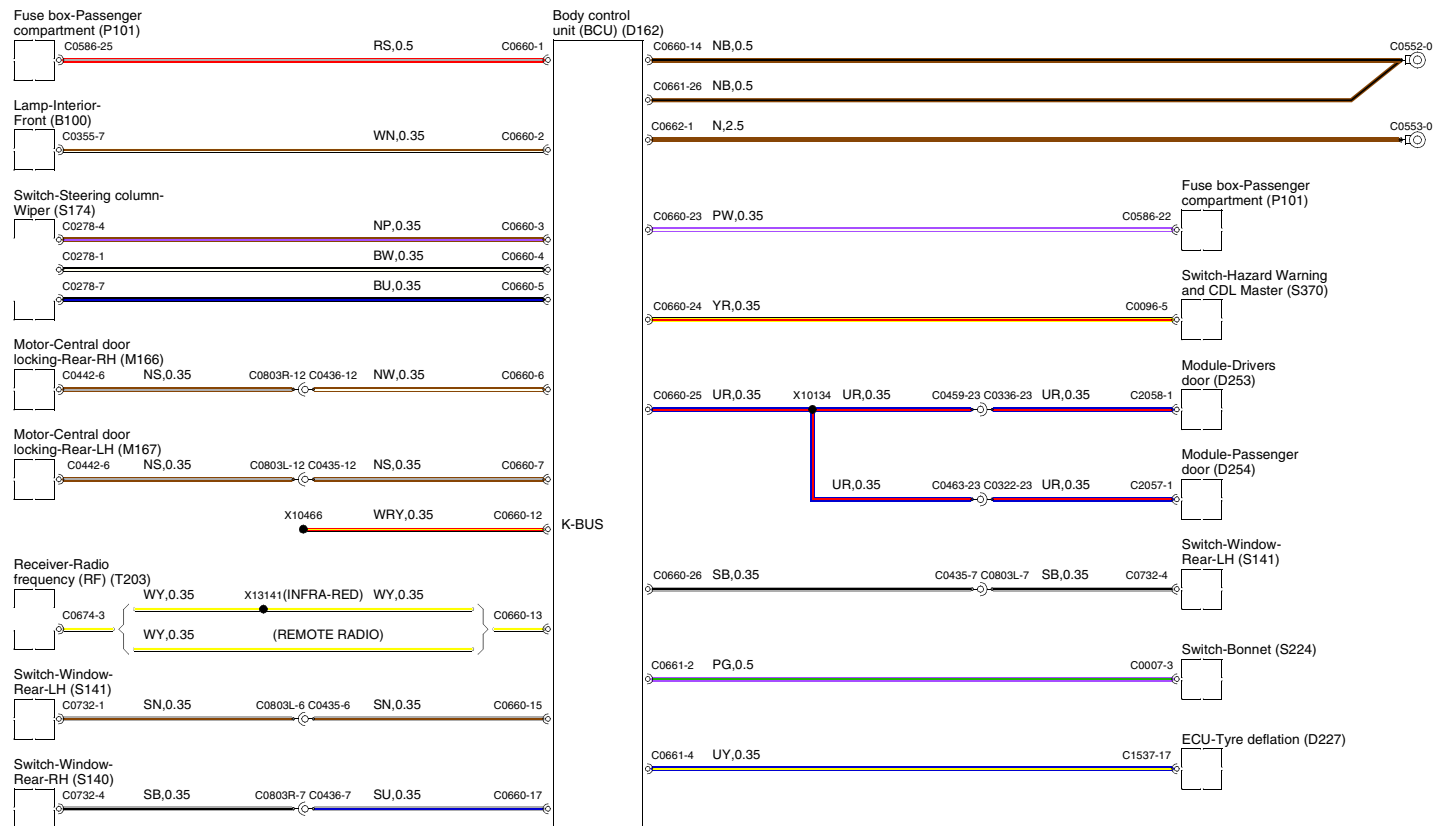



11 BODY CONTROL UNIT

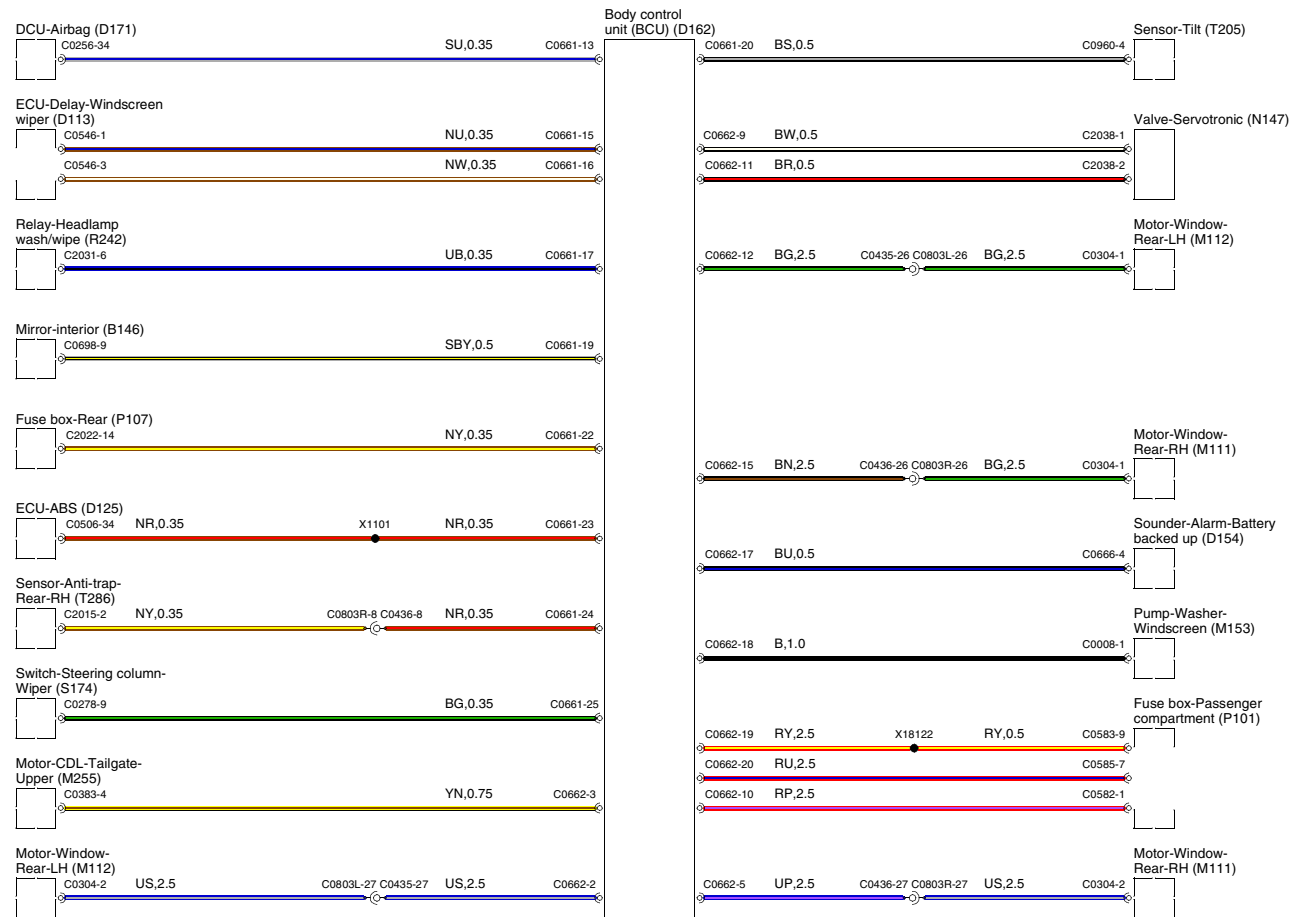



11 BODY CONTROL UNIT

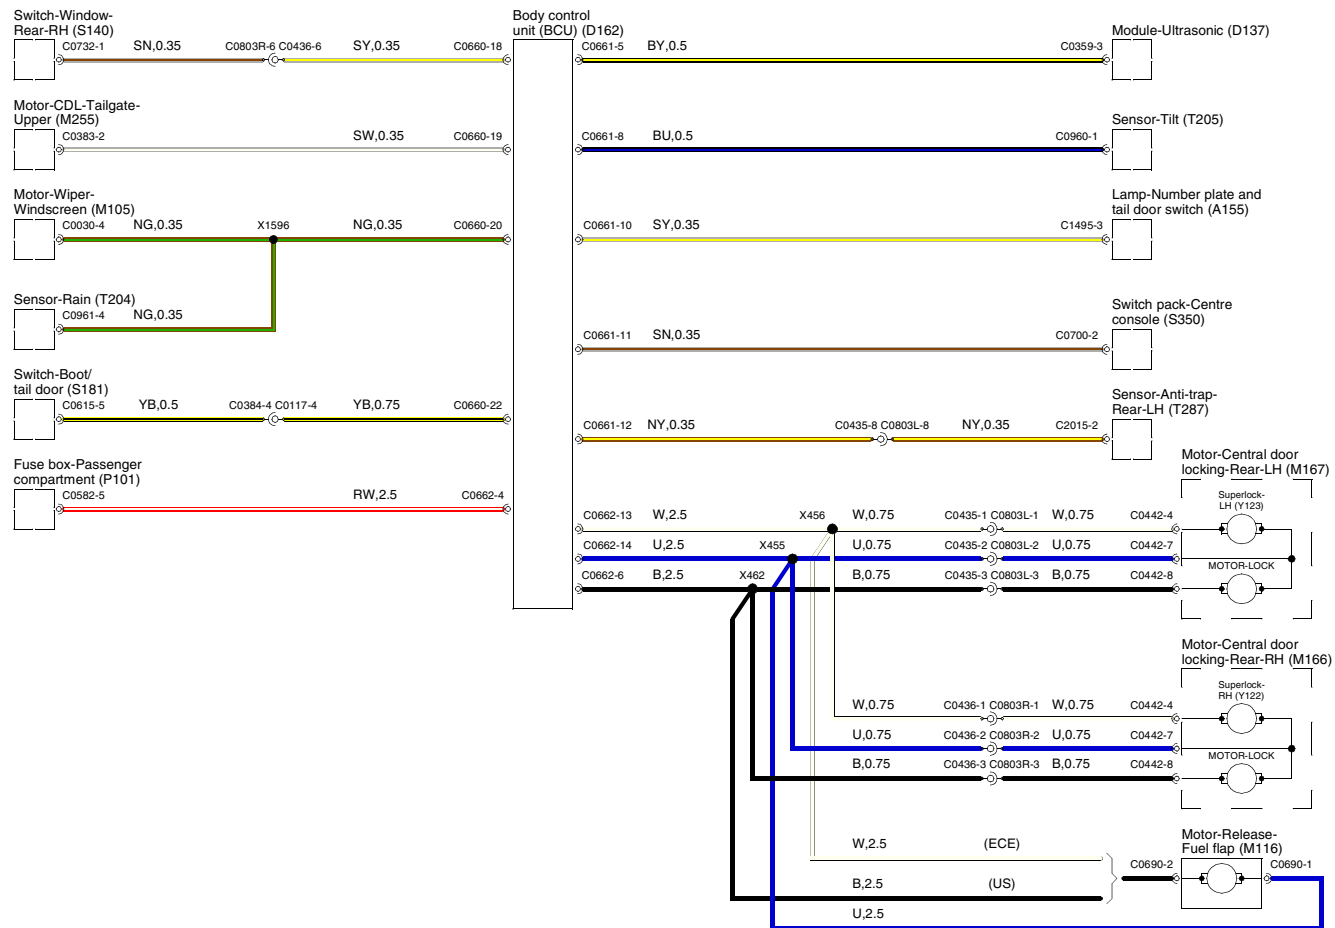


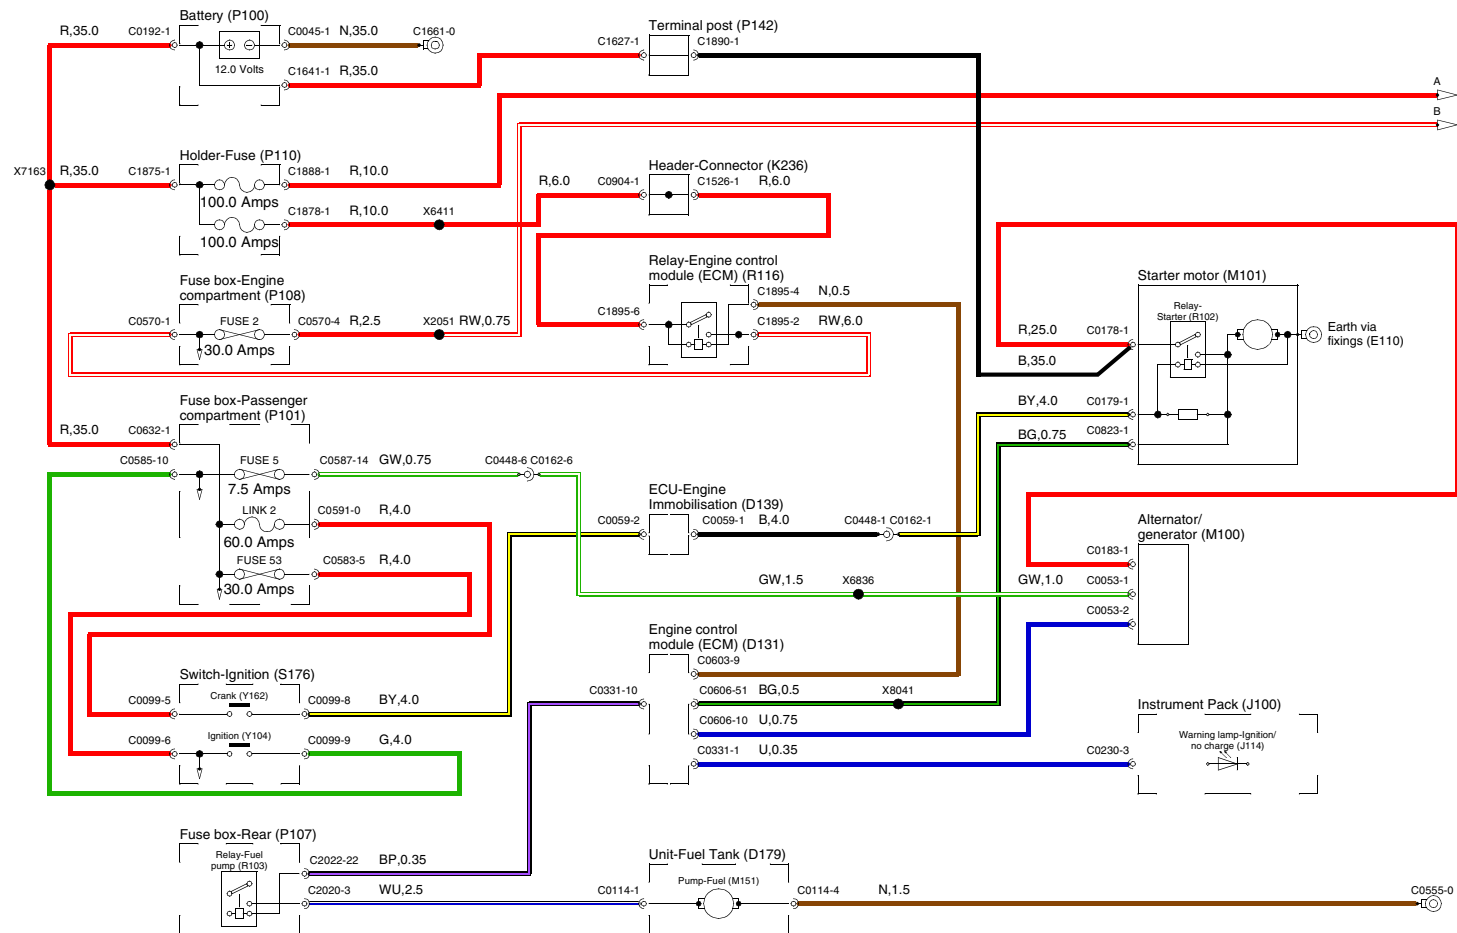


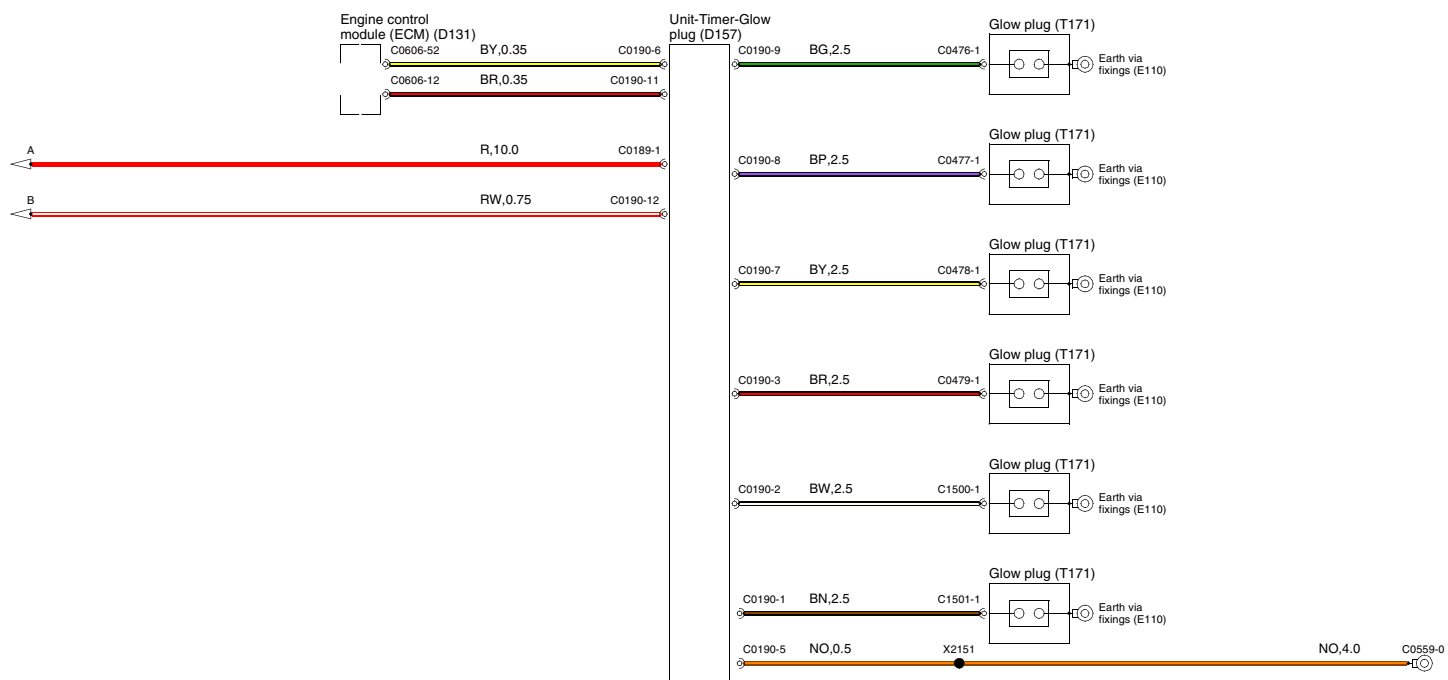


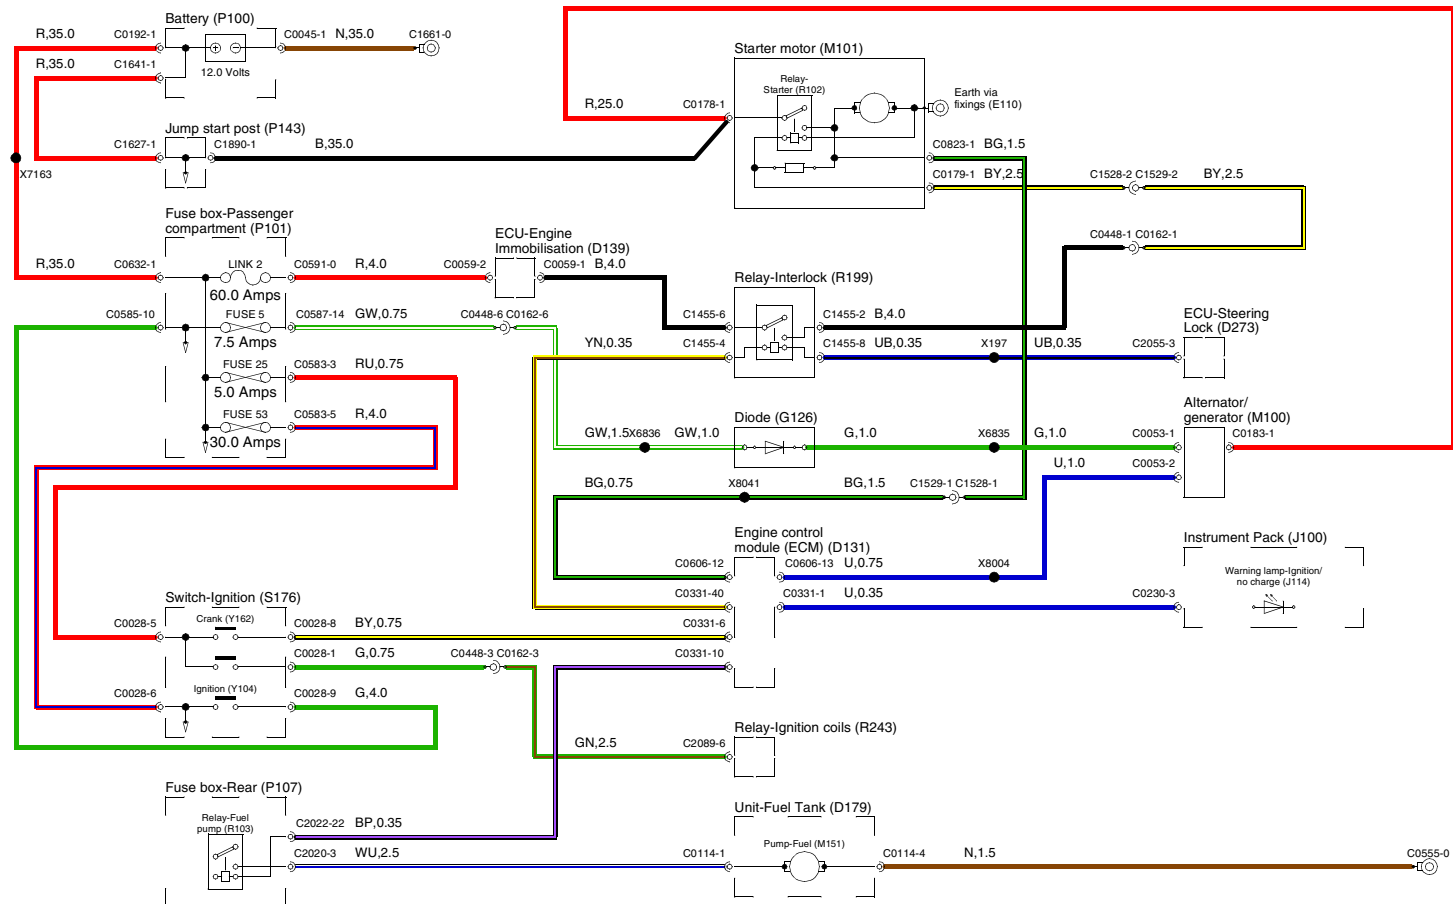


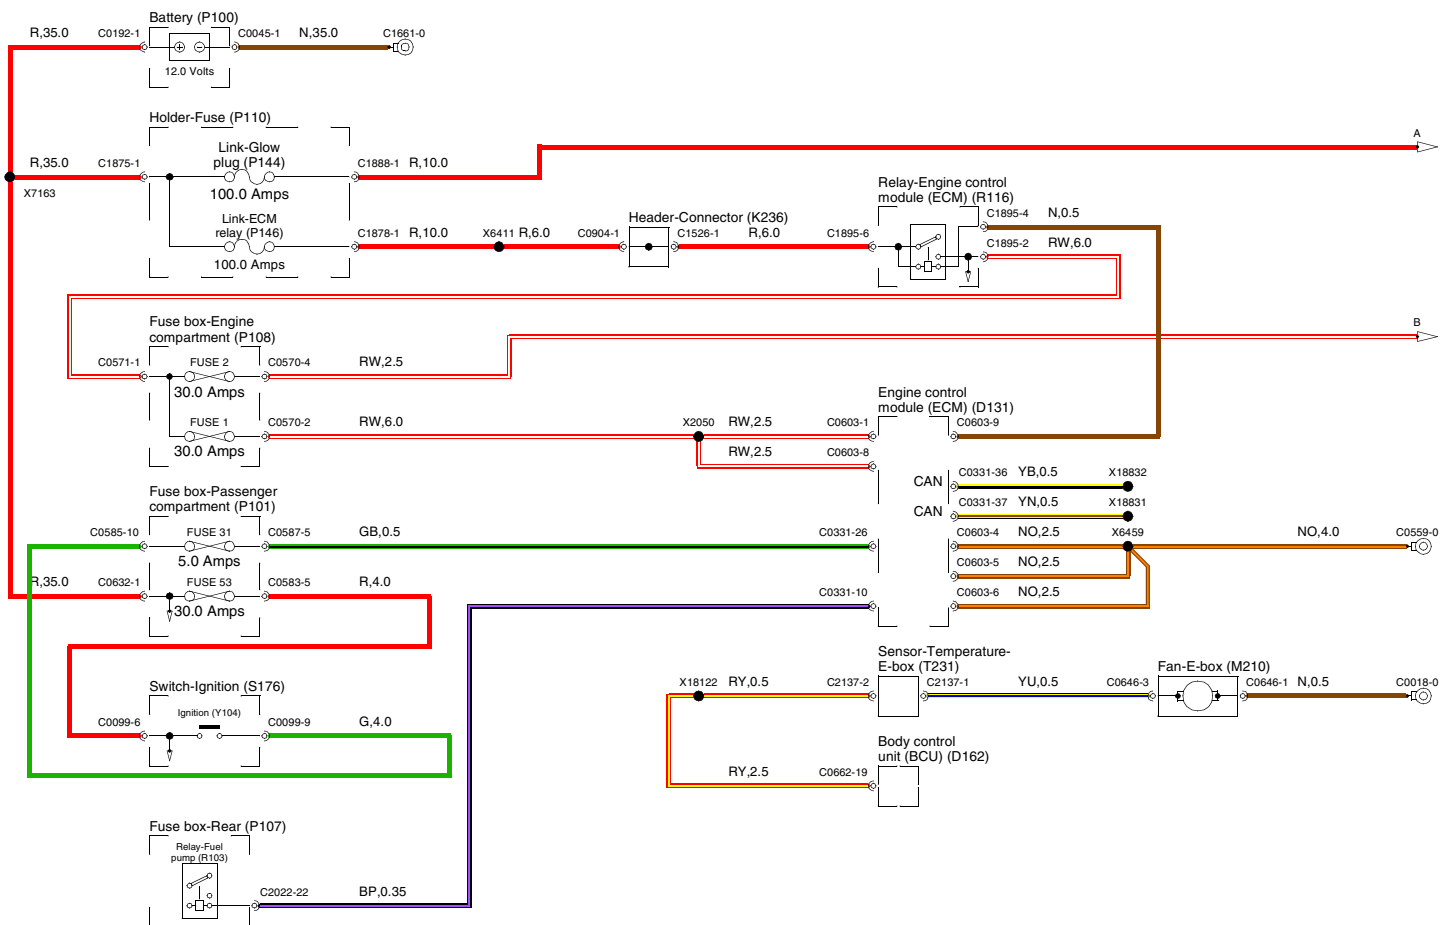


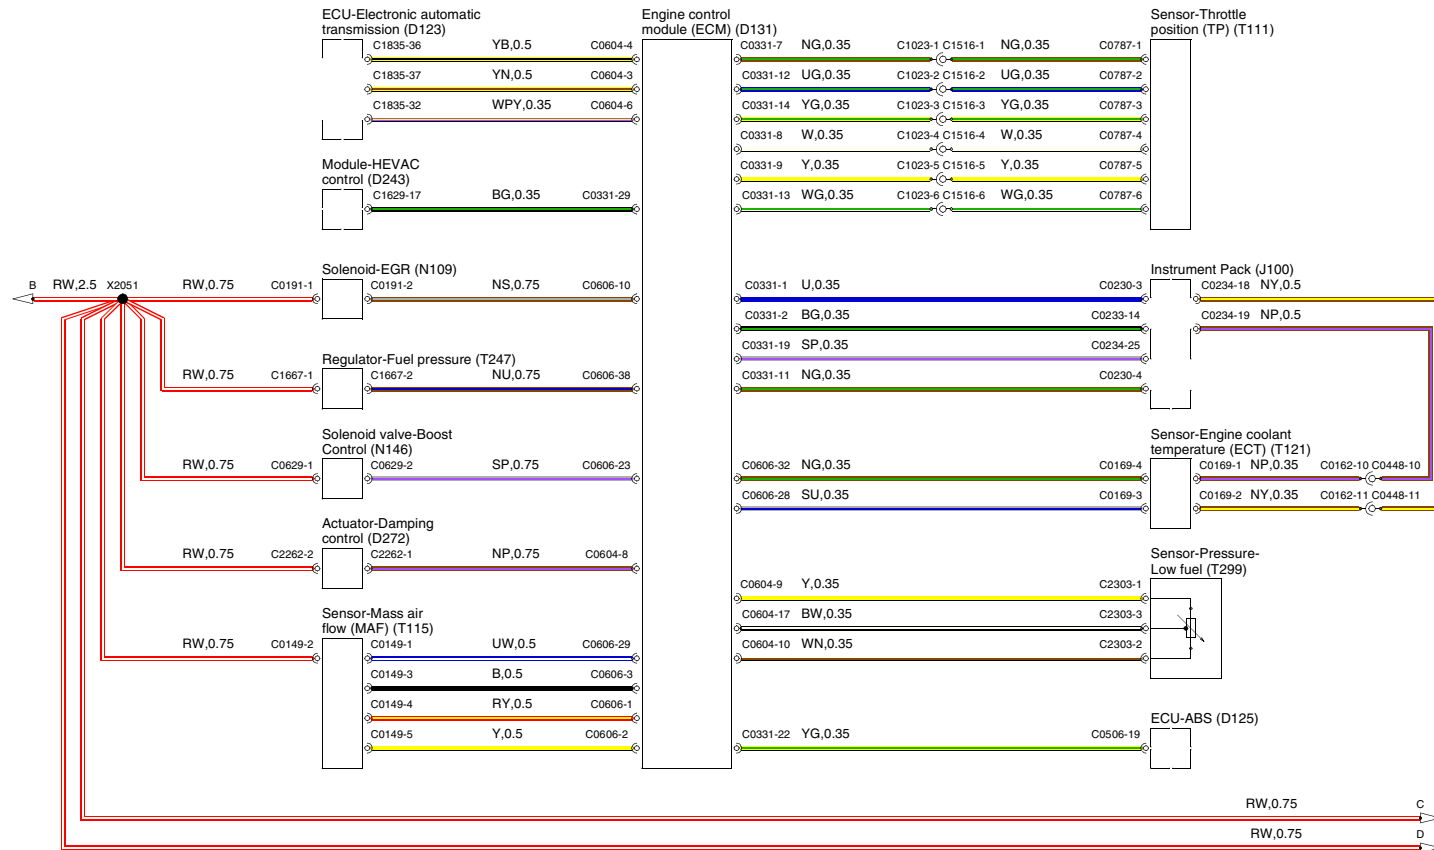


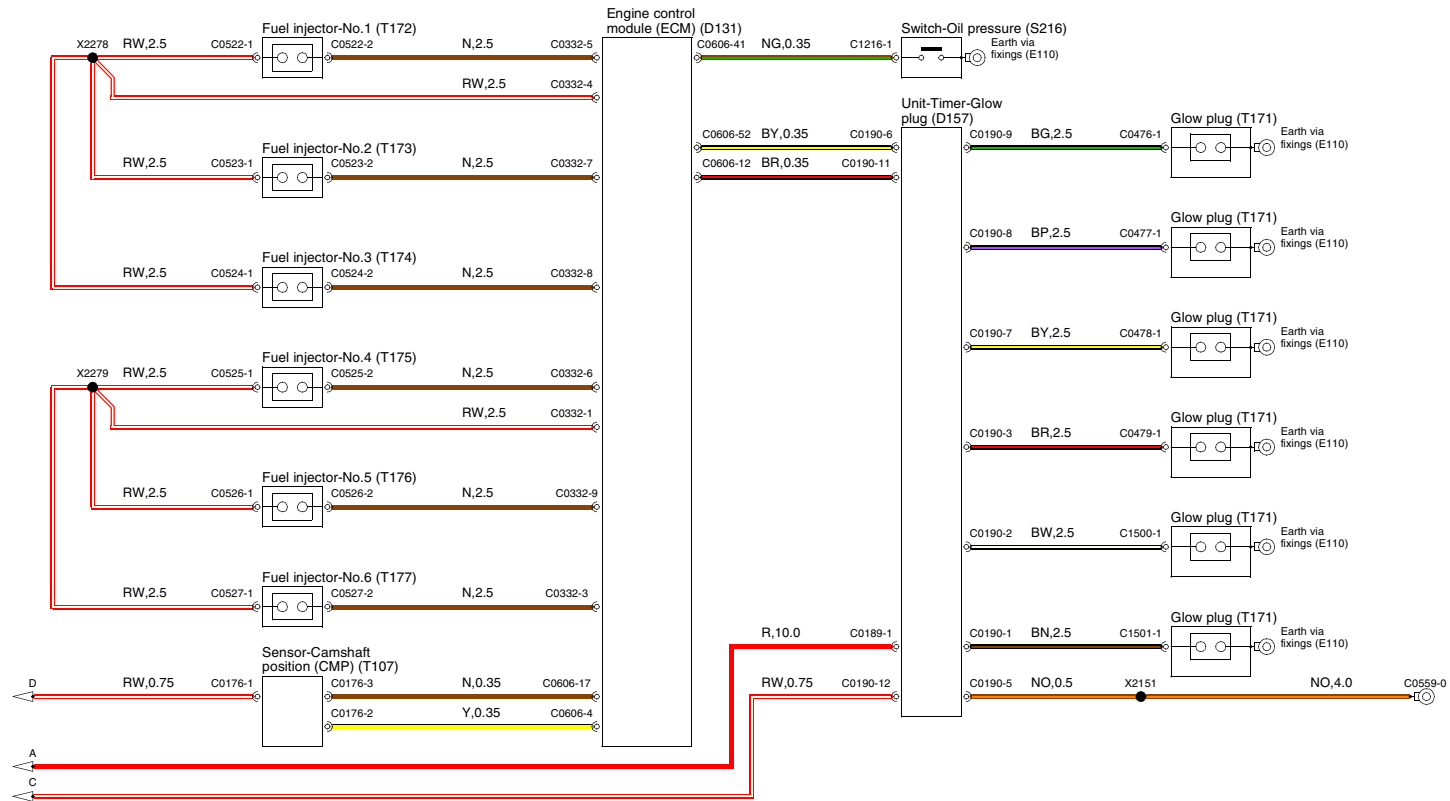


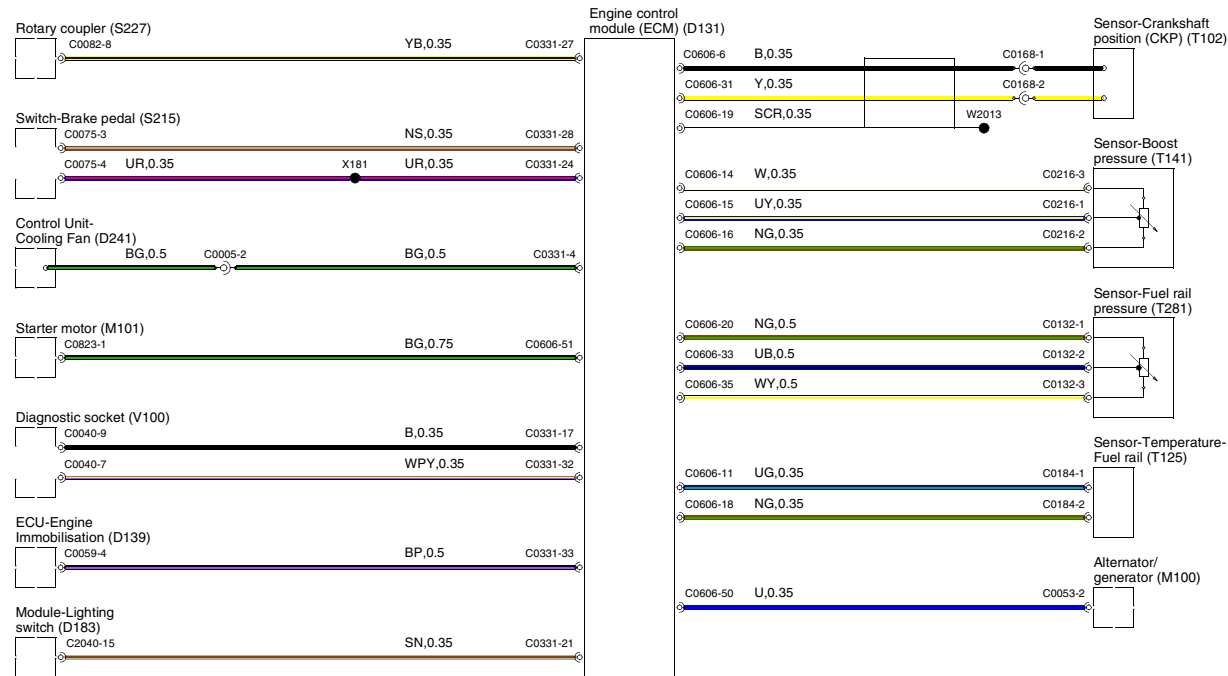


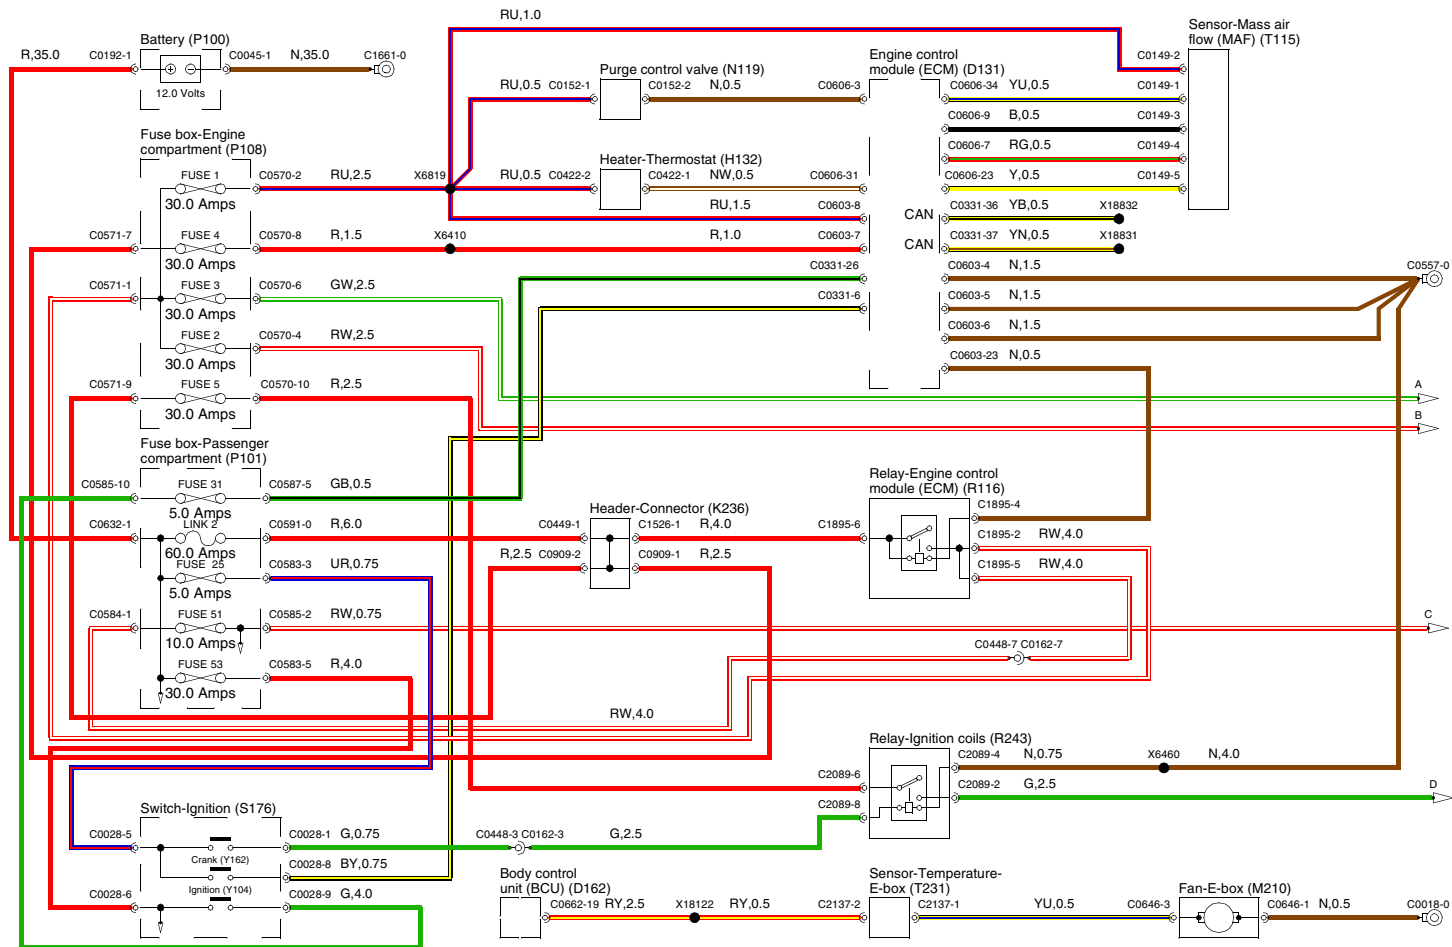

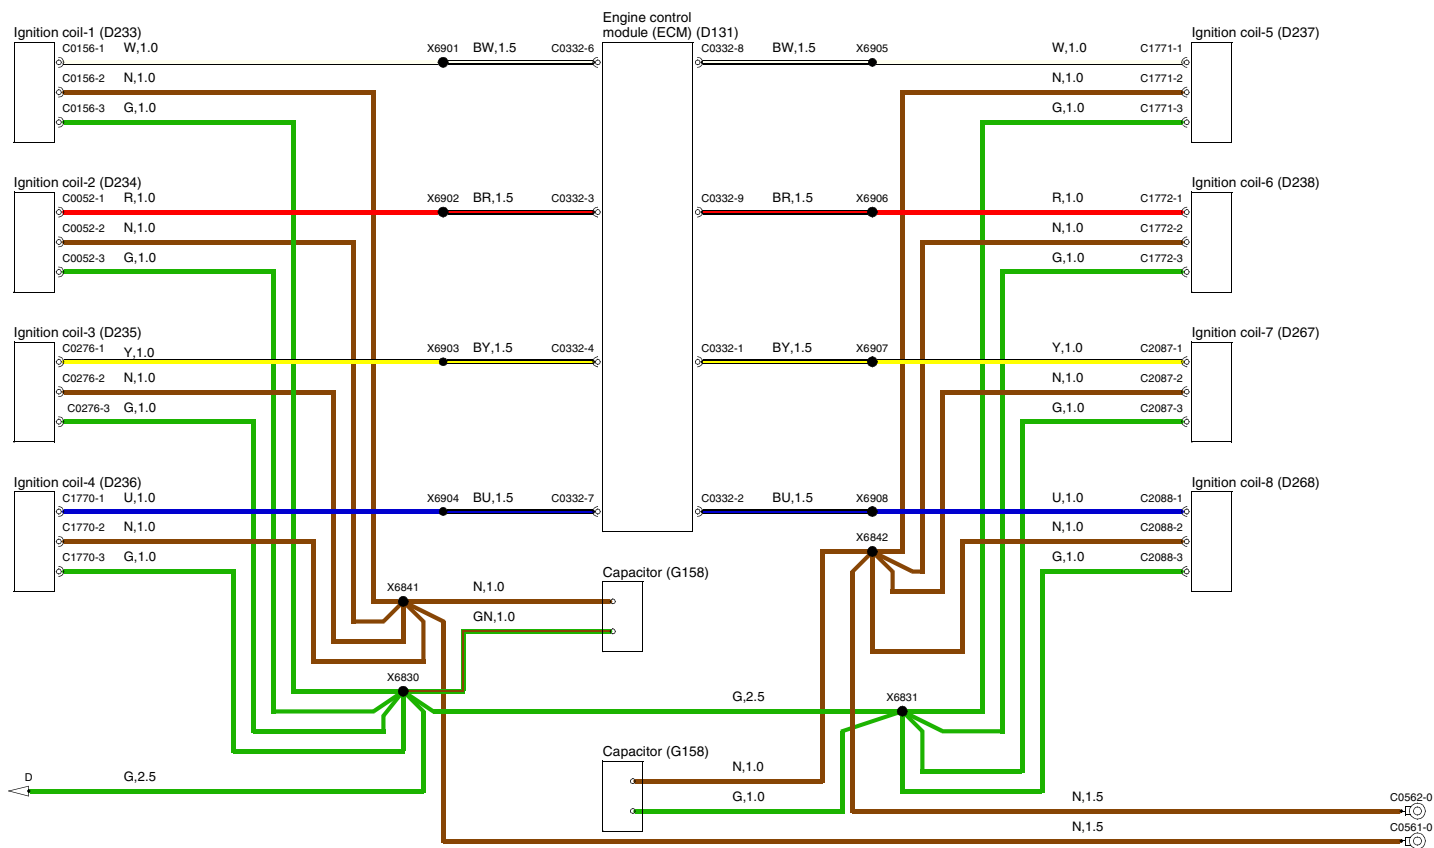


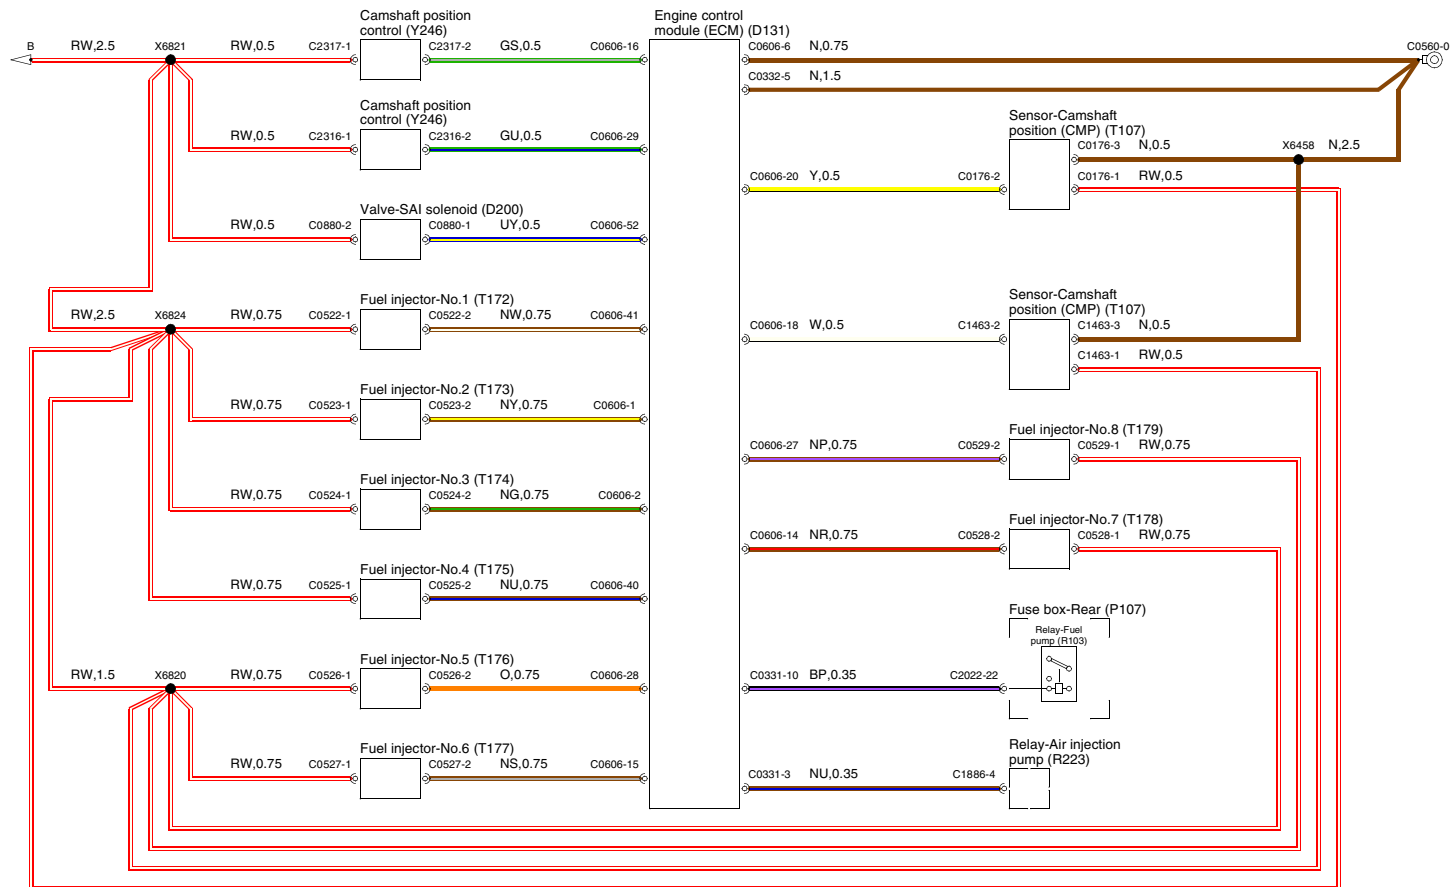

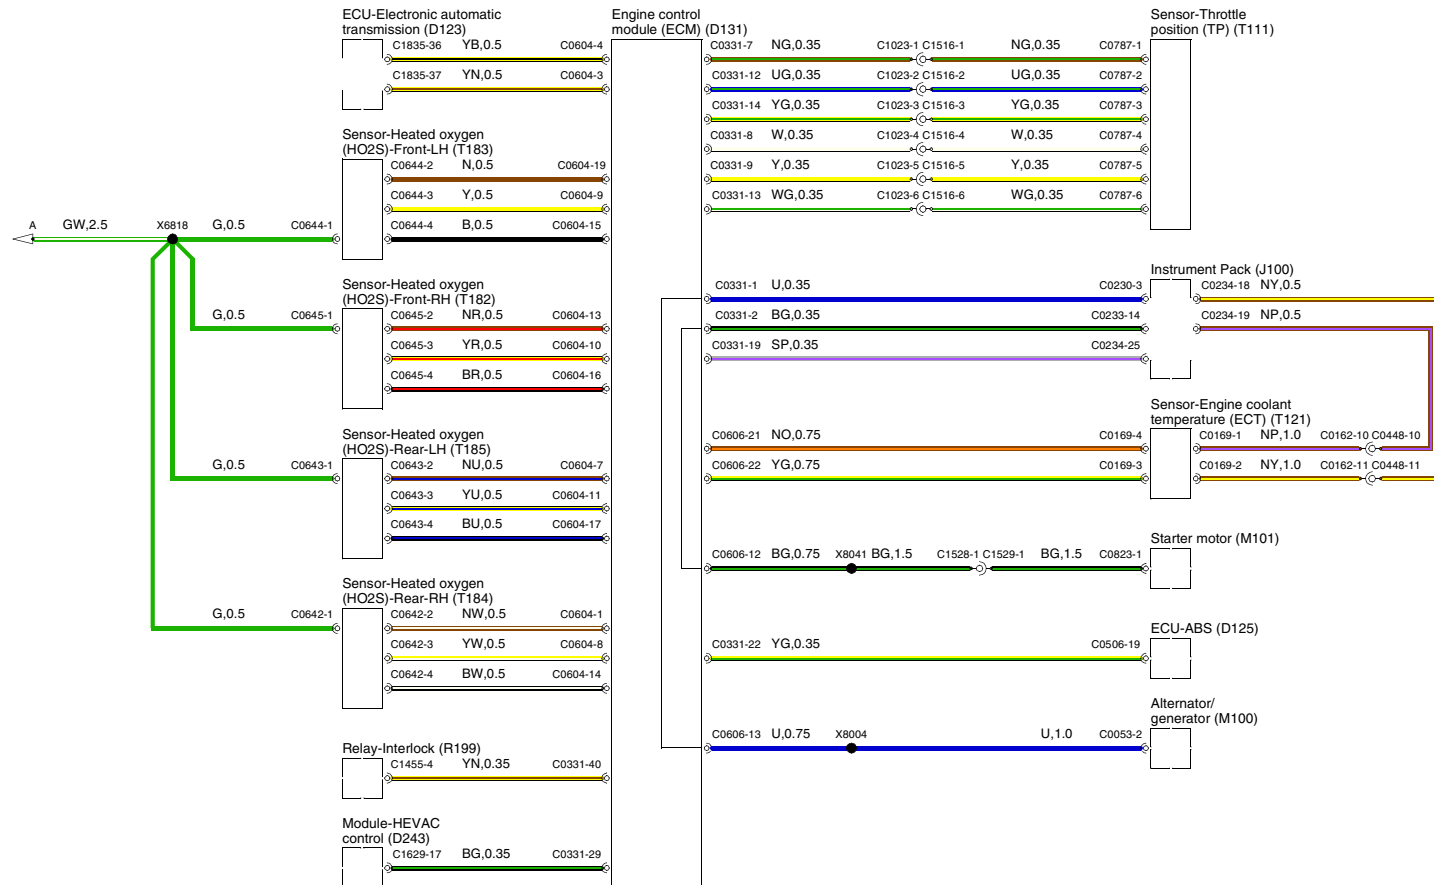


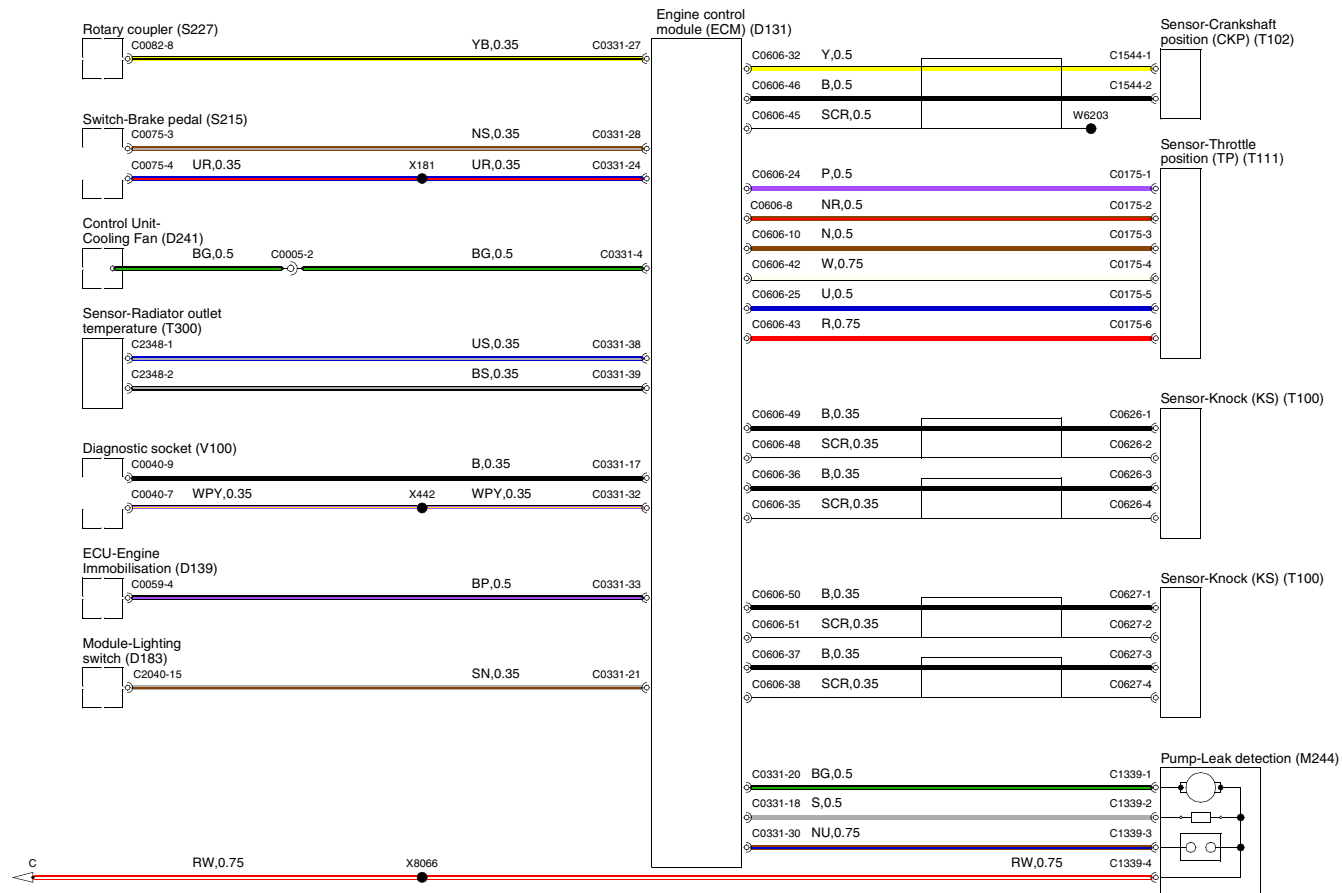


20 FUEL PUMP

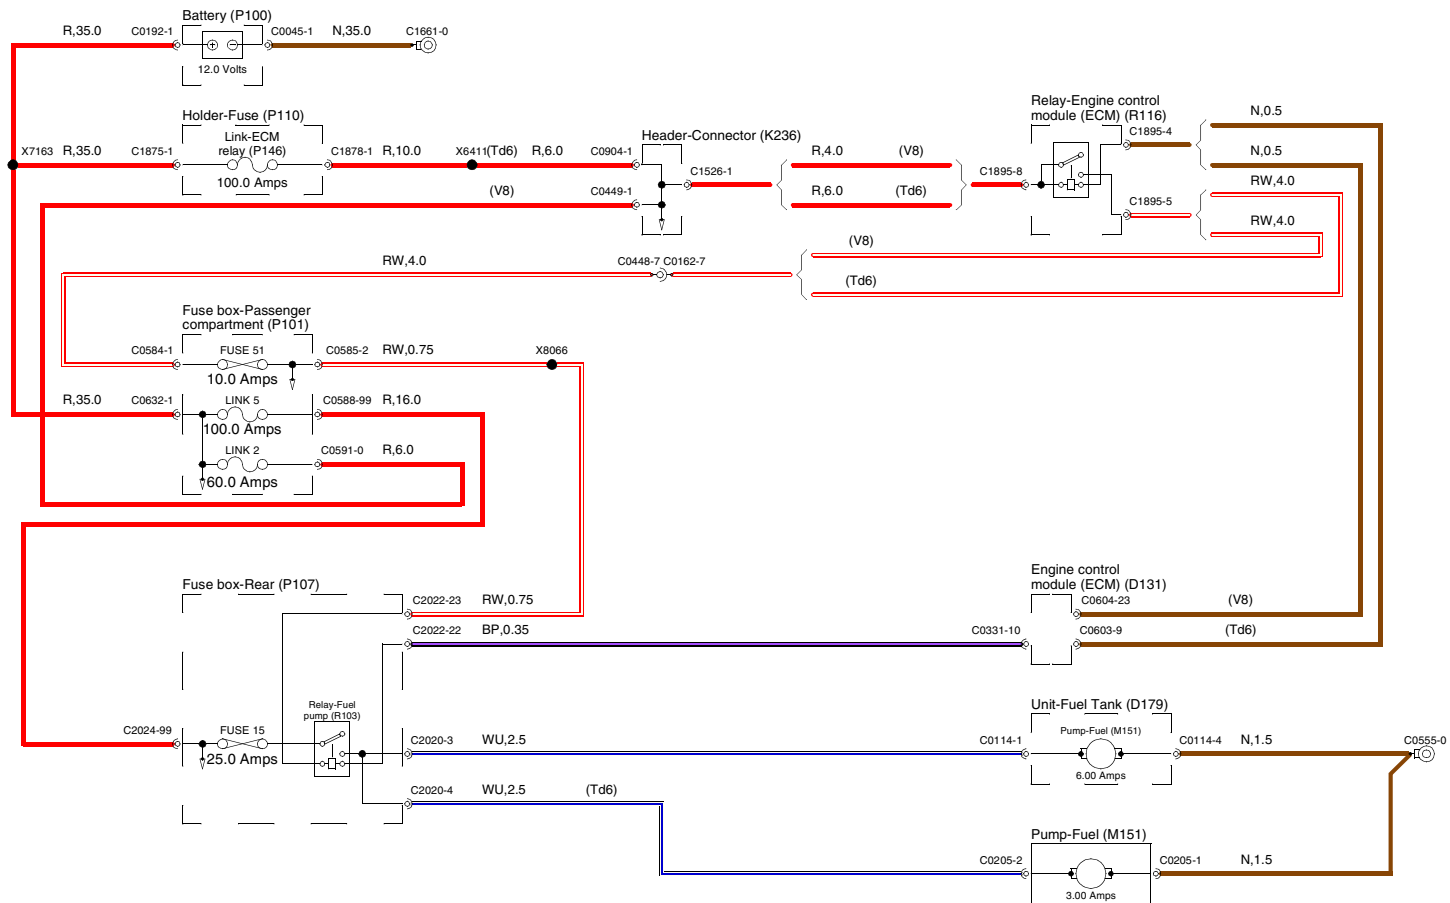


20 SECONDARY AIR INJECTION

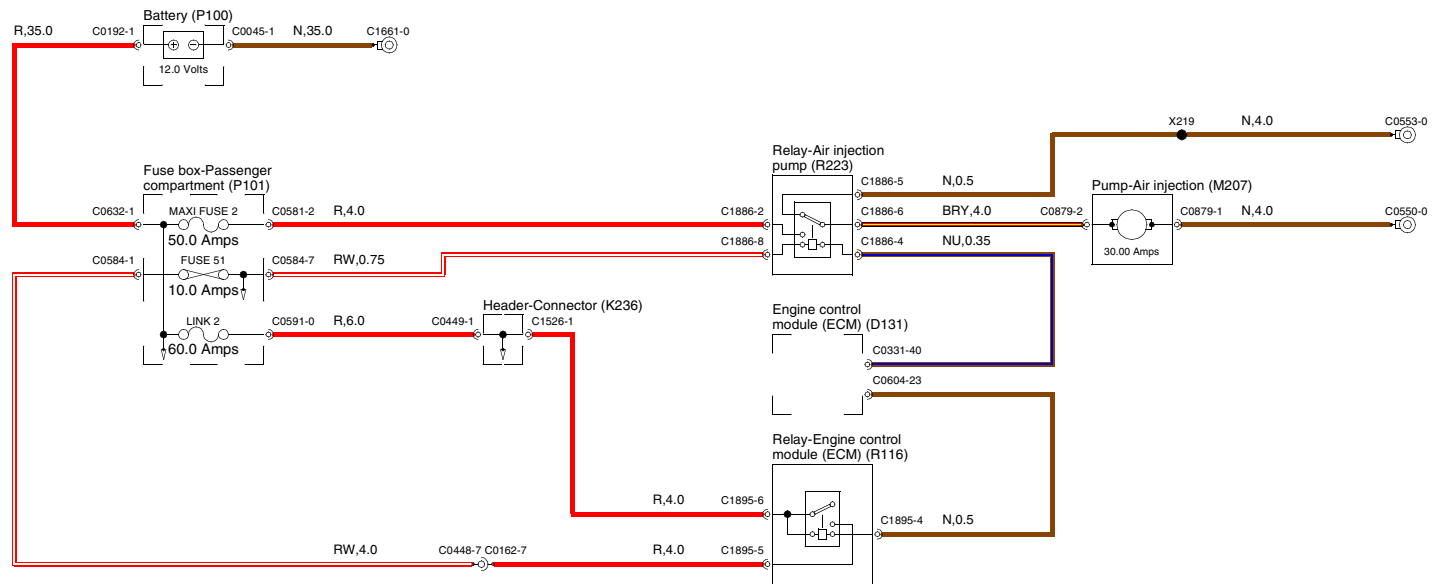



22 COOLING FANS

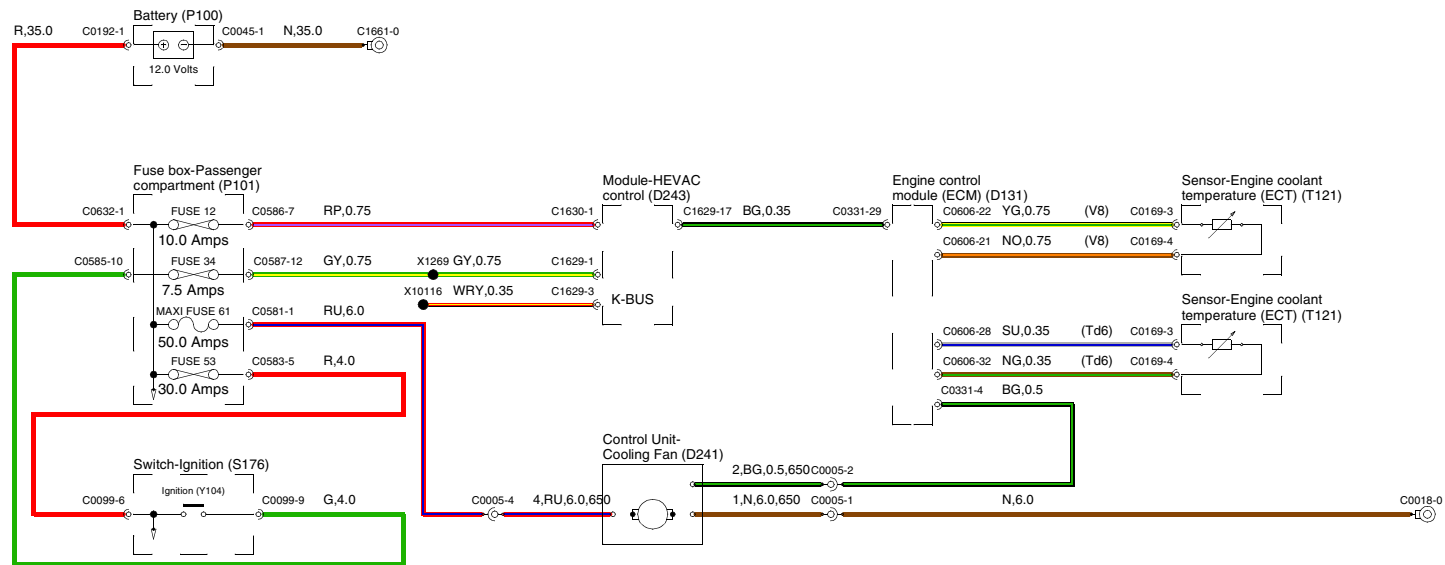


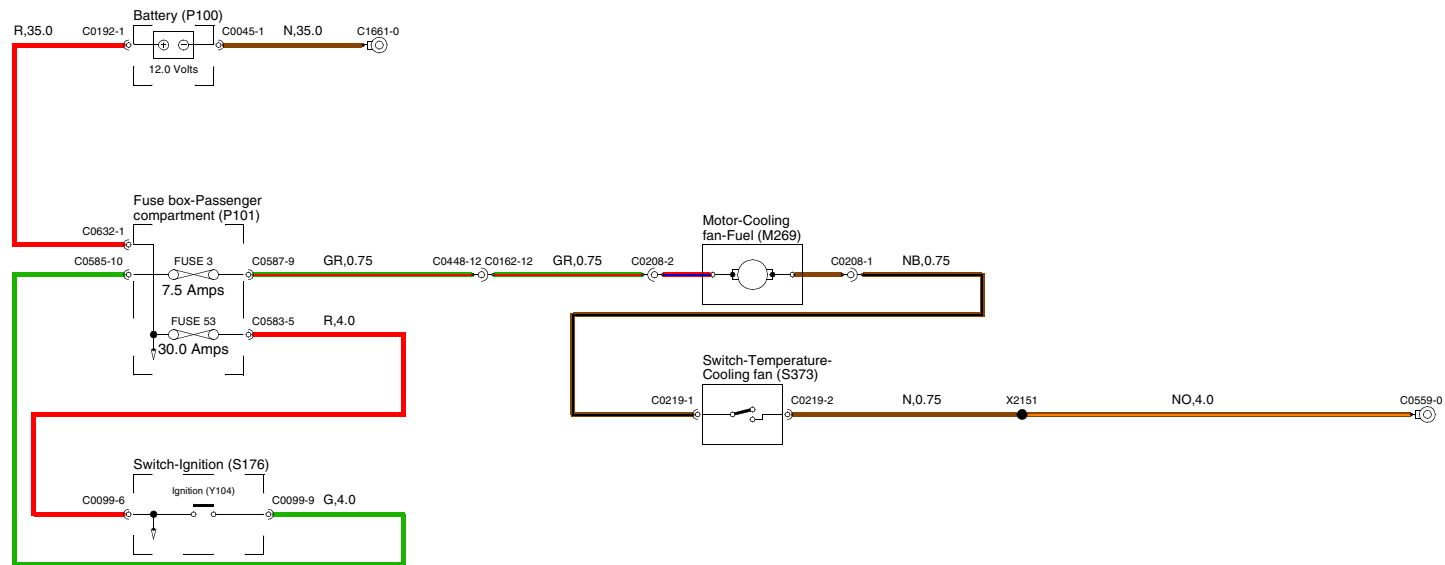



31 CRUISE CONTROL

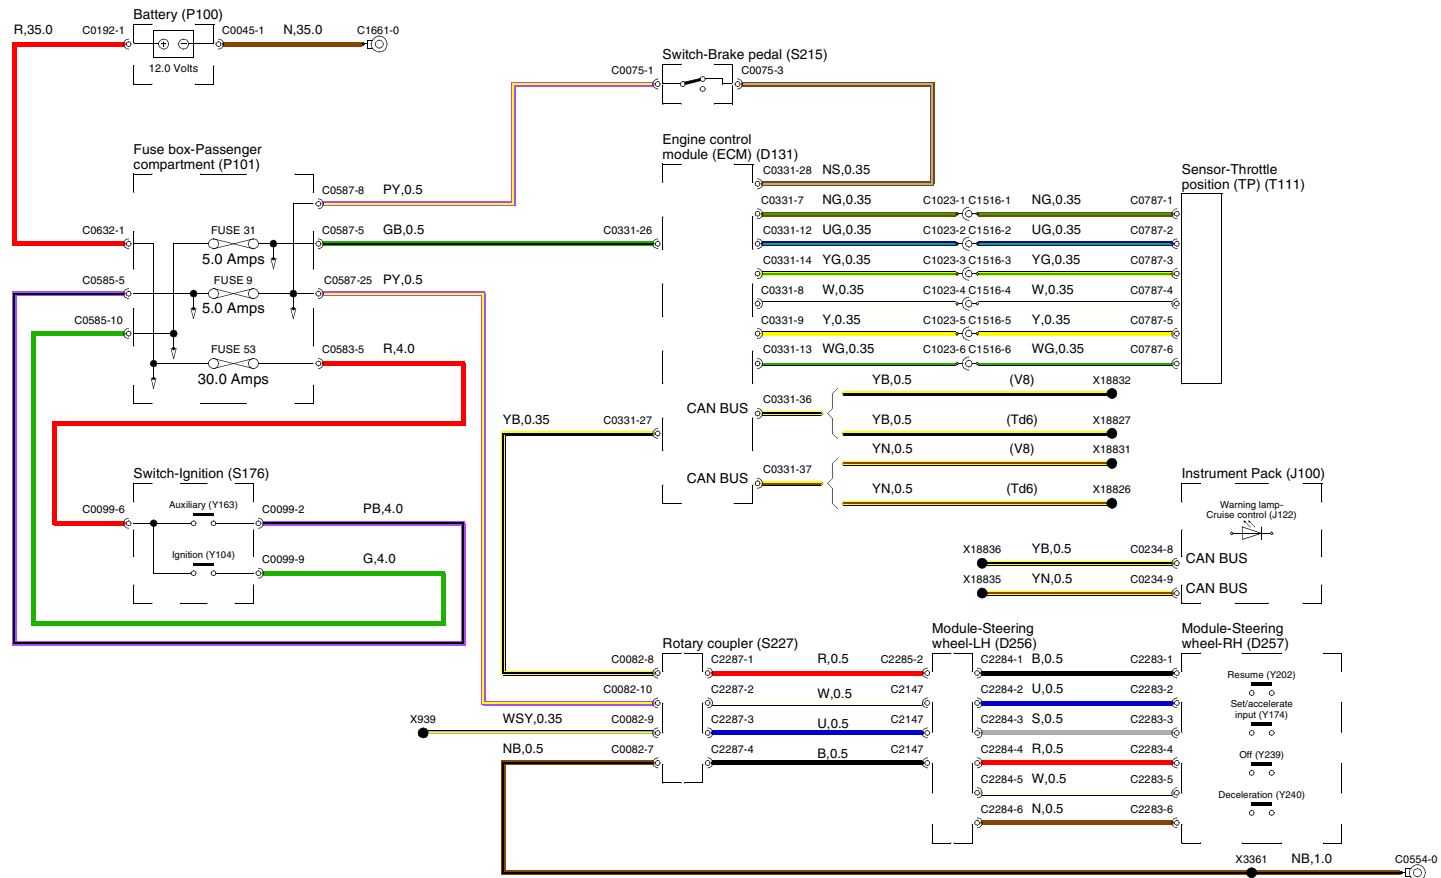

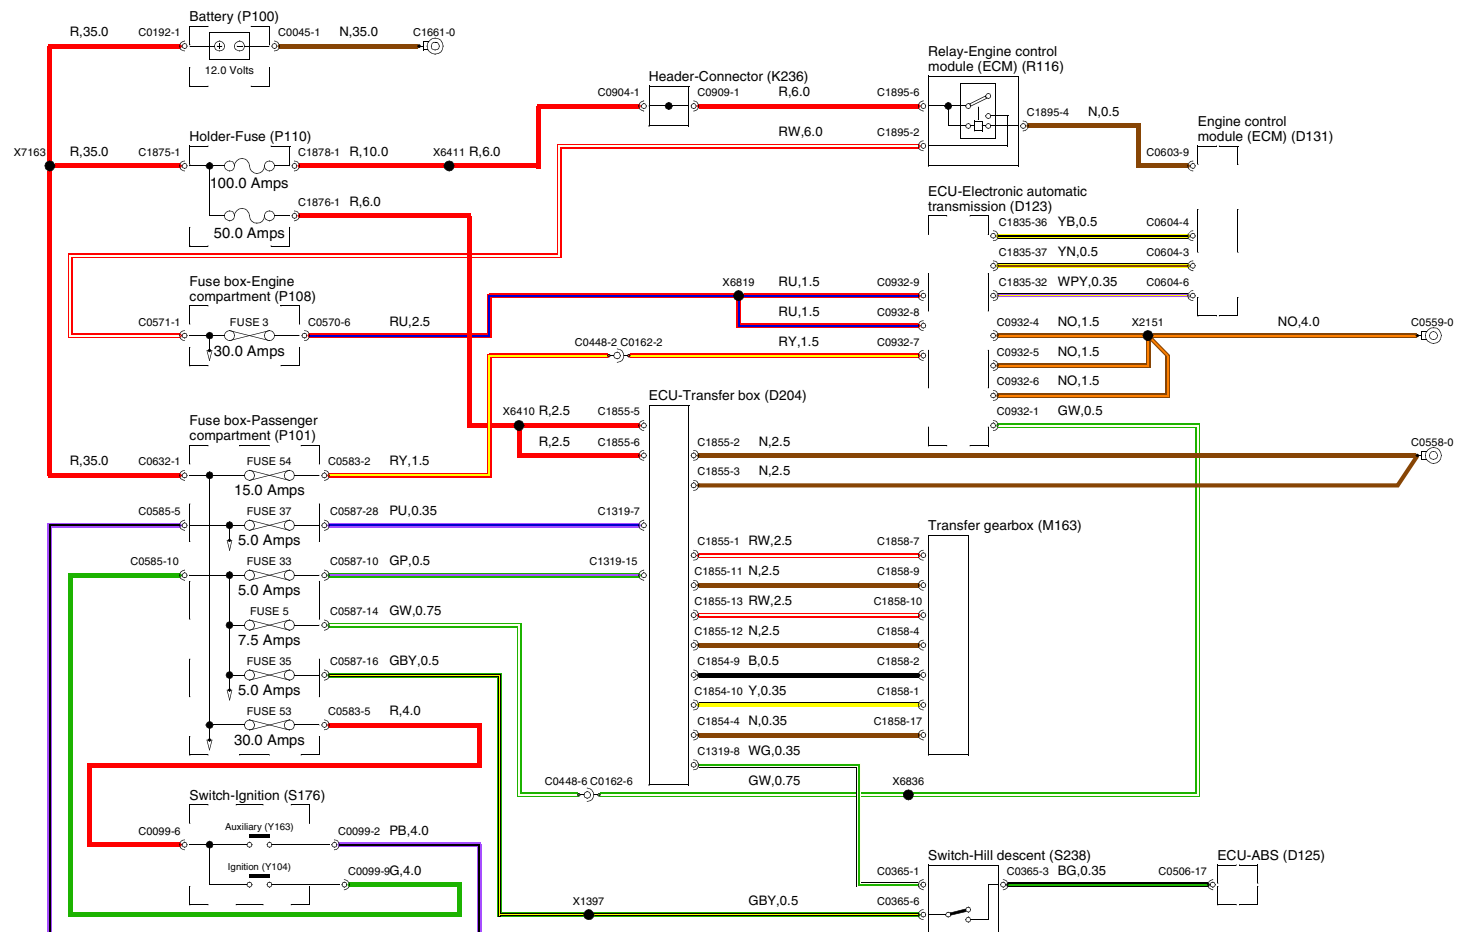


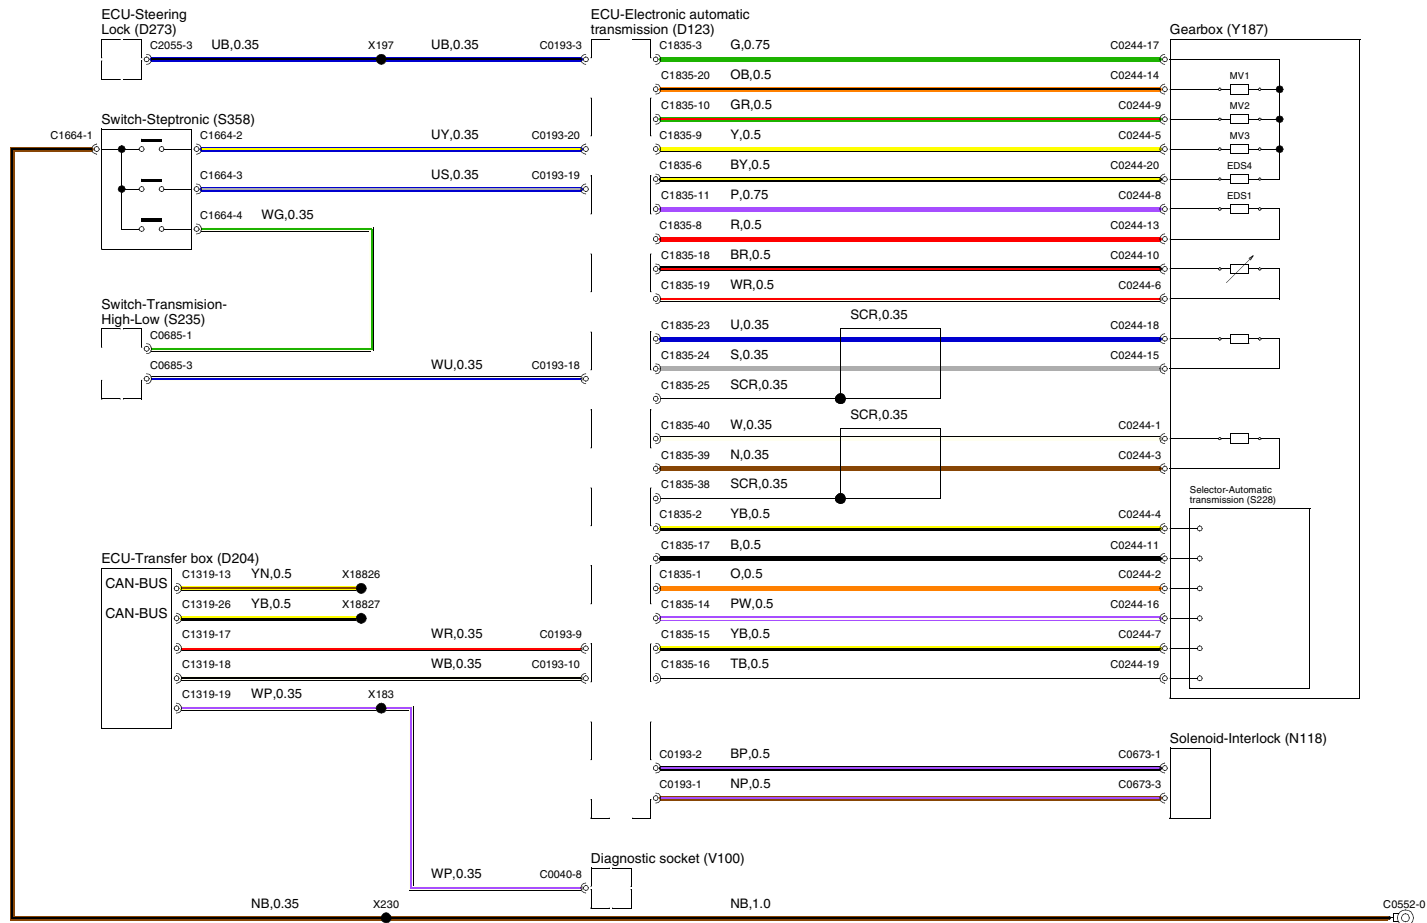


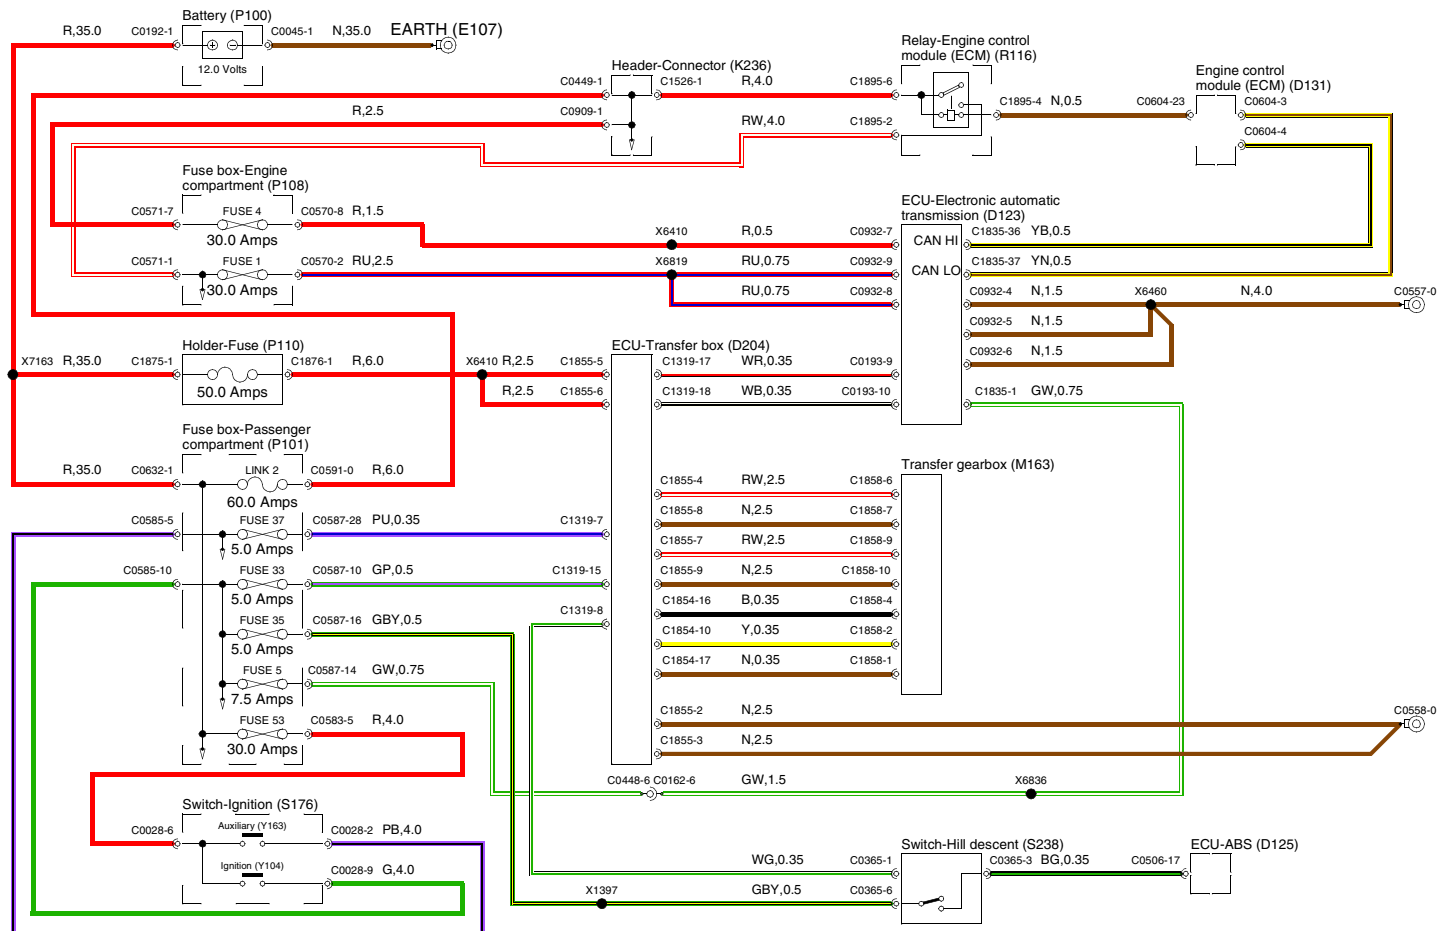

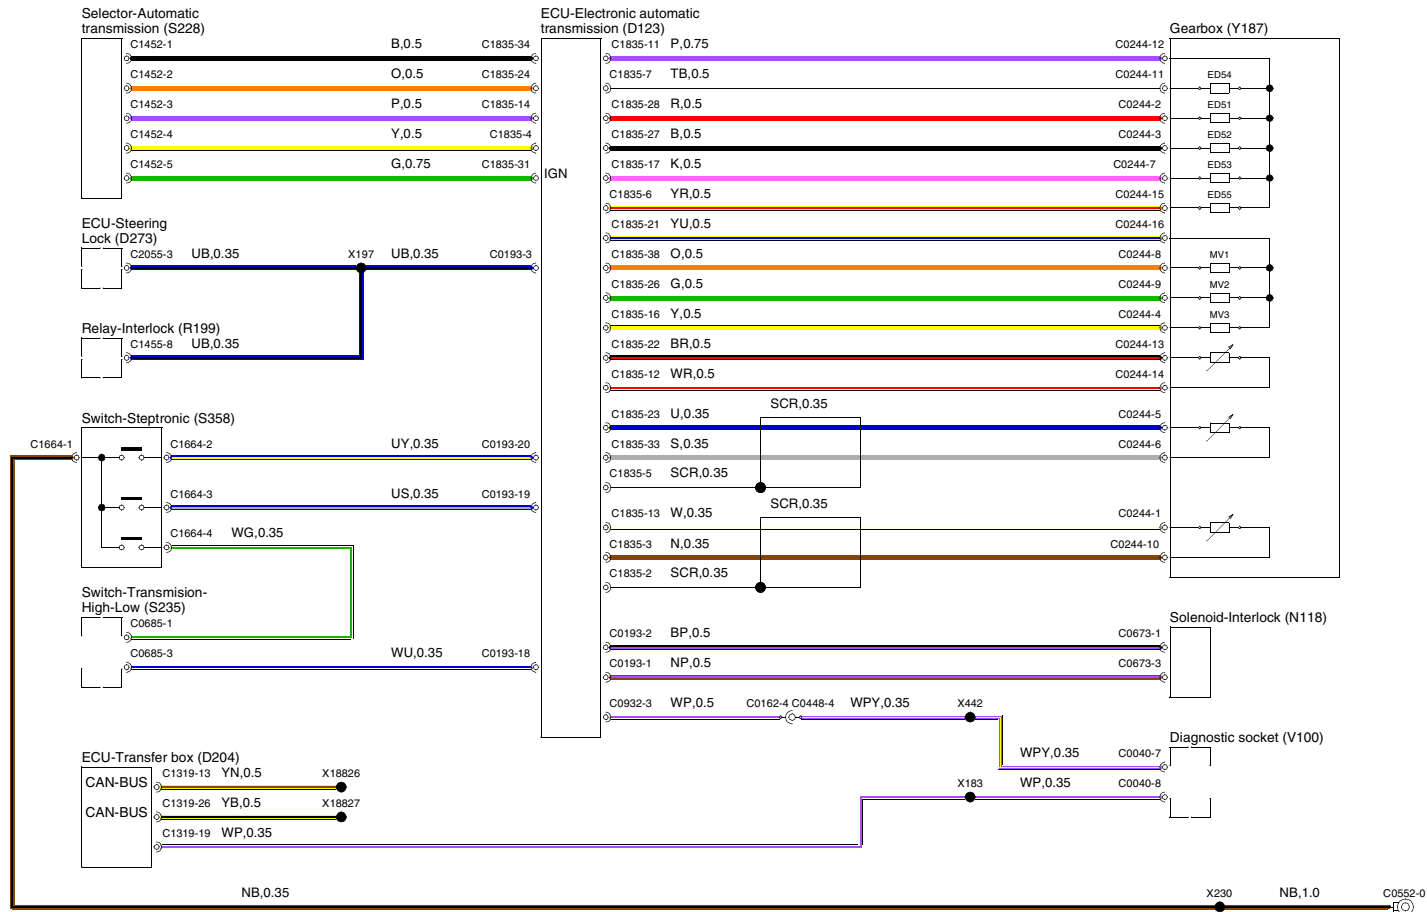


34 AIR SUSPENSION

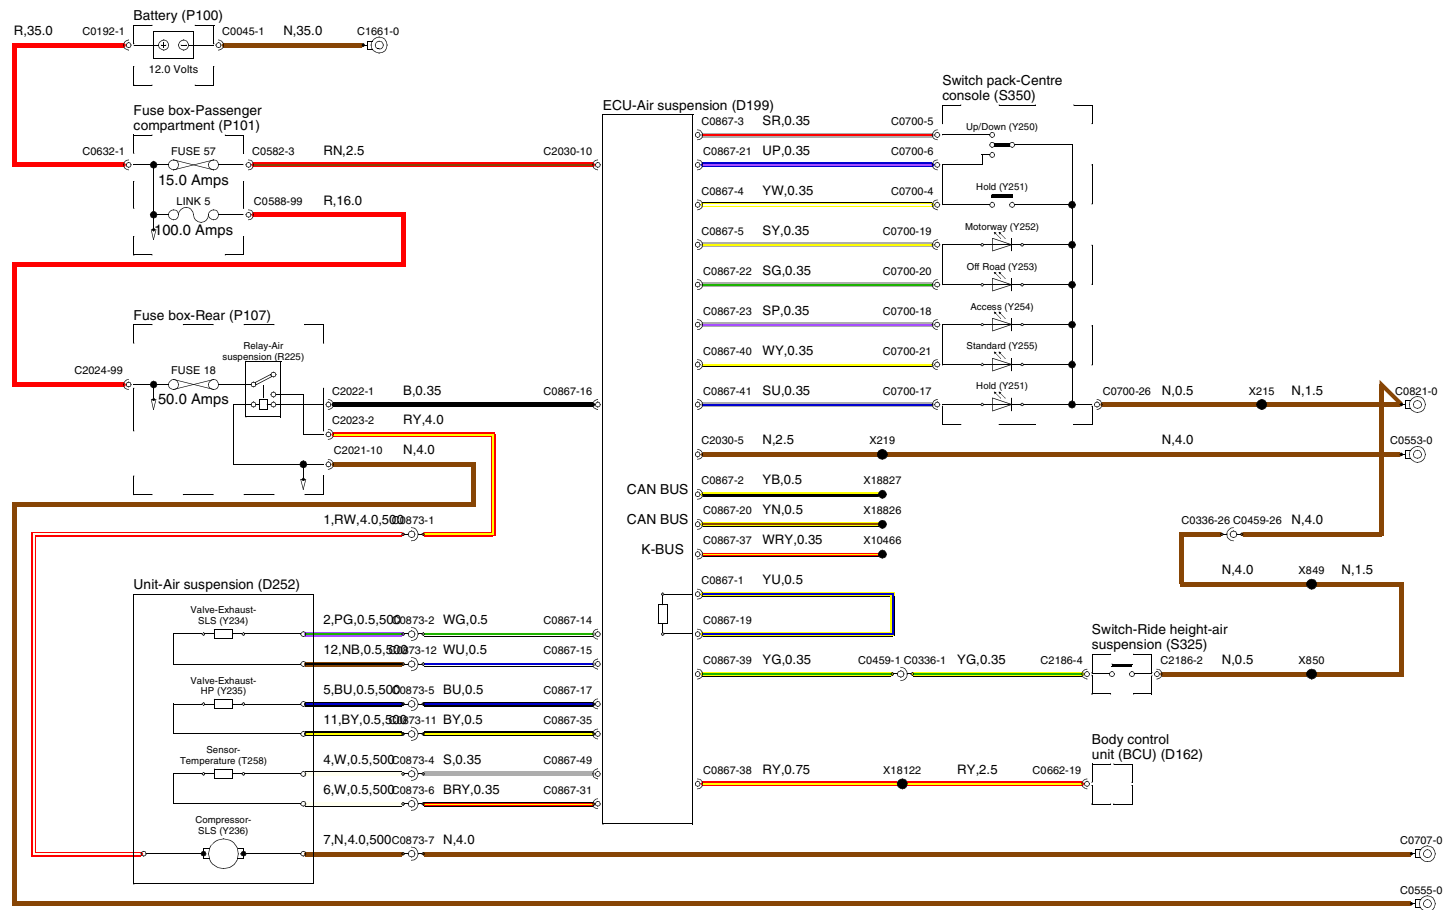


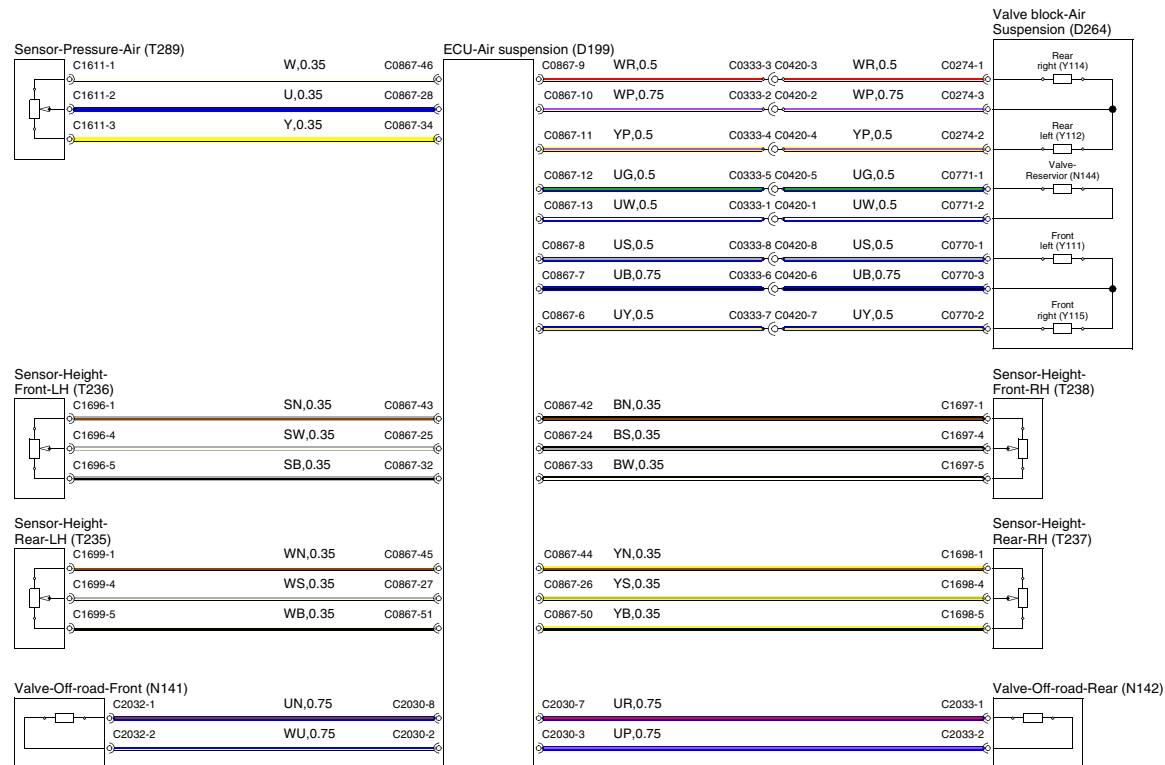



35 ANTI-LOCK BRAKING SYSTEM (ABS)

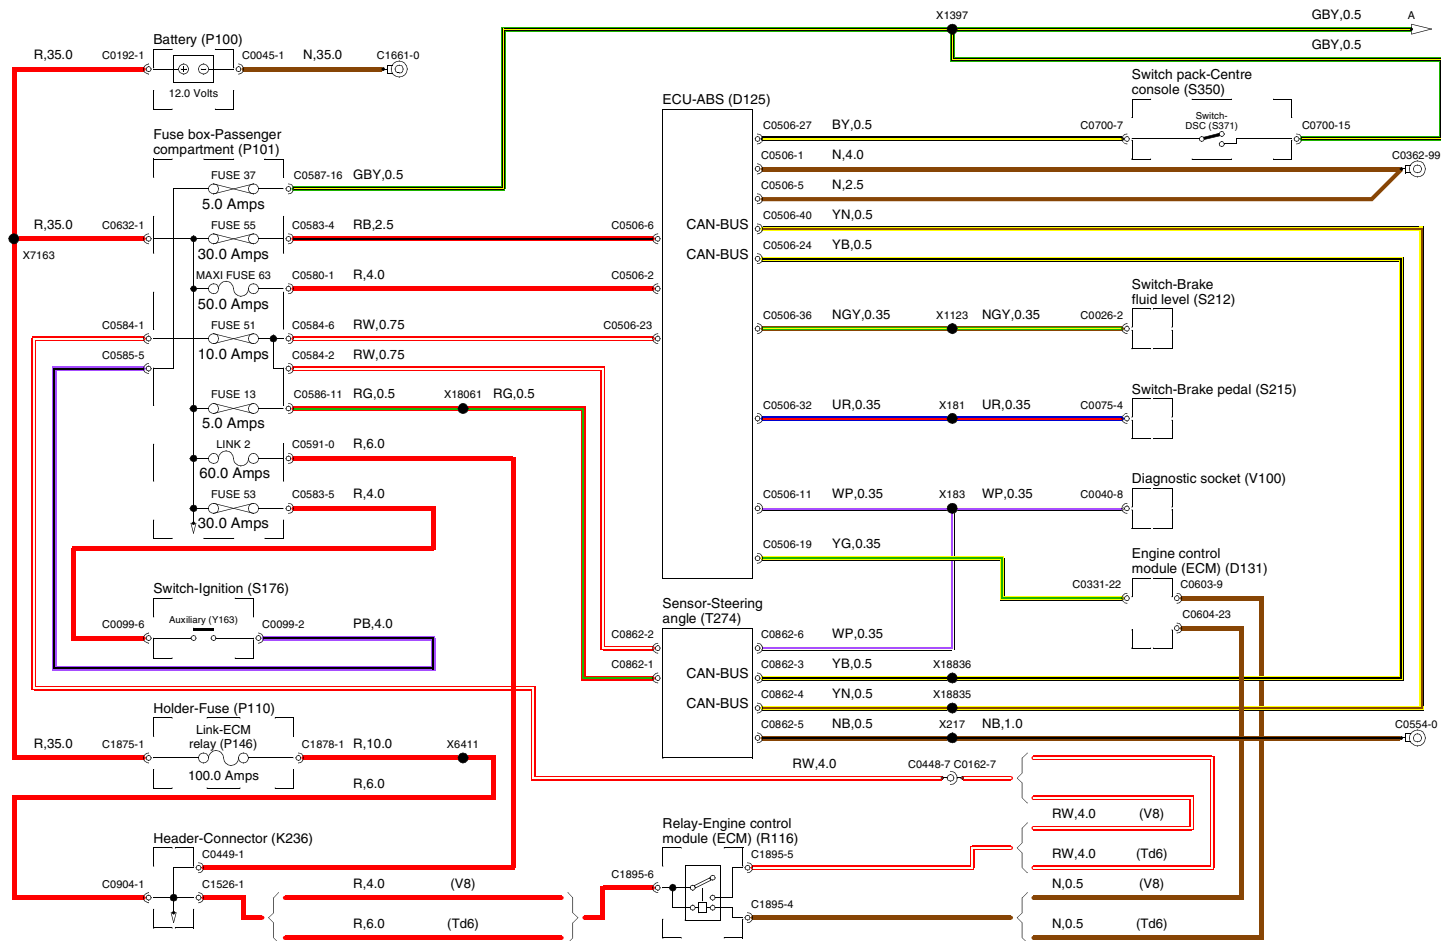



35 ANTI-LOCK BRAKING SYSTEM (ABS)

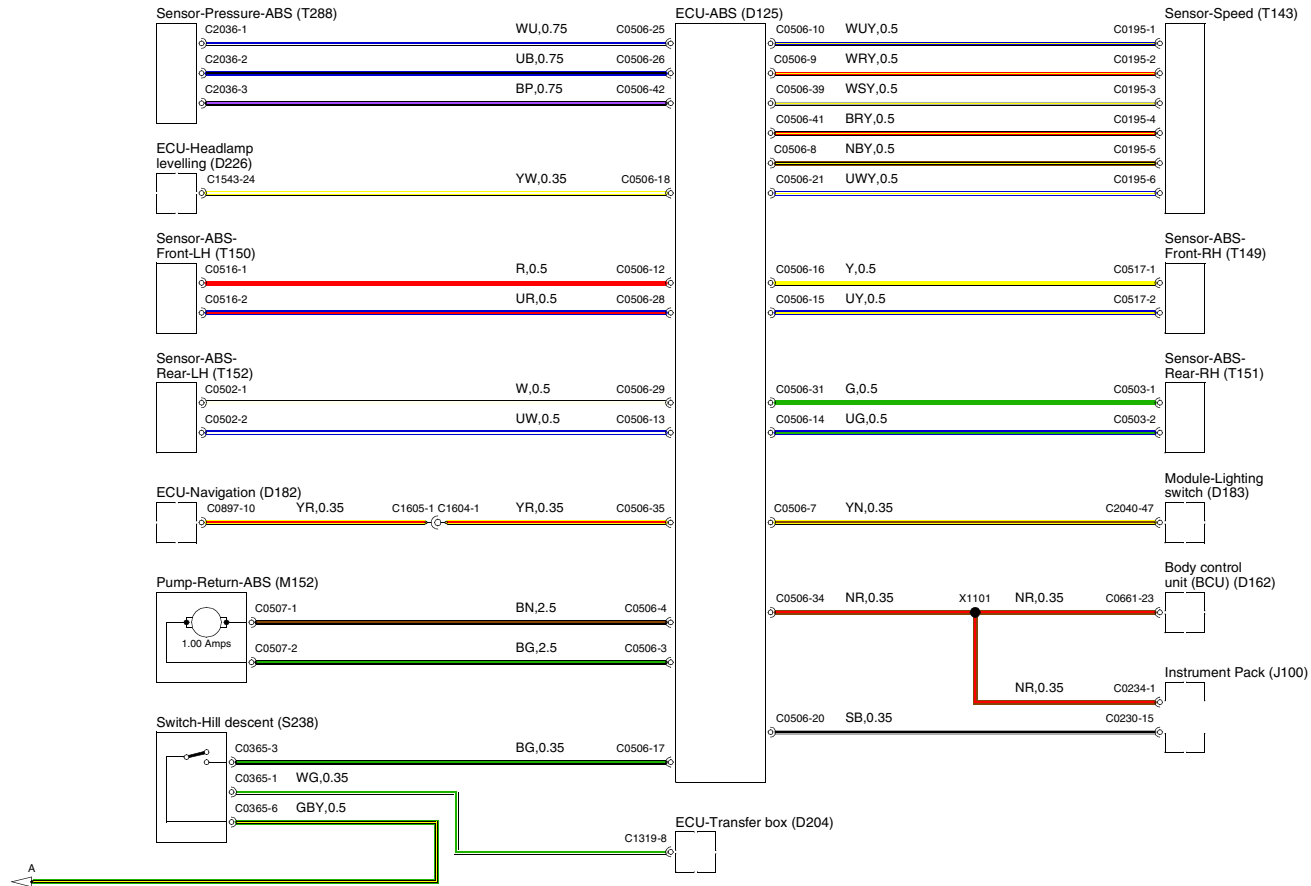


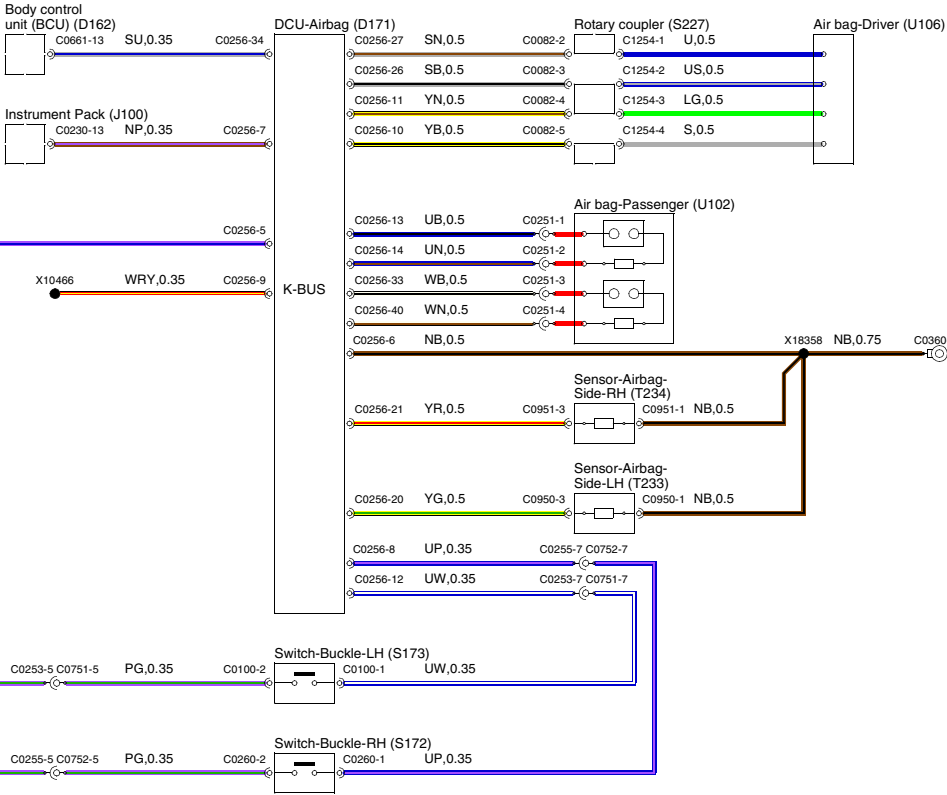


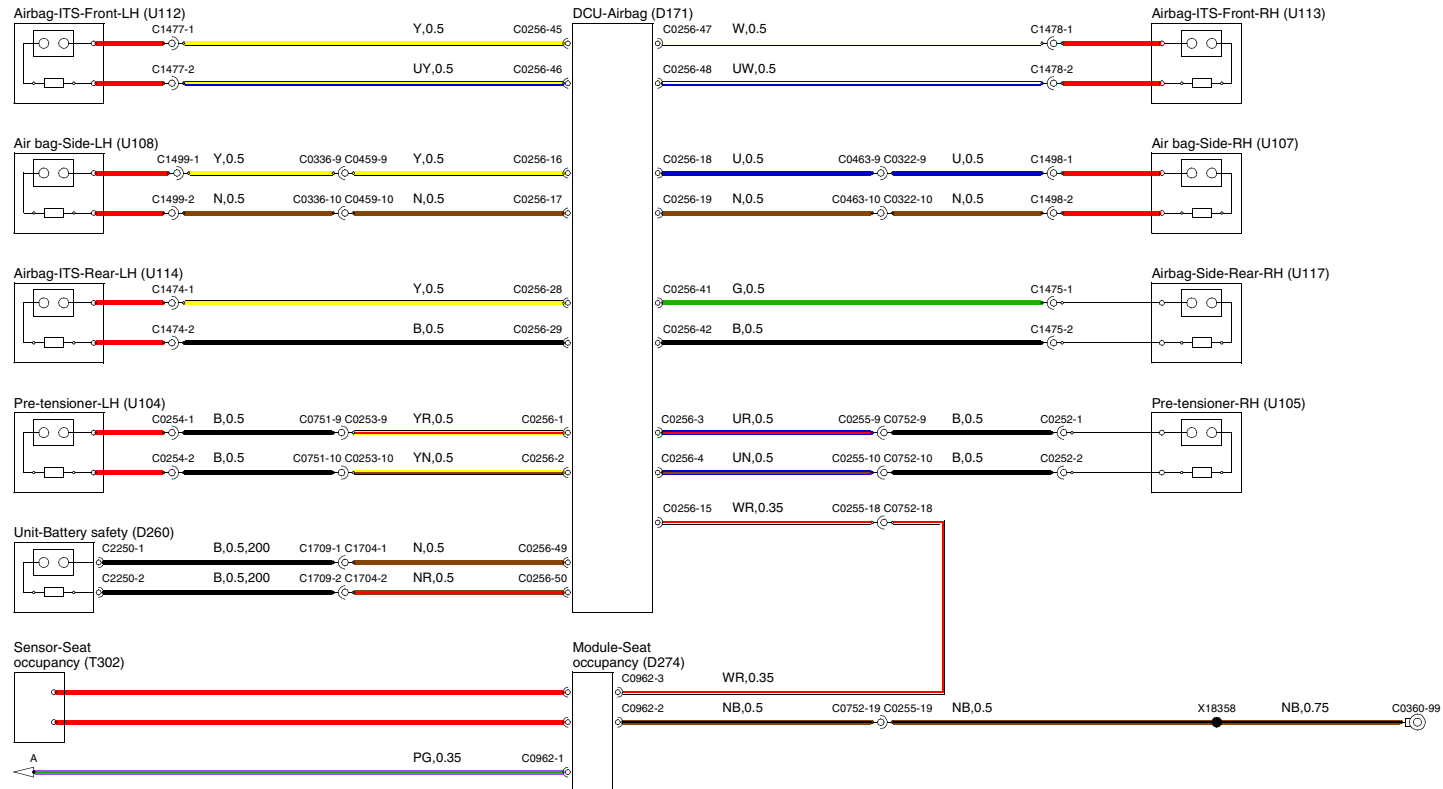


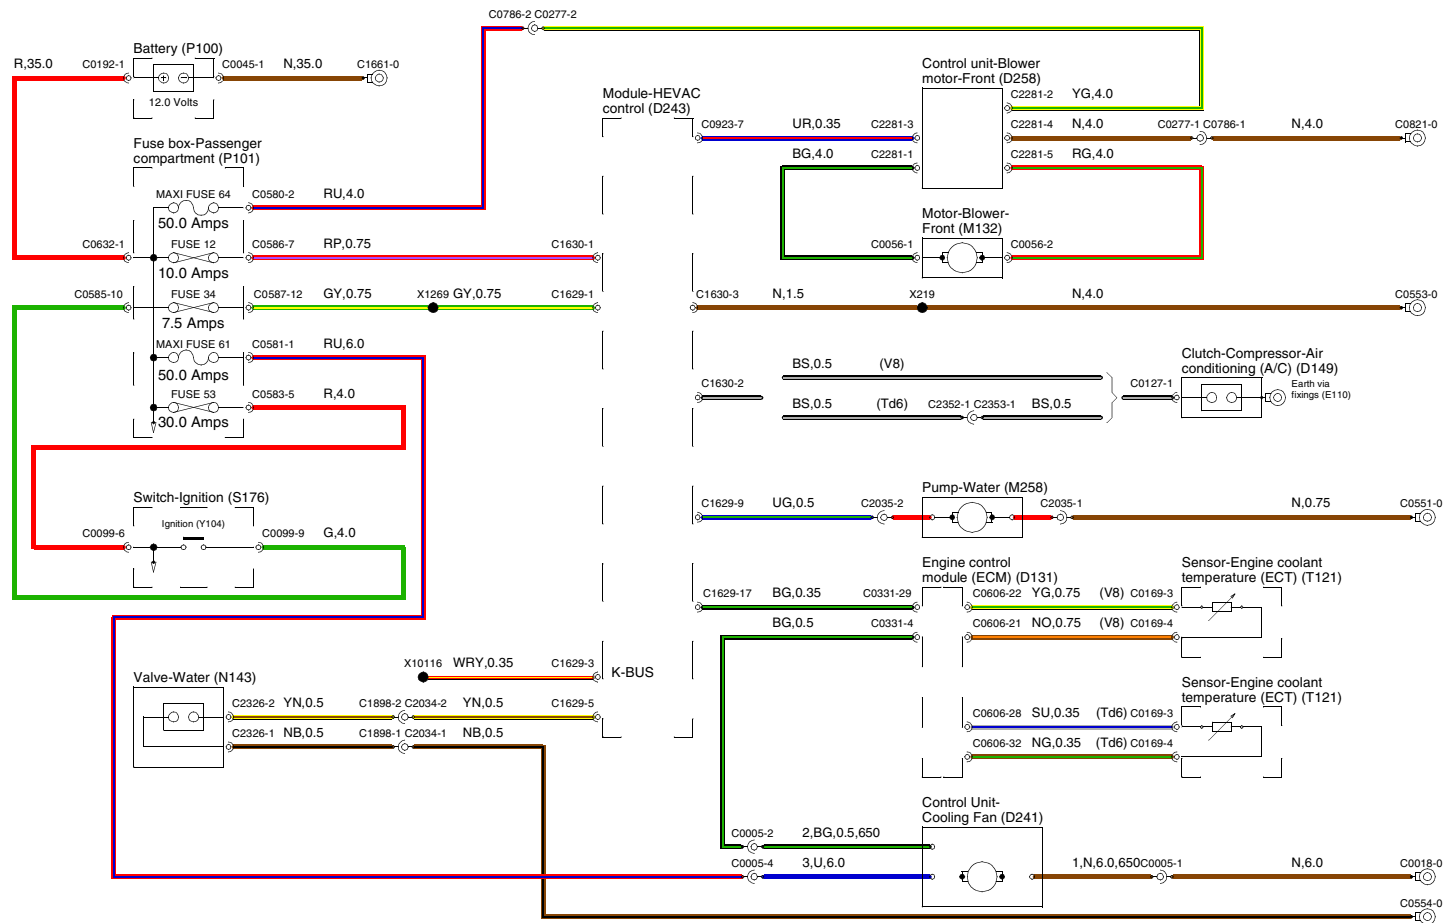


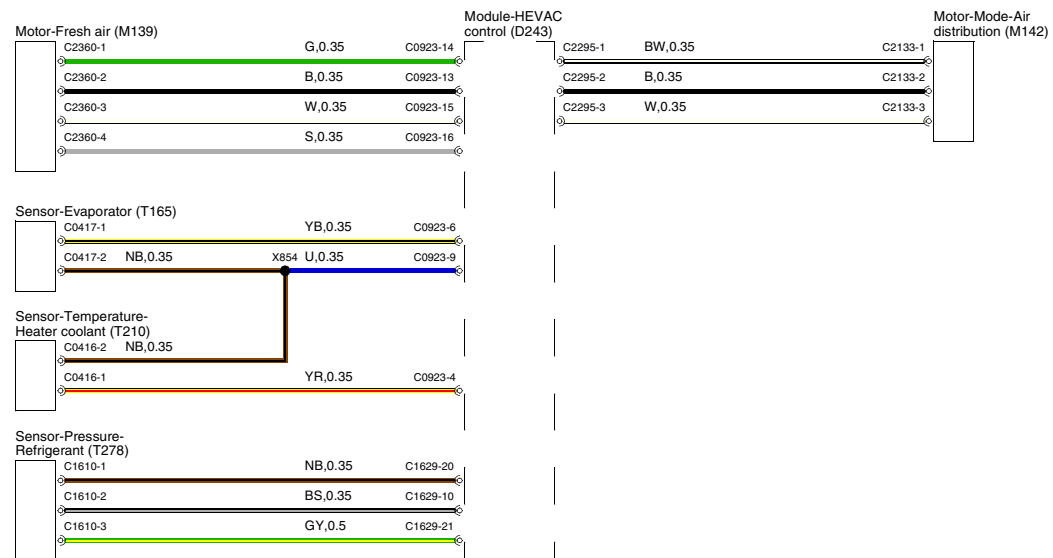


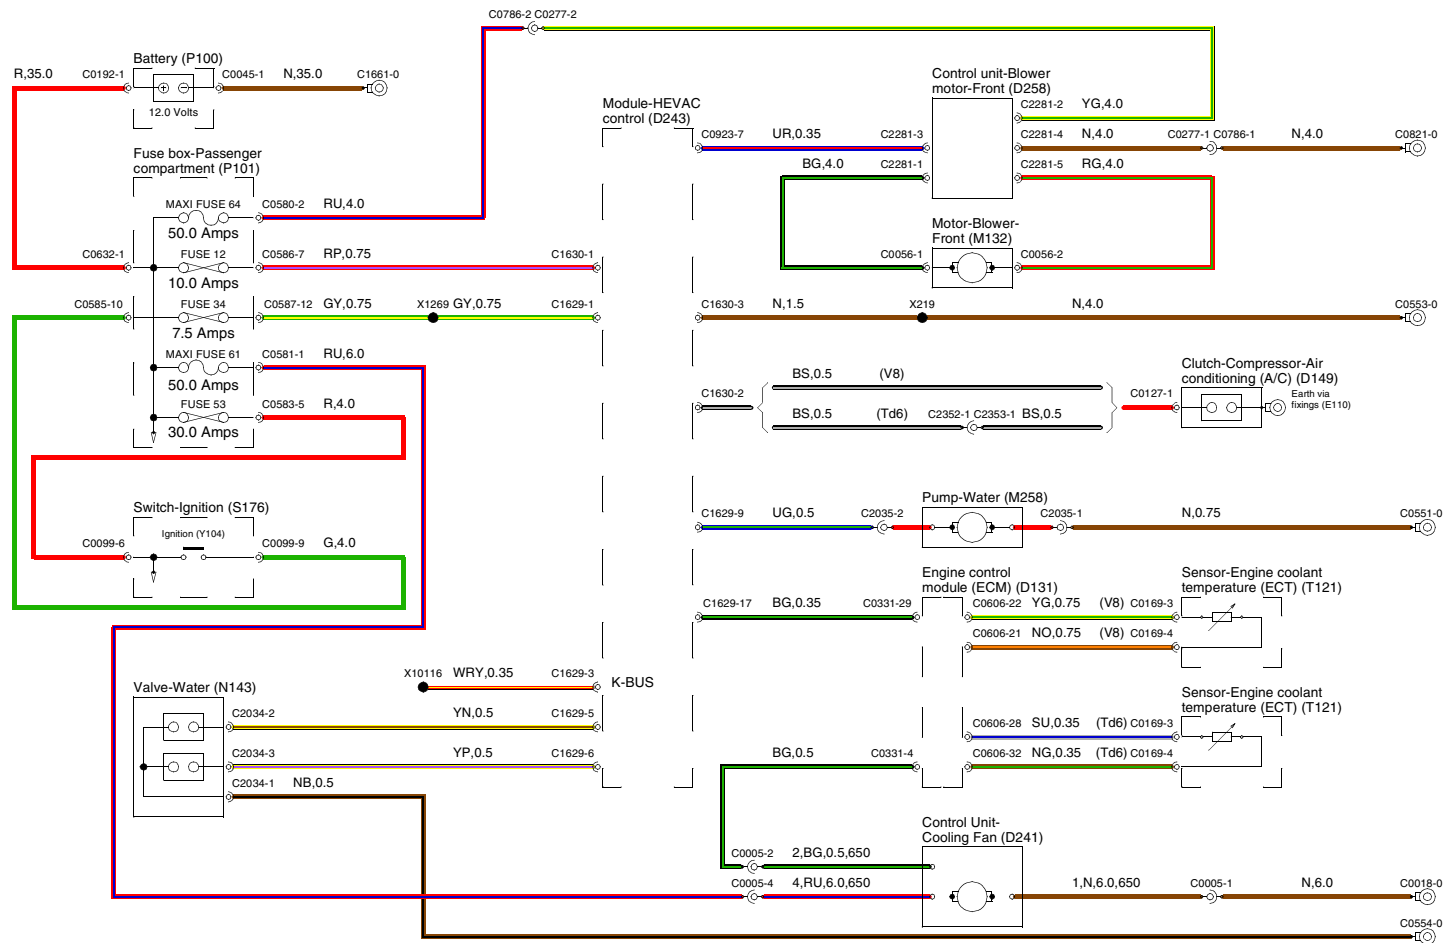

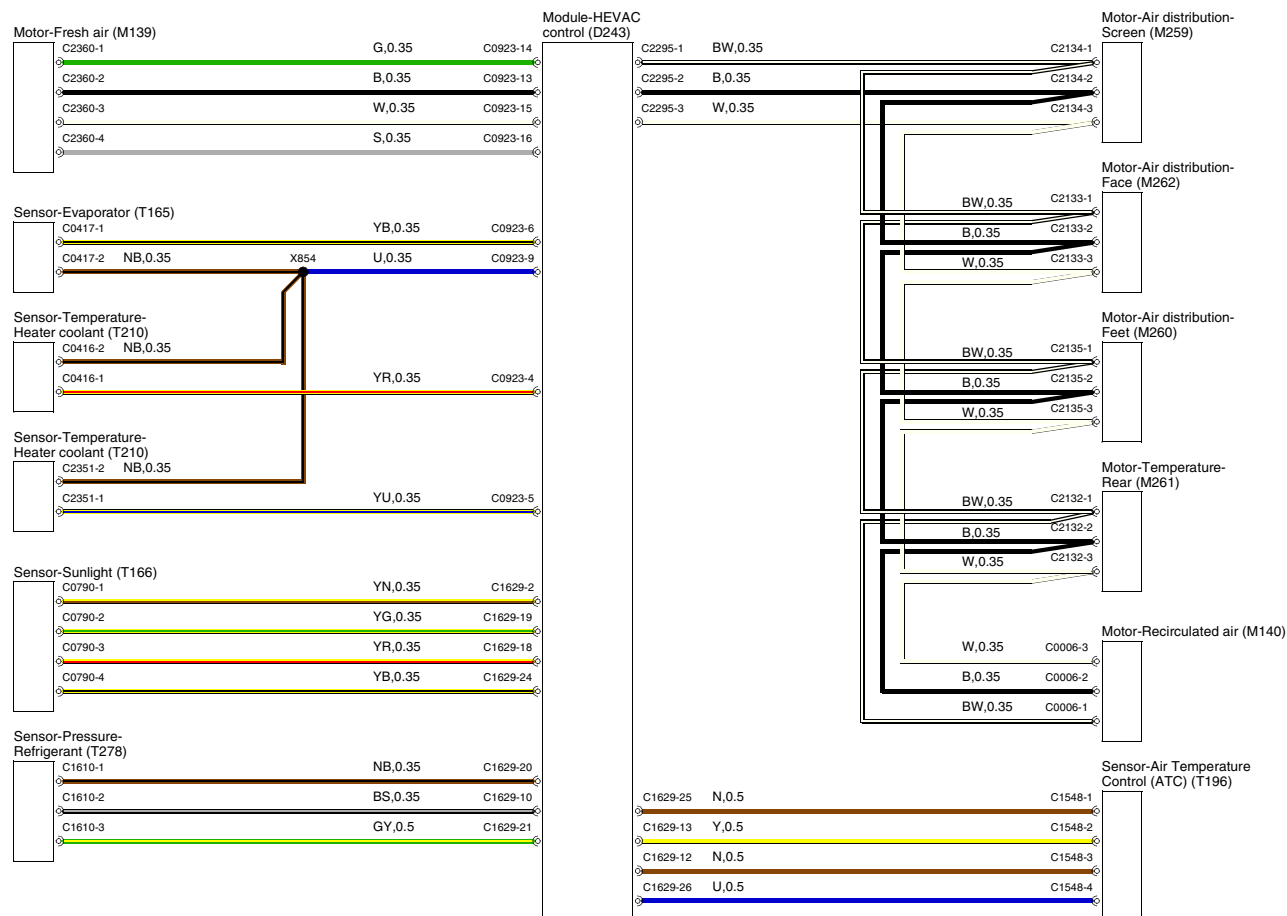


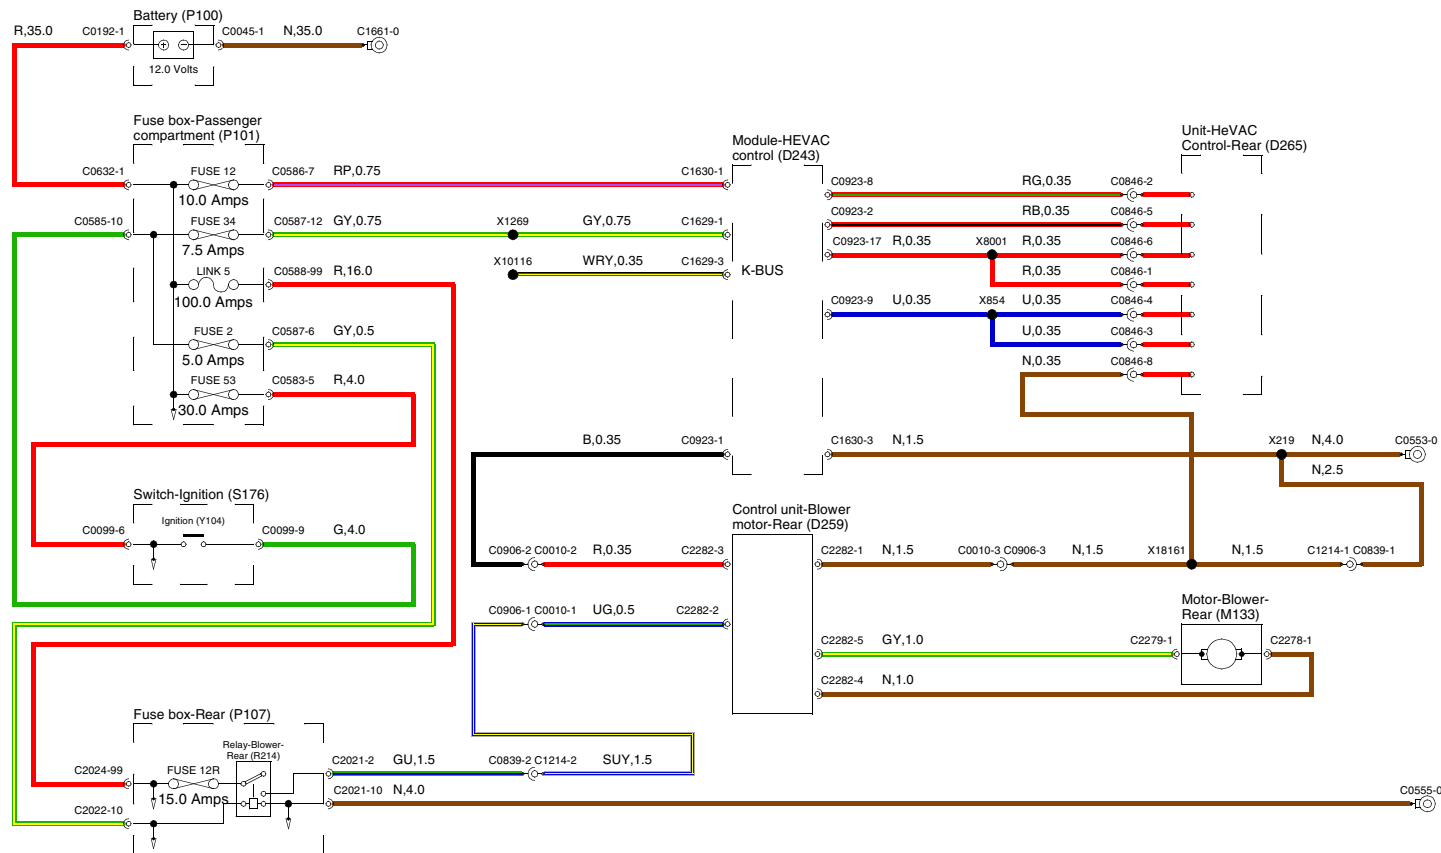

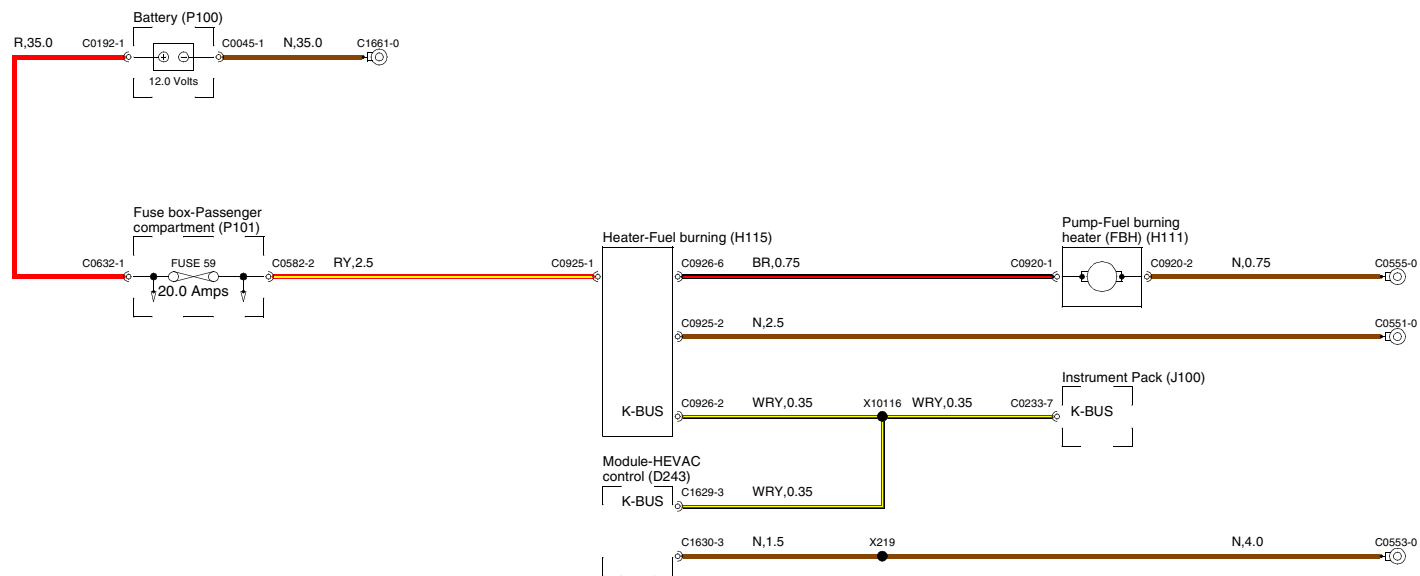


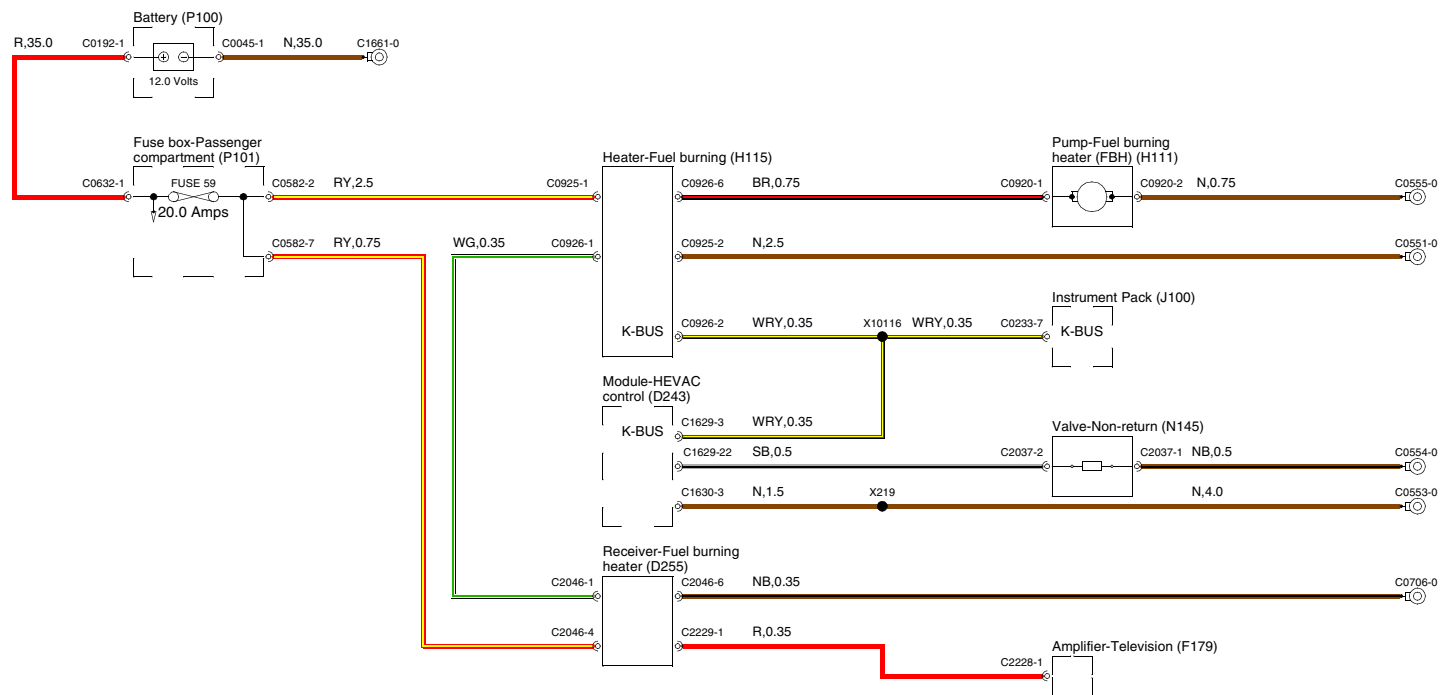



40 HEATED FRONT SCREEN

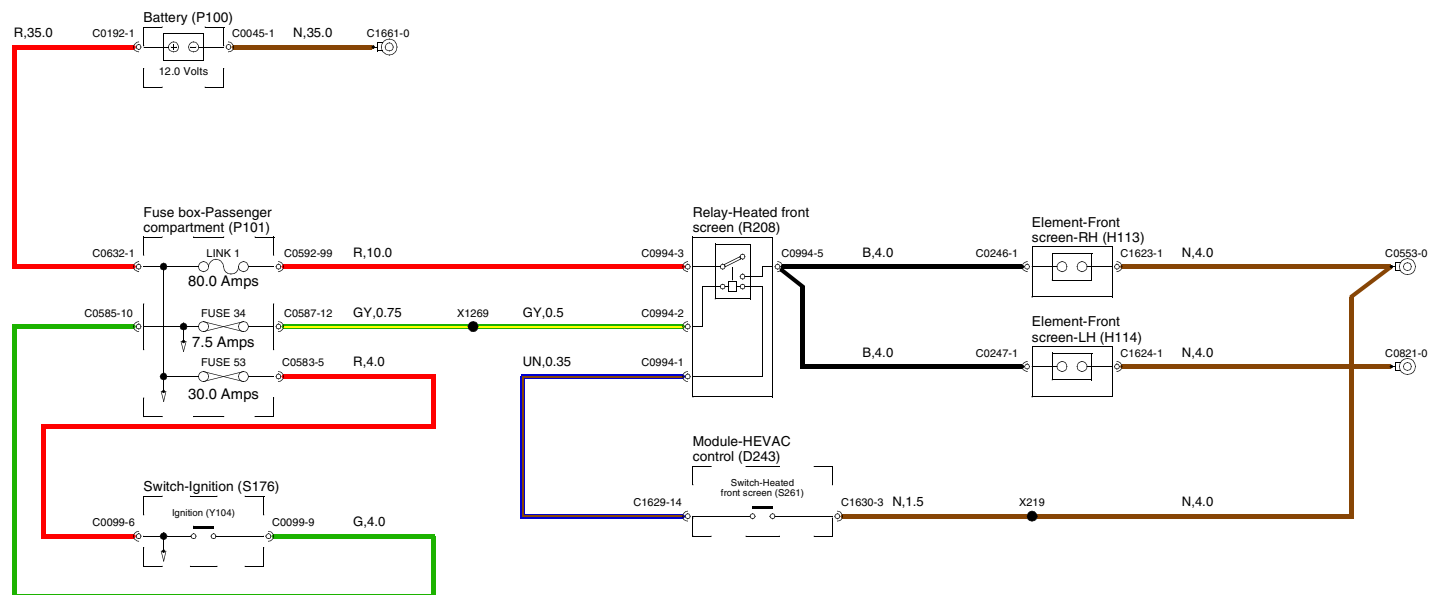



40 HEATED REAR SCREEN

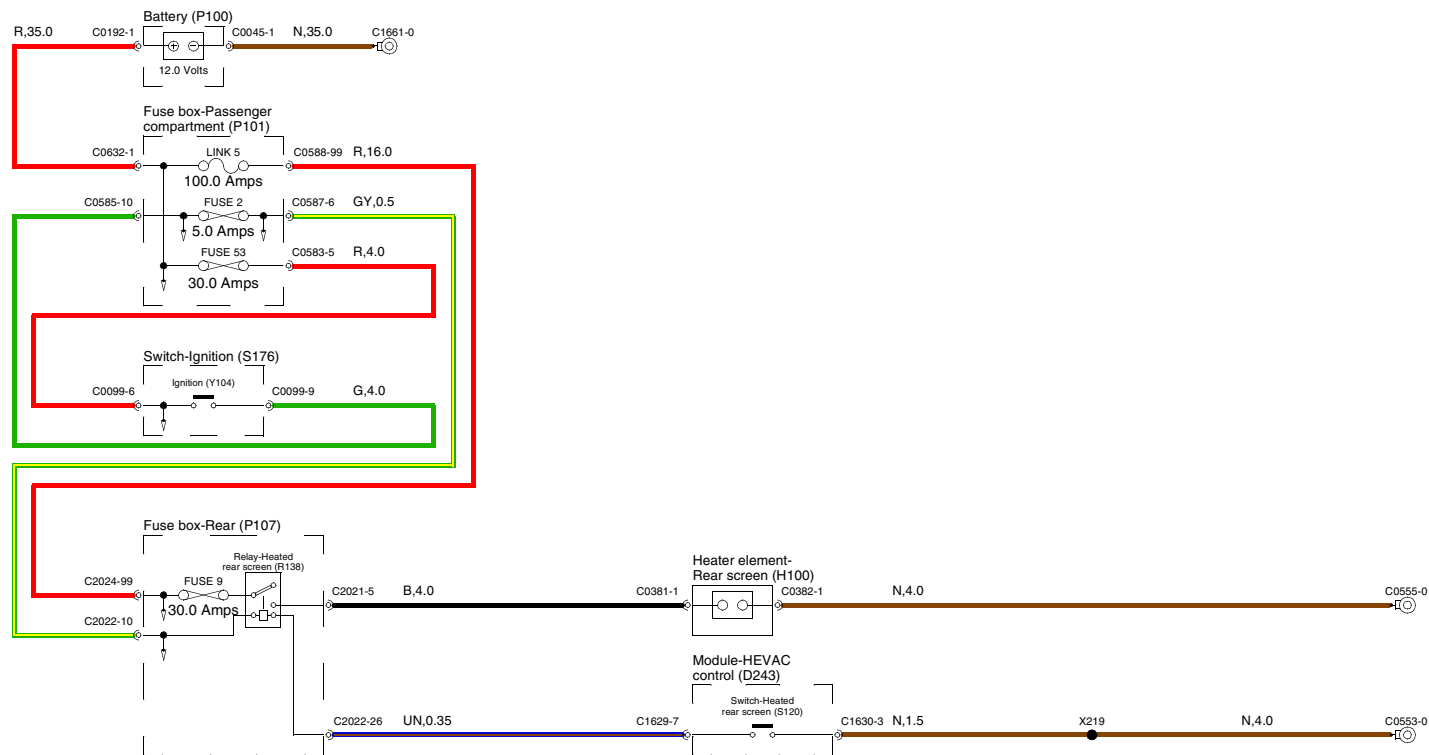


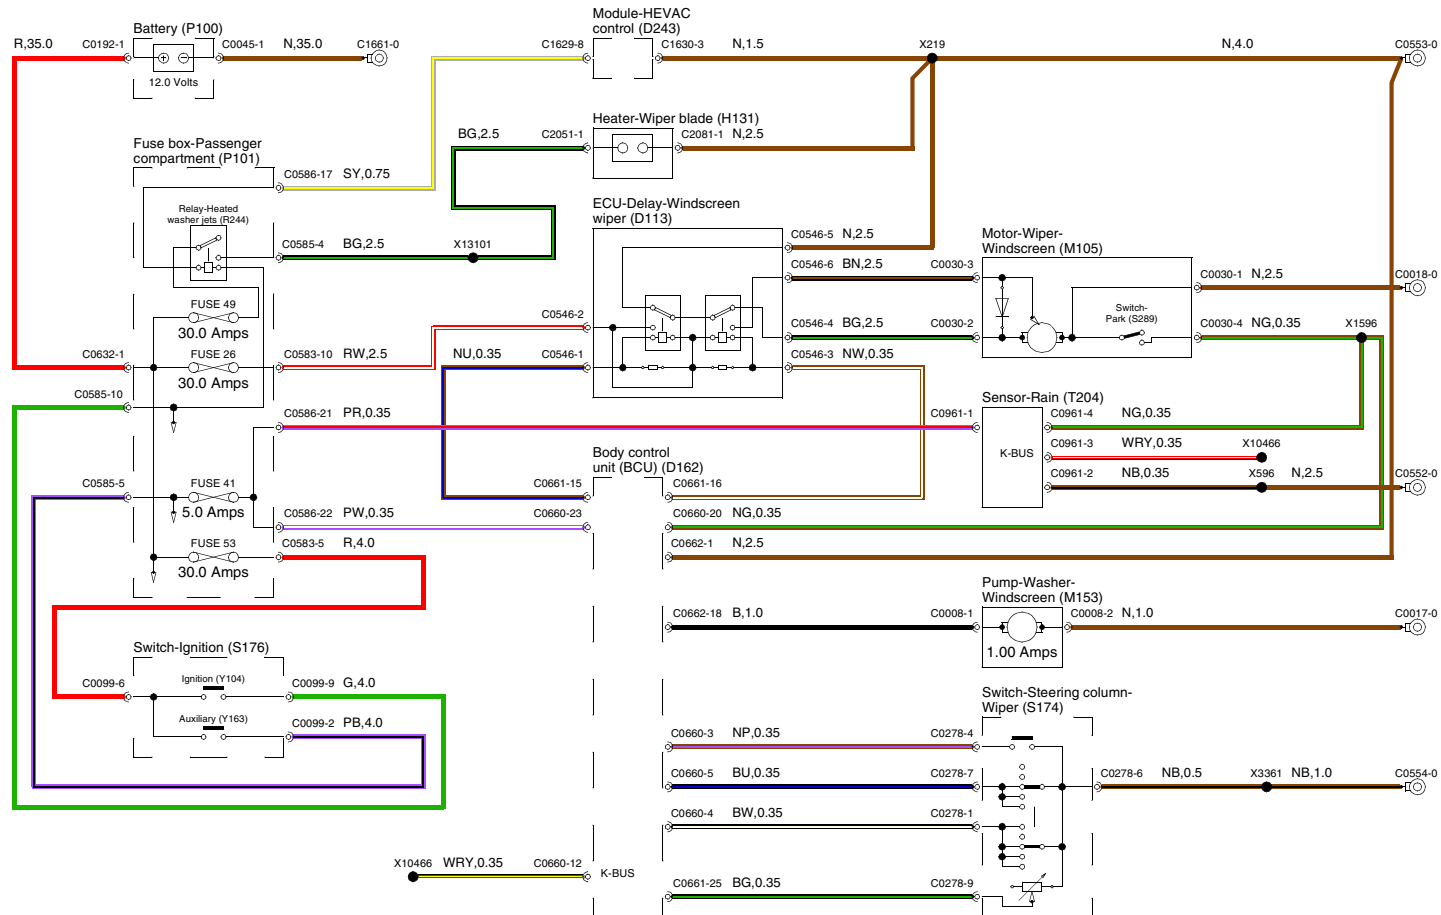


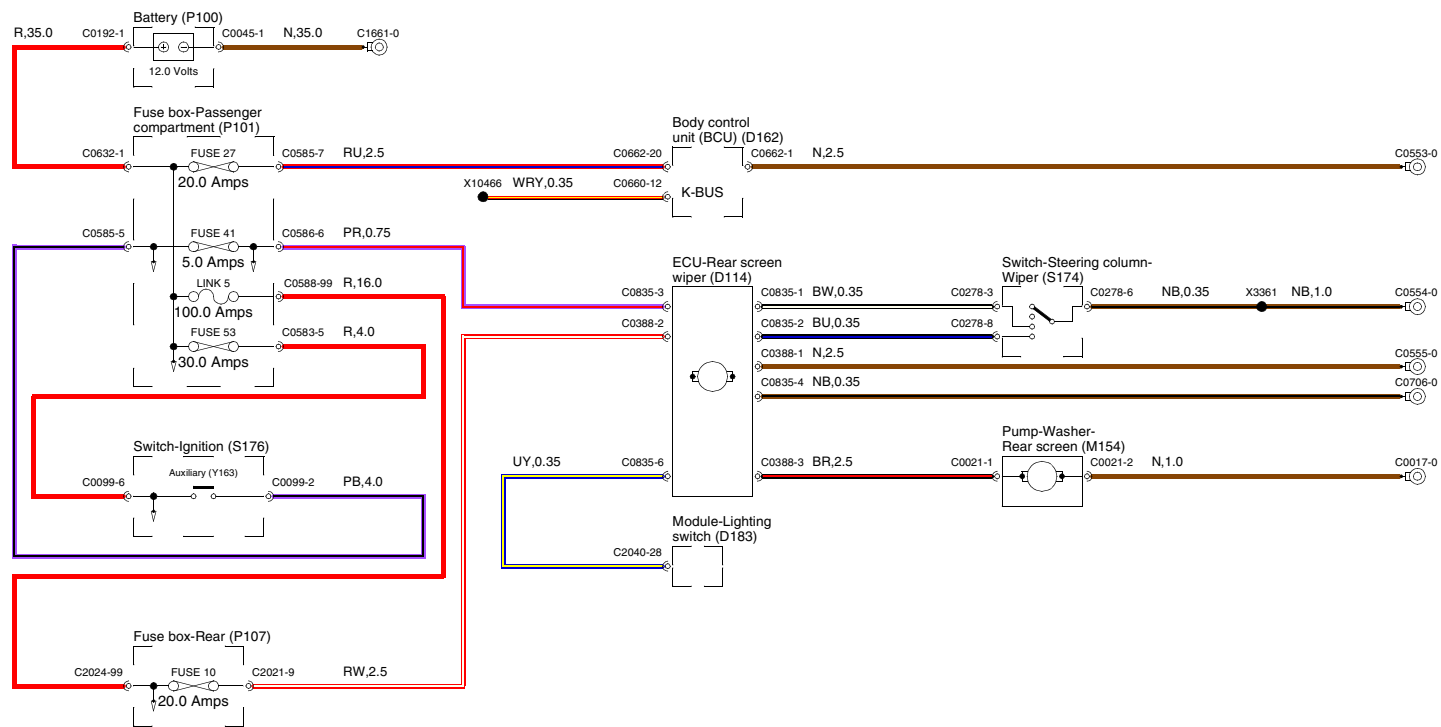


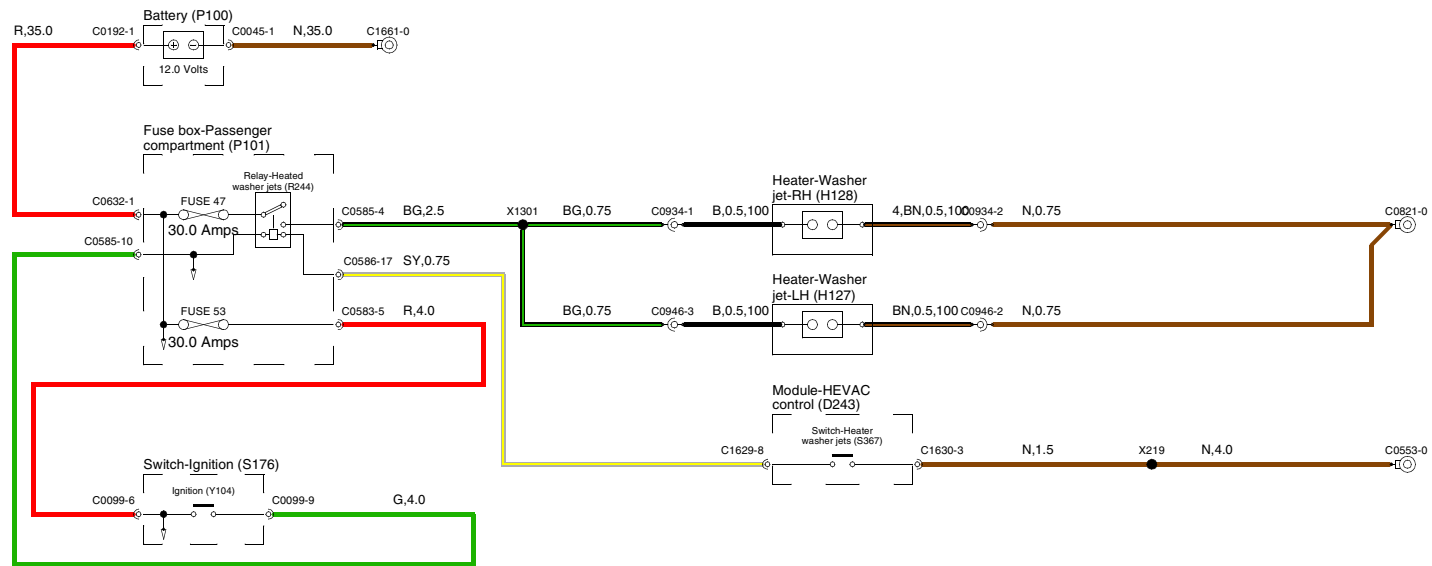


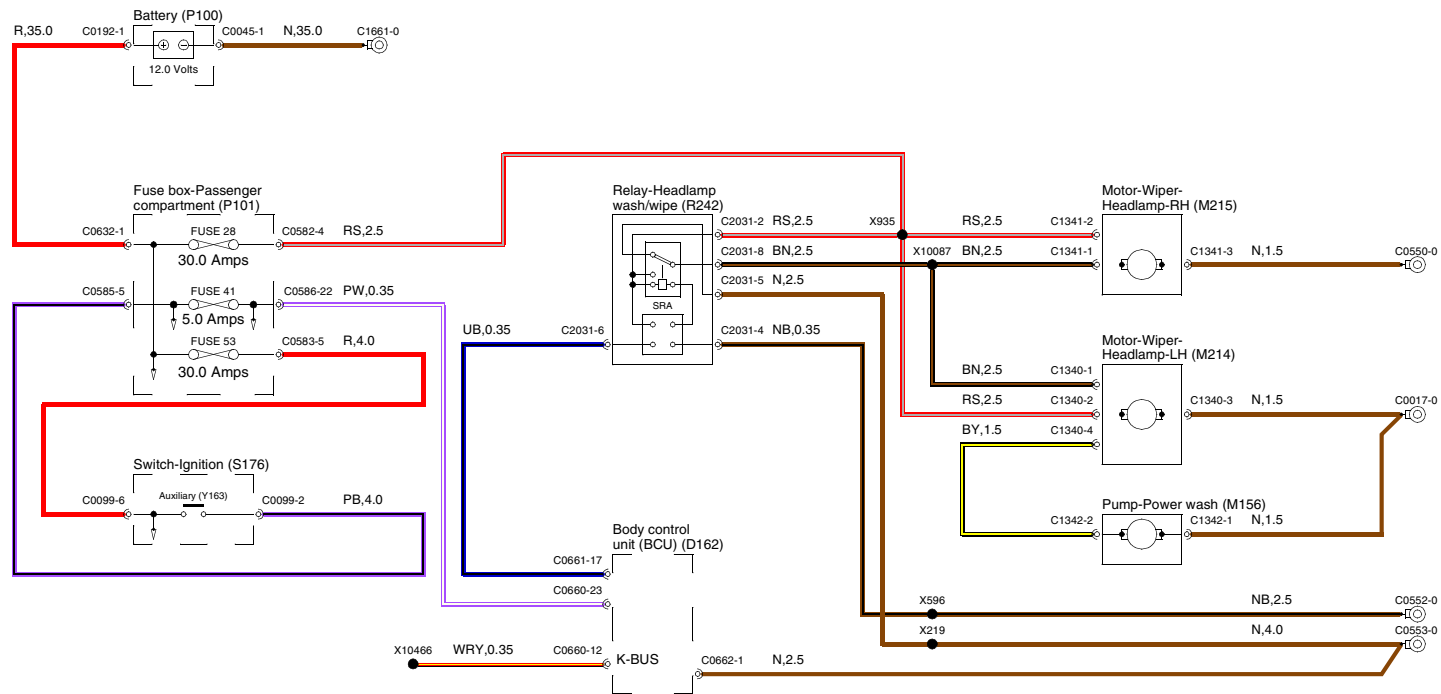


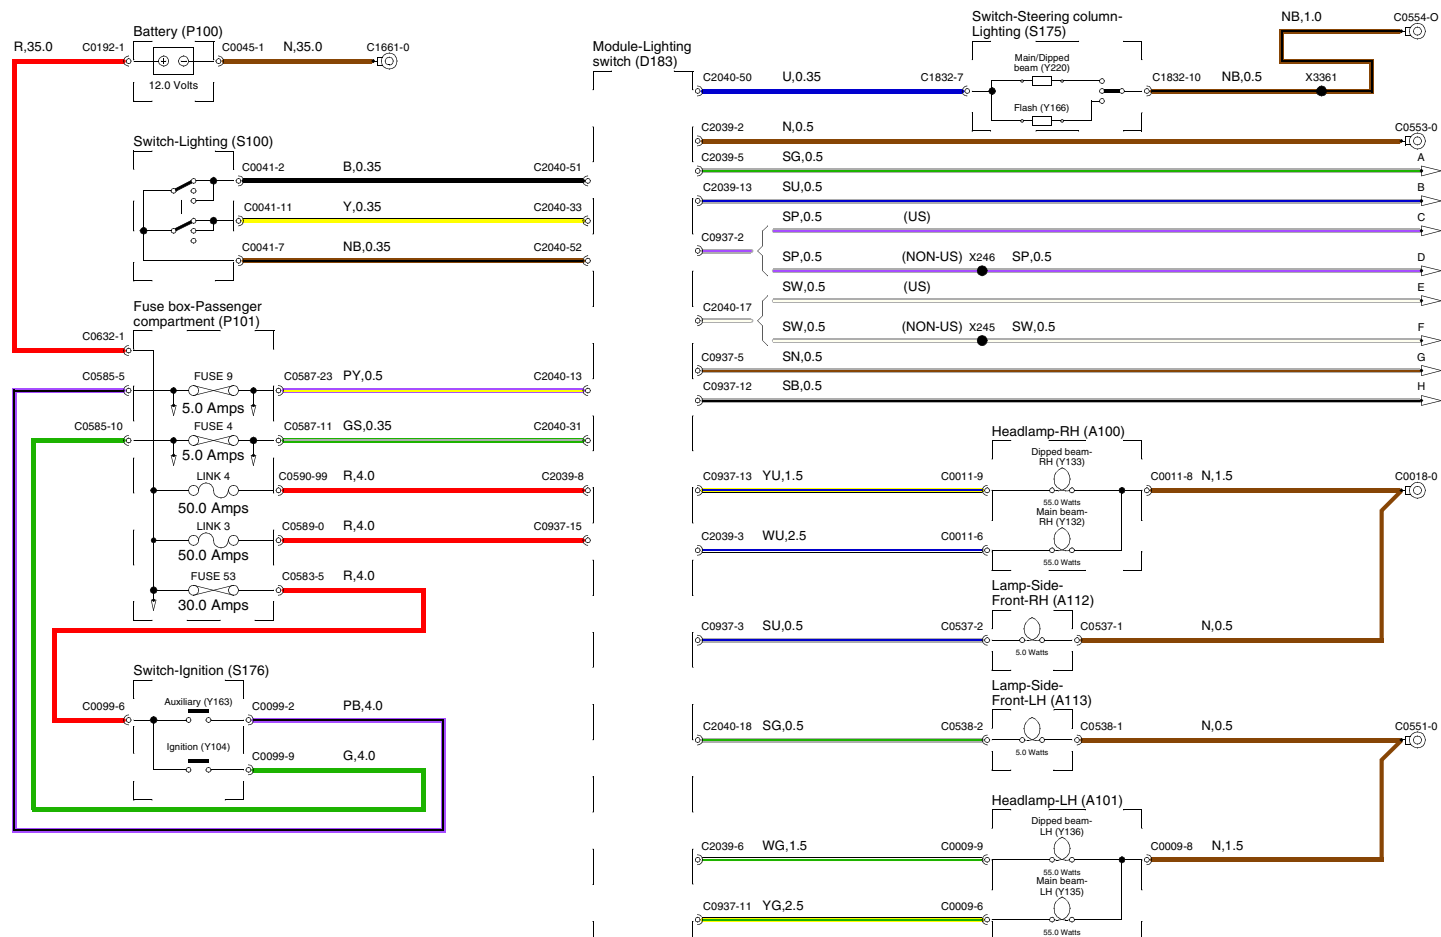


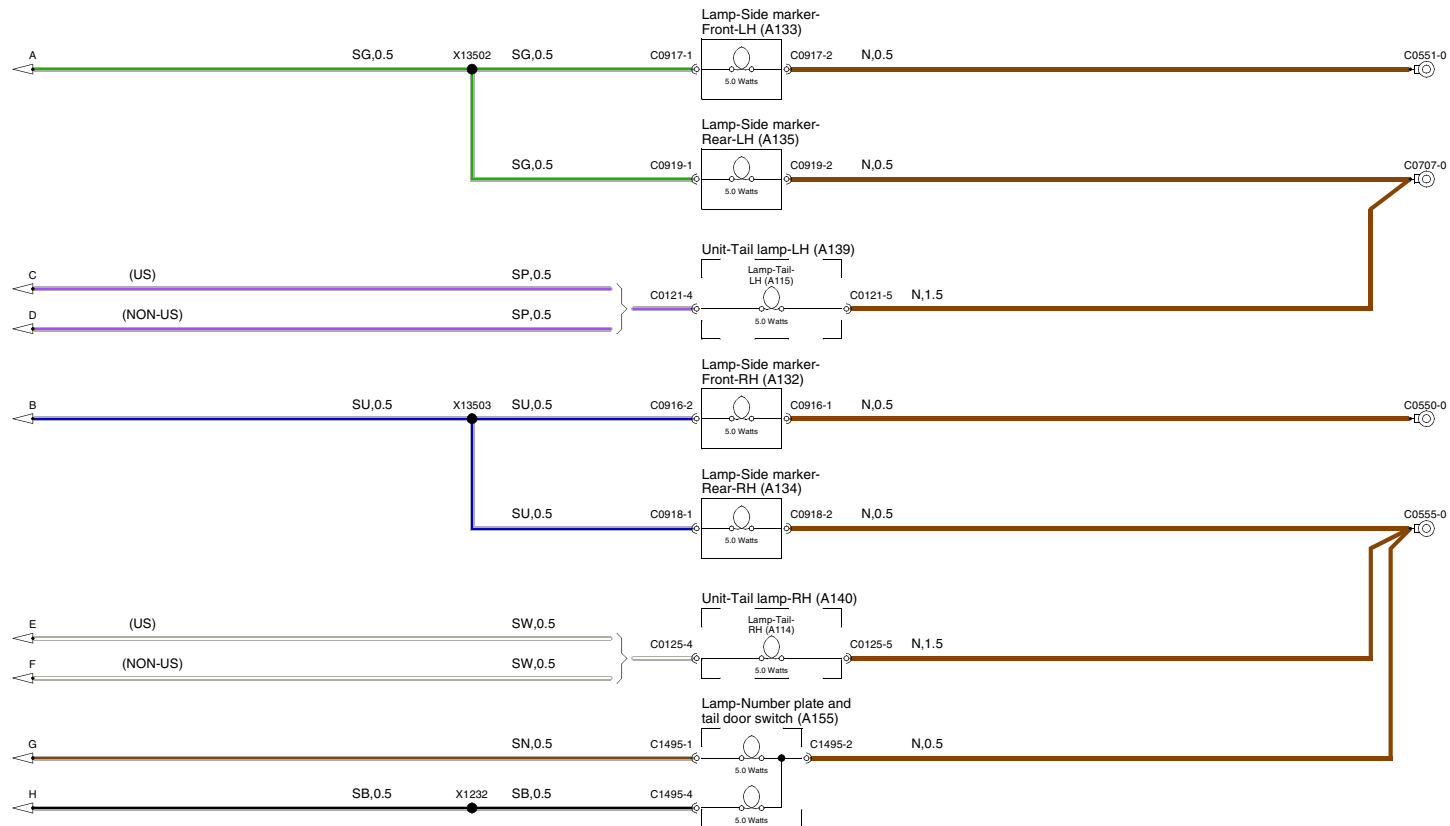


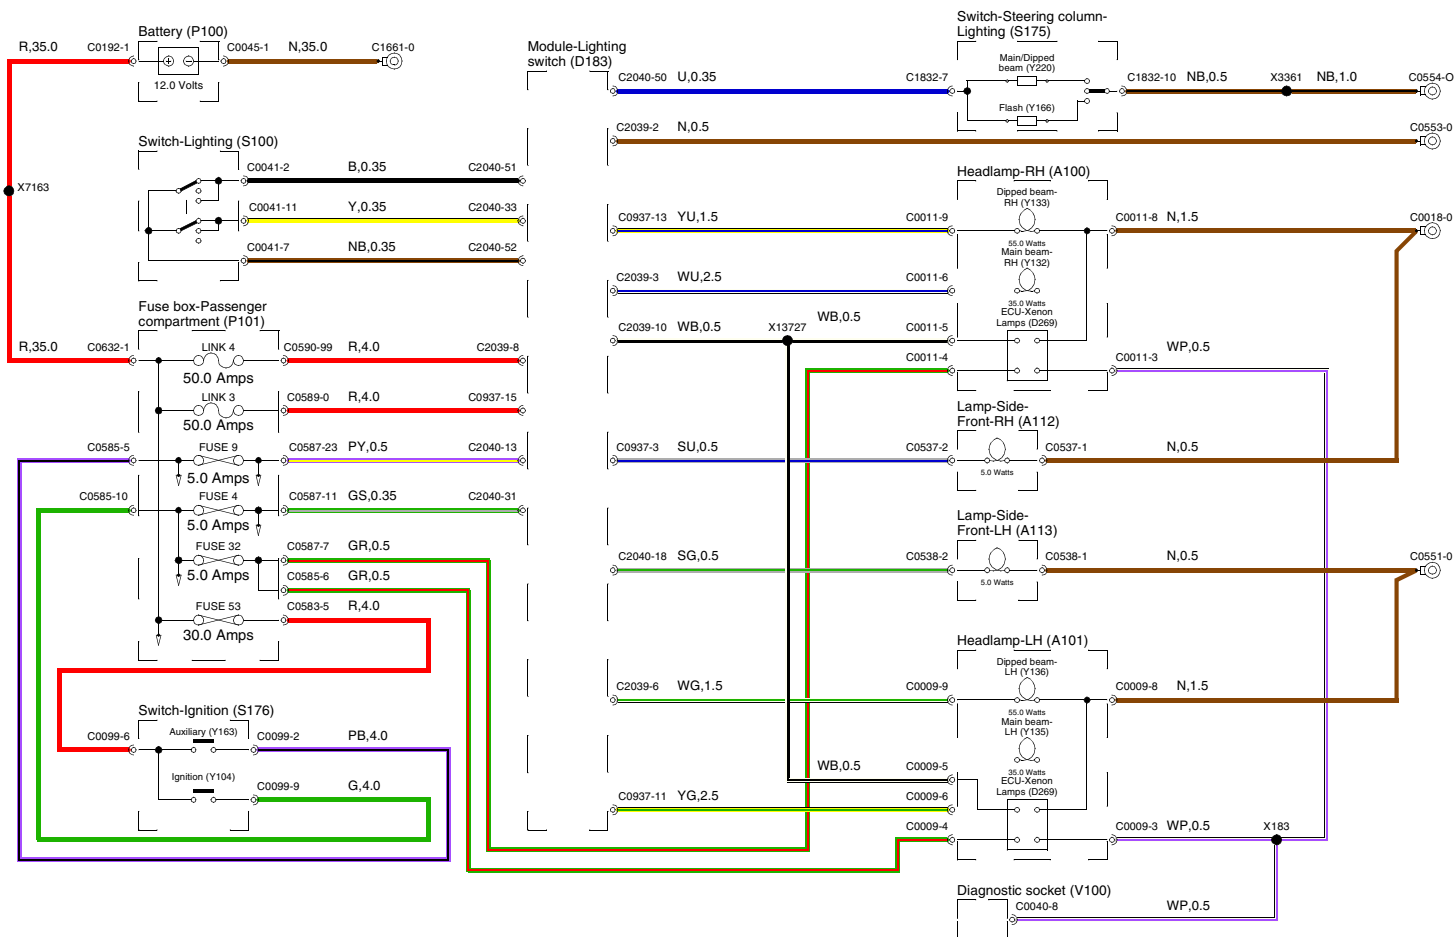


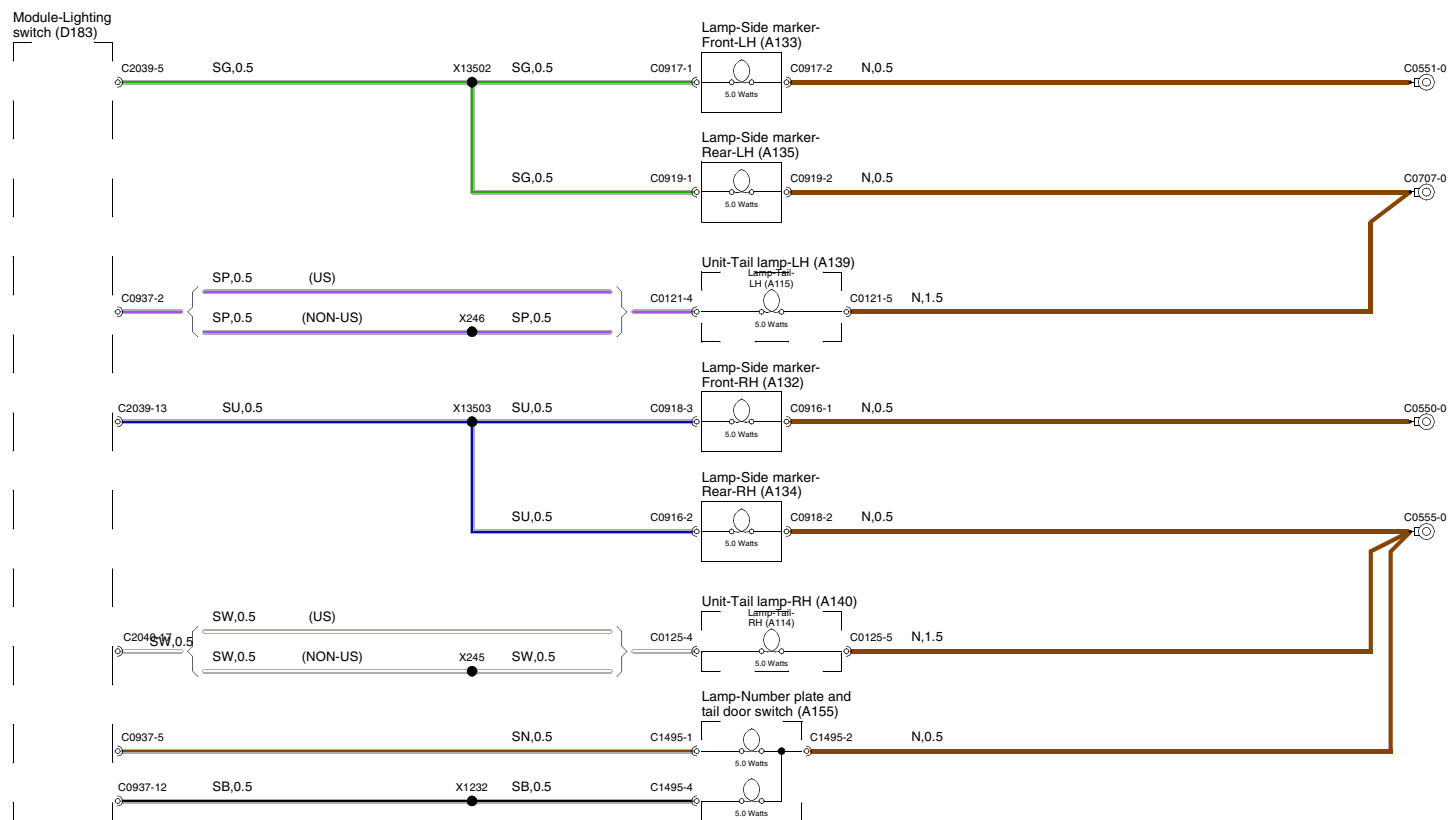


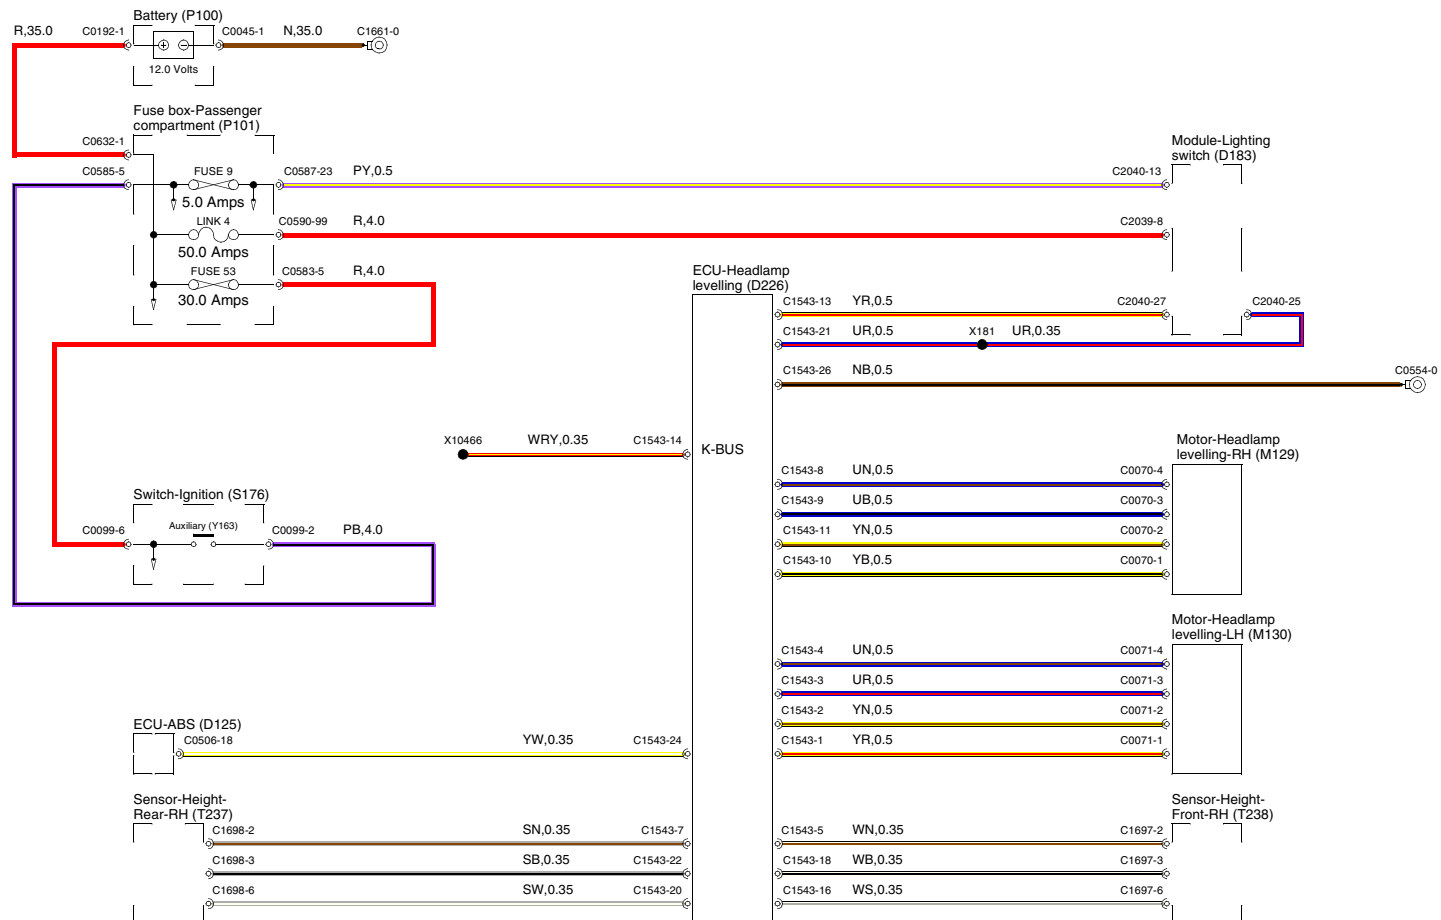


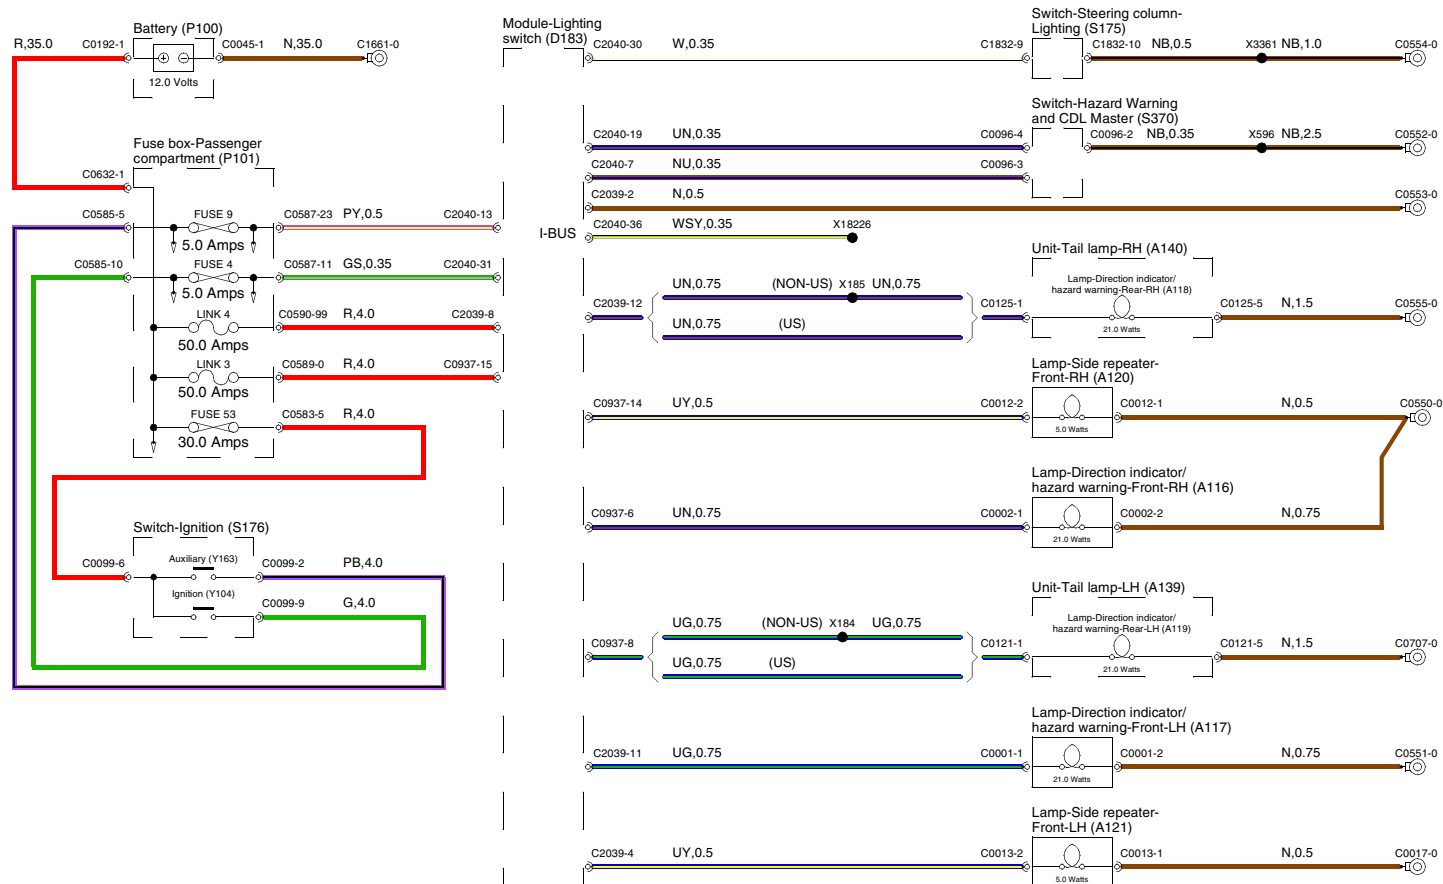

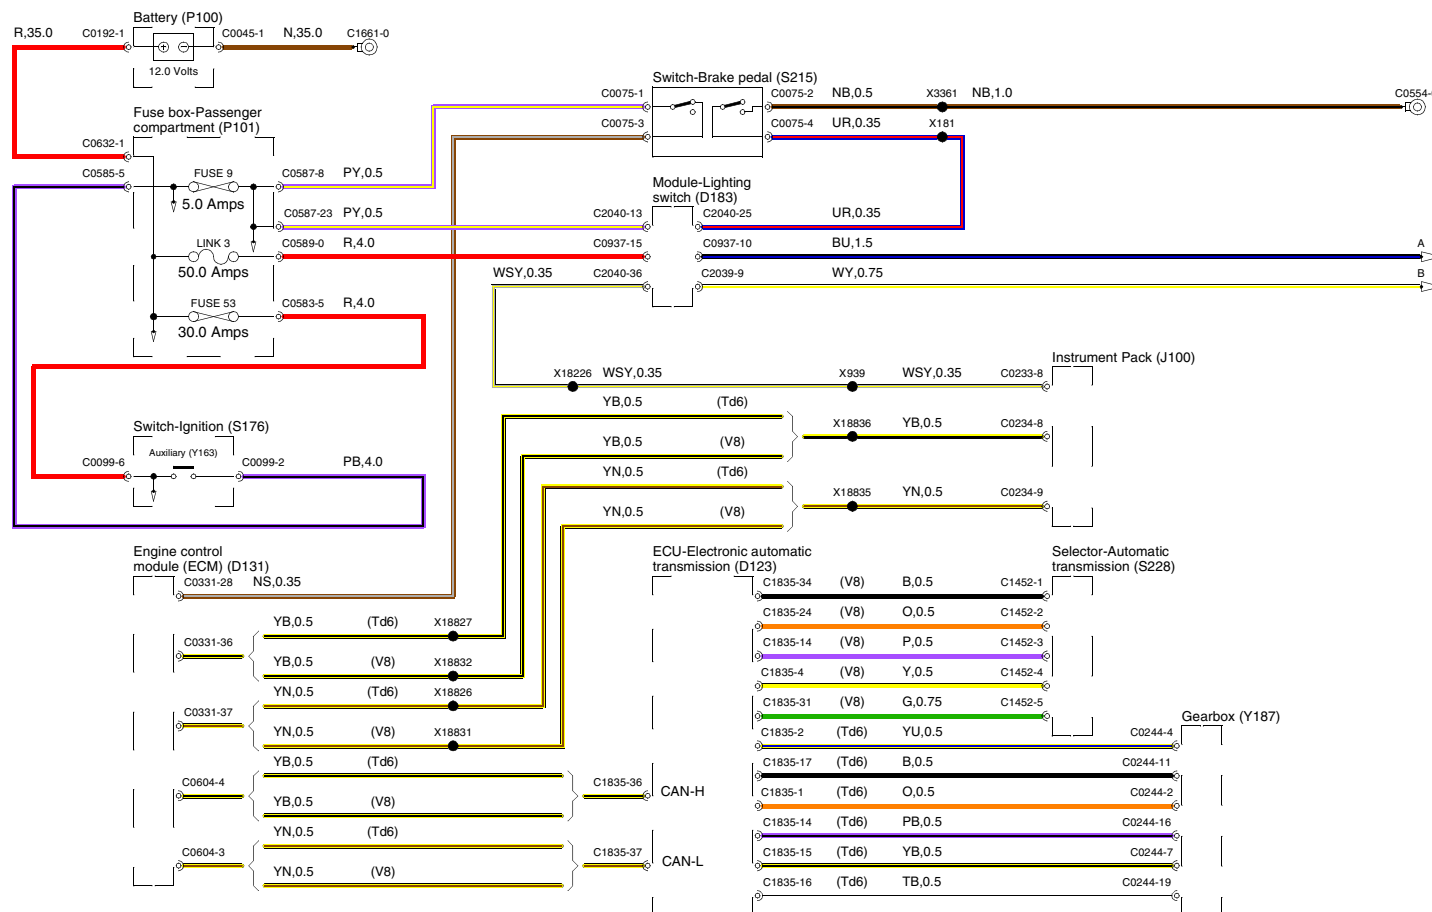


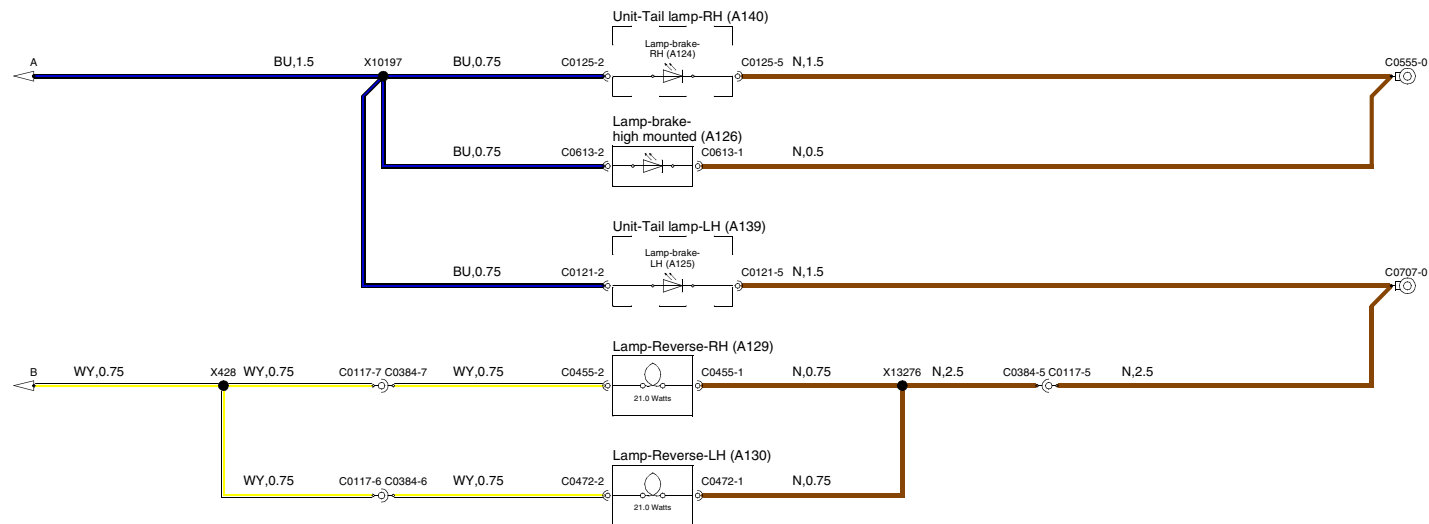


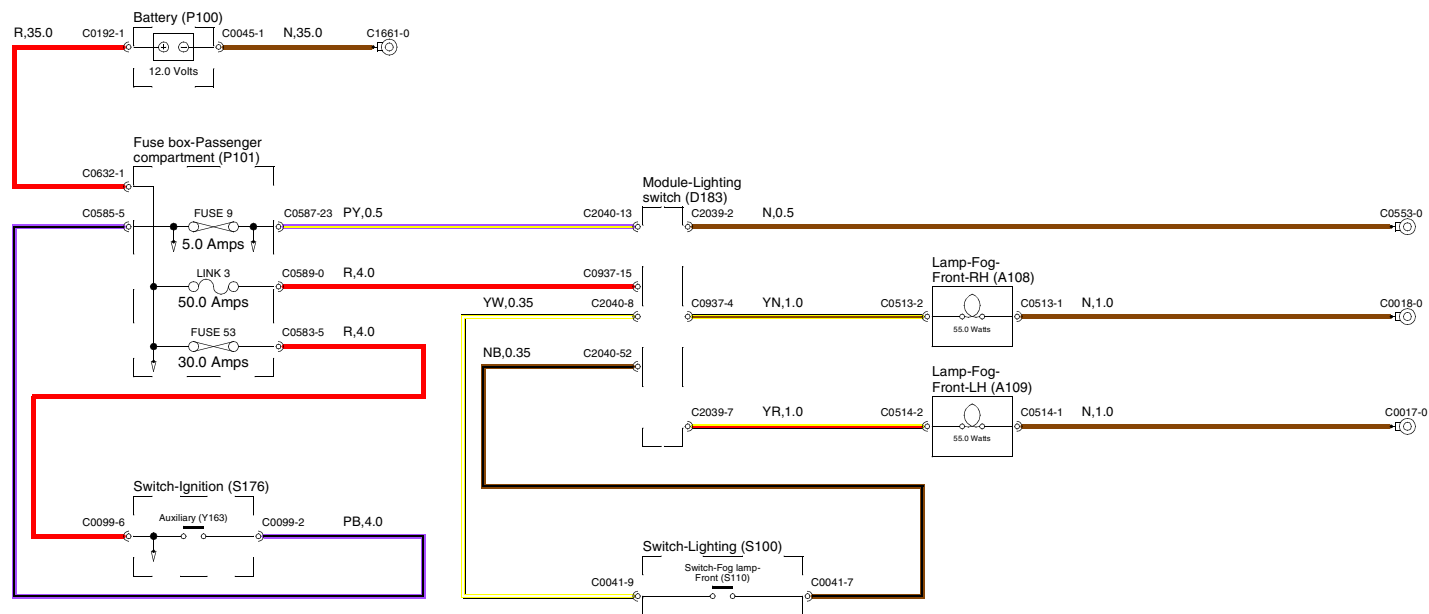

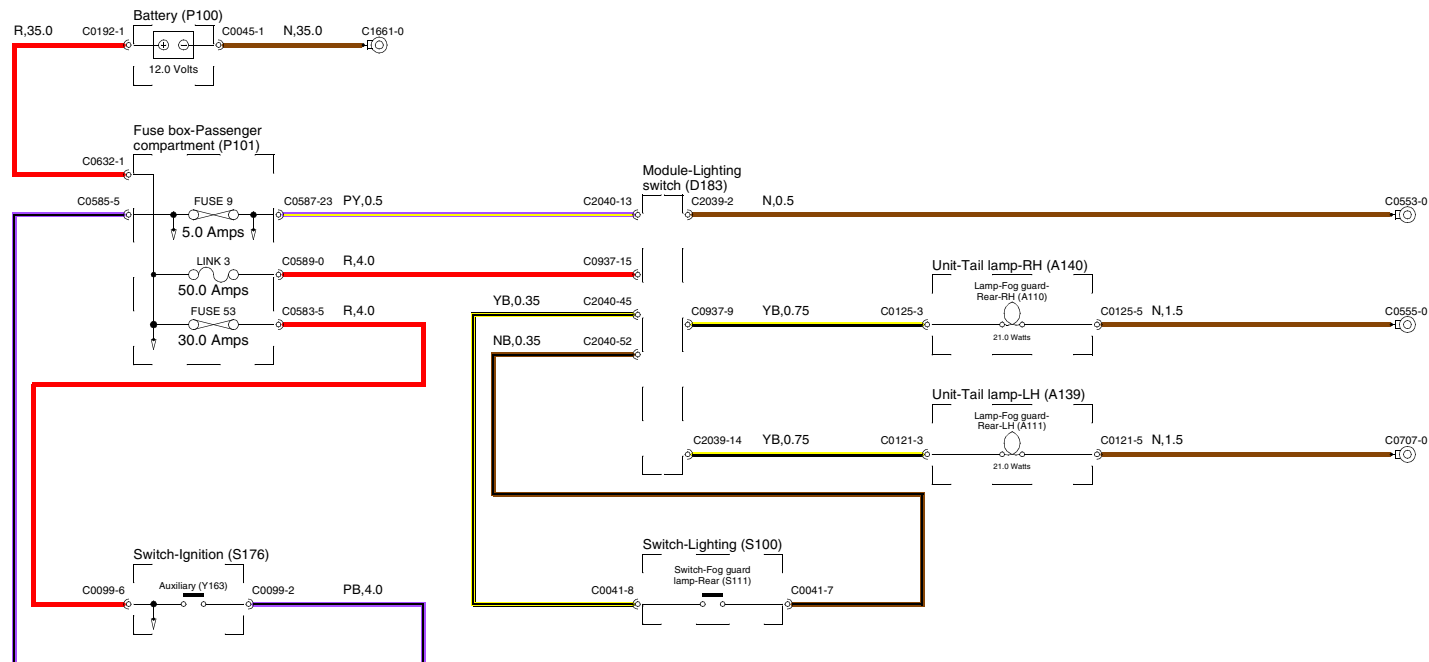


44 INTERIOR LAMPS

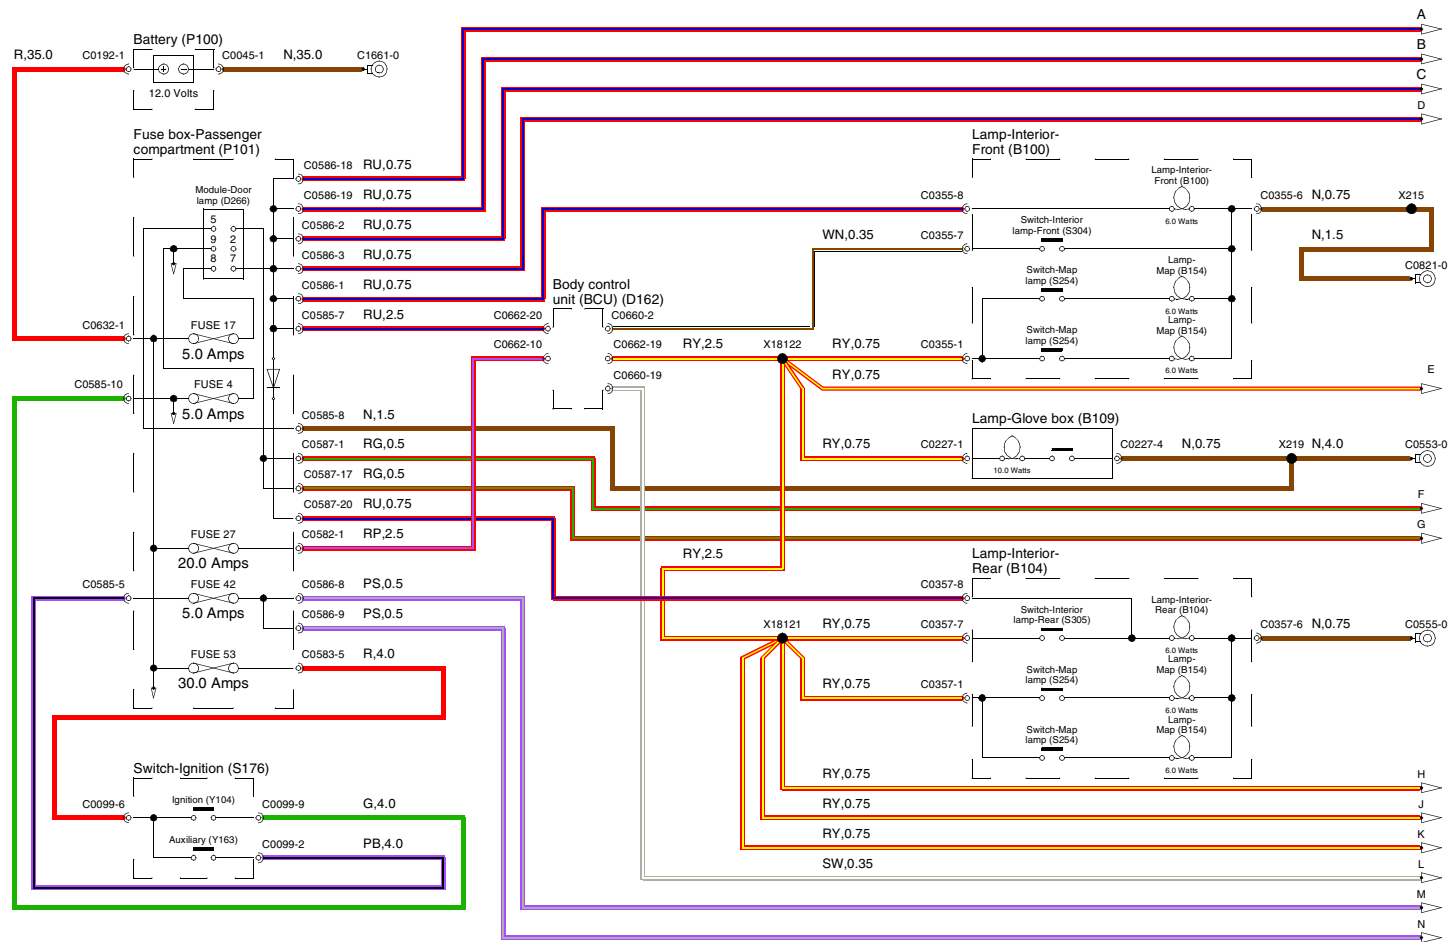


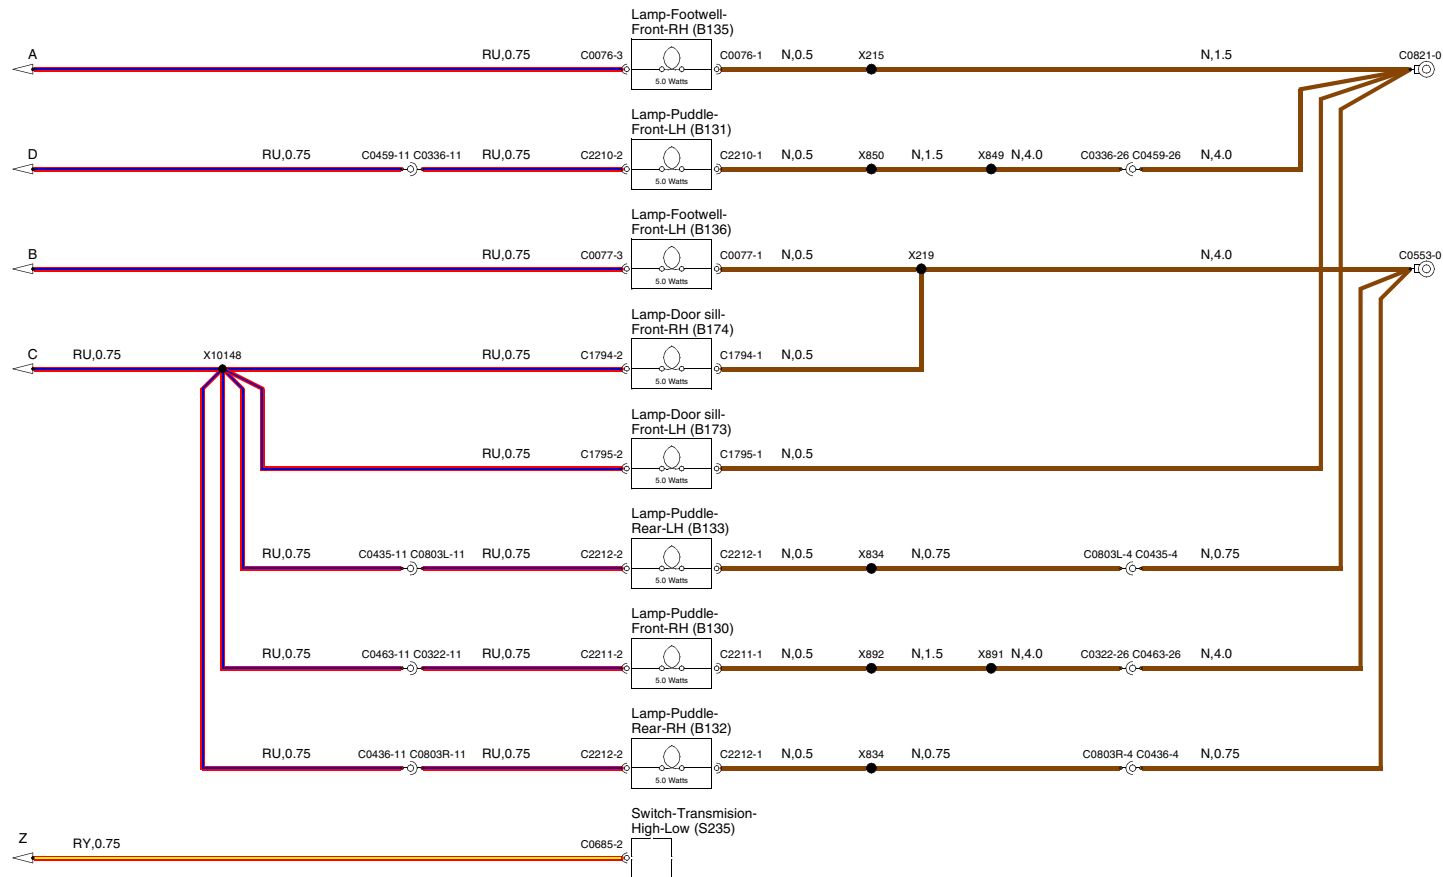


44 INTERIOR LAMPS

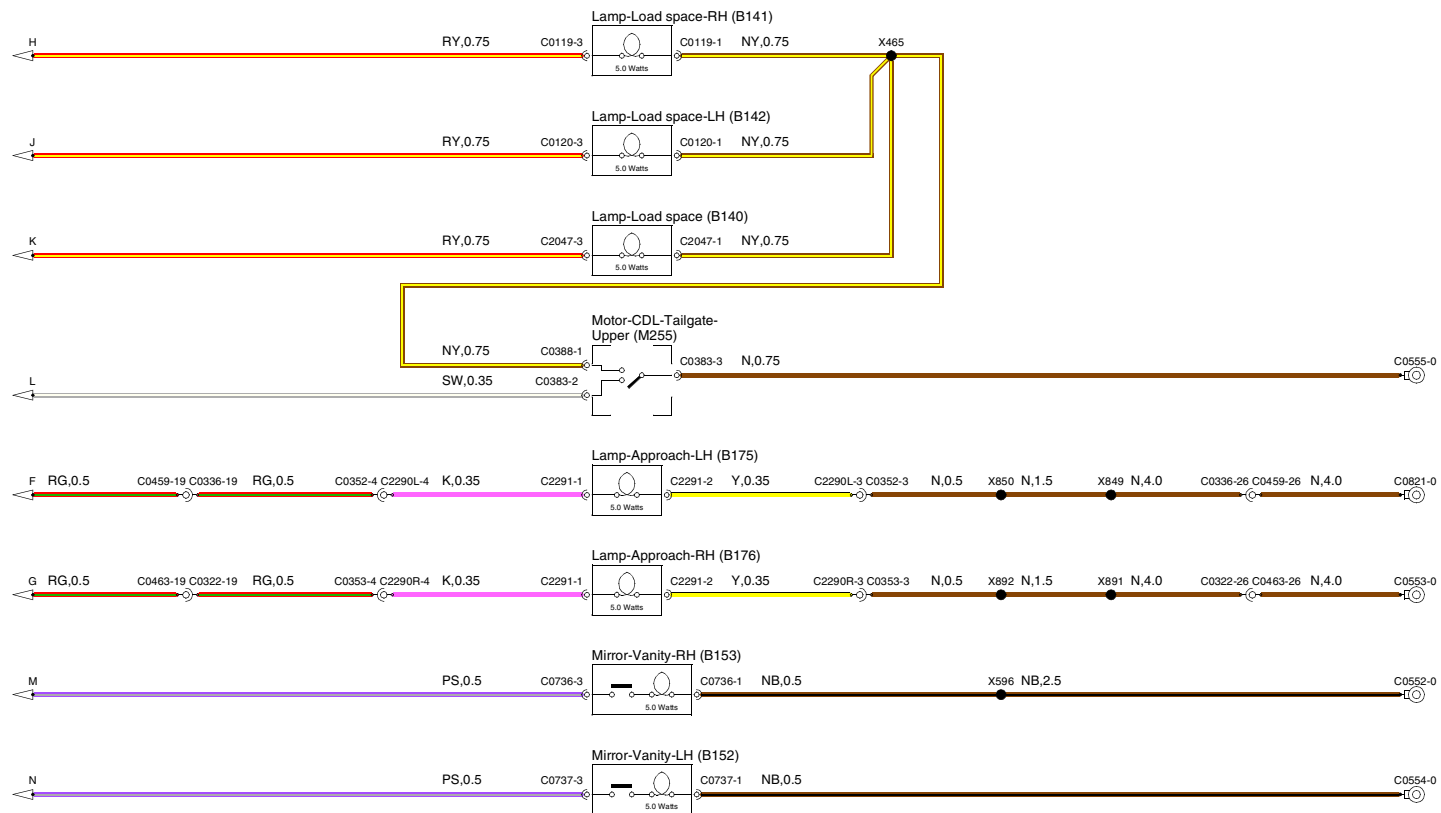



46 INTERIOR ILLUMINATION

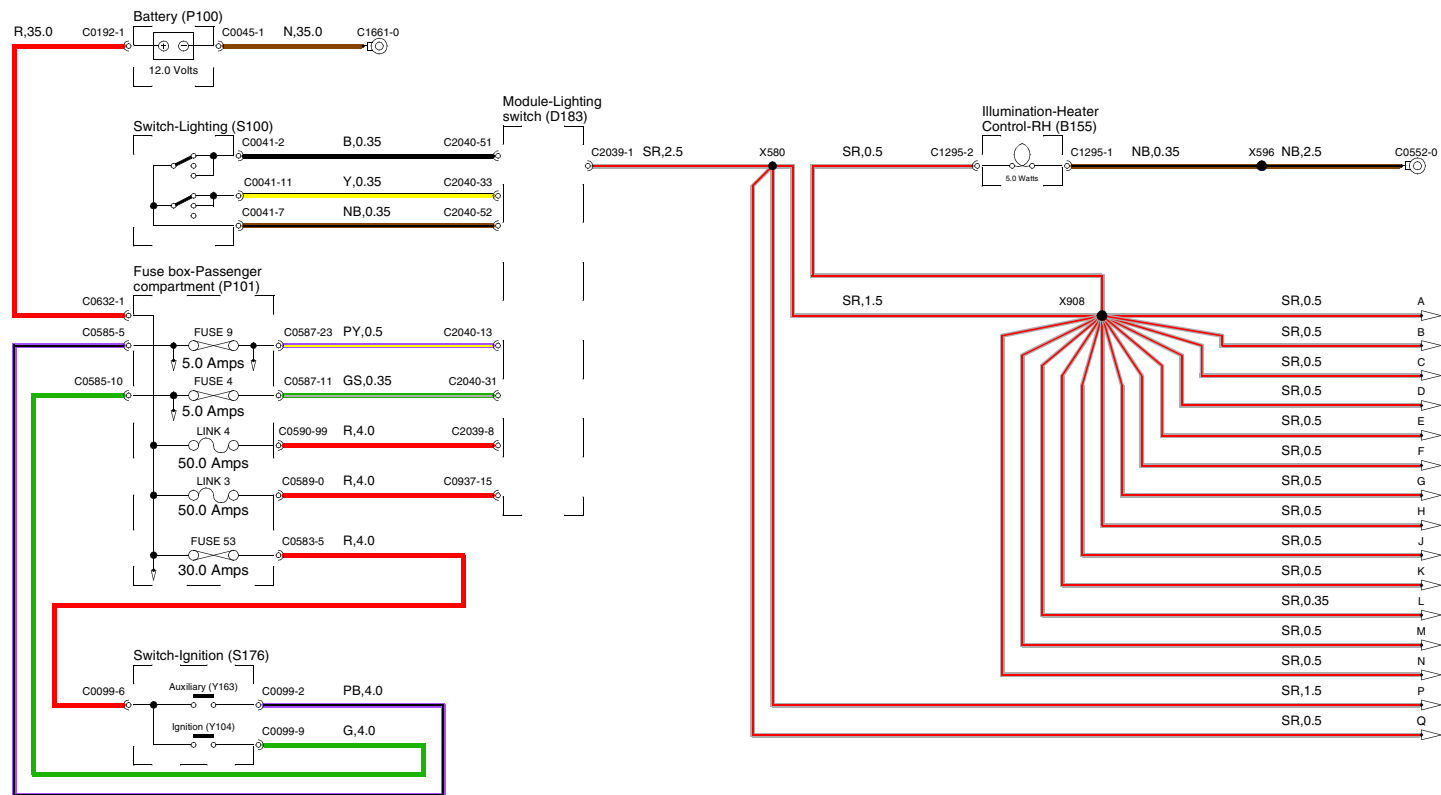

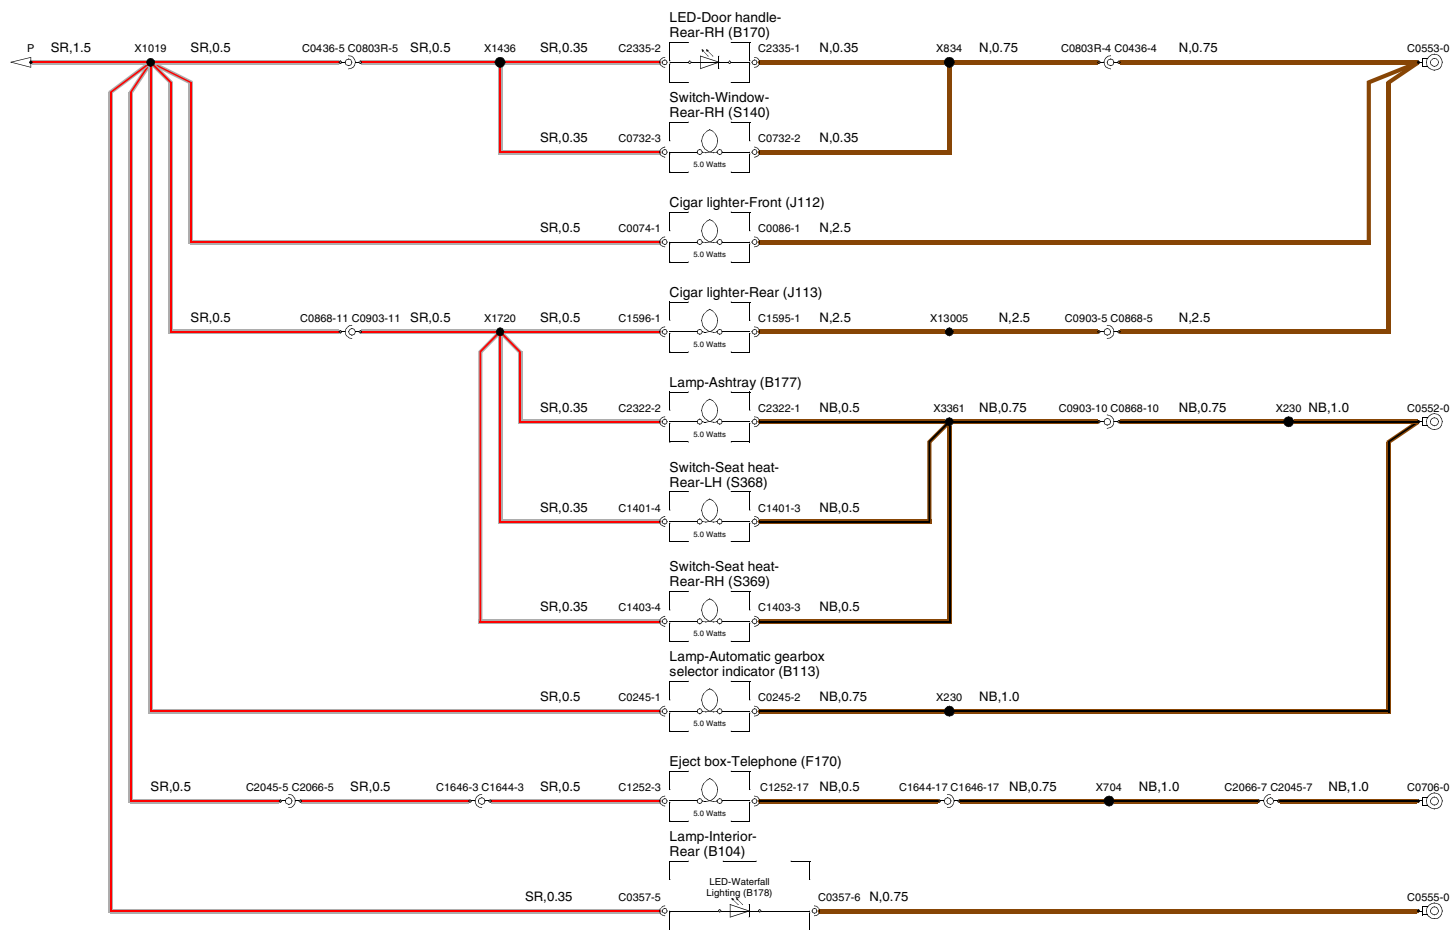



46 INTERIOR ILLUMINATION

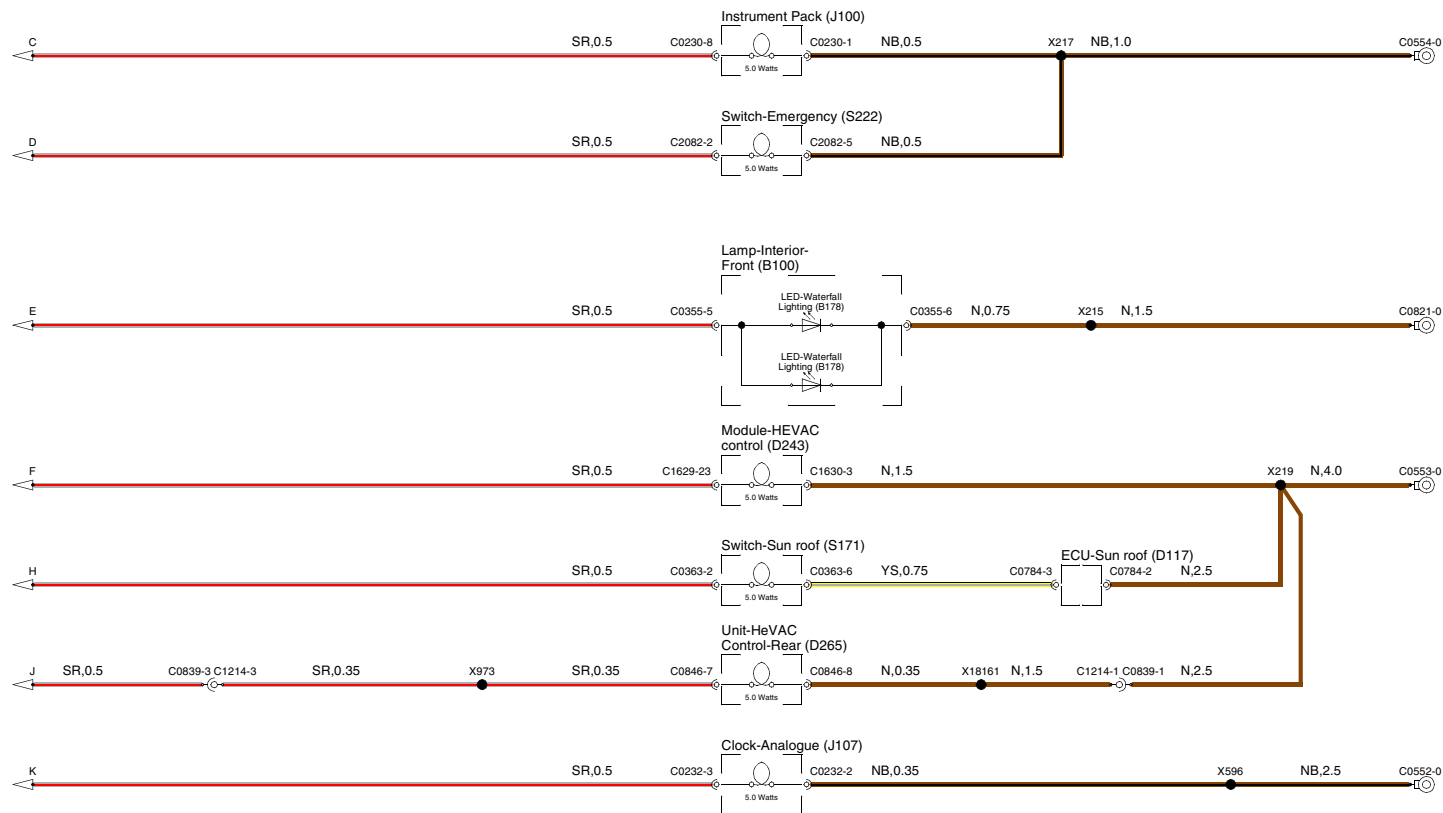


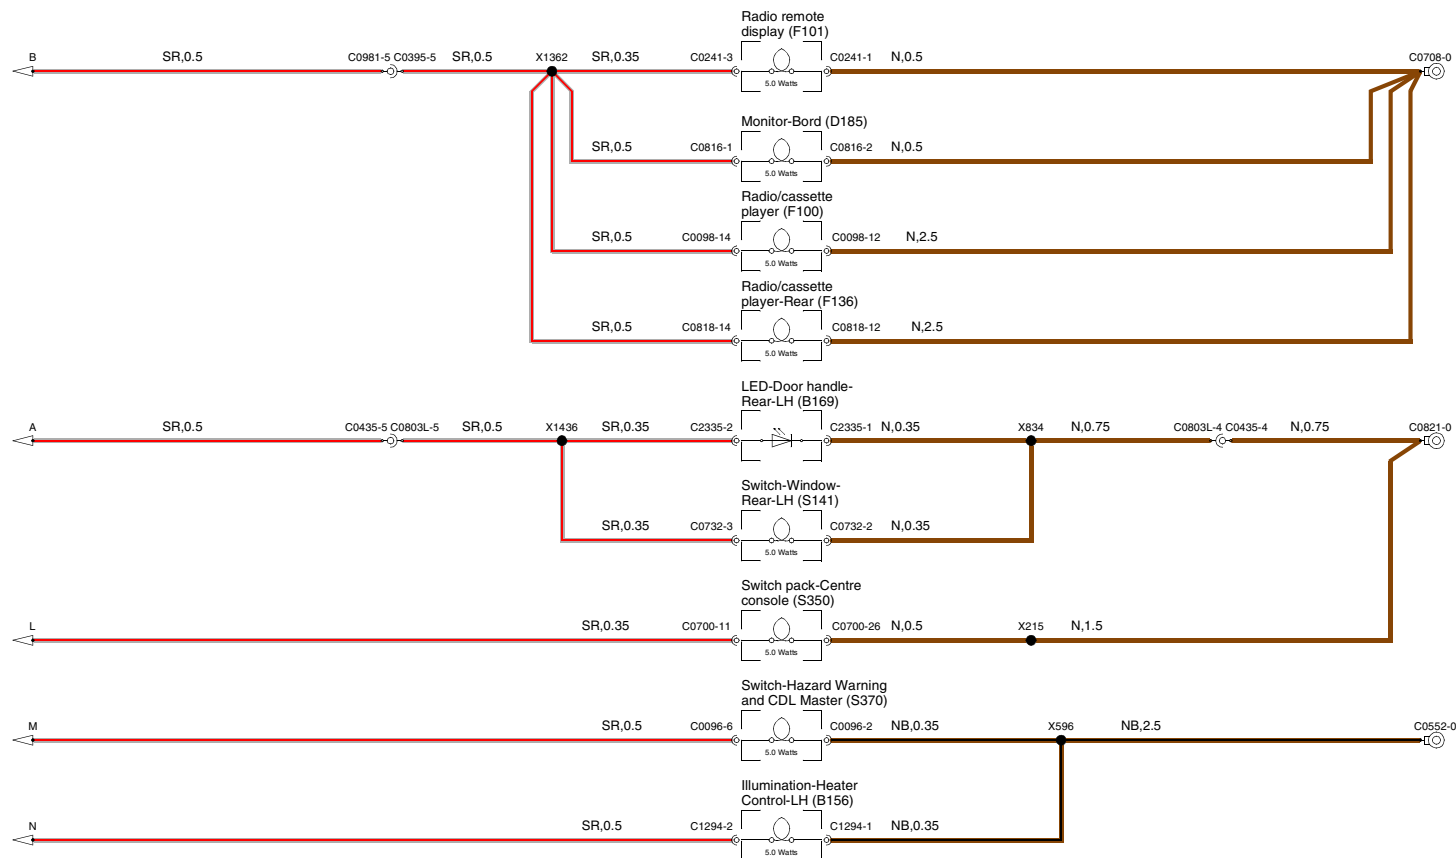


46 INTERIOR ILLUMINATION

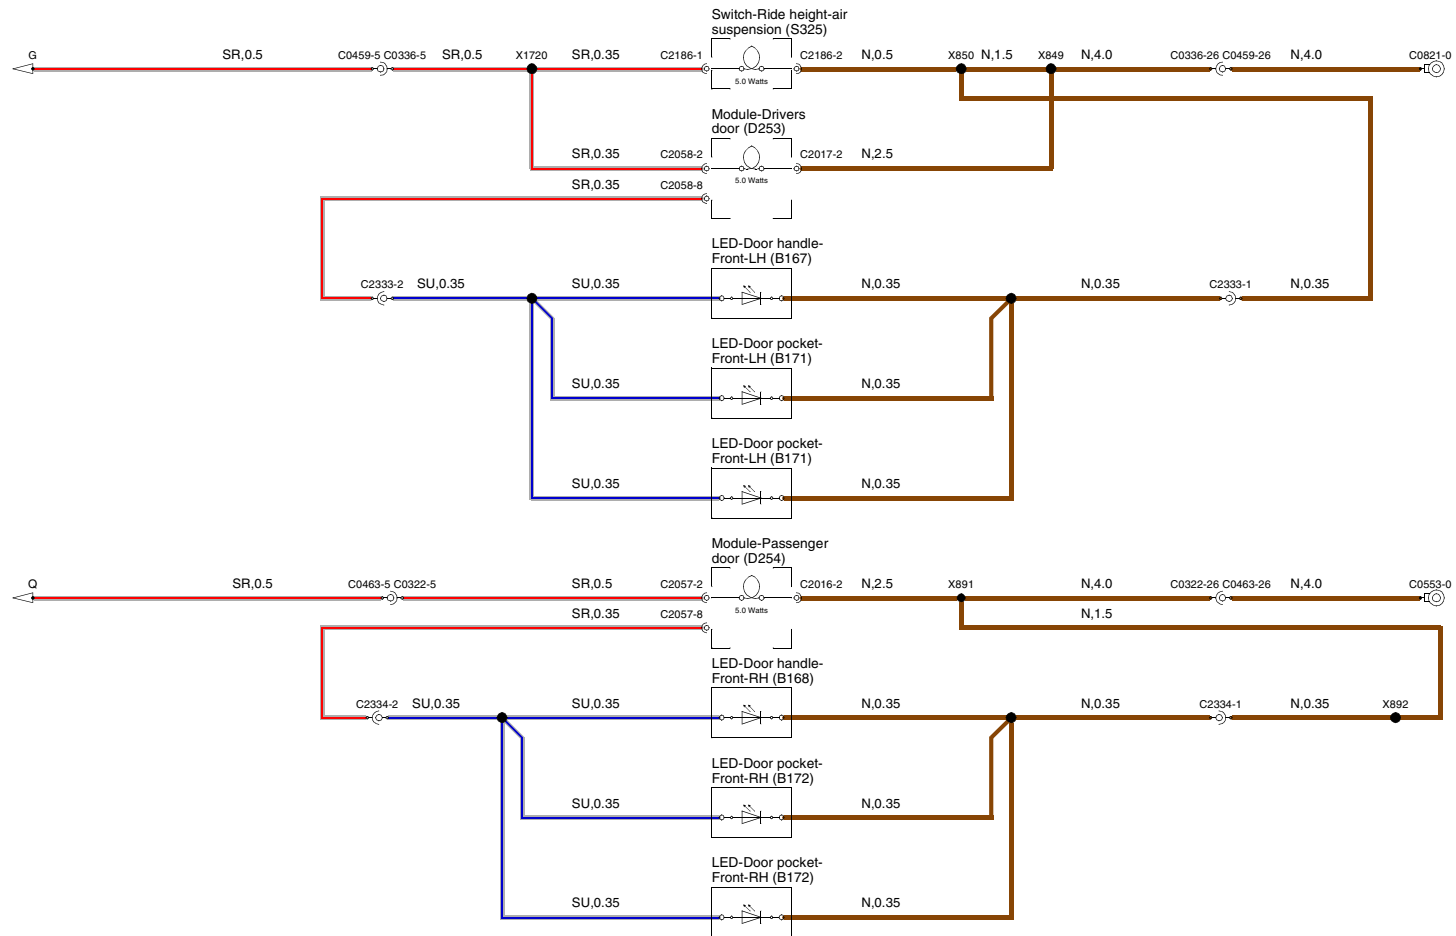


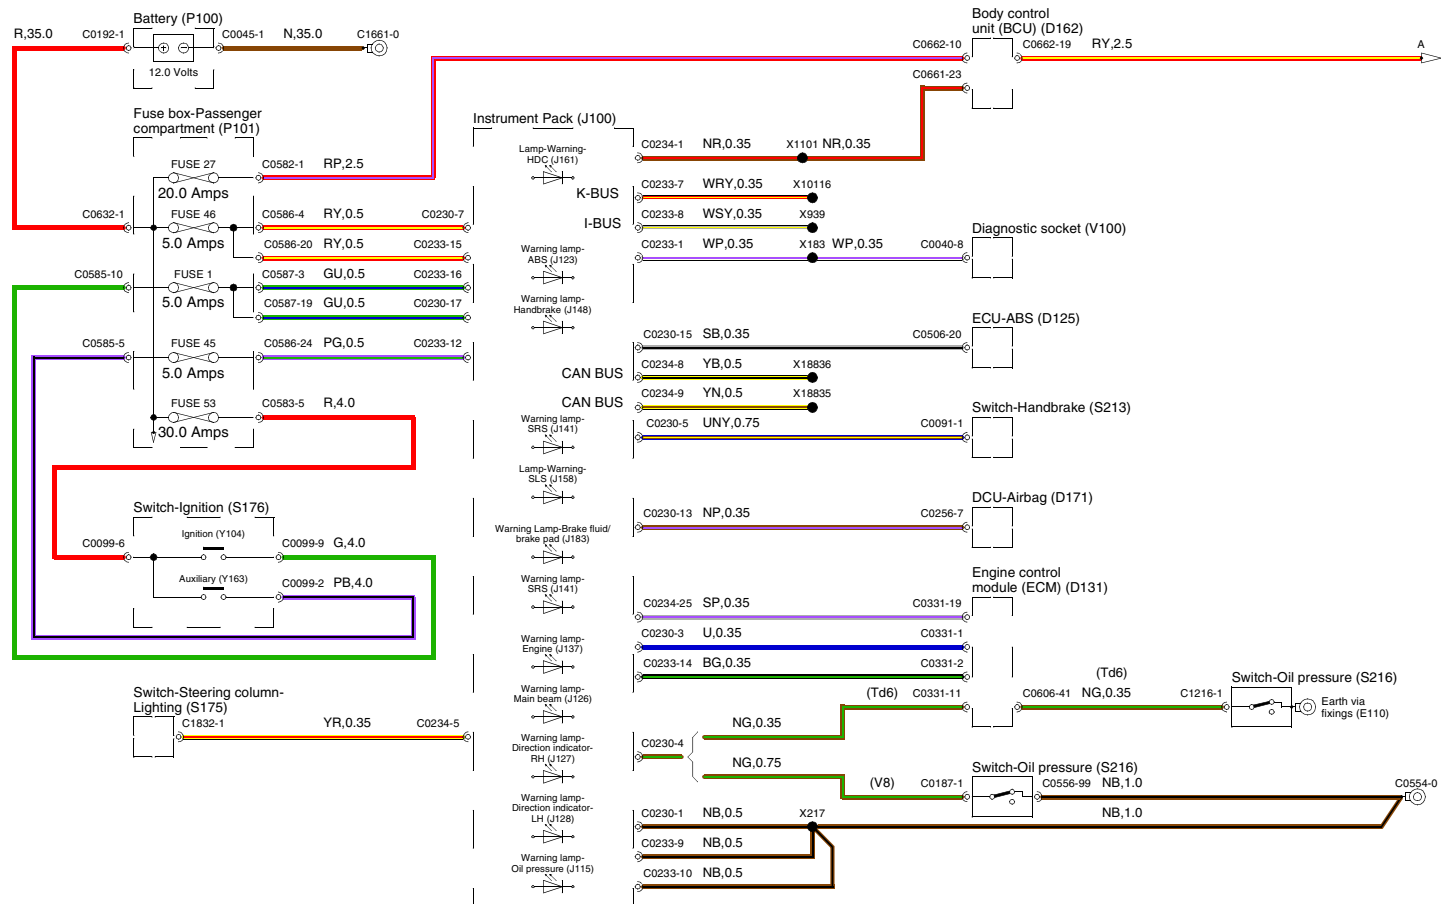


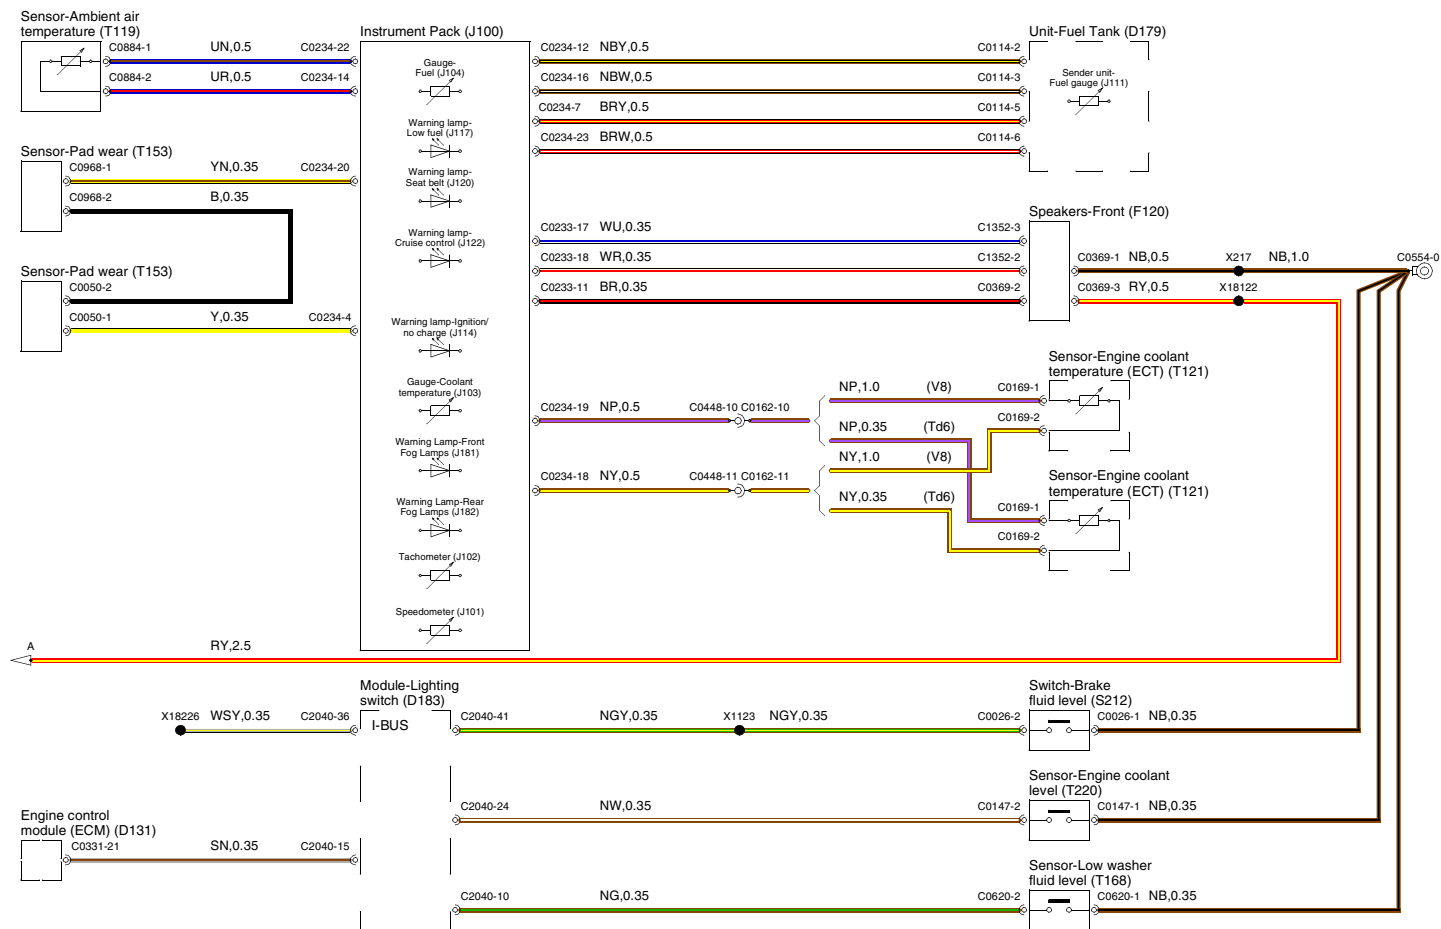

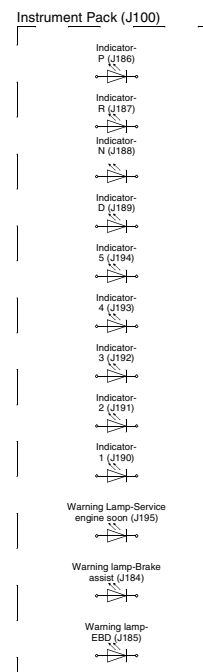


47 ROTARY COUPLER

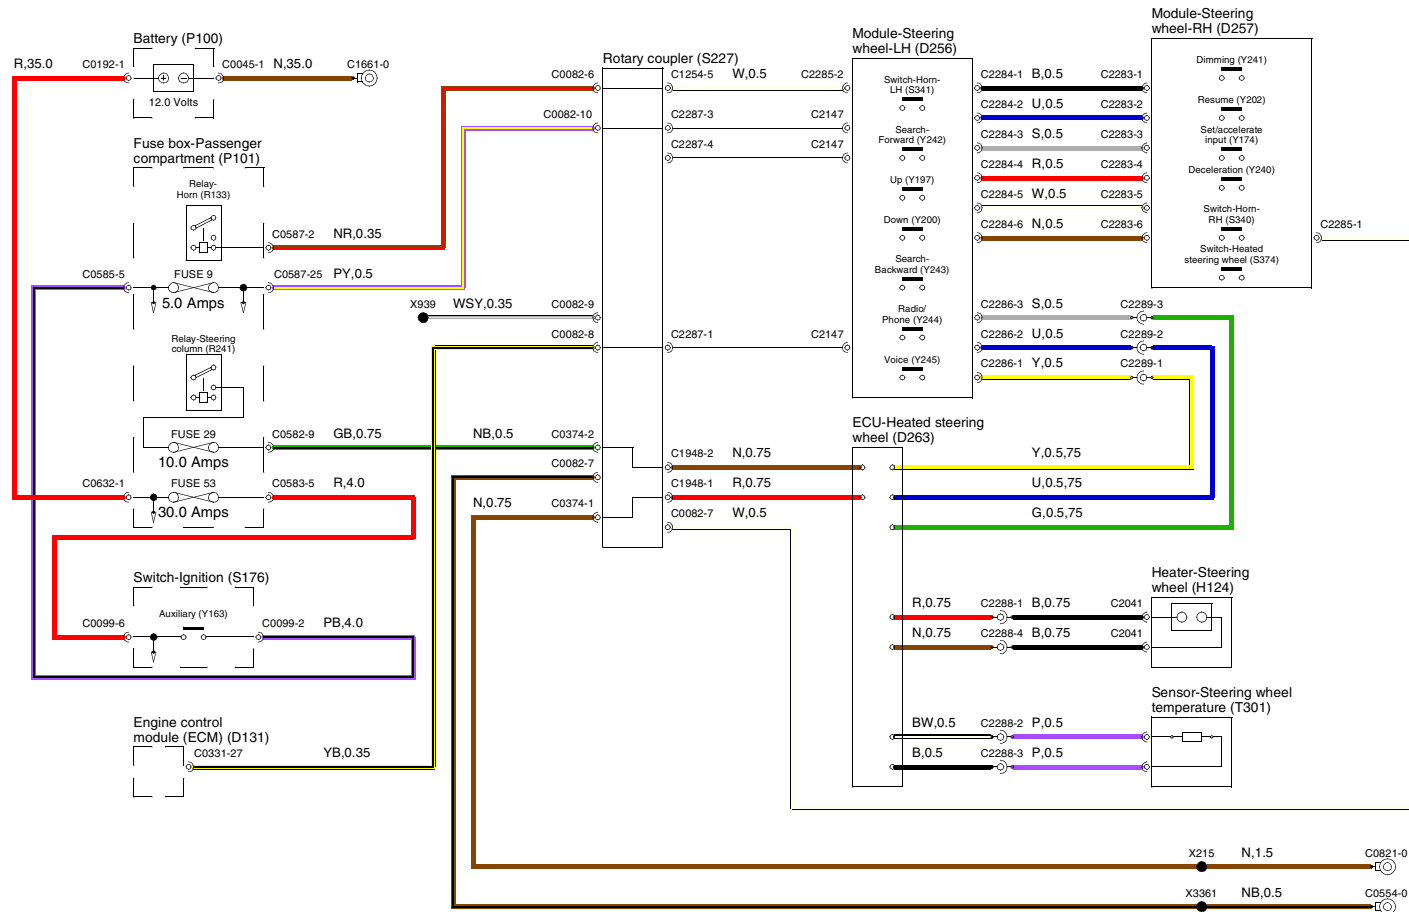


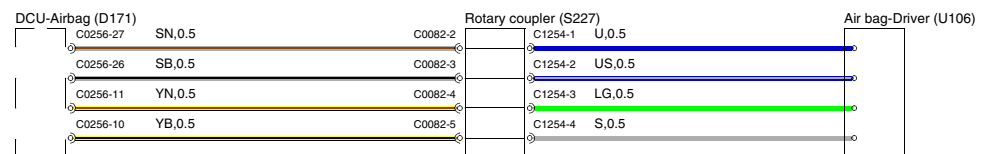


48 CLOCK

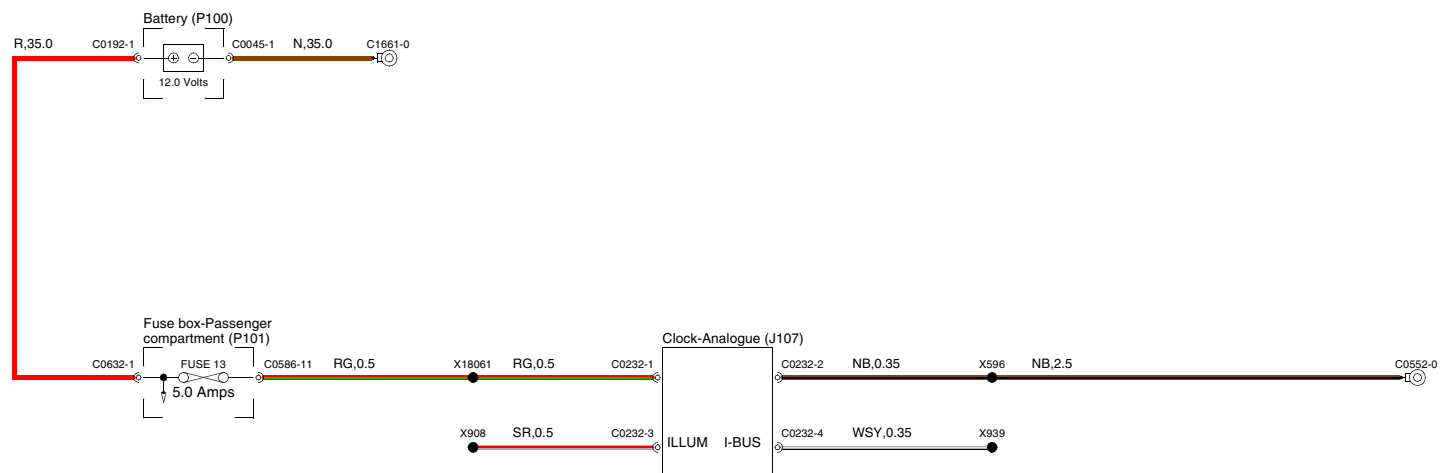


48 HORN (S)

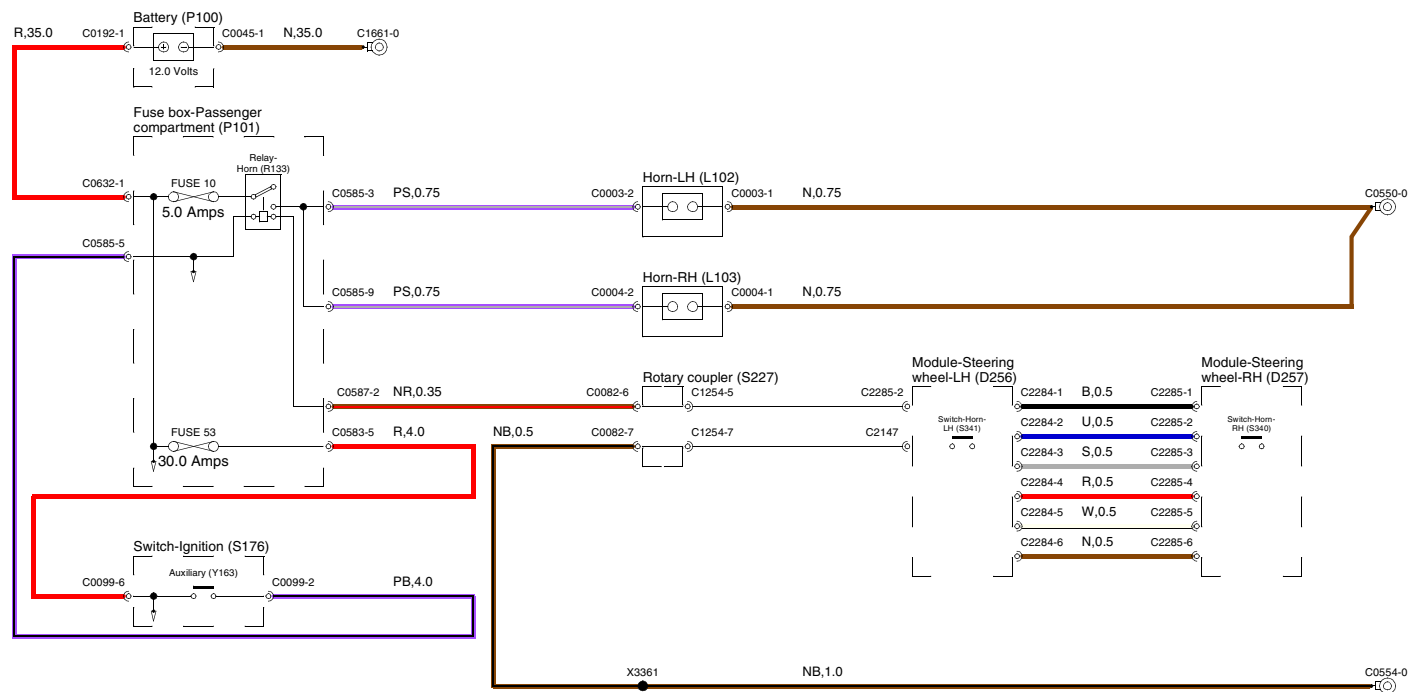



49 ACCESSORY SOCKET

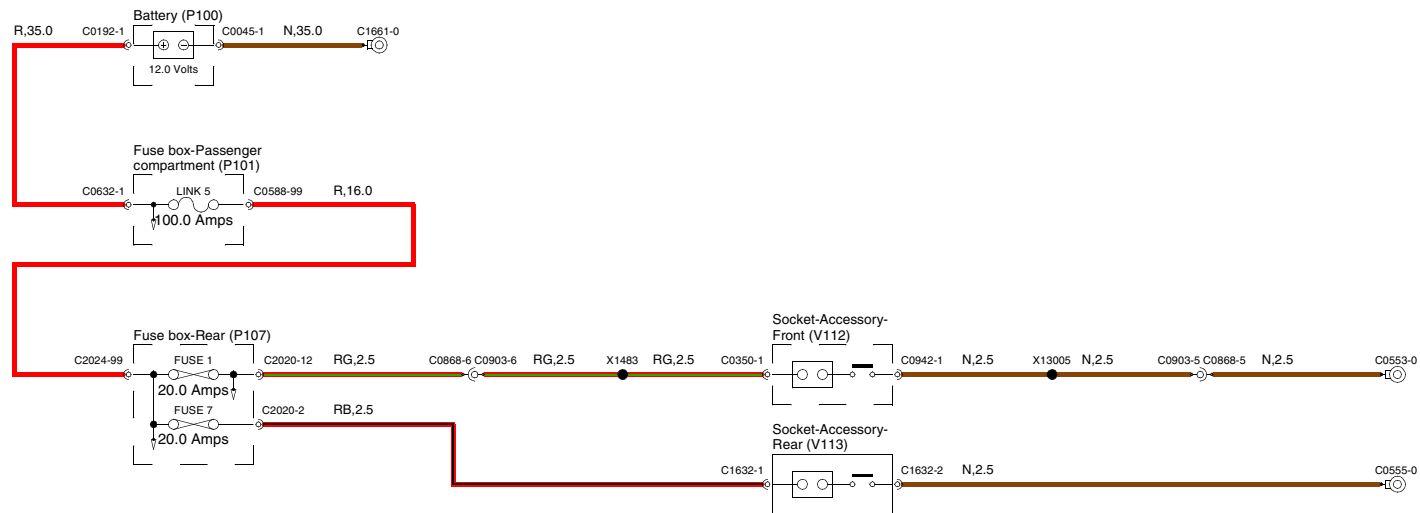



49 CIGAR LIGHTER

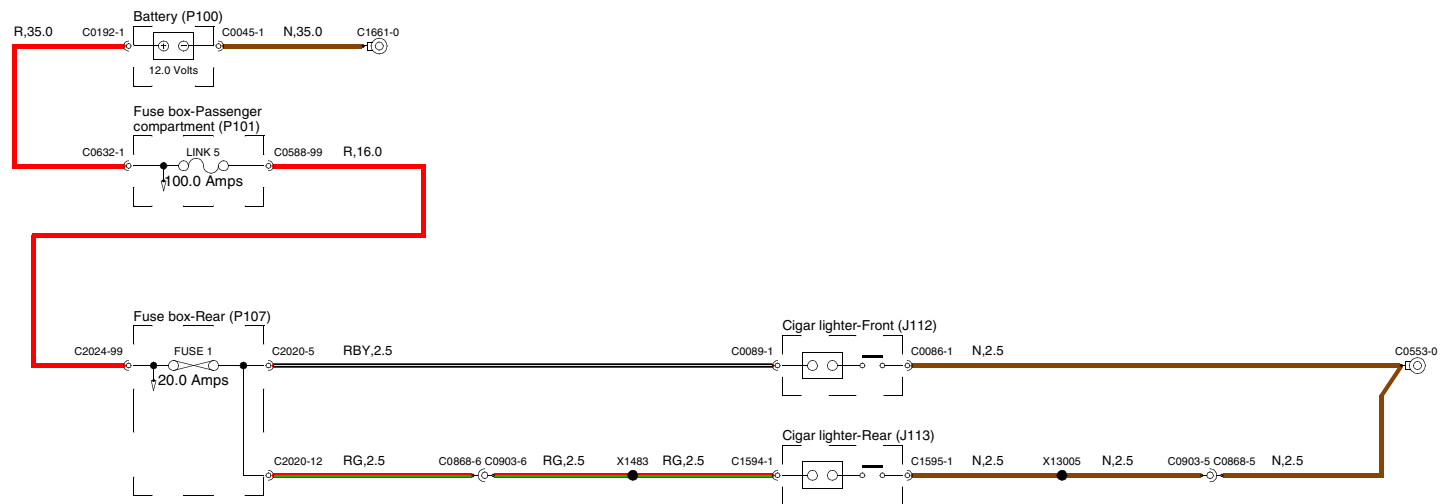


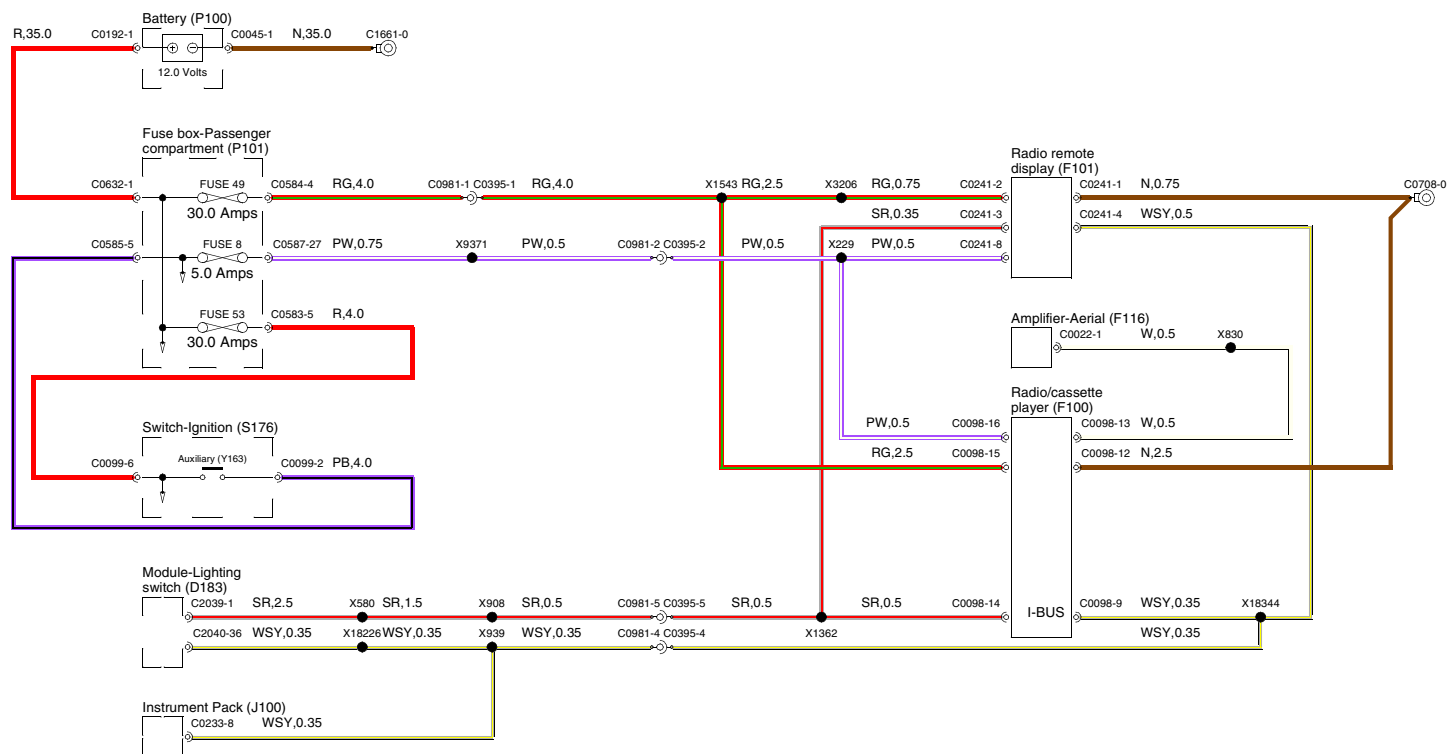


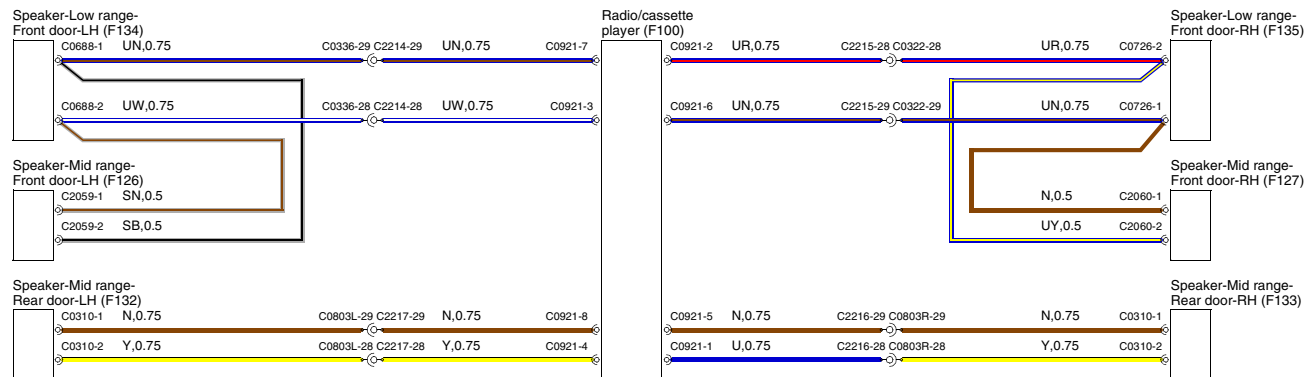


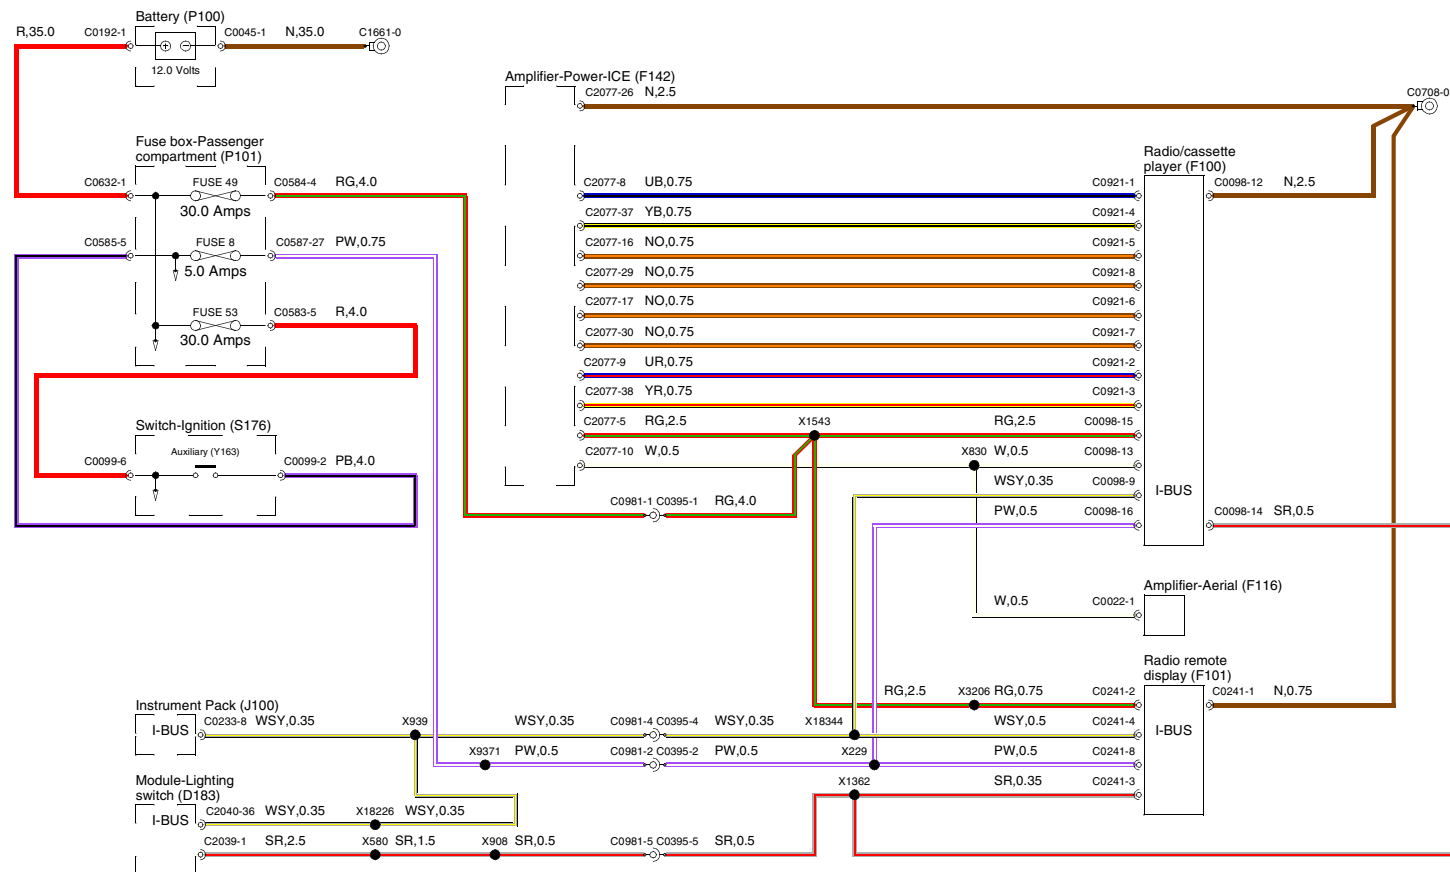


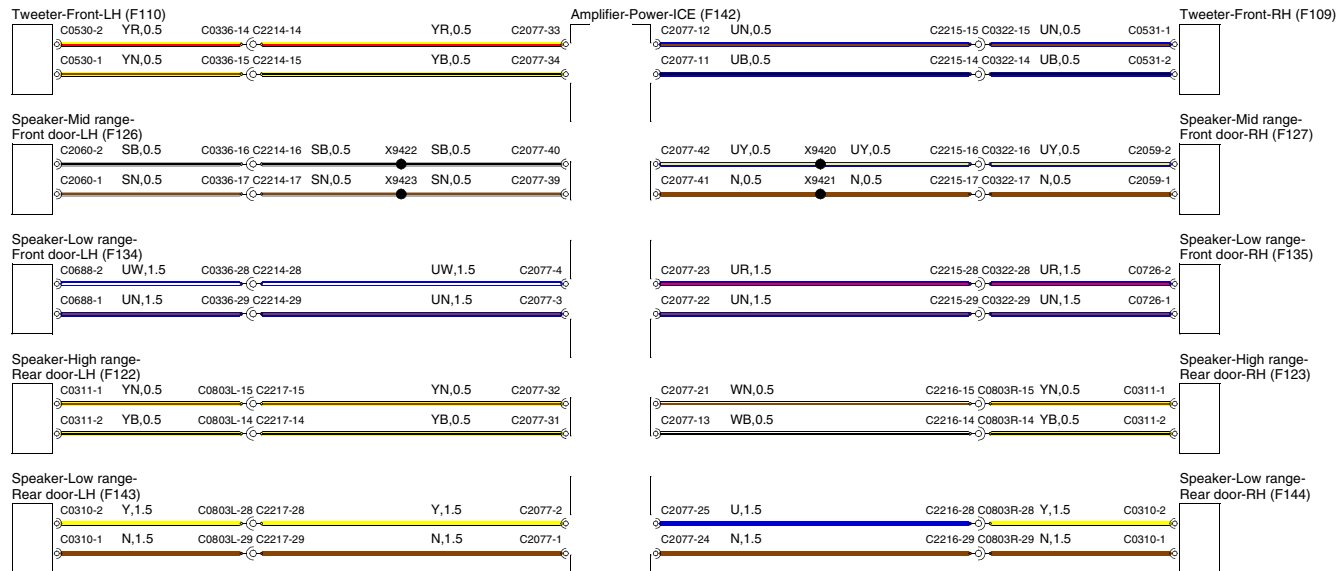


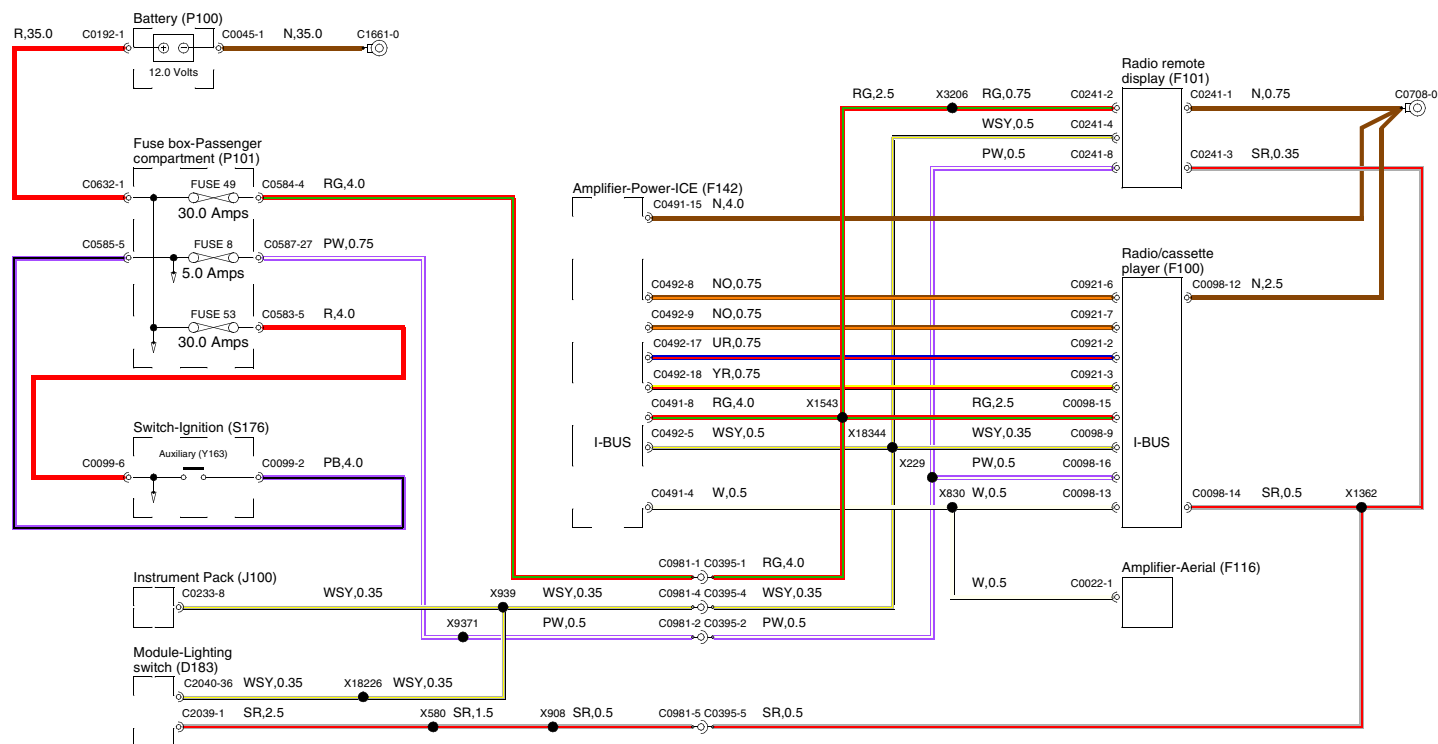


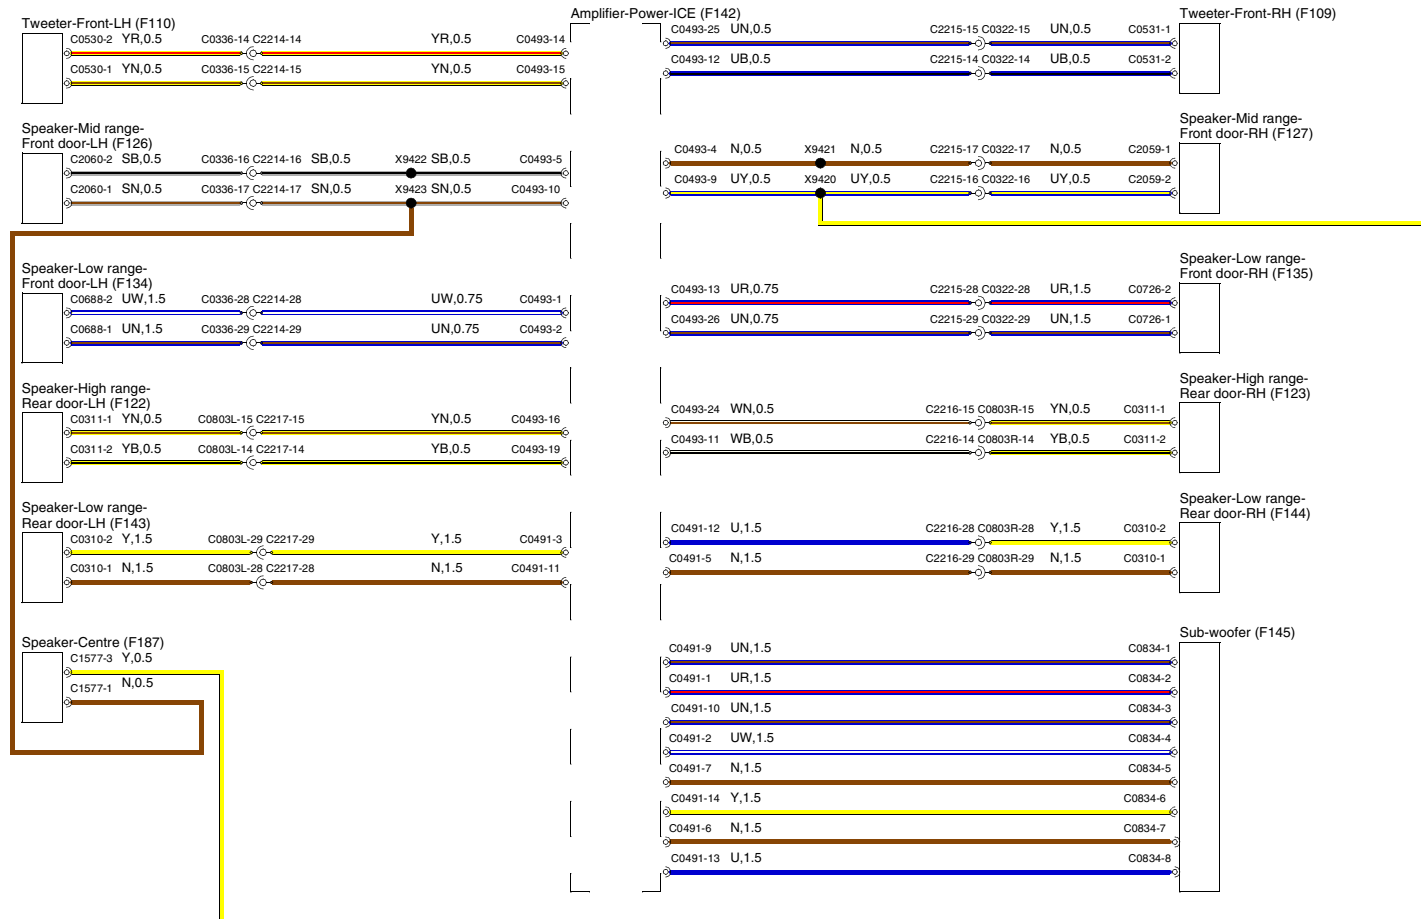


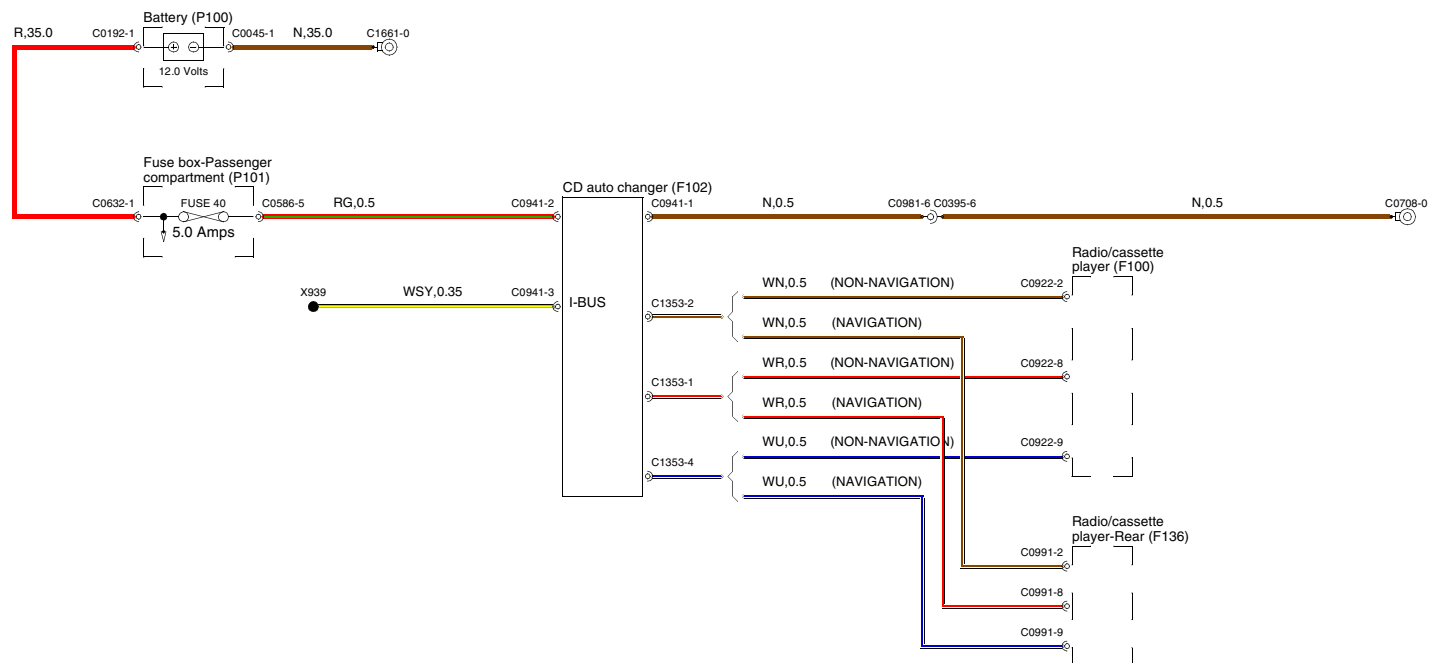


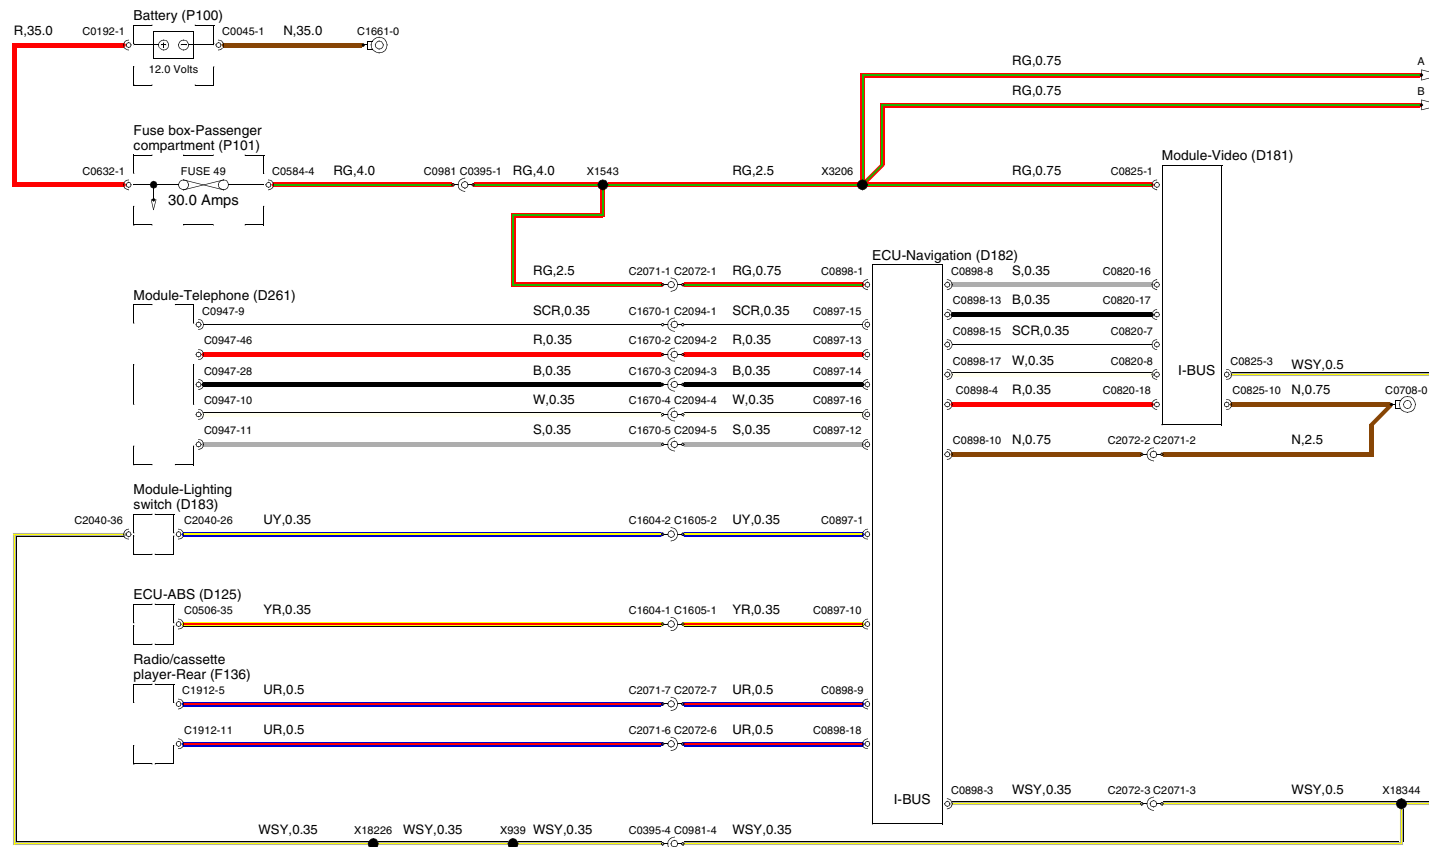


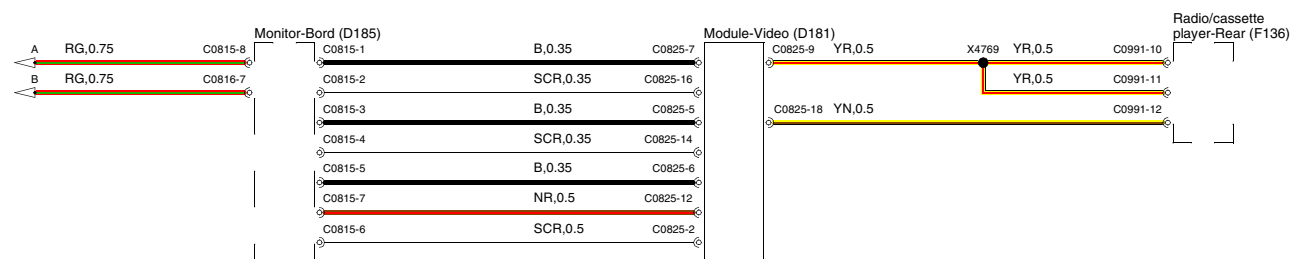


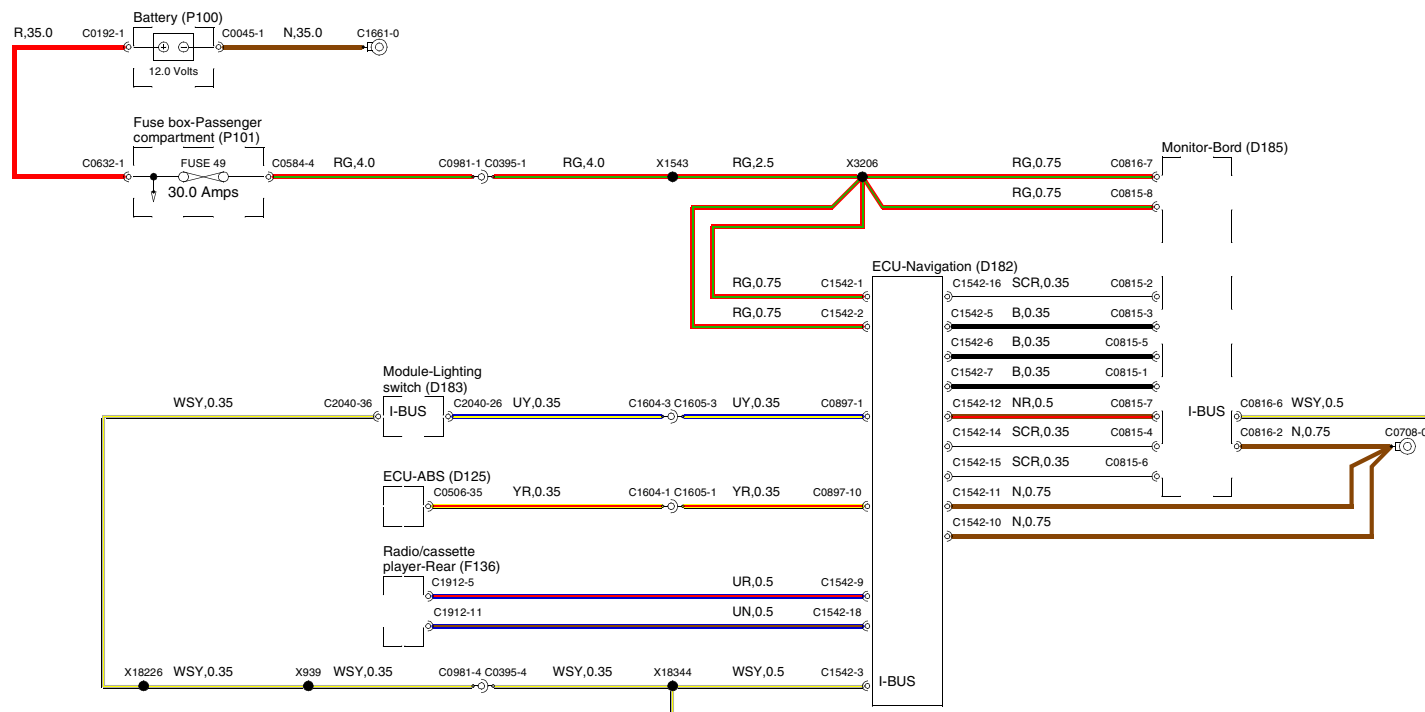


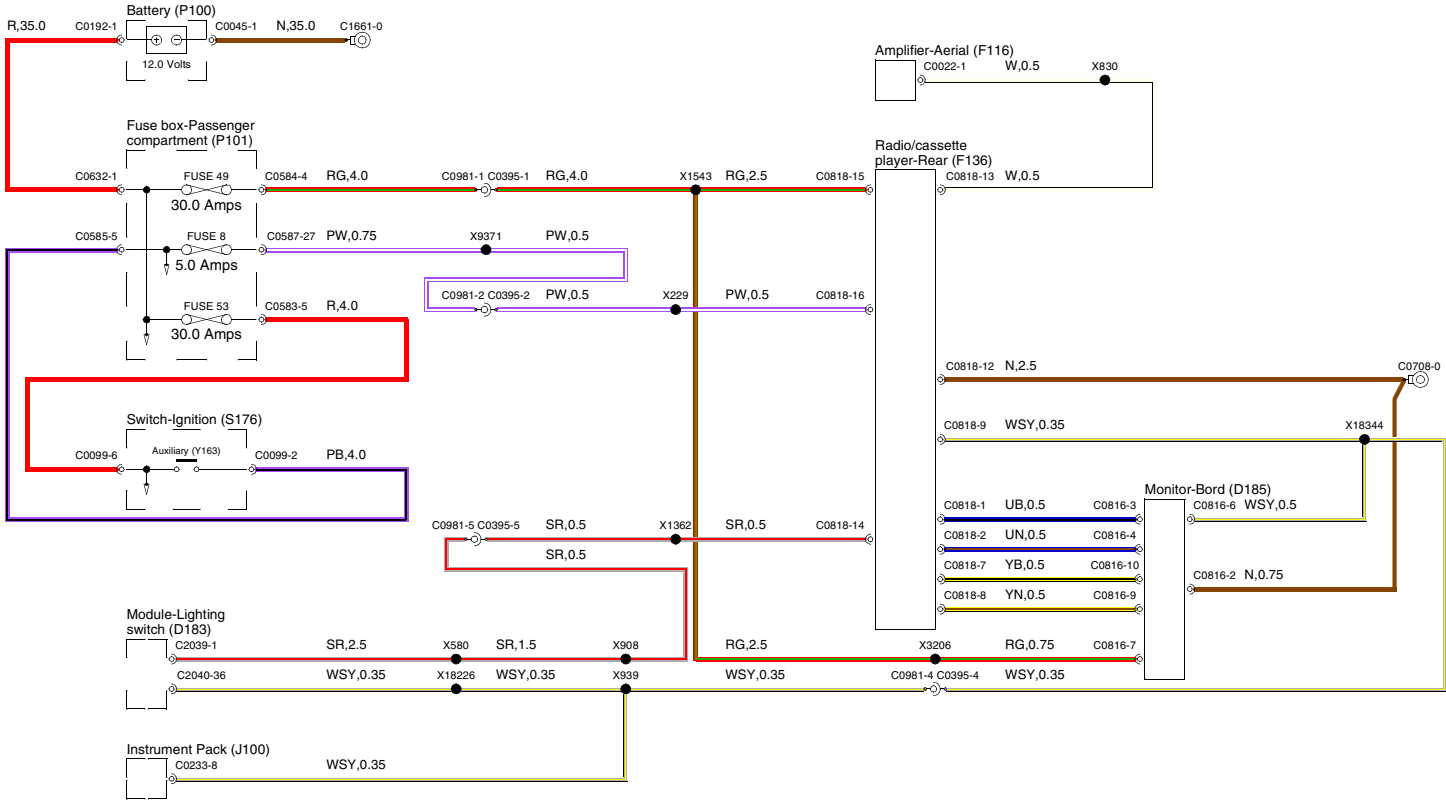


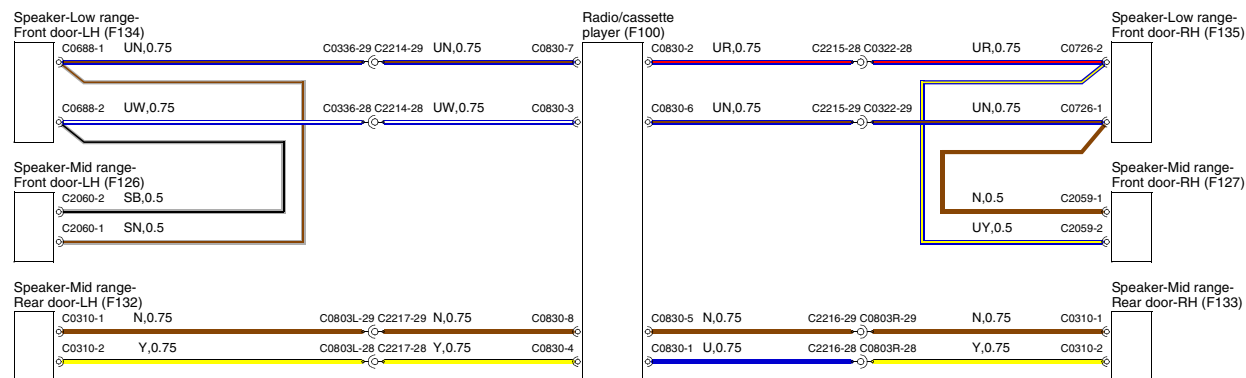


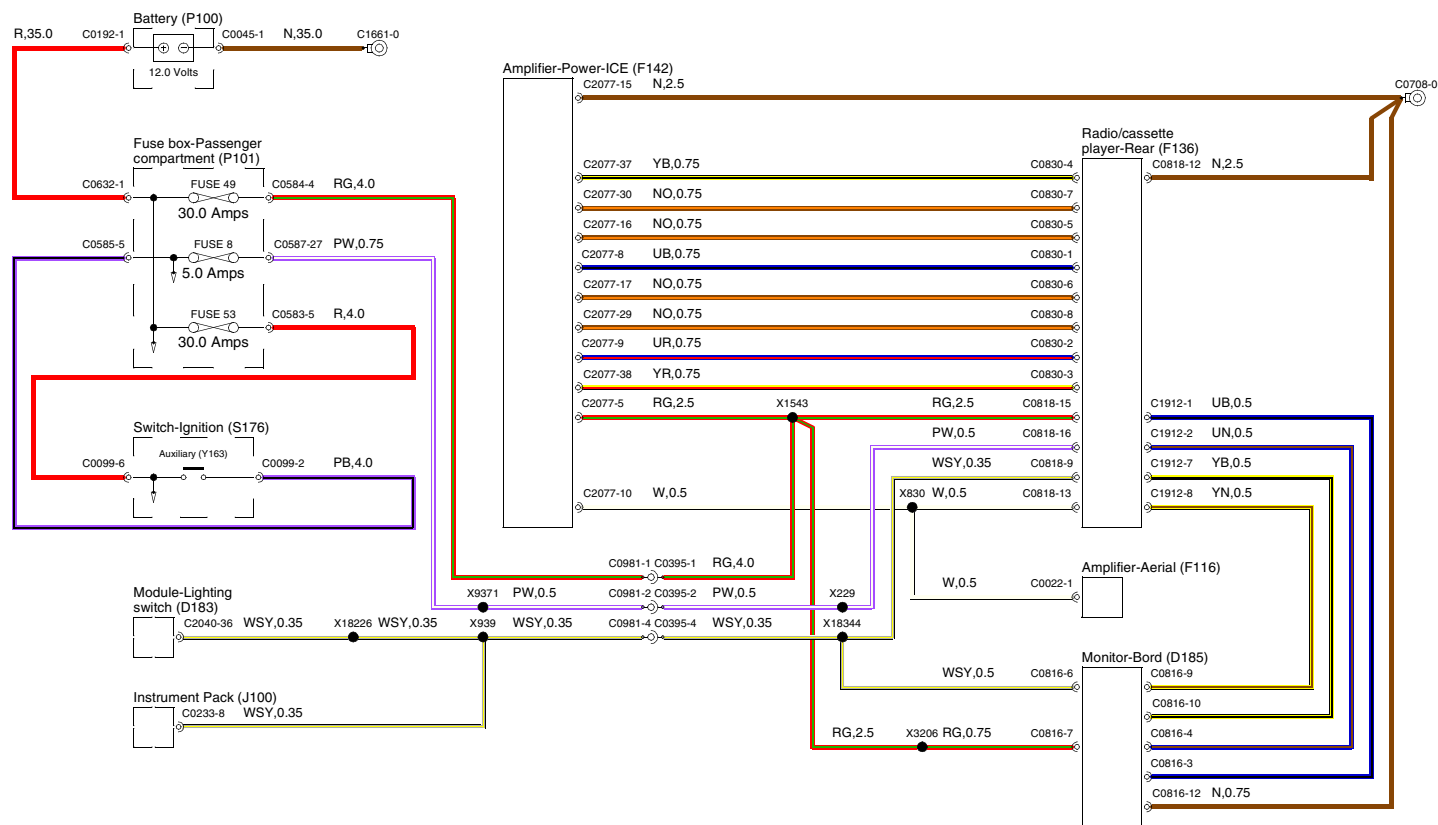


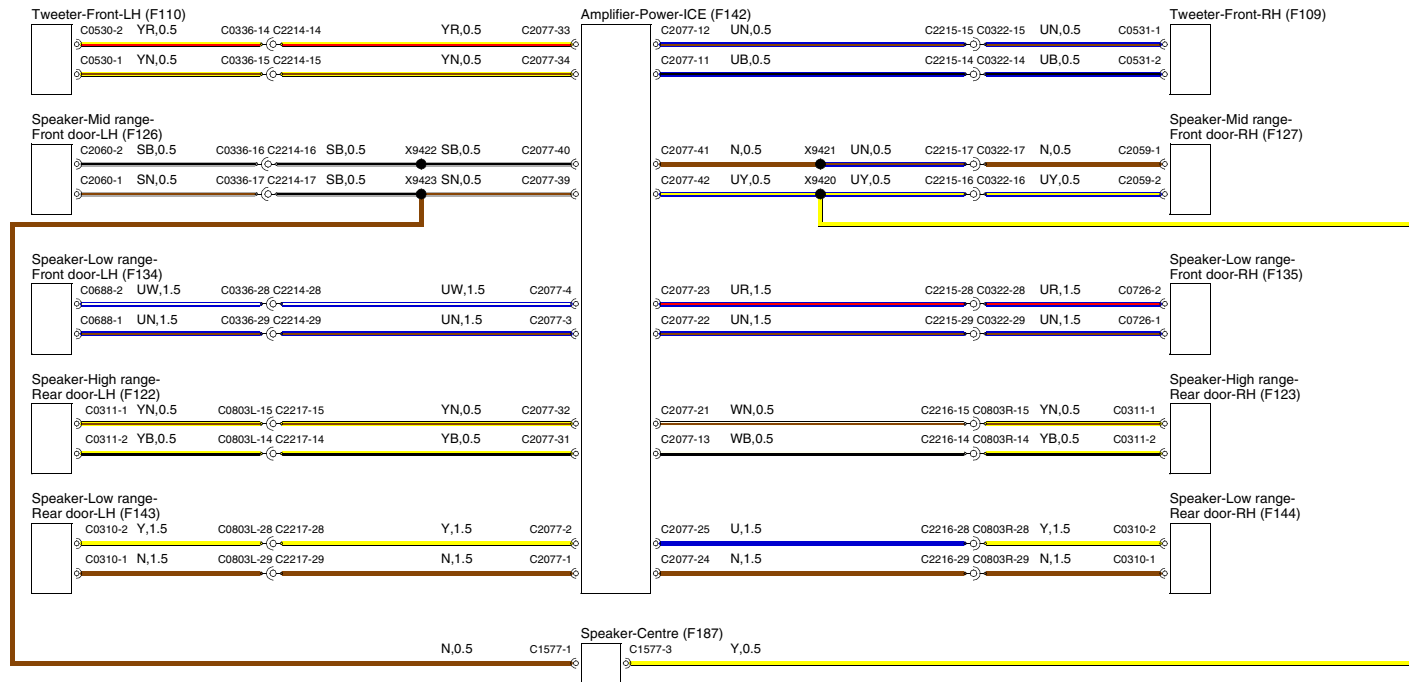


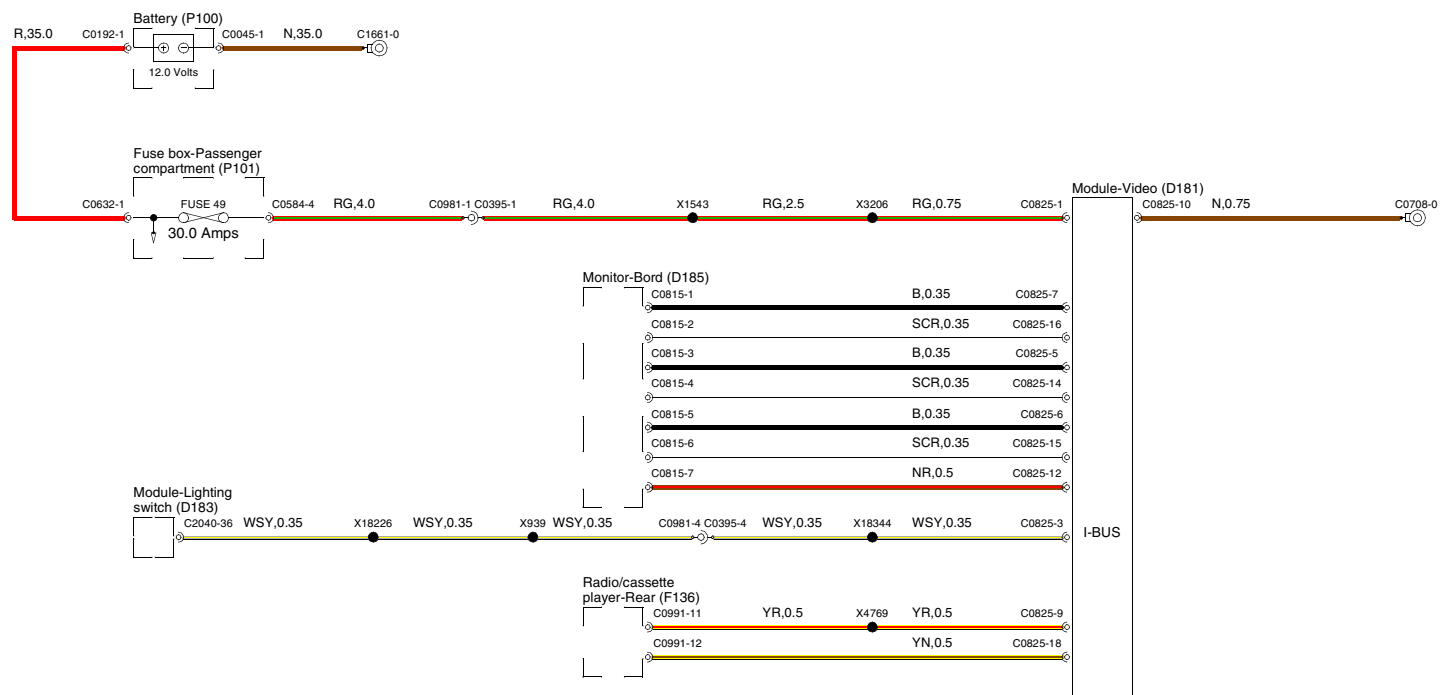

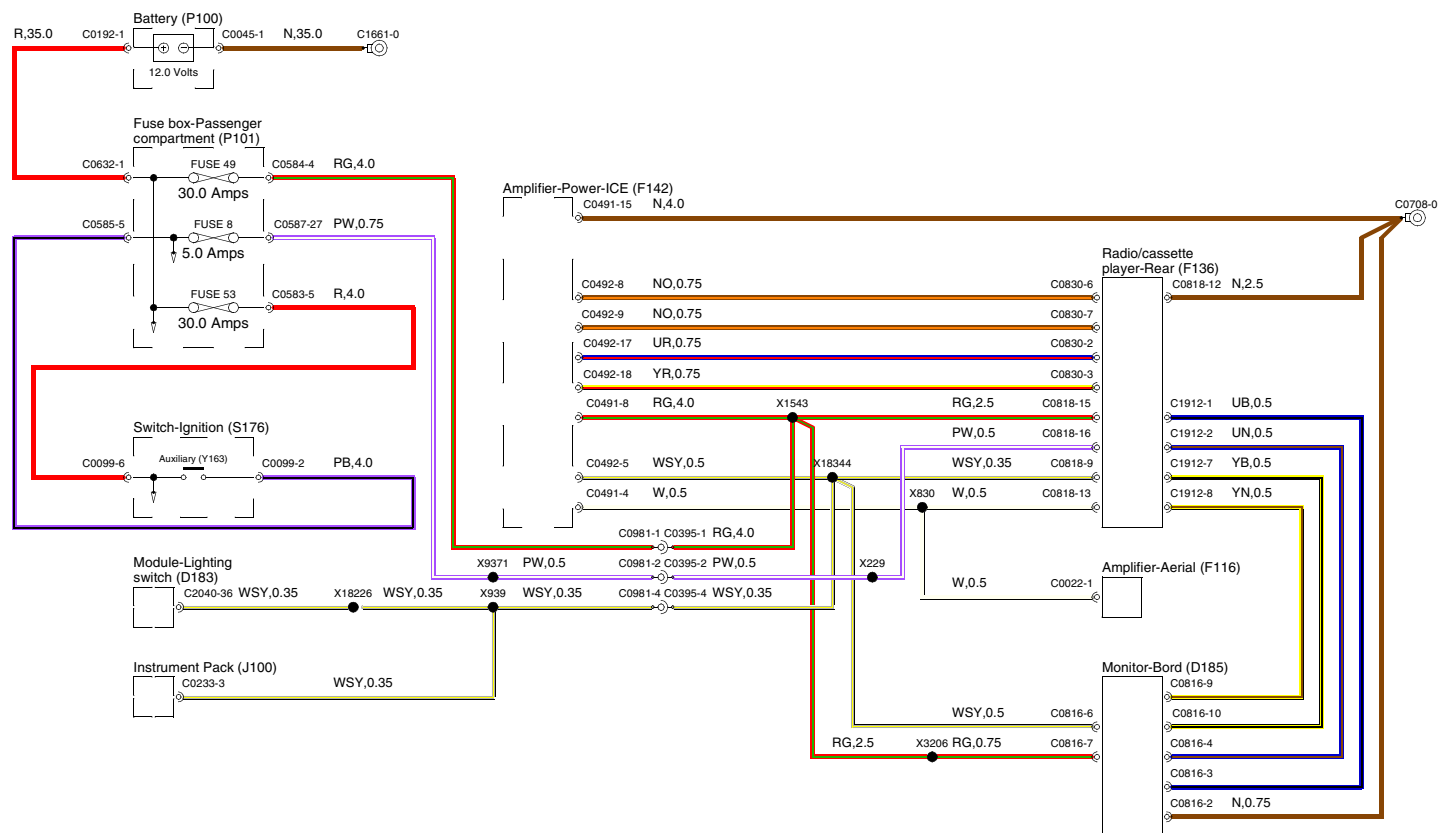


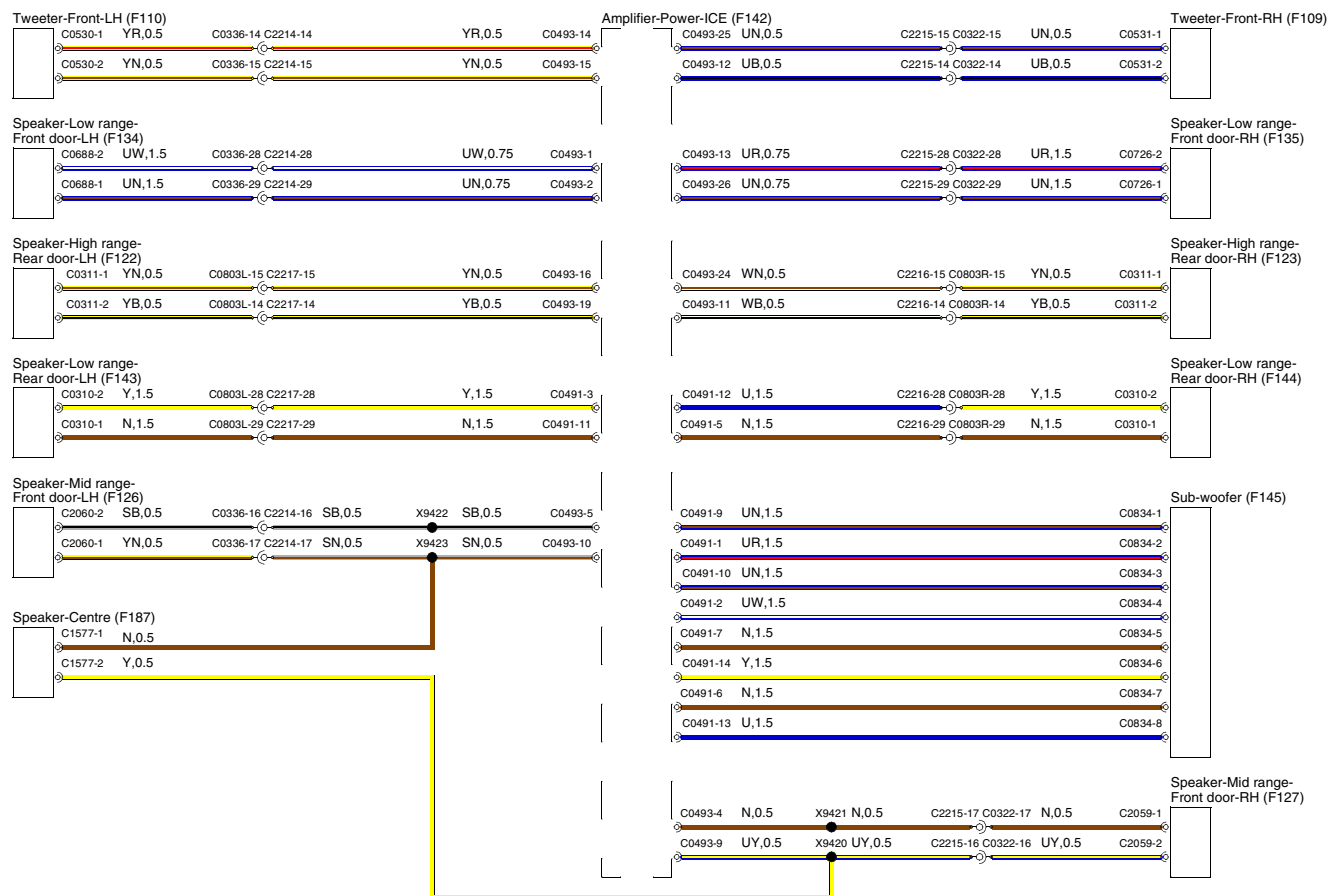

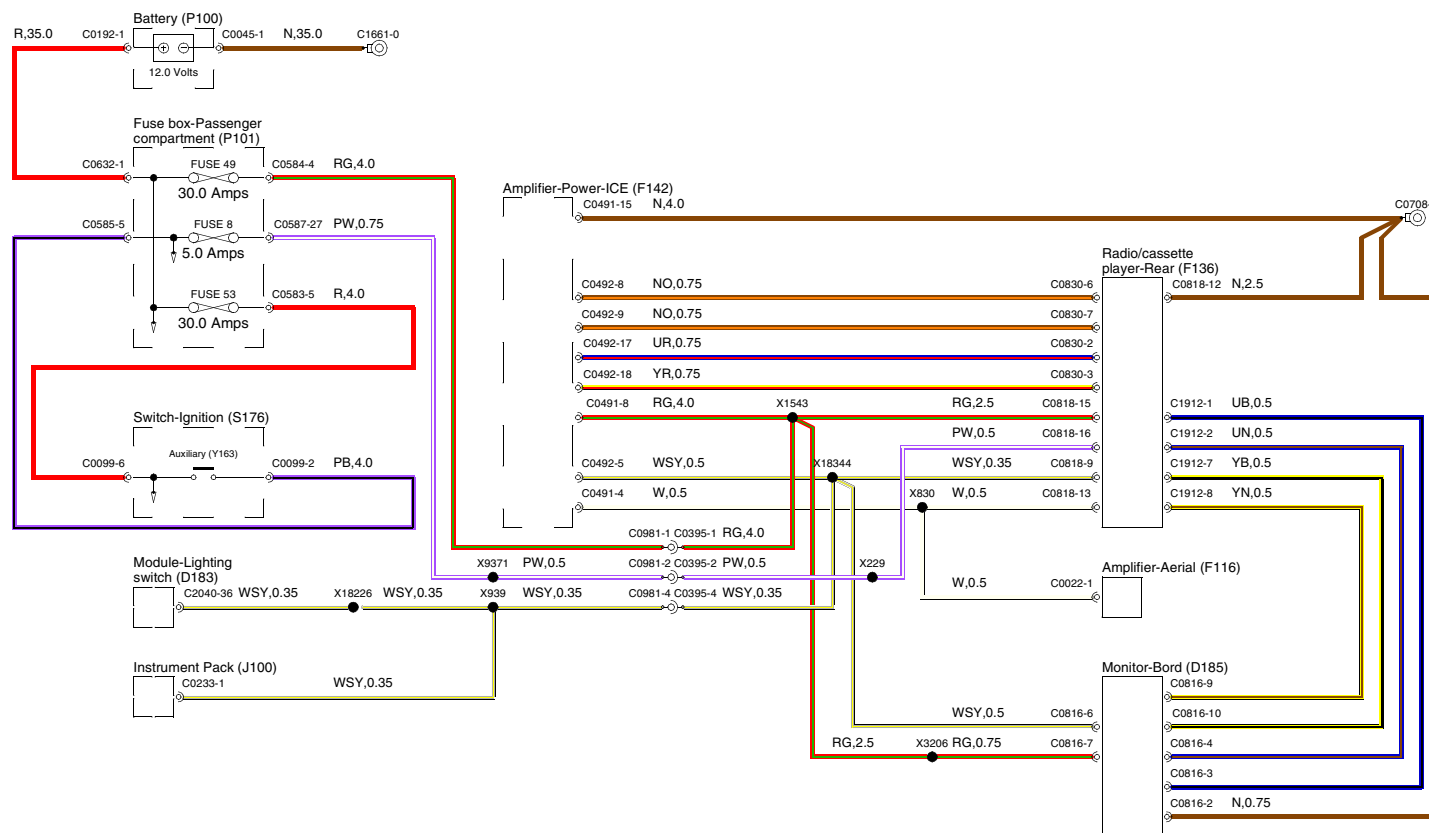


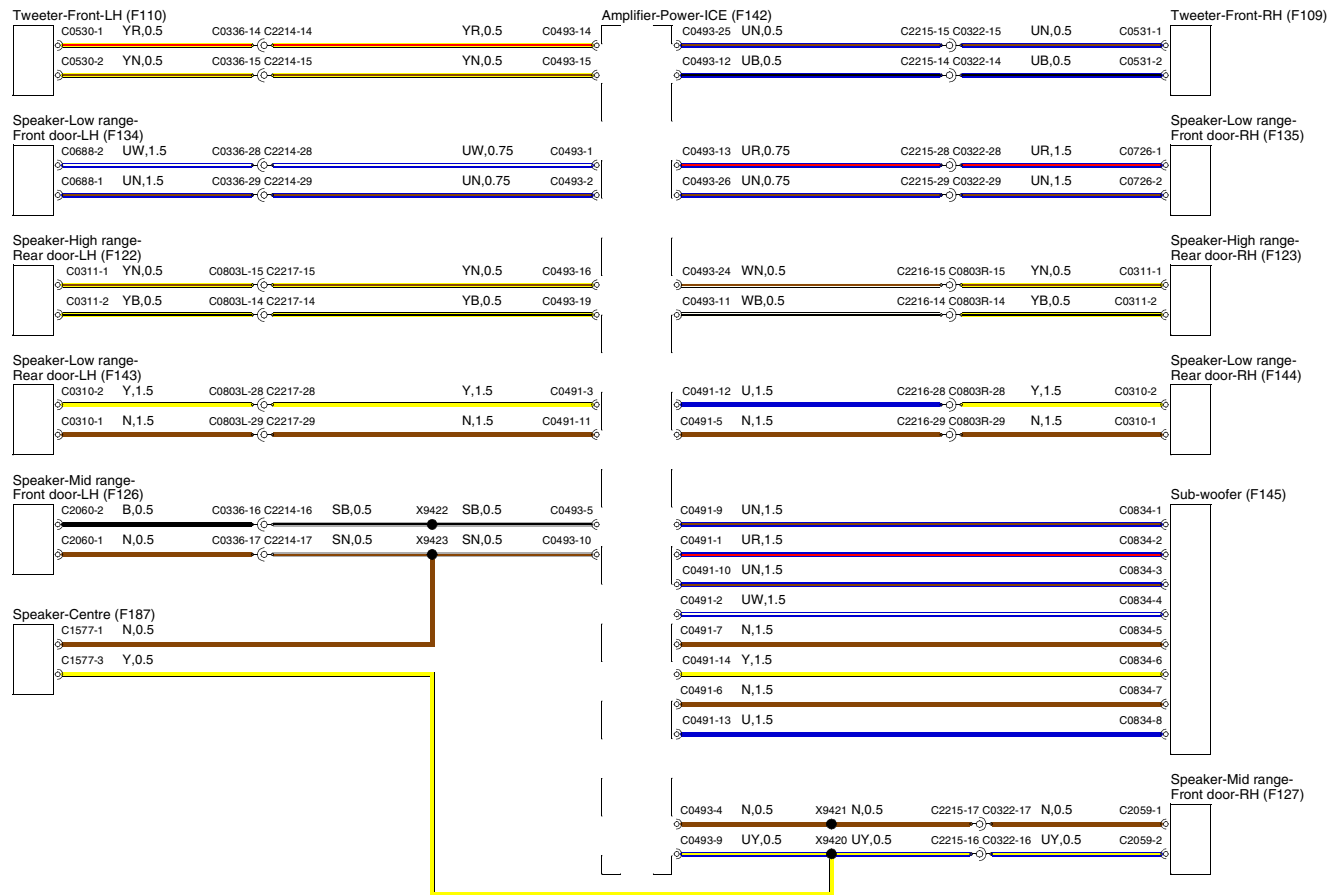


65 SPLICES AND CENTRE TAPS

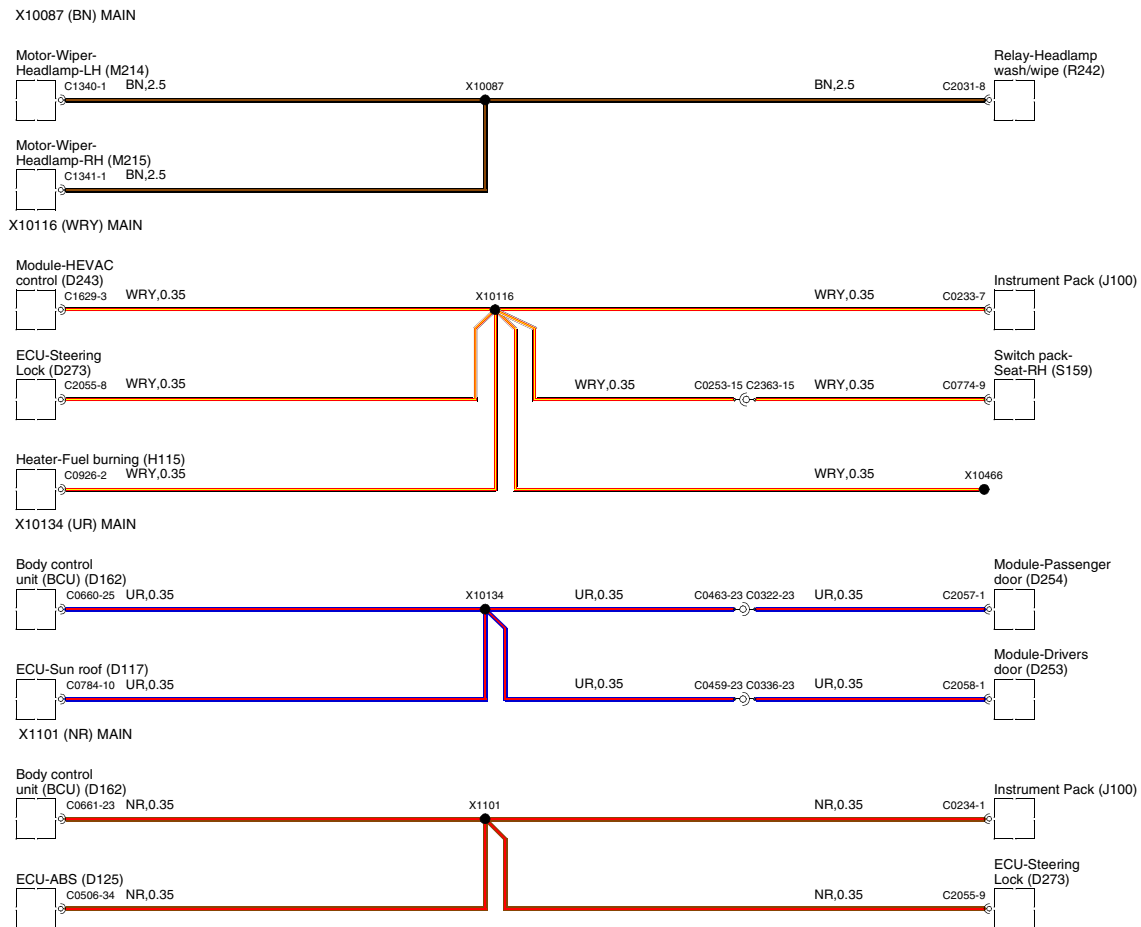


X10148 (RU) MAIN

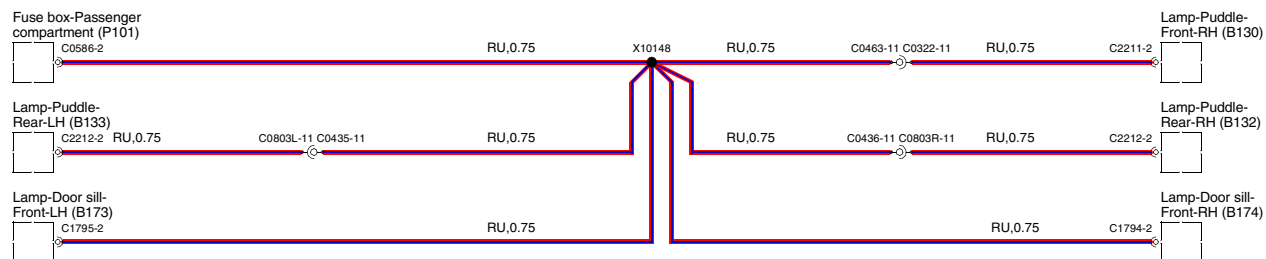


X1019 (SR) MAIN

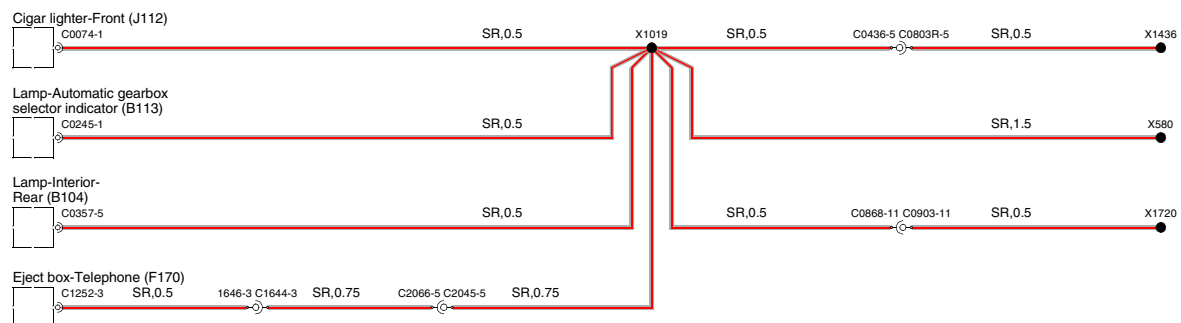


X1123 (NGY) MAIN

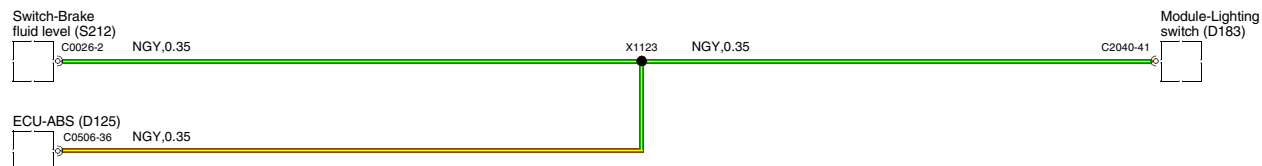


65 SPLICES AND CENTRE TAPS

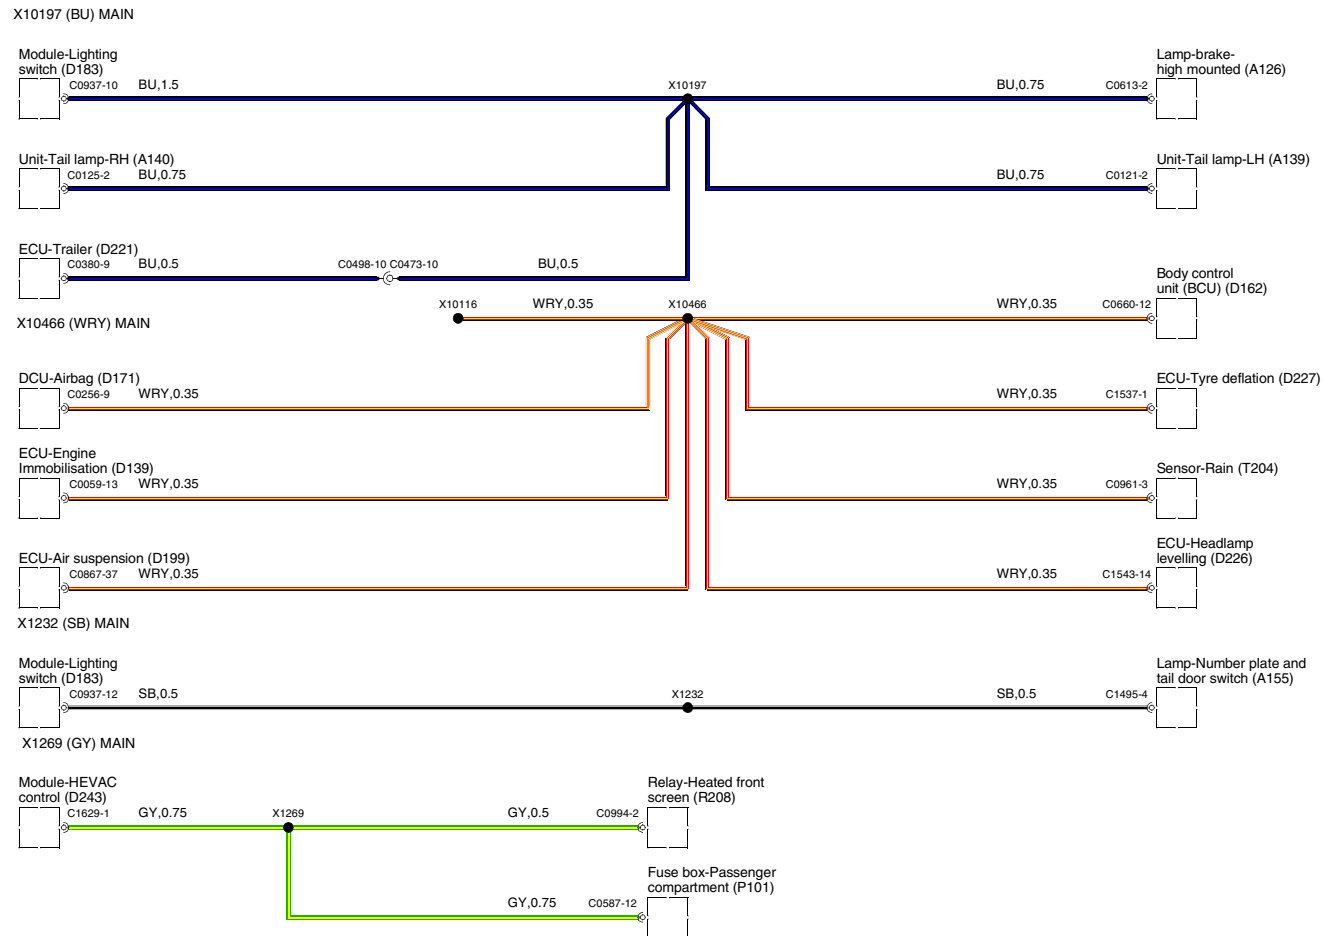

X1301 (BG) MAIN

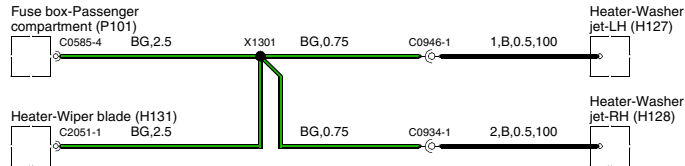

X13141 (WY) MAIN

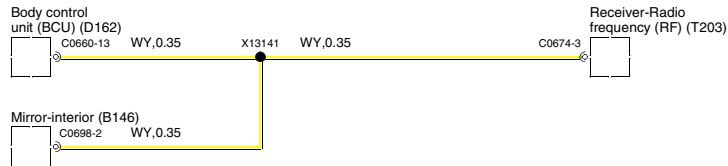

X13332 (NU) MAIN



X13333 (NR) MAIN




X13334 (NB) MAIN




X13335 (NW) MAIN




X13502 (SG) MAIN

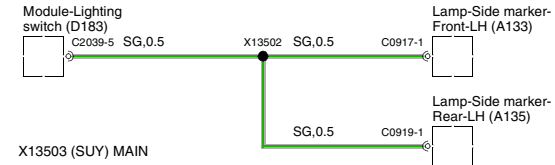


X13503 (SUY) MAIN

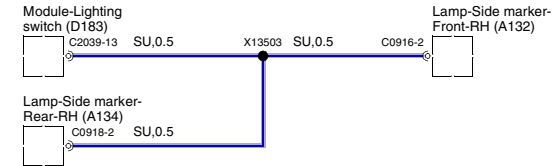


X13727 (WB) MAIN

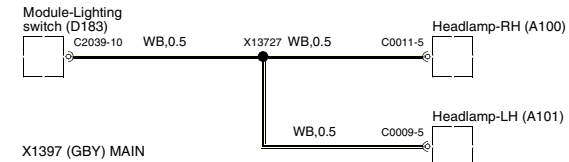

X1397 (GBY) MAIN

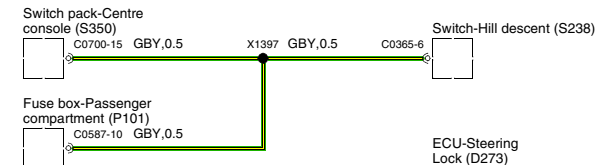


X1445 (PB) MAIN

 


65 SPLICES AND CENTRE TAPS


X1596 (NG) MAIN

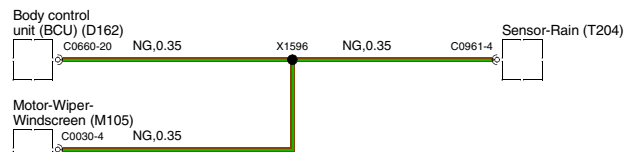


X18061 (RG) MAIN

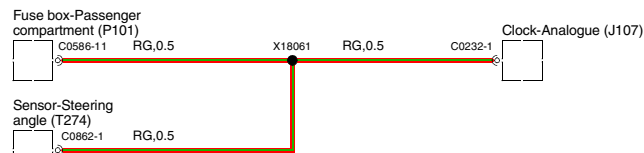


X181 (UR) MAIN

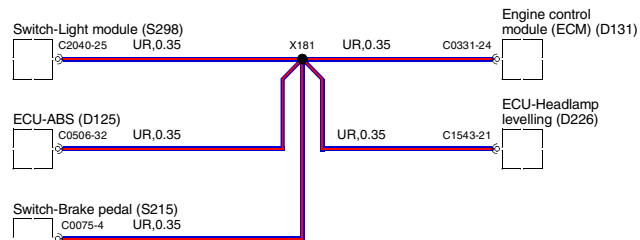


X18226 (WSY) MAIN

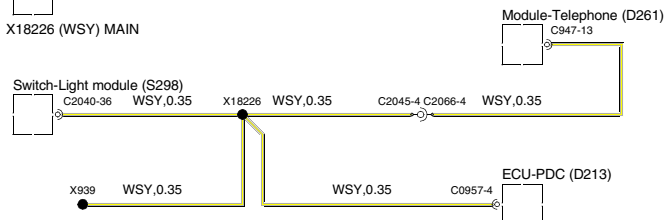


X18121 (RY) MAIN

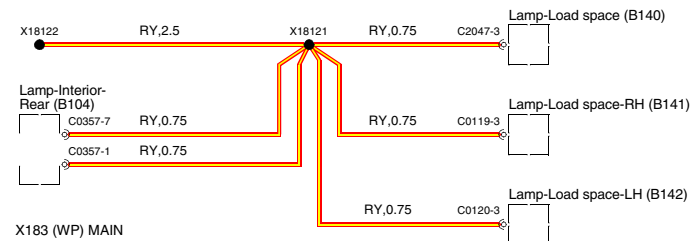


X183 (WP) MAIN

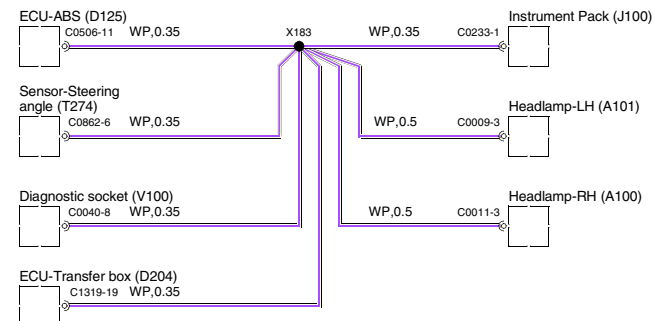


X18316 (RY) MAIN

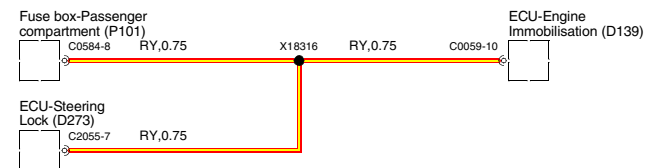

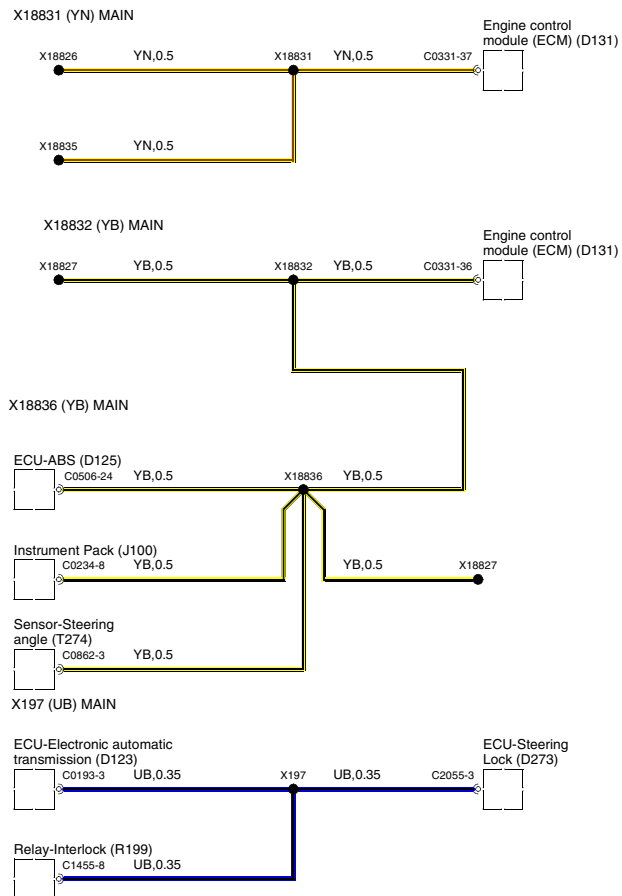


65 SPLICES AND CENTRE TAPS


X18122 (RY) MAIN

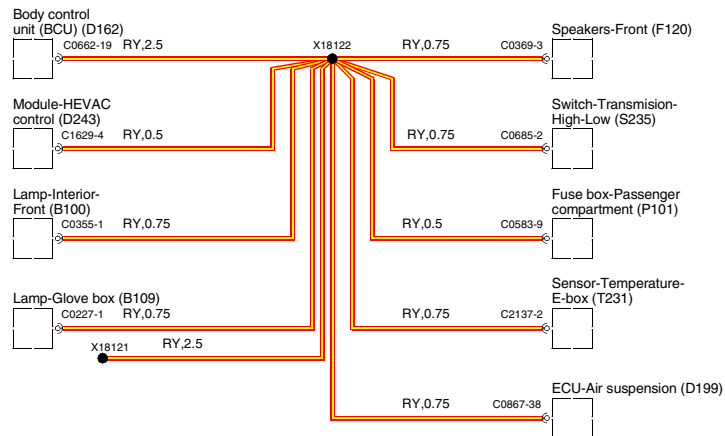


X184 (UG) MAIN

 

X185 (UN) MAIN

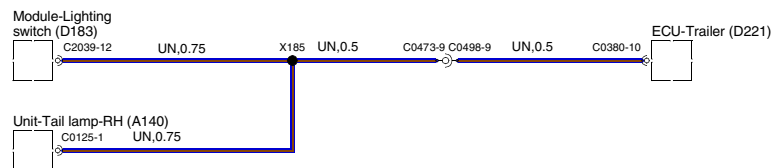


X18826 (YN) MAIN

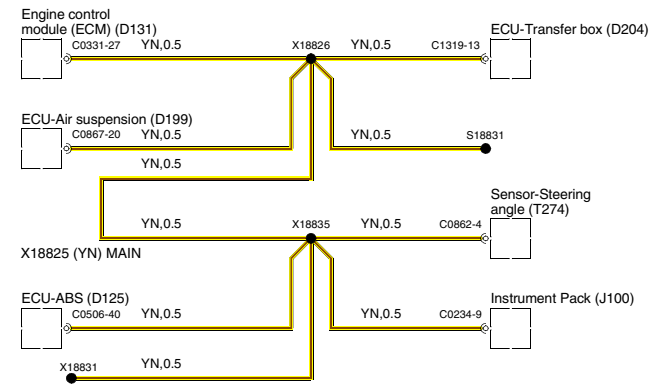

X18825 (YN) MAIN




X18827 (YB) MAIN

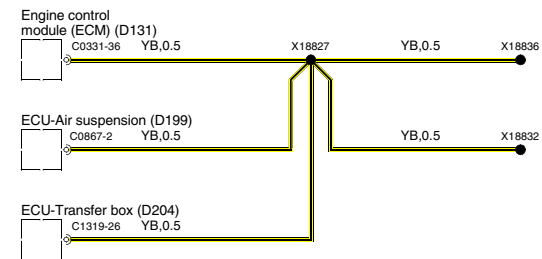


65 SPLICES AND CENTRE TAPS


X206 (RN) MAIN

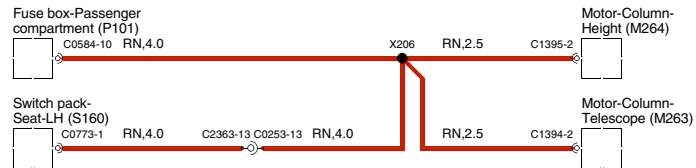


X2050 (R) Td6 ENG

 


X245 (SW) MAIN

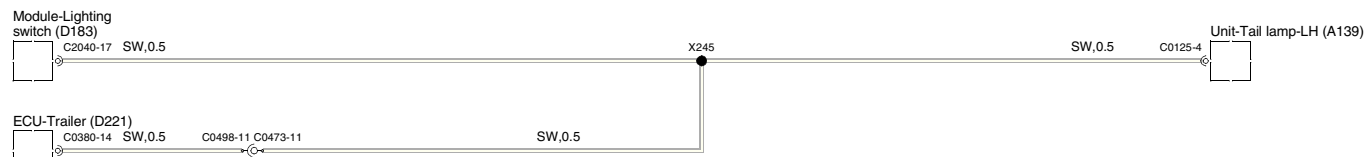

X246 (SP) MAIN

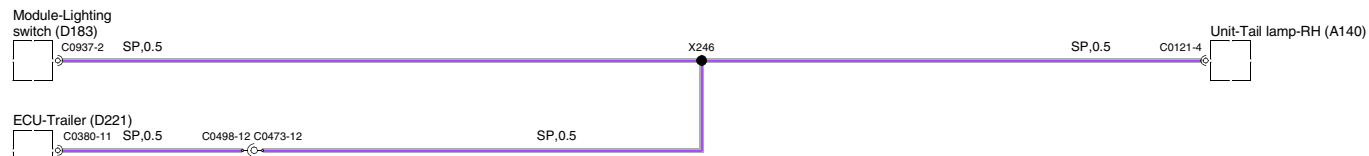


X428 (WY) MAIN

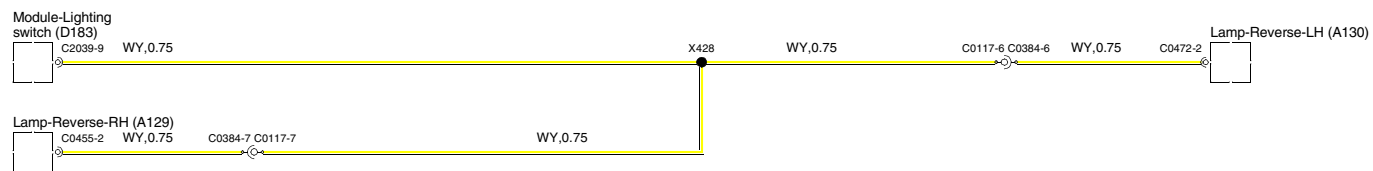


65 SPLICES AND CENTRE TAPS


X442 (WPY) MAIN

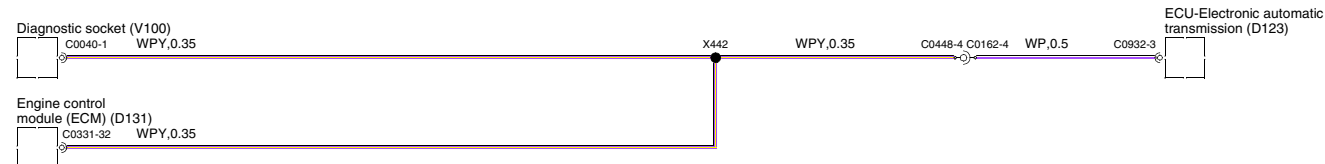


X455 (U) MAIN

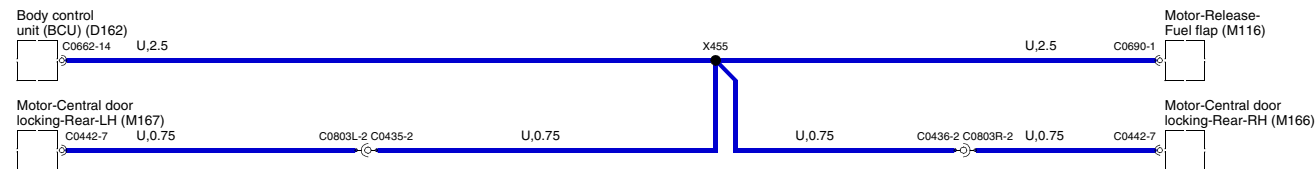

X456 (W) MAIN

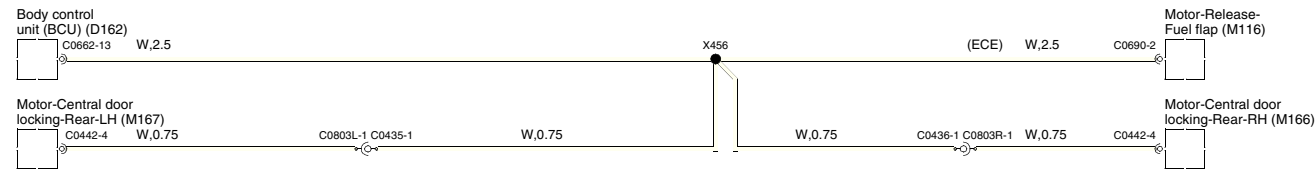


X462 (B) MAIN

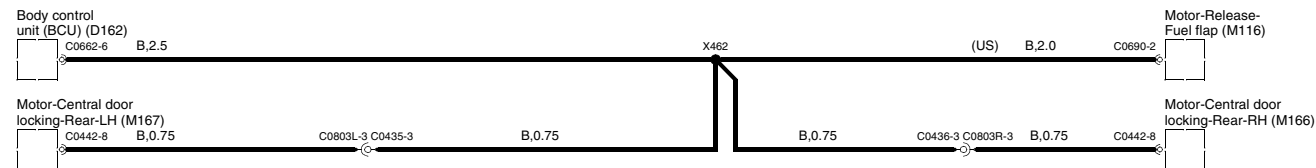


X465 (NY) MAIN




X580 (SR) MAIN

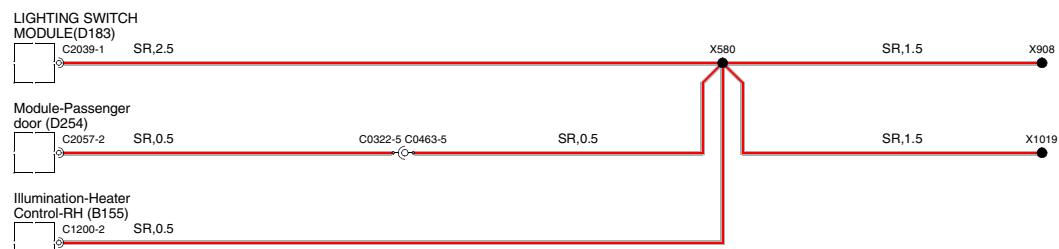


X8066 (RW) MAIN

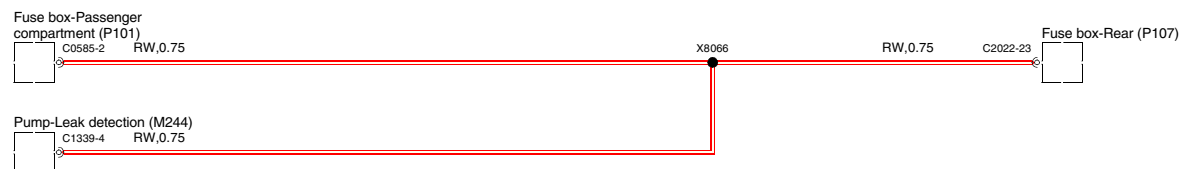


X935 (RS) MAIN

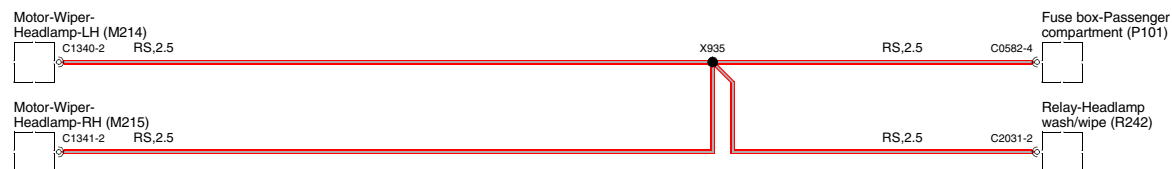


65 SPLICES AND CENTRE TAPS

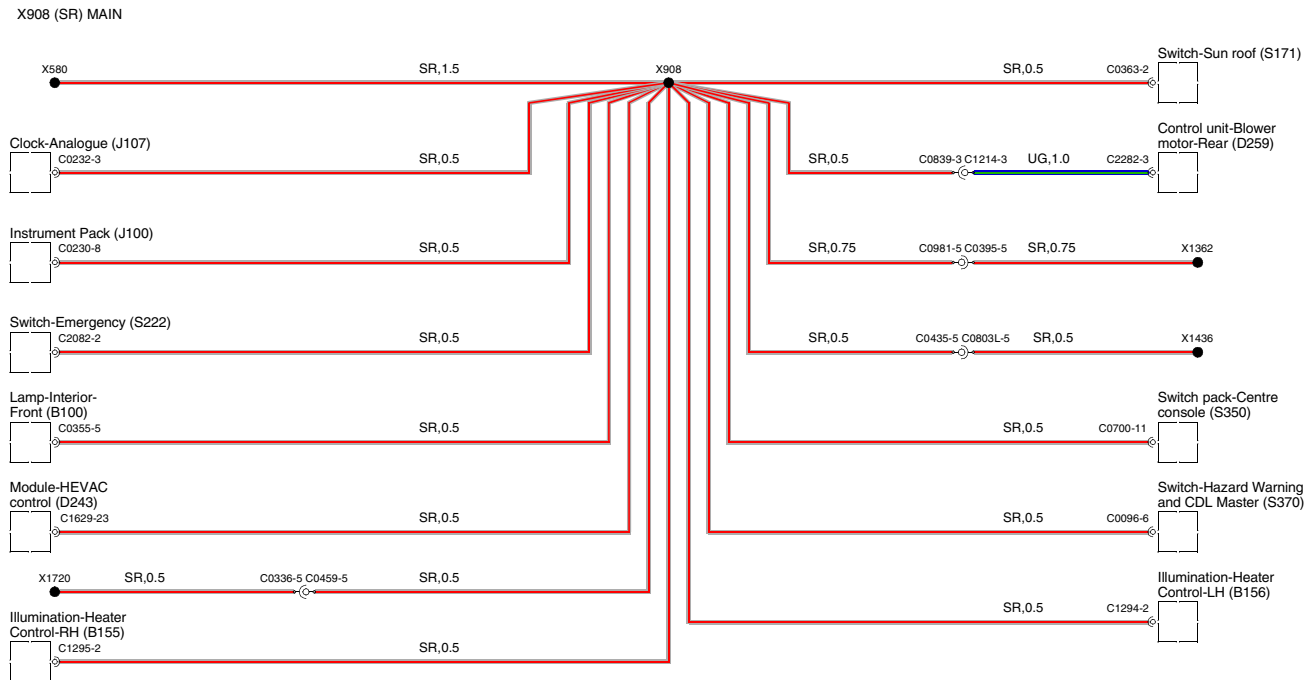


X9371 (PW) MAIN

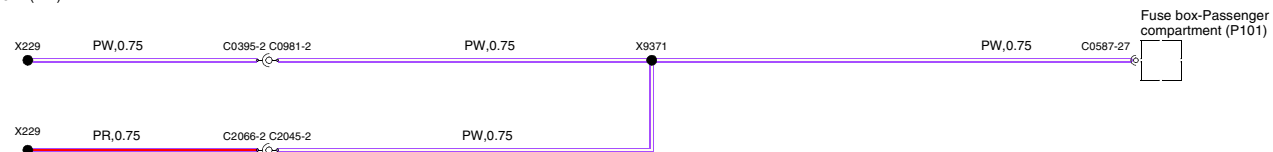


X939 (WSY) MAIN

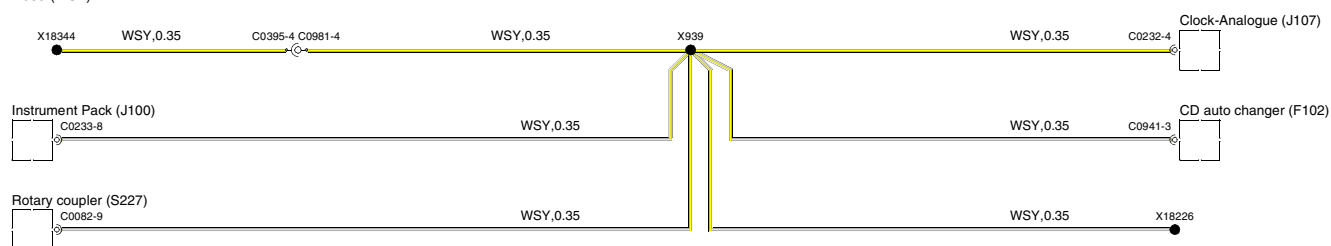


X1720 (SR) DRIVERS DOOR

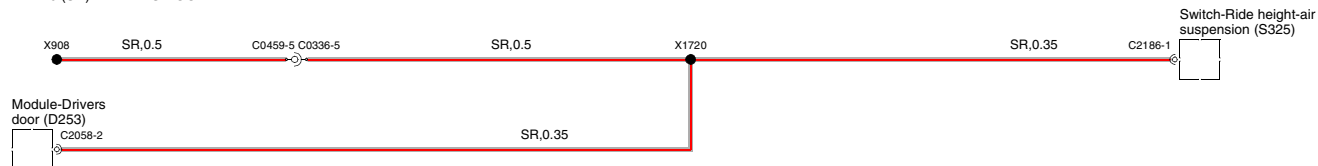


X1436 (SR) REAR DOOR LH

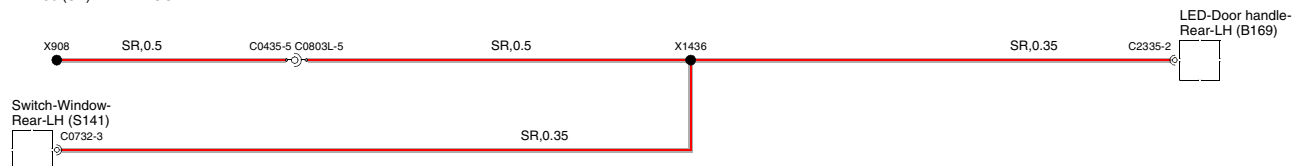


65 SPLICES AND CENTRE TAPS

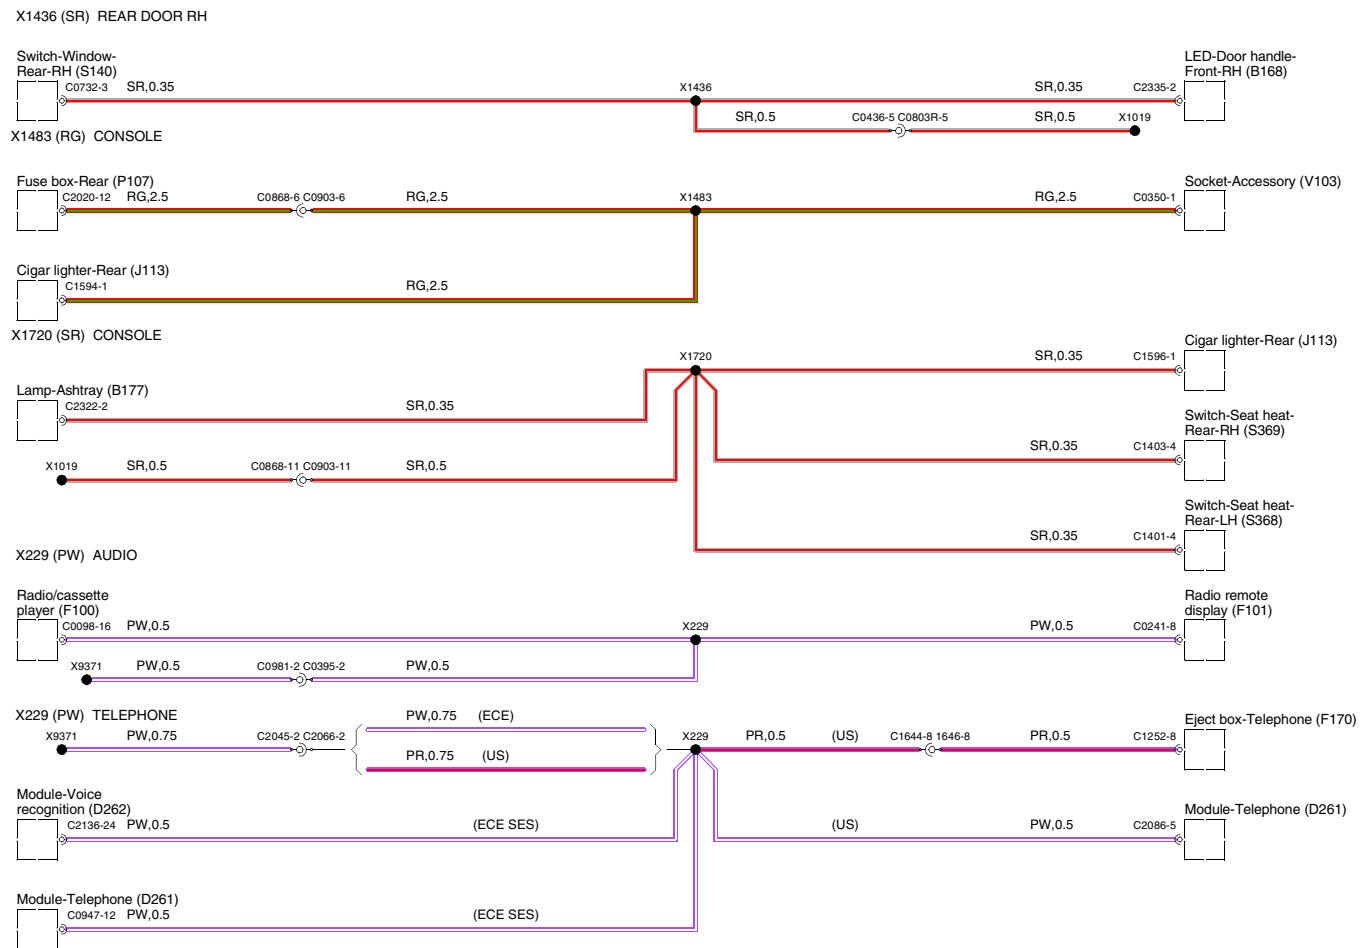


X1483 (RY) TELEPHONE X3368 (RY) TELEPHONE

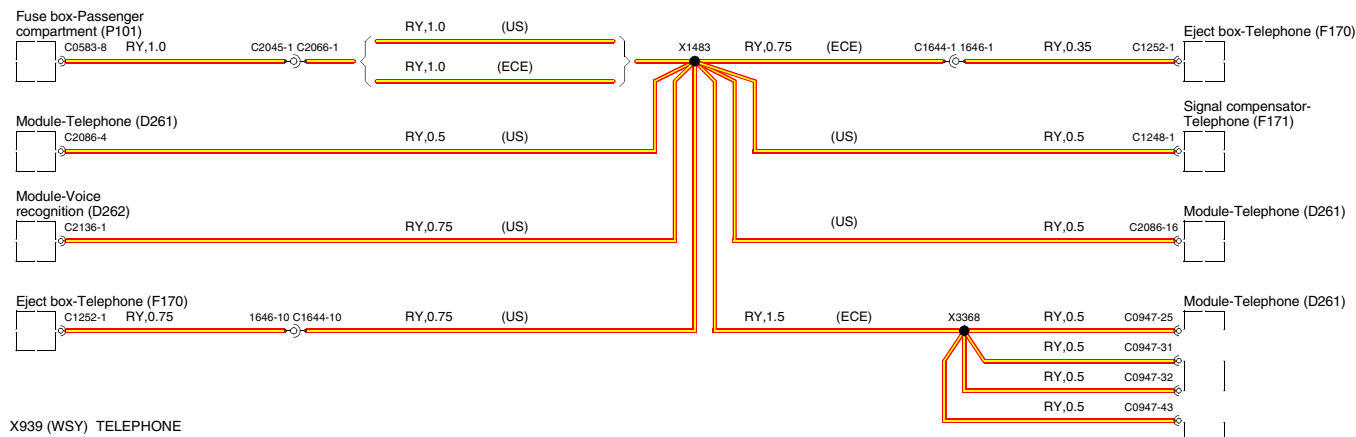


X939 (WSY) TELEPHONE

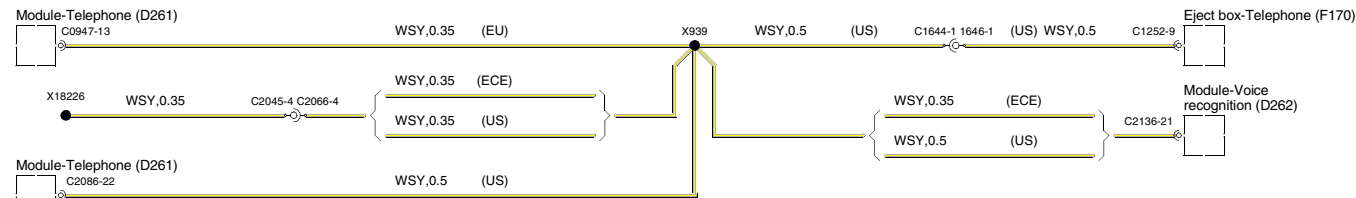


X1293 (WN) TELEPHONE

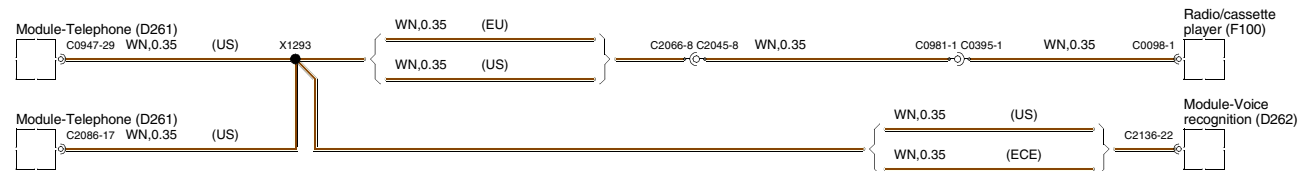


65 SPLICES AND CENTRE TAPS

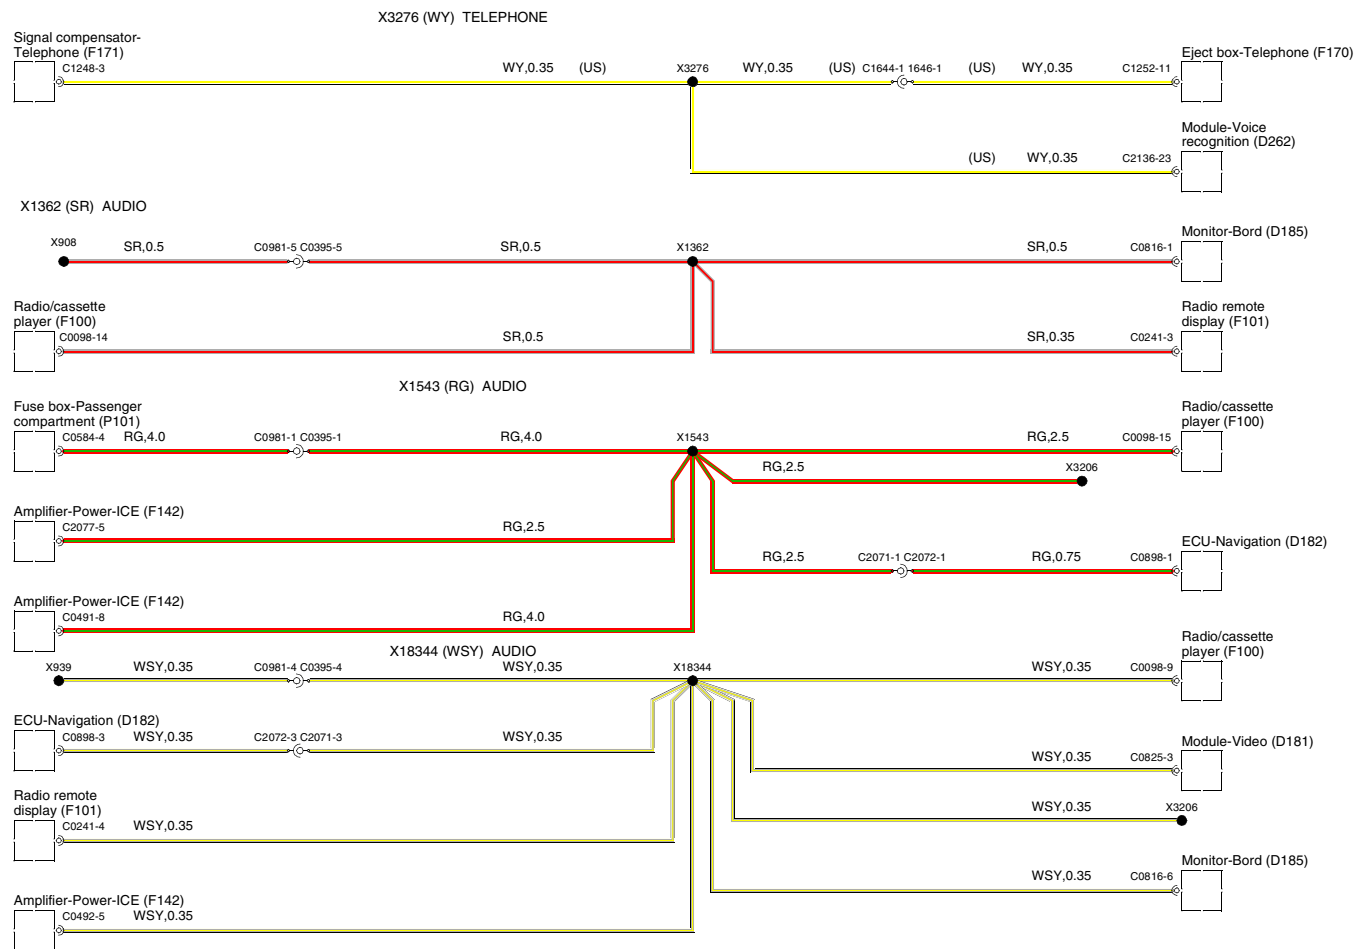


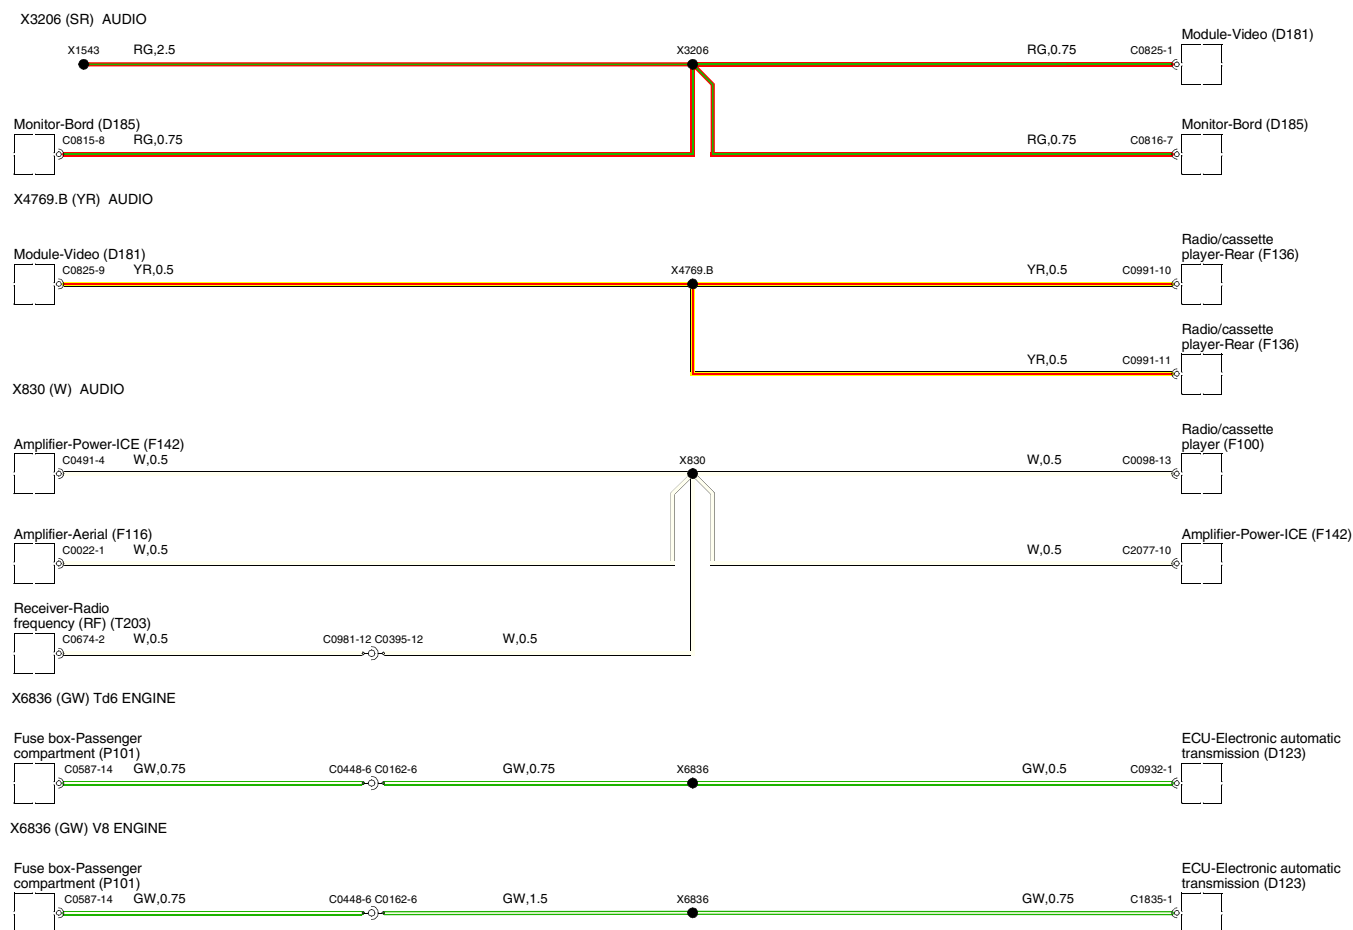

65 SPLICES AND CENTRE TAPS

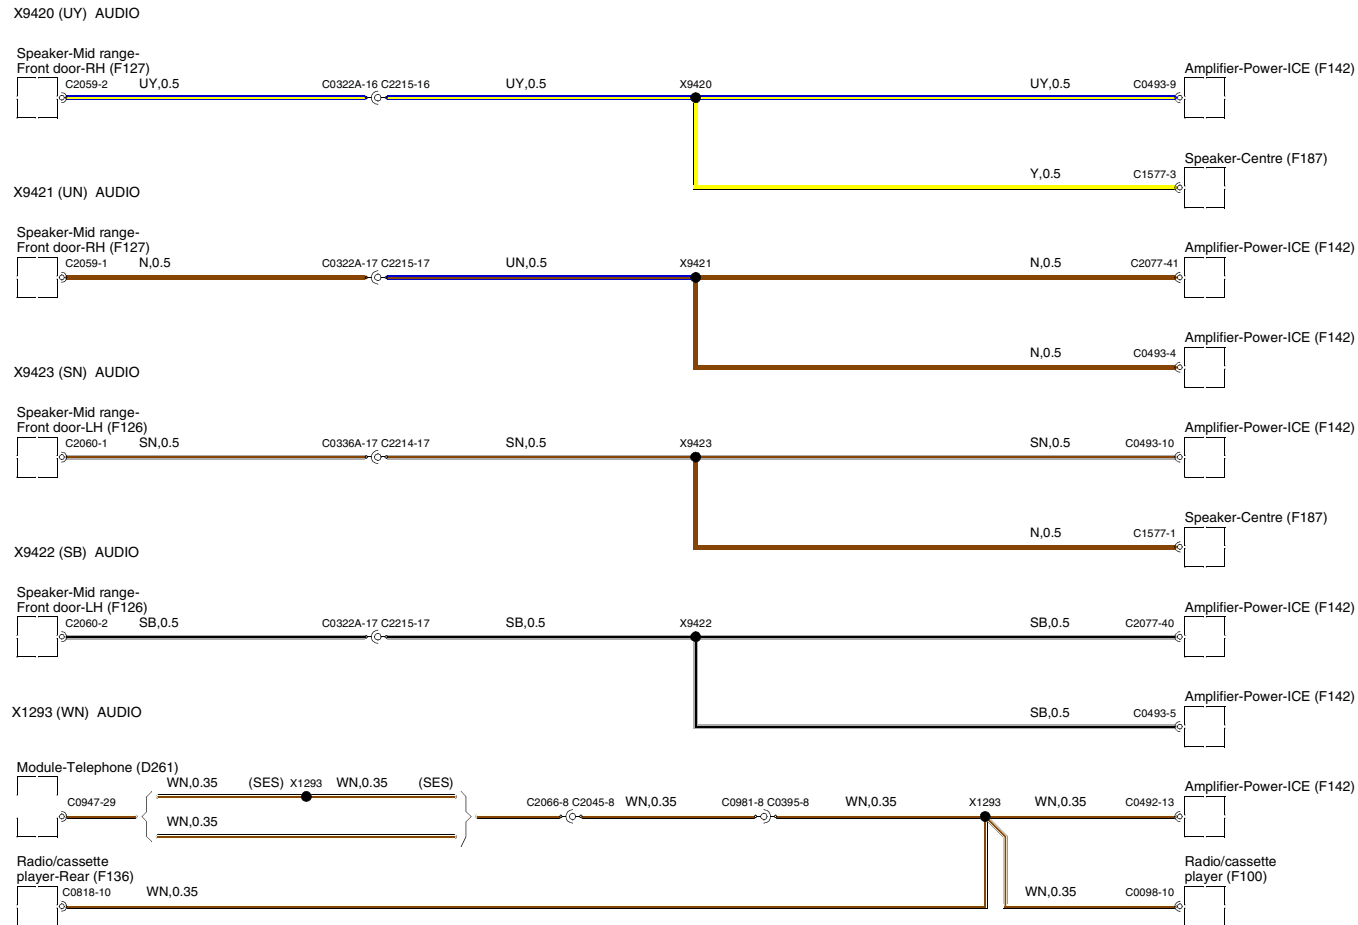


X6819 (RU) V8 ENG

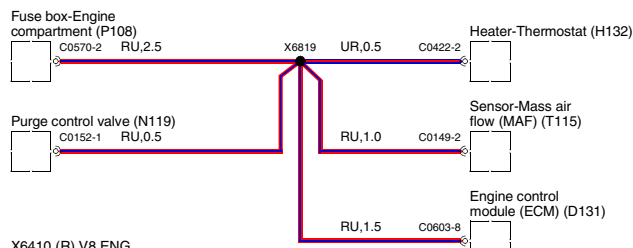


X6410 (R) V8 ENG



 
X6901 (W/BW) V8 ENG




X6902 (R/BR) V8 ENG

 


X6903 (Y/BY) V8 ENG

 

X8041 (BG) V8 ENG

 


X6905 (W/BW) V8 ENG

 


X6906 (R/BR) V8 ENG



 
X6907 (Y/BY) V8 ENG




X6908 (U/BU) V8 ENG

 

X6818 (GW) V8 ENG

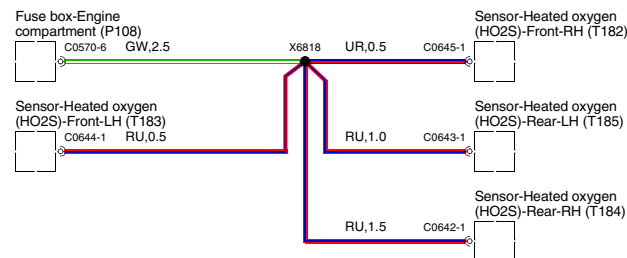


X6904 (U/BU) V8 ENG

 


65 SPLICES AND CENTRE TAPS


X6821 (RW) V8 ENG X6824 (RW) V8 ENG X6820 (RW) V8 ENG

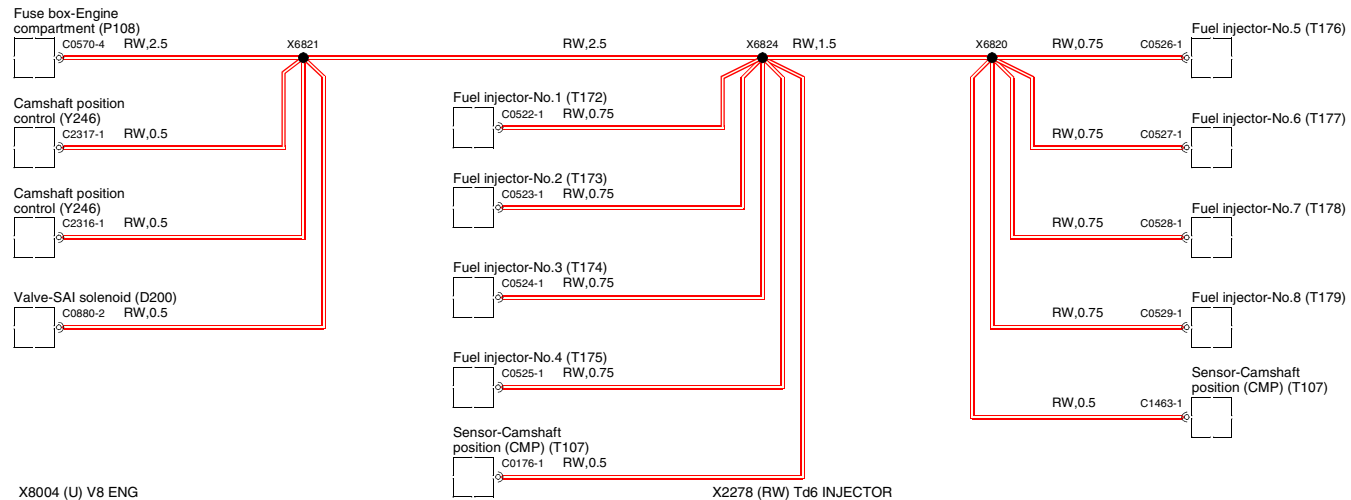


X8004 (U) V8 ENG

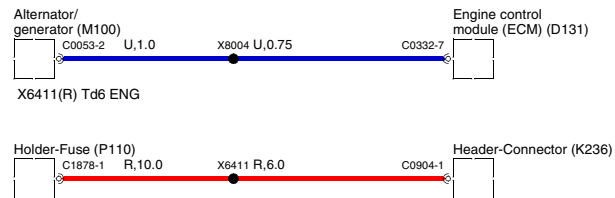


X2278 (RW) Td6 INJECTOR

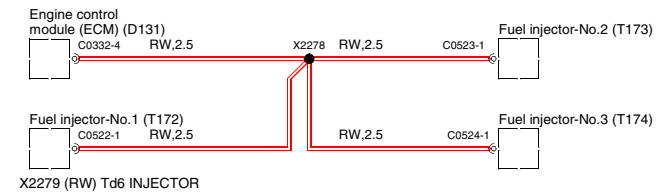



X6830 (G) V8 ENG X6831 (G) V8 ENG

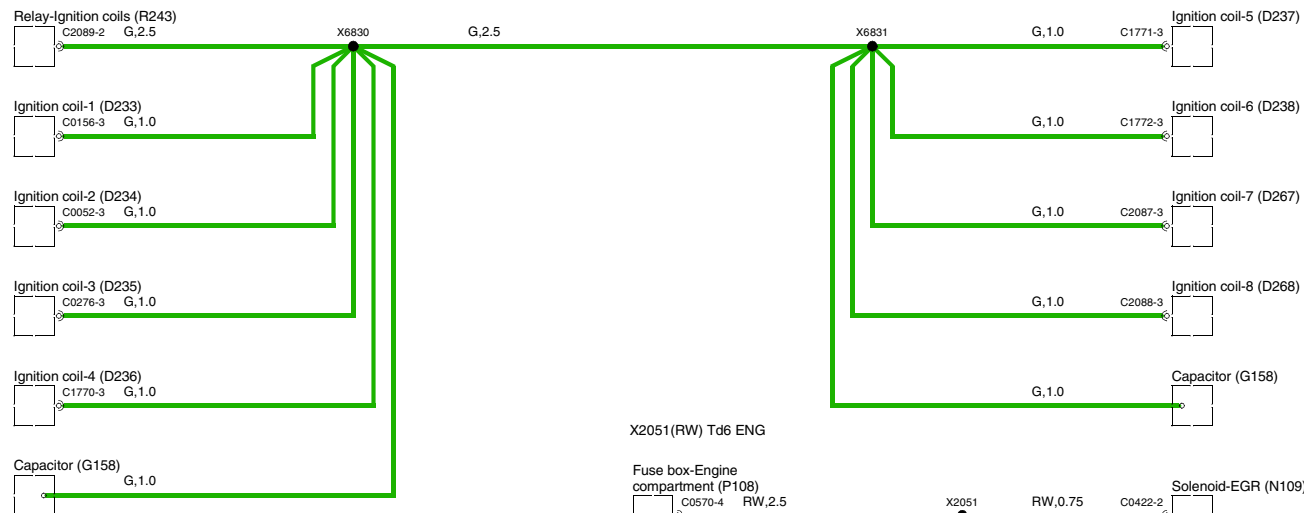


X2051(RW) Td6 ENG

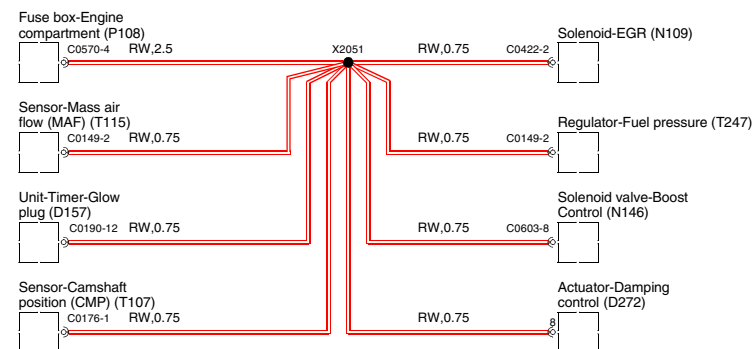


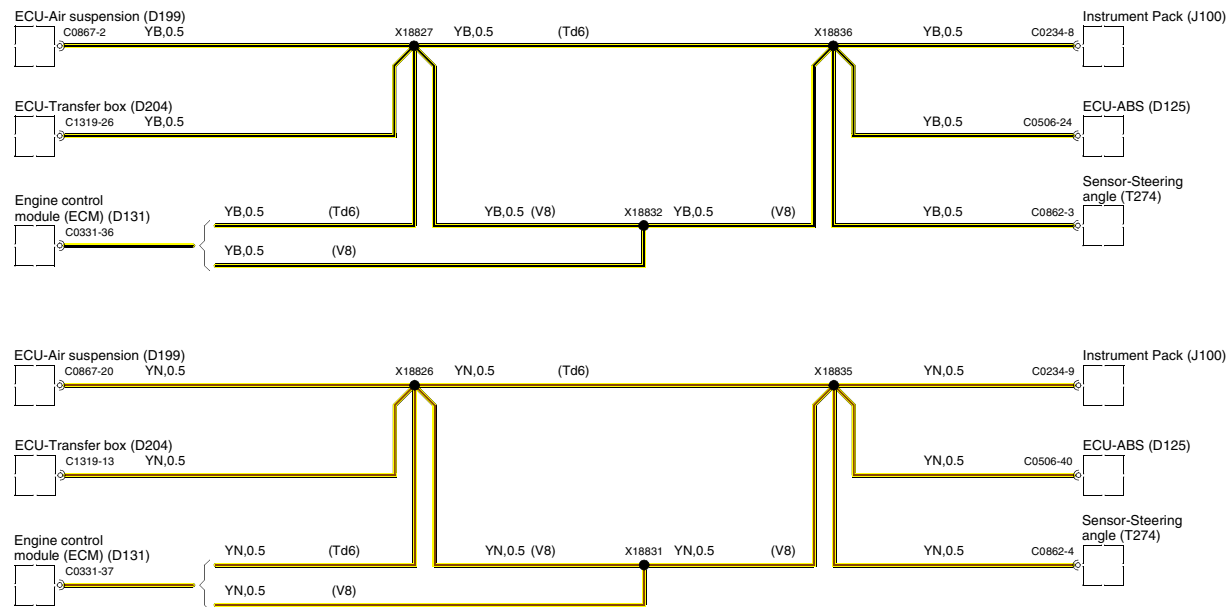

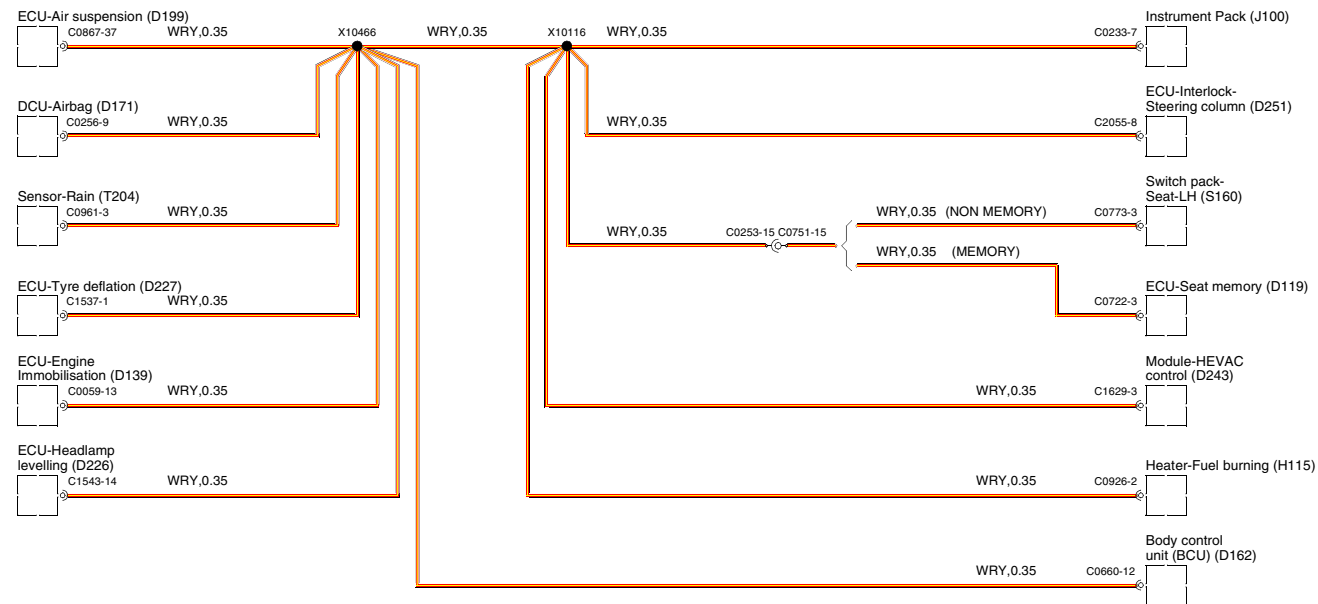

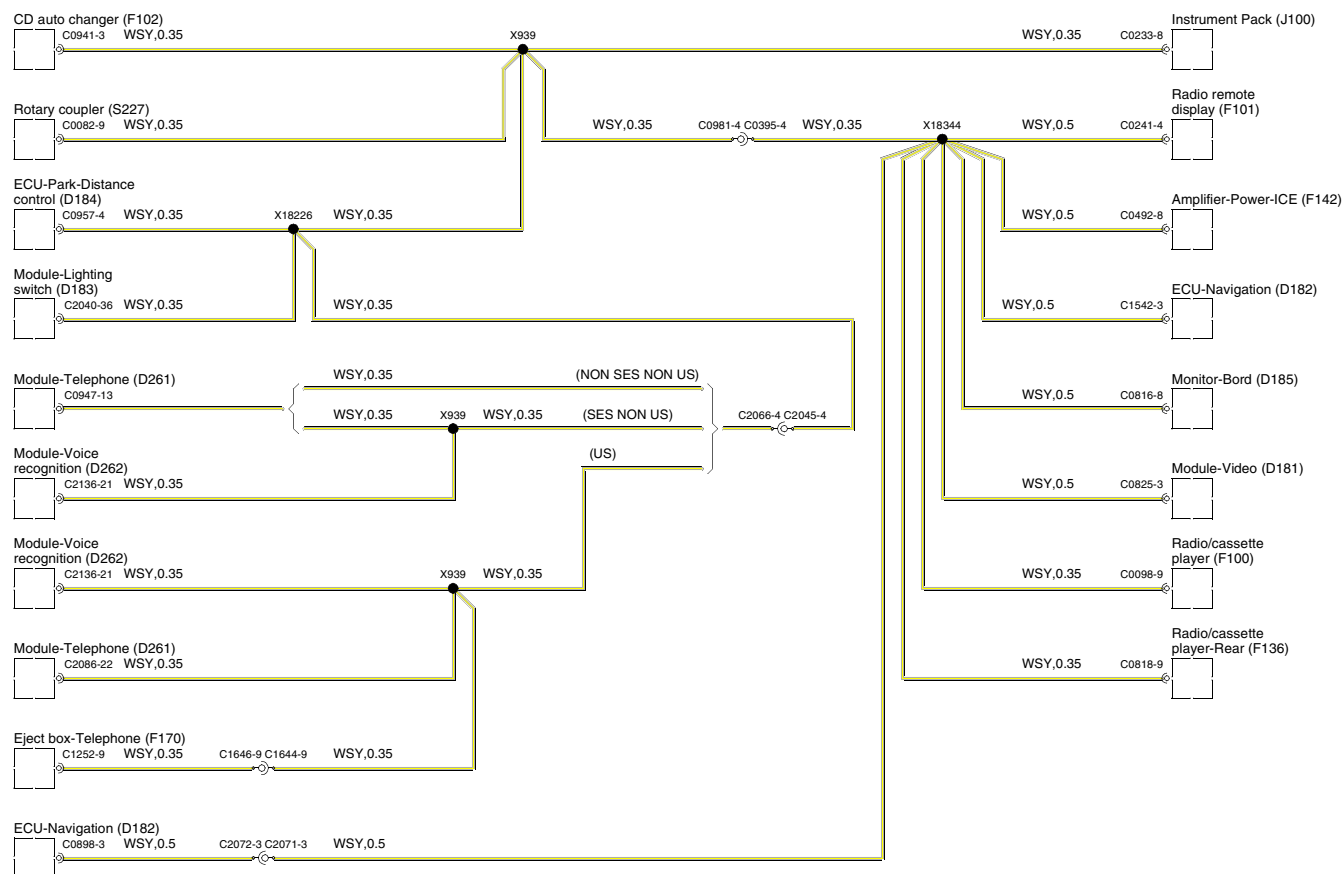

73 TYRE PRESSURE MONITORING

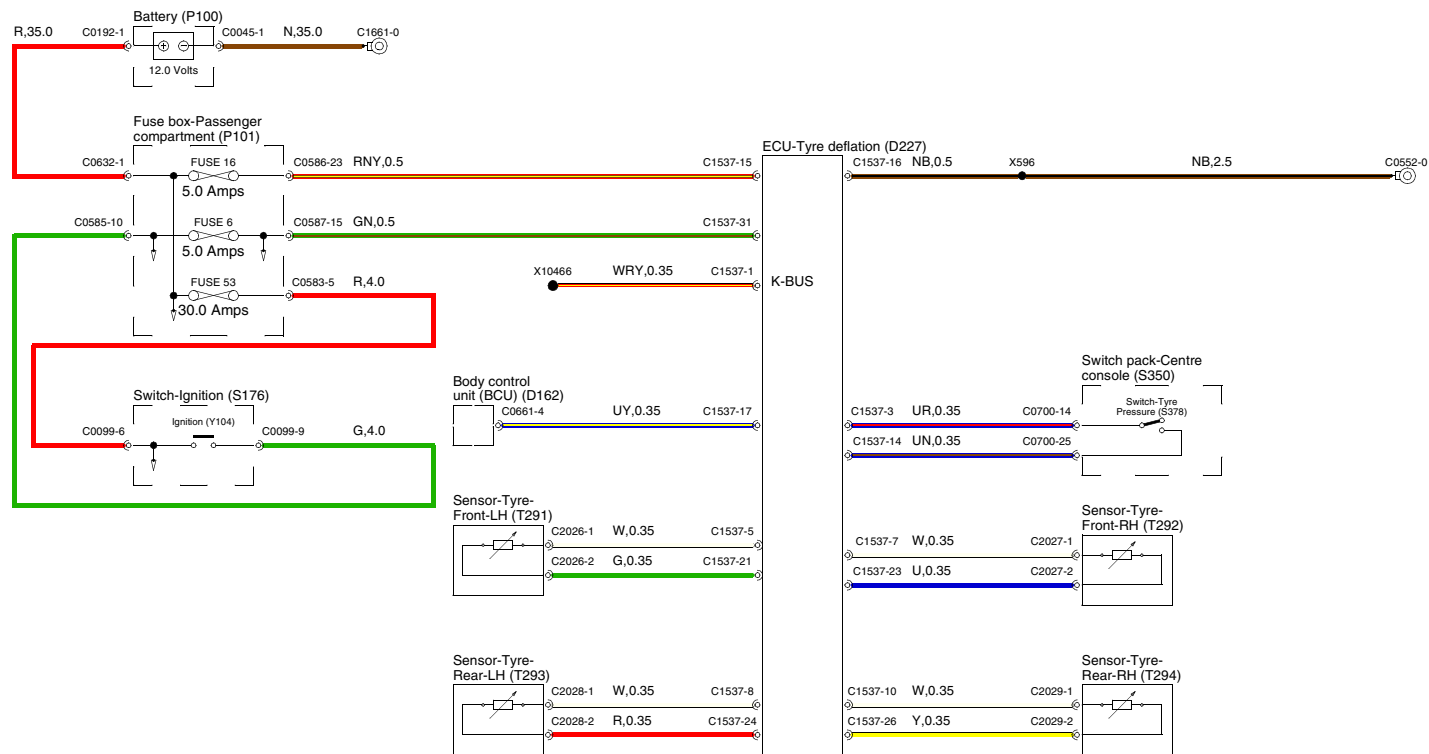

75 PARK DISTANCE CONTROL (PDC)

